



ACI F8x Messages

- [ACI F8* Commands, on page 1](#)

ACI F8* Commands

F866296: fltTcalnfrareplicaPerfStats5minDoerMoCreateLast

Severity: variable

Explanation: This fault is caused by "numer of MO create current value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO create" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866297: fltTcalnfrareplicaPerfStats15minDoerMoCreateLast

Severity: variable

Explanation: This fault is caused by "numer of MO create current value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO create" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866298: fltTcalnfrareplicaPerfStats1hDoerMoCreateLast

Severity: variable

Explanation: This fault is caused by "numer of MO create current value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO create" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866299: fltTcalnfrareplicaPerfStats1dDoerMoCreateLast

Severity: variable

Explanation: This fault is caused by "numer of MO create current value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO create" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866300: fltTcalnfraReplicaPerfStats1wDoerMoCreateLast

Severity: variable

Explanation: This fault is caused by "numer of MO create current value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO create" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866301: fltTcalnfraReplicaPerfStats1moDoerMoCreateLast

Severity: variable

Explanation: This fault is caused by "numer of MO create current value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO create" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866302: fltTcalnfraReplicaPerfStats1qtrDoerMoCreateLast

Severity: variable

Explanation: This fault is caused by "numer of MO create current value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO create" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866303: fltTcalnfraReplicaPerfStats1yearDoerMoCreateLast

Severity: variable

Explanation: This fault is caused by "numer of MO create current value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO create" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866312: fltTcalnfraReplicaPerfStats5minDoerMoCreateCum

Severity: variable

Explanation: This fault is caused by "numer of MO create cumulative" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO create" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866313: fltTcalnfraReplicaPerfStats15minDoerMoCreateCum

Severity: variable

Explanation: This fault is caused by "numer of MO create cumulative" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO create" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866314: fltTcalnfraReplicaPerfStats1hDoerMoCreateCum

Severity: variable

Explanation: This fault is caused by "numer of MO create cumulative" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO create" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866315: fltTcalnfraReplicaPerfStats1dDoerMoCreateCum

Severity: variable

Explanation: This fault is caused by "numer of MO create cumulative" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO create" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866316: fltTcalnfraReplicaPerfStats1wDoerMoCreateCum

Severity: variable

Explanation: This fault is caused by "numer of MO create cumulative" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO create" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866317: fltTcalnfraReplicaPerfStats1moDoerMoCreateCum

Severity: variable

Explanation: This fault is caused by "numer of MO create cumulative" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO create" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866318: fltTcalnfraReplicaPerfStats1qtrDoerMoCreateCum

Severity: variable

Explanation: This fault is caused by "numer of MO create cumulative" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO create" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866319: fltTcalnfraReplicaPerfStats1yearDoerMoCreateCum

Severity: variable

Explanation: This fault is caused by "numer of MO create cumulative" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO create" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866320: fltTcalnfraReplicaPerfStats5minDoerMoCreatePer

Severity: variable

Explanation: This fault is caused by "numer of MO create periodic" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO create" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866321: fltTcalnfraReplicaPerfStats15minDoerMoCreatePer

Severity: variable

Explanation: This fault is caused by "numer of MO create periodic" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO create" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866322: fltTcalnfraReplicaPerfStats1hDoerMoCreatePer

Severity: variable

Explanation: This fault is caused by "numer of MO create periodic" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO create" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866323: fltTcalnfraReplicaPerfStats1dDoerMoCreatePer

Severity: variable

Explanation: This fault is caused by "numer of MO create periodic" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO create" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866324: fltTcalnfraReplicaPerfStats1wDoerMoCreatePer

Severity: variable

Explanation: This fault is caused by "numer of MO create periodic" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO create" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866325: fltTcalnfraReplicaPerfStats1moDoerMoCreatePer

Severity: variable

Explanation: This fault is caused by "numer of MO create periodic" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO create" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866326: fltTcalnfraReplicaPerfStats1qtrDoerMoCreatePer

Severity: variable

Explanation: This fault is caused by "numer of MO create periodic" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO create" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866327: fltTcalnfraReplicaPerfStats1yearDoerMoCreatePer

Severity: variable

Explanation: This fault is caused by "numer of MO create periodic" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO create" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866328: fltTcalnfraReplicaPerfStats5minDoerMoCreateMin

Severity: variable

Explanation: This fault is caused by "numer of MO create minimum value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO create" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866329: fltTcalnfraReplicaPerfStats15minDoerMoCreateMin

Severity: variable

Explanation: This fault is caused by "numer of MO create minimum value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO create" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866330: fltTcalnfraReplicaPerfStats1hDoerMoCreateMin

Severity: variable

Explanation: This fault is caused by "numer of MO create minimum value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO create" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866331: fltTcalnfraReplicaPerfStats1dDoerMoCreateMin

Severity: variable

Explanation: This fault is caused by "numer of MO create minimum value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO create" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866332: fltTcalnfraReplicaPerfStats1wDoerMoCreateMin

Severity: variable

Explanation: This fault is caused by "numer of MO create minimum value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO create" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866333: fltTcalnfraReplicaPerfStats1moDoerMoCreateMin

Severity: variable

Explanation: This fault is caused by "numer of MO create minimum value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO create" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866334: fltTcalnfraReplicaPerfStats1qtrDoerMoCreateMin

Severity: variable

Explanation: This fault is caused by "numer of MO create minimum value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO create" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866335: fltTcalnfraReplicaPerfStats1yearDoerMoCreateMin

Severity: variable

Explanation: This fault is caused by "numer of MO create minimum value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO create" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866336: fltTcalnfraReplicaPerfStats5minDoerMoCreateMax

Severity: variable

Explanation: This fault is caused by "numer of MO create maximum value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO create" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866337: fltTcalnfraReplicaPerfStats15minDoerMoCreateMax

Severity: variable

Explanation: This fault is caused by "numer of MO create maximum value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO create" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866338: fltTcalnfraReplicaPerfStats1hDoerMoCreateMax

Severity: variable

Explanation: This fault is caused by "numer of MO create maximum value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO create" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866339: fltTcalnfraReplicaPerfStats1dDoerMoCreateMax

Severity: variable

Explanation: This fault is caused by "number of MO create maximum value" statistical property crossing threshold level.

Recommended Action: Check the values of "number of MO create" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866340: fltTcalnfraReplicaPerfStats1wDoerMoCreateMax

Severity: variable

Explanation: This fault is caused by "number of MO create maximum value" statistical property crossing threshold level.

Recommended Action: Check the values of "number of MO create" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866341: fltTcalnfraReplicaPerfStats1moDoerMoCreateMax

Severity: variable

Explanation: This fault is caused by "number of MO create maximum value" statistical property crossing threshold level.

Recommended Action: Check the values of "number of MO create" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866342: fltTcalnfraReplicaPerfStats1qtrDoerMoCreateMax

Severity: variable

Explanation: This fault is caused by "number of MO create maximum value" statistical property crossing threshold level.

Recommended Action: Check the values of "number of MO create" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866343: fltTcalnfraReplicaPerfStats1yearDoerMoCreateMax

Severity: variable

Explanation: This fault is caused by "number of MO create maximum value" statistical property crossing threshold level.

Recommended Action: Check the values of "number of MO create" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866344: fltTcalnfraReplicaPerfStats5minDoerMoCreateAvg

Severity: variable

Explanation: This fault is caused by "number of MO create average value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO create" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866345: fltTcalnfraReplicaPerfStats15minDoerMoCreateAvg

Severity: variable

Explanation: This fault is caused by "numer of MO create average value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO create" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866346: fltTcalnfraReplicaPerfStats1hDoerMoCreateAvg

Severity: variable

Explanation: This fault is caused by "numer of MO create average value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO create" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866347: fltTcalnfraReplicaPerfStats1dDoerMoCreateAvg

Severity: variable

Explanation: This fault is caused by "numer of MO create average value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO create" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866348: fltTcalnfraReplicaPerfStats1wDoerMoCreateAvg

Severity: variable

Explanation: This fault is caused by "numer of MO create average value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO create" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866349: fltTcalnfraReplicaPerfStats1moDoerMoCreateAvg

Severity: variable

Explanation: This fault is caused by "numer of MO create average value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO create" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866350: fltTcalnfraReplicaPerfStats1qtrDoerMoCreateAvg

Severity: variable

Explanation: This fault is caused by "numer of MO create average value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO create" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866351: fltTcalnfraReplicaPerfStats1yearDoerMoCreateAvg

Severity: variable

Explanation: This fault is caused by "numer of MO create average value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO create" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866376: fltTcalnfraReplicaPerfStats5minDoerMoCreateTr

Severity: variable

Explanation: This fault is caused by "numer of MO create trend" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO create" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866377: fltTcalnfraReplicaPerfStats15minDoerMoCreateTr

Severity: variable

Explanation: This fault is caused by "numer of MO create trend" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO create" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866378: fltTcalnfraReplicaPerfStats1hDoerMoCreateTr

Severity: variable

Explanation: This fault is caused by "numer of MO create trend" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO create" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866379: fltTcalnfraReplicaPerfStats1dDoerMoCreateTr

Severity: variable

Explanation: This fault is caused by "numer of MO create trend" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO create" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866380: fltTcalnfraReplicaPerfStats1wDoerMoCreateTr

Severity: variable

Explanation: This fault is caused by "numer of MO create trend" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO create" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866381: fltTcalnfraReplicaPerfStats1moDoerMoCreateTr

Severity: variable

Explanation: This fault is caused by "numer of MO create trend" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO create" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866382: fltTcalnfraReplicaPerfStats1qtrDoerMoCreateTr

Severity: variable

Explanation: This fault is caused by "numer of MO create trend" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO create" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866383: fltTcalnfraReplicaPerfStats1yearDoerMoCreateTr

Severity: variable

Explanation: This fault is caused by "numer of MO create trend" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO create" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866384: fltTcalnfraReplicaPerfStats5minDoerMoCreateRate

Severity: variable

Explanation: This fault is caused by "numer of MO create rate" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO create" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866385: fltTcalnfraReplicaPerfStats15minDoerMoCreateRate

Severity: variable

Explanation: This fault is caused by "numer of MO create rate" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO create" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866386: fltTcalnfraReplicaPerfStats1hDoerMoCreateRate

Severity: variable

Explanation: This fault is caused by "numer of MO create rate" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO create" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866387: fltTcalnfraReplicaPerfStats1dDoerMoCreateRate

Severity: variable

Explanation: This fault is caused by "numer of MO create rate" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO create" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866388: fltTcalnfraReplicaPerfStats1wDoerMoCreateRate

Severity: variable

Explanation: This fault is caused by "numer of MO create rate" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO create" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866389: fltTcalnfraReplicaPerfStats1moDoerMoCreateRate

Severity: variable

Explanation: This fault is caused by "numer of MO create rate" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO create" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866390: fltTcalnfraReplicaPerfStats1qtrDoerMoCreateRate

Severity: variable

Explanation: This fault is caused by "numer of MO create rate" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO create" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866391: fltTcalnfraReplicaPerfStats1yearDoerMoCreateRate

Severity: variable

Explanation: This fault is caused by "numer of MO create rate" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO create" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866464: fltTcalnfraReplicaPerfStats5minDoerMoDeleteLast

Severity: variable

Explanation: This fault is caused by "numer of MO delete current value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO delete" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866465: fltTcalnfraReplicaPerfStats15minDoerMoDeleteLast

Severity: variable

Explanation: This fault is caused by "numer of MO delete current value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO delete" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866466: fltTcalnfraReplicaPerfStats1hDoerMoDeleteLast

Severity: variable

Explanation: This fault is caused by "numer of MO delete current value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO delete" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866467: fltTcalnfraReplicaPerfStats1dDoerMoDeleteLast

Severity: variable

Explanation: This fault is caused by "numer of MO delete current value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO delete" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866468: fltTcalnfraReplicaPerfStats1wDoerMoDeleteLast

Severity: variable

Explanation: This fault is caused by "numer of MO delete current value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO delete" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866469: fltTcalnfraReplicaPerfStats1moDoerMoDeleteLast

Severity: variable

Explanation: This fault is caused by "numer of MO delete current value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO delete" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866470: fltTcalnfraReplicaPerfStats1qtrDoerMoDeleteLast

Severity: variable

Explanation: This fault is caused by "numer of MO delete current value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO delete" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866471: fltTcalnfraReplicaPerfStats1yearDoerMoDeleteLast

Severity: variable

Explanation: This fault is caused by "numer of MO delete current value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO delete" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866480: fltTcalnfraReplicaPerfStats5minDoerMoDeleteCum

Severity: variable

Explanation: This fault is caused by "numer of MO delete cumulative" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO delete" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866481: fltTcalnfraReplicaPerfStats15minDoerMoDeleteCum

Severity: variable

Explanation: This fault is caused by "numer of MO delete cumulative" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO delete" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866482: fltTcalnfraReplicaPerfStats1hDoerMoDeleteCum

Severity: variable

Explanation: This fault is caused by "numer of MO delete cumulative" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO delete" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866483: fltTcalnfraReplicaPerfStats1dDoerMoDeleteCum

Severity: variable

Explanation: This fault is caused by "numer of MO delete cumulative" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO delete" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866484: fltTcalnfraReplicaPerfStats1wDoerMoDeleteCum

Severity: variable

Explanation: This fault is caused by "numer of MO delete cumulative" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO delete" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866485: fltTcalnfraReplicaPerfStats1moDoerMoDeleteCum

Severity: variable

Explanation: This fault is caused by "numer of MO delete cumulative" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO delete" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866486: fltTcalnfraReplicaPerfStats1qtrDoerMoDeleteCum

Severity: variable

Explanation: This fault is caused by "numer of MO delete cumulative" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO delete" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866487: fltTcalnfraReplicaPerfStats1yearDoerMoDeleteCum

Severity: variable

Explanation: This fault is caused by "numer of MO delete cumulative" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO delete" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866488: fltTcalnfraReplicaPerfStats5minDoerMoDeletePer

Severity: variable

Explanation: This fault is caused by "numer of MO delete periodic" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO delete" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866489: fltTcalnfraReplicaPerfStats15minDoerMoDeletePer

Severity: variable

Explanation: This fault is caused by "numer of MO delete periodic" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO delete" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866490: fltTcalnfraReplicaPerfStats1hDoerMoDeletePer

Severity: variable

Explanation: This fault is caused by "numer of MO delete periodic" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO delete" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866491: fltTcalnfraReplicaPerfStats1dDoerMoDeletePer

Severity: variable

Explanation: This fault is caused by "numer of MO delete periodic" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO delete" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866492: fltTcalnfraReplicaPerfStats1wDoerMoDeletePer

Severity: variable

Explanation: This fault is caused by "numer of MO delete periodic" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO delete" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866493: fltTcalnfraReplicaPerfStats1moDoerMoDeletePer

Severity: variable

Explanation: This fault is caused by "numer of MO delete periodic" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO delete" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866494: fltTcalnfraReplicaPerfStats1qtrDoerMoDeletePer

Severity: variable

Explanation: This fault is caused by "numer of MO delete periodic" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO delete" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866495: fltTcalnfraReplicaPerfStats1yearDoerMoDeletePer

Severity: variable

Explanation: This fault is caused by "numer of MO delete periodic" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO delete" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866496: fltTcalnfraReplicaPerfStats5minDoerMoDeleteMin

Severity: variable

Explanation: This fault is caused by "numer of MO delete minimum value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO delete" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866497: fltTcalnfraReplicaPerfStats15minDoerMoDeleteMin

Severity: variable

Explanation: This fault is caused by "numer of MO delete minimum value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO delete" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866498: fltTcalnfraReplicaPerfStats1hDoerMoDeleteMin

Severity: variable

Explanation: This fault is caused by "numer of MO delete minimum value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO delete" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866499: fltTcalnfraReplicaPerfStats1dDoerMoDeleteMin

Severity: variable

Explanation: This fault is caused by "numer of MO delete minimum value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO delete" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866500: fltTcalnfraReplicaPerfStats1wDoerMoDeleteMin

Severity: variable

Explanation: This fault is caused by "numer of MO delete minimum value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO delete" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866501: fltTcalnfraReplicaPerfStats1moDoerMoDeleteMin

Severity: variable

Explanation: This fault is caused by "numer of MO delete minimum value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO delete" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866502: fltTcalnfraReplicaPerfStats1qtrDoerMoDeleteMin

Severity: variable

Explanation: This fault is caused by "numer of MO delete minimum value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO delete" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866503: fltTcalnfraReplicaPerfStats1yearDoerMoDeleteMin

Severity: variable

Explanation: This fault is caused by "numer of MO delete minimum value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO delete" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866504: fltTcalnfraReplicaPerfStats5minDoerMoDeleteMax

Severity: variable

Explanation: This fault is caused by "numer of MO delete maximum value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO delete" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866505: fltTcalnfraReplicaPerfStats15minDoerMoDeleteMax

Severity: variable

Explanation: This fault is caused by "numer of MO delete maximum value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO delete" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866506: fltTcalnfraReplicaPerfStats1hDoerMoDeleteMax

Severity: variable

Explanation: This fault is caused by "numer of MO delete maximum value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO delete" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866507: fltTcalnfraReplicaPerfStats1dDoerMoDeleteMax

Severity: variable

Explanation: This fault is caused by "numer of MO delete maximum value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO delete" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866508: fltTcalnfraReplicaPerfStats1wDoerMoDeleteMax

Severity: variable

Explanation: This fault is caused by "number of MO delete maximum value" statistical property crossing threshold level.

Recommended Action: Check the values of "number of MO delete" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866509: fltTcalnfraReplicaPerfStats1moDoerMoDeleteMax

Severity: variable

Explanation: This fault is caused by "number of MO delete maximum value" statistical property crossing threshold level.

Recommended Action: Check the values of "number of MO delete" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866510: fltTcalnfraReplicaPerfStats1qtrDoerMoDeleteMax

Severity: variable

Explanation: This fault is caused by "number of MO delete maximum value" statistical property crossing threshold level.

Recommended Action: Check the values of "number of MO delete" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866511: fltTcalnfraReplicaPerfStats1yearDoerMoDeleteMax

Severity: variable

Explanation: This fault is caused by "number of MO delete maximum value" statistical property crossing threshold level.

Recommended Action: Check the values of "number of MO delete" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866512: fltTcalnfraReplicaPerfStats5minDoerMoDeleteAvg

Severity: variable

Explanation: This fault is caused by "number of MO delete average value" statistical property crossing threshold level.

Recommended Action: Check the values of "number of MO delete" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866513: fltTcalnfraReplicaPerfStats15minDoerMoDeleteAvg

Severity: variable

Explanation: This fault is caused by "number of MO delete average value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO delete" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866514: fltTcalnfraReplicaPerfStats1hDoerMoDeleteAvg

Severity: variable

Explanation: This fault is caused by "numer of MO delete average value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO delete" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866515: fltTcalnfraReplicaPerfStats1dDoerMoDeleteAvg

Severity: variable

Explanation: This fault is caused by "numer of MO delete average value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO delete" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866516: fltTcalnfraReplicaPerfStats1wDoerMoDeleteAvg

Severity: variable

Explanation: This fault is caused by "numer of MO delete average value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO delete" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866517: fltTcalnfraReplicaPerfStats1moDoerMoDeleteAvg

Severity: variable

Explanation: This fault is caused by "numer of MO delete average value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO delete" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866518: fltTcalnfraReplicaPerfStats1qtrDoerMoDeleteAvg

Severity: variable

Explanation: This fault is caused by "numer of MO delete average value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO delete" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866519: fltTcalnfraReplicaPerfStats1yearDoerMoDeleteAvg

Severity: variable

Explanation: This fault is caused by "numer of MO delete average value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO delete" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866544: fltTcalnfraReplicaPerfStats5minDoerMoDeleteTr

Severity: variable

Explanation: This fault is caused by "numer of MO delete trend" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO delete" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866545: fltTcalnfraReplicaPerfStats15minDoerMoDeleteTr

Severity: variable

Explanation: This fault is caused by "numer of MO delete trend" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO delete" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866546: fltTcalnfraReplicaPerfStats1hDoerMoDeleteTr

Severity: variable

Explanation: This fault is caused by "numer of MO delete trend" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO delete" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866547: fltTcalnfraReplicaPerfStats1dDoerMoDeleteTr

Severity: variable

Explanation: This fault is caused by "numer of MO delete trend" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO delete" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866548: fltTcalnfraReplicaPerfStats1wDoerMoDeleteTr

Severity: variable

Explanation: This fault is caused by "numer of MO delete trend" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO delete" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866549: fltTcalnfraReplicaPerfStats1moDoerMoDeleteTr

Severity: variable

Explanation: This fault is caused by "numer of MO delete trend" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO delete" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866550: fltTcalnfraReplicaPerfStats1qtrDoerMoDeleteTr

Severity: variable

Explanation: This fault is caused by "numer of MO delete trend" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO delete" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866551: fltTcalnfraReplicaPerfStats1yearDoerMoDeleteTr

Severity: variable

Explanation: This fault is caused by "numer of MO delete trend" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO delete" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866552: fltTcalnfraReplicaPerfStats5minDoerMoDeleteRate

Severity: variable

Explanation: This fault is caused by "numer of MO delete rate" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO delete" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866553: fltTcalnfraReplicaPerfStats15minDoerMoDeleteRate

Severity: variable

Explanation: This fault is caused by "numer of MO delete rate" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO delete" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866554: fltTcalnfraReplicaPerfStats1hDoerMoDeleteRate

Severity: variable

Explanation: This fault is caused by "number of MO delete rate" statistical property crossing threshold level.

Recommended Action: Check the values of "number of MO delete" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866555: fltTcalnfraReplicaPerfStats1dDoerMoDeleteRate

Severity: variable

Explanation: This fault is caused by "number of MO delete rate" statistical property crossing threshold level.

Recommended Action: Check the values of "number of MO delete" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866556: fltTcalnfraReplicaPerfStats1wDoerMoDeleteRate

Severity: variable

Explanation: This fault is caused by "number of MO delete rate" statistical property crossing threshold level.

Recommended Action: Check the values of "number of MO delete" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866557: fltTcalnfraReplicaPerfStats1moDoerMoDeleteRate

Severity: variable

Explanation: This fault is caused by "number of MO delete rate" statistical property crossing threshold level.

Recommended Action: Check the values of "number of MO delete" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866558: fltTcalnfraReplicaPerfStats1qtrDoerMoDeleteRate

Severity: variable

Explanation: This fault is caused by "number of MO delete rate" statistical property crossing threshold level.

Recommended Action: Check the values of "number of MO delete" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866559: fltTcalnfraReplicaPerfStats1yearDoerMoDeleteRate

Severity: variable

Explanation: This fault is caused by "number of MO delete rate" statistical property crossing threshold level.

Recommended Action: Check the values of "number of MO delete" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866632: fltTcalnfraReplicaPerfStats5minDoerMoModifyLast

Severity: variable

Explanation: This fault is caused by "numer of MO modify current value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO modify" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866633: fltTcalnfraReplicaPerfStats15minDoerMoModifyLast

Severity: variable

Explanation: This fault is caused by "numer of MO modify current value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO modify" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866634: fltTcalnfraReplicaPerfStats1hDoerMoModifyLast

Severity: variable

Explanation: This fault is caused by "numer of MO modify current value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO modify" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866635: fltTcalnfraReplicaPerfStats1dDoerMoModifyLast

Severity: variable

Explanation: This fault is caused by "numer of MO modify current value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO modify" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866636: fltTcalnfraReplicaPerfStats1wDoerMoModifyLast

Severity: variable

Explanation: This fault is caused by "numer of MO modify current value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO modify" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866637: fltTcalnfraReplicaPerfStats1moDoerMoModifyLast

Severity: variable

Explanation: This fault is caused by "number of MO modify current value" statistical property crossing threshold level.

Recommended Action: Check the values of "number of MO modify" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866638: fltTcalnfraReplicaPerfStats1qtrDoerMoModifyLast

Severity: variable

Explanation: This fault is caused by "number of MO modify current value" statistical property crossing threshold level.

Recommended Action: Check the values of "number of MO modify" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866639: fltTcalnfraReplicaPerfStats1yearDoerMoModifyLast

Severity: variable

Explanation: This fault is caused by "number of MO modify current value" statistical property crossing threshold level.

Recommended Action: Check the values of "number of MO modify" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866648: fltTcalnfraReplicaPerfStats5minDoerMoModifyCum

Severity: variable

Explanation: This fault is caused by "number of MO modify cumulative" statistical property crossing threshold level.

Recommended Action: Check the values of "number of MO modify" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866649: fltTcalnfraReplicaPerfStats15minDoerMoModifyCum

Severity: variable

Explanation: This fault is caused by "number of MO modify cumulative" statistical property crossing threshold level.

Recommended Action: Check the values of "number of MO modify" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866650: fltTcalnfraReplicaPerfStats1hDoerMoModifyCum

Severity: variable

Explanation: This fault is caused by "number of MO modify cumulative" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO modify" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866651: fltTcalnfraReplicaPerfStats1dDoerMoModifyCum

Severity: variable

Explanation: This fault is caused by "numer of MO modify cumulative" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO modify" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866652: fltTcalnfraReplicaPerfStats1wDoerMoModifyCum

Severity: variable

Explanation: This fault is caused by "numer of MO modify cumulative" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO modify" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866653: fltTcalnfraReplicaPerfStats1moDoerMoModifyCum

Severity: variable

Explanation: This fault is caused by "numer of MO modify cumulative" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO modify" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866654: fltTcalnfraReplicaPerfStats1qtrDoerMoModifyCum

Severity: variable

Explanation: This fault is caused by "numer of MO modify cumulative" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO modify" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866655: fltTcalnfraReplicaPerfStats1yearDoerMoModifyCum

Severity: variable

Explanation: This fault is caused by "numer of MO modify cumulative" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO modify" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866656: fltTcalnfraReplicaPerfStats5minDoerMoModifyPer

Severity: variable

Explanation: This fault is caused by "number of MO modify periodic" statistical property crossing threshold level.

Recommended Action: Check the values of "number of MO modify" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866657: fltTcalnfraReplicaPerfStats15minDoerMoModifyPer

Severity: variable

Explanation: This fault is caused by "number of MO modify periodic" statistical property crossing threshold level.

Recommended Action: Check the values of "number of MO modify" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866658: fltTcalnfraReplicaPerfStats1hDoerMoModifyPer

Severity: variable

Explanation: This fault is caused by "number of MO modify periodic" statistical property crossing threshold level.

Recommended Action: Check the values of "number of MO modify" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866659: fltTcalnfraReplicaPerfStats1dDoerMoModifyPer

Severity: variable

Explanation: This fault is caused by "number of MO modify periodic" statistical property crossing threshold level.

Recommended Action: Check the values of "number of MO modify" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866660: fltTcalnfraReplicaPerfStats1wDoerMoModifyPer

Severity: variable

Explanation: This fault is caused by "number of MO modify periodic" statistical property crossing threshold level.

Recommended Action: Check the values of "number of MO modify" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866661: fltTcalnfraReplicaPerfStats1moDoerMoModifyPer

Severity: variable

Explanation: This fault is caused by "numer of MO modify periodic" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO modify" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866662: fltTcalnfraReplicaPerfStats1qtrDoerMoModifyPer

Severity: variable

Explanation: This fault is caused by "numer of MO modify periodic" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO modify" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866663: fltTcalnfraReplicaPerfStats1yearDoerMoModifyPer

Severity: variable

Explanation: This fault is caused by "numer of MO modify periodic" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO modify" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866664: fltTcalnfraReplicaPerfStats5minDoerMoModifyMin

Severity: variable

Explanation: This fault is caused by "numer of MO modify minimum value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO modify" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866665: fltTcalnfraReplicaPerfStats15minDoerMoModifyMin

Severity: variable

Explanation: This fault is caused by "numer of MO modify minimum value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO modify" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866666: fltTcalnfraReplicaPerfStats1hDoerMoModifyMin

Severity: variable

Explanation: This fault is caused by "numer of MO modify minimum value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO modify" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866667: fltTcalnfraReplicaPerfStats1dDoerMoModifyMin

Severity: variable

Explanation: This fault is caused by "numer of MO modify minimum value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO modify" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866668: fltTcalnfraReplicaPerfStats1wDoerMoModifyMin

Severity: variable

Explanation: This fault is caused by "numer of MO modify minimum value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO modify" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866669: fltTcalnfraReplicaPerfStats1moDoerMoModifyMin

Severity: variable

Explanation: This fault is caused by "numer of MO modify minimum value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO modify" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866670: fltTcalnfraReplicaPerfStats1qtrDoerMoModifyMin

Severity: variable

Explanation: This fault is caused by "numer of MO modify minimum value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO modify" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866671: fltTcalnfraReplicaPerfStats1yearDoerMoModifyMin

Severity: variable

Explanation: This fault is caused by "numer of MO modify minimum value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO modify" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866672: fltTcalnfraReplicaPerfStats5minDoerMoModifyMax

Severity: variable

Explanation: This fault is caused by "numer of MO modify maximum value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO modify" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866673: fltTcalnfraReplicaPerfStats15minDoerMoModifyMax

Severity: variable

Explanation: This fault is caused by "numer of MO modify maximum value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO modify" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866674: fltTcalnfraReplicaPerfStats1hDoerMoModifyMax

Severity: variable

Explanation: This fault is caused by "numer of MO modify maximum value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO modify" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866675: fltTcalnfraReplicaPerfStats1dDoerMoModifyMax

Severity: variable

Explanation: This fault is caused by "numer of MO modify maximum value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO modify" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866676: fltTcalnfraReplicaPerfStats1wDoerMoModifyMax

Severity: variable

Explanation: This fault is caused by "numer of MO modify maximum value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO modify" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866677: fltTcalnfraReplicaPerfStats1moDoerMoModifyMax

Severity: variable

Explanation: This fault is caused by "number of MO modify maximum value" statistical property crossing threshold level.

Recommended Action: Check the values of "number of MO modify" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866678: fltTcalnfraReplicaPerfStats1qtrDoerMoModifyMax

Severity: variable

Explanation: This fault is caused by "number of MO modify maximum value" statistical property crossing threshold level.

Recommended Action: Check the values of "number of MO modify" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866679: fltTcalnfraReplicaPerfStats1yearDoerMoModifyMax

Severity: variable

Explanation: This fault is caused by "number of MO modify maximum value" statistical property crossing threshold level.

Recommended Action: Check the values of "number of MO modify" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866680: fltTcalnfraReplicaPerfStats5minDoerMoModifyAvg

Severity: variable

Explanation: This fault is caused by "number of MO modify average value" statistical property crossing threshold level.

Recommended Action: Check the values of "number of MO modify" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866681: fltTcalnfraReplicaPerfStats15minDoerMoModifyAvg

Severity: variable

Explanation: This fault is caused by "number of MO modify average value" statistical property crossing threshold level.

Recommended Action: Check the values of "number of MO modify" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866682: fltTcalnfraReplicaPerfStats1hDoerMoModifyAvg

Severity: variable

Explanation: This fault is caused by "number of MO modify average value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO modify" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866683: fltTcalnfraReplicaPerfStats1dDoerMoModifyAvg

Severity: variable

Explanation: This fault is caused by "numer of MO modify average value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO modify" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866684: fltTcalnfraReplicaPerfStats1wDoerMoModifyAvg

Severity: variable

Explanation: This fault is caused by "numer of MO modify average value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO modify" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866685: fltTcalnfraReplicaPerfStats1moDoerMoModifyAvg

Severity: variable

Explanation: This fault is caused by "numer of MO modify average value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO modify" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866686: fltTcalnfraReplicaPerfStats1qtrDoerMoModifyAvg

Severity: variable

Explanation: This fault is caused by "numer of MO modify average value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO modify" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866687: fltTcalnfraReplicaPerfStats1yearDoerMoModifyAvg

Severity: variable

Explanation: This fault is caused by "numer of MO modify average value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO modify" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866712: fltTcalnfraReplicaPerfStats5minDoerMoModifyTr

Severity: variable

Explanation: This fault is caused by "number of MO modify trend" statistical property crossing threshold level.

Recommended Action: Check the values of "number of MO modify" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866713: fltTcalnfraReplicaPerfStats15minDoerMoModifyTr

Severity: variable

Explanation: This fault is caused by "number of MO modify trend" statistical property crossing threshold level.

Recommended Action: Check the values of "number of MO modify" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866714: fltTcalnfraReplicaPerfStats1hDoerMoModifyTr

Severity: variable

Explanation: This fault is caused by "number of MO modify trend" statistical property crossing threshold level.

Recommended Action: Check the values of "number of MO modify" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866715: fltTcalnfraReplicaPerfStats1dDoerMoModifyTr

Severity: variable

Explanation: This fault is caused by "number of MO modify trend" statistical property crossing threshold level.

Recommended Action: Check the values of "number of MO modify" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866716: fltTcalnfraReplicaPerfStats1wDoerMoModifyTr

Severity: variable

Explanation: This fault is caused by "number of MO modify trend" statistical property crossing threshold level.

Recommended Action: Check the values of "number of MO modify" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866717: fltTcalnfraReplicaPerfStats1moDoerMoModifyTr

Severity: variable

Explanation: This fault is caused by "numer of MO modify trend" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO modify" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866718: fltTcalnfraReplicaPerfStats1qtrDoerMoModifyTr

Severity: variable

Explanation: This fault is caused by "numer of MO modify trend" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO modify" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866719: fltTcalnfraReplicaPerfStats1yearDoerMoModifyTr

Severity: variable

Explanation: This fault is caused by "numer of MO modify trend" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO modify" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866720: fltTcalnfraReplicaPerfStats5minDoerMoModifyRate

Severity: variable

Explanation: This fault is caused by "numer of MO modify rate" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO modify" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866721: fltTcalnfraReplicaPerfStats15minDoerMoModifyRate

Severity: variable

Explanation: This fault is caused by "numer of MO modify rate" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO modify" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866722: fltTcalnfraReplicaPerfStats1hDoerMoModifyRate

Severity: variable

Explanation: This fault is caused by "numer of MO modify rate" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO modify" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866723: fltTcalnfraReplicaPerfStats1dDoerMoModifyRate

Severity: variable

Explanation: This fault is caused by "numer of MO modify rate" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO modify" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866724: fltTcalnfraReplicaPerfStats1wDoerMoModifyRate

Severity: variable

Explanation: This fault is caused by "numer of MO modify rate" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO modify" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866725: fltTcalnfraReplicaPerfStats1moDoerMoModifyRate

Severity: variable

Explanation: This fault is caused by "numer of MO modify rate" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO modify" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866726: fltTcalnfraReplicaPerfStats1qtrDoerMoModifyRate

Severity: variable

Explanation: This fault is caused by "numer of MO modify rate" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO modify" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866727: fltTcalnfraReplicaPerfStats1yearDoerMoModifyRate

Severity: variable

Explanation: This fault is caused by "numer of MO modify rate" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of MO modify" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866800: fltTcalnfraReplicaPerfStats5minDoerStimulusLast

Severity: variable

Explanation: This fault is caused by "numer of doer stimulus current value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of doer stimulus" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866801: fltTcalInfraReplicaPerfStats15minDoerStimulusLast

Severity: variable

Explanation: This fault is caused by "numer of doer stimulus current value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of doer stimulus" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866802: fltTcalInfraReplicaPerfStats1hDoerStimulusLast

Severity: variable

Explanation: This fault is caused by "numer of doer stimulus current value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of doer stimulus" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866803: fltTcalInfraReplicaPerfStats1dDoerStimulusLast

Severity: variable

Explanation: This fault is caused by "numer of doer stimulus current value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of doer stimulus" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866804: fltTcalInfraReplicaPerfStats1wDoerStimulusLast

Severity: variable

Explanation: This fault is caused by "numer of doer stimulus current value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of doer stimulus" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866805: fltTcalInfraReplicaPerfStats1moDoerStimulusLast

Severity: variable

Explanation: This fault is caused by "numer of doer stimulus current value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of doer stimulus" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866806: fltTcalnfraReplicaPerfStats1qtrDoerStimulusLast

Severity: variable

Explanation: This fault is caused by "numer of doer stimulus current value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of doer stimulus" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866807: fltTcalnfraReplicaPerfStats1yearDoerStimulusLast

Severity: variable

Explanation: This fault is caused by "numer of doer stimulus current value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of doer stimulus" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866816: fltTcalnfraReplicaPerfStats5minDoerStimulusCum

Severity: variable

Explanation: This fault is caused by "numer of doer stimulus cumulative" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of doer stimulus" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866817: fltTcalnfraReplicaPerfStats15minDoerStimulusCum

Severity: variable

Explanation: This fault is caused by "numer of doer stimulus cumulative" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of doer stimulus" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866818: fltTcalnfraReplicaPerfStats1hDoerStimulusCum

Severity: variable

Explanation: This fault is caused by "numer of doer stimulus cumulative" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of doer stimulus" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866819: fltTcalnfraReplicaPerfStats1dDoerStimulusCum

Severity: variable

Explanation: This fault is caused by "numer of doer stimulus cumulative" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of doer stimulus" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866820: fltTcalnfraReplicaPerfStats1wDoerStimulusCum

Severity: variable

Explanation: This fault is caused by "numer of doer stimulus cumulative" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of doer stimulus" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866821: fltTcalnfraReplicaPerfStats1moDoerStimulusCum

Severity: variable

Explanation: This fault is caused by "numer of doer stimulus cumulative" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of doer stimulus" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866822: fltTcalnfraReplicaPerfStats1qtrDoerStimulusCum

Severity: variable

Explanation: This fault is caused by "numer of doer stimulus cumulative" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of doer stimulus" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866823: fltTcalnfraReplicaPerfStats1yearDoerStimulusCum

Severity: variable

Explanation: This fault is caused by "numer of doer stimulus cumulative" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of doer stimulus" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866824: fltTcalnfraReplicaPerfStats5minDoerStimulusPer

Severity: variable

Explanation: This fault is caused by "numer of doer stimulus periodic" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of doer stimulus" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866825: fltTcalnfraReplicaPerfStats15minDoerStimulusPer

Severity: variable

Explanation: This fault is caused by "numer of doer stimulus periodic" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of doer stimulus" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866826: fltTcalnfraReplicaPerfStats1hDoerStimulusPer

Severity: variable

Explanation: This fault is caused by "numer of doer stimulus periodic" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of doer stimulus" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866827: fltTcalnfraReplicaPerfStats1dDoerStimulusPer

Severity: variable

Explanation: This fault is caused by "numer of doer stimulus periodic" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of doer stimulus" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866828: fltTcalnfraReplicaPerfStats1wDoerStimulusPer

Severity: variable

Explanation: This fault is caused by "numer of doer stimulus periodic" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of doer stimulus" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866829: fltTcalnfraReplicaPerfStats1moDoerStimulusPer

Severity: variable

Explanation: This fault is caused by "numer of doer stimulus periodic" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of doer stimulus" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866830: fltTcalnfraReplicaPerfStats1qtrDoerStimulusPer

Severity: variable

Explanation: This fault is caused by "numer of doer stimulus periodic" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of doer stimulus" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866831: fltTcalnfraReplicaPerfStats1yearDoerStimulusPer

Severity: variable

Explanation: This fault is caused by "numer of doer stimulus periodic" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of doer stimulus" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866832: fltTcalnfraReplicaPerfStats5minDoerStimulusMin

Severity: variable

Explanation: This fault is caused by "numer of doer stimulus minimum value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of doer stimulus" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866833: fltTcalnfraReplicaPerfStats15minDoerStimulusMin

Severity: variable

Explanation: This fault is caused by "numer of doer stimulus minimum value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of doer stimulus" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866834: fltTcalnfraReplicaPerfStats1hDoerStimulusMin

Severity: variable

Explanation: This fault is caused by "numer of doer stimulus minimum value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of doer stimulus" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866835: fltTcalnfraReplicaPerfStats1dDoerStimulusMin

Severity: variable

Explanation: This fault is caused by "number of doer stimulus minimum value" statistical property crossing threshold level.

Recommended Action: Check the values of "number of doer stimulus" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866836: fltTcalnfraReplicaPerfStats1wDoerStimulusMin

Severity: variable

Explanation: This fault is caused by "number of doer stimulus minimum value" statistical property crossing threshold level.

Recommended Action: Check the values of "number of doer stimulus" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866837: fltTcalnfraReplicaPerfStats1moDoerStimulusMin

Severity: variable

Explanation: This fault is caused by "number of doer stimulus minimum value" statistical property crossing threshold level.

Recommended Action: Check the values of "number of doer stimulus" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866838: fltTcalnfraReplicaPerfStats1qtrDoerStimulusMin

Severity: variable

Explanation: This fault is caused by "number of doer stimulus minimum value" statistical property crossing threshold level.

Recommended Action: Check the values of "number of doer stimulus" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866839: fltTcalnfraReplicaPerfStats1yearDoerStimulusMin

Severity: variable

Explanation: This fault is caused by "number of doer stimulus minimum value" statistical property crossing threshold level.

Recommended Action: Check the values of "number of doer stimulus" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866840: fltTcalnfraReplicaPerfStats5minDoerStimulusMax

Severity: variable

Explanation: This fault is caused by "number of doer stimulus maximum value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of doer stimulus" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866841: fltTcalInfraReplicaPerfStats15minDoerStimulusMax

Severity: variable

Explanation: This fault is caused by "numer of doer stimulus maximum value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of doer stimulus" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866842: fltTcalInfraReplicaPerfStats1hDoerStimulusMax

Severity: variable

Explanation: This fault is caused by "numer of doer stimulus maximum value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of doer stimulus" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866843: fltTcalInfraReplicaPerfStats1dDoerStimulusMax

Severity: variable

Explanation: This fault is caused by "numer of doer stimulus maximum value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of doer stimulus" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866844: fltTcalInfraReplicaPerfStats1wDoerStimulusMax

Severity: variable

Explanation: This fault is caused by "numer of doer stimulus maximum value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of doer stimulus" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866845: fltTcalInfraReplicaPerfStats1moDoerStimulusMax

Severity: variable

Explanation: This fault is caused by "numer of doer stimulus maximum value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of doer stimulus" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866846: fltTcalnfraReplicaPerfStats1qtrDoerStimulusMax

Severity: variable

Explanation: This fault is caused by "number of doer stimulus maximum value" statistical property crossing threshold level.

Recommended Action: Check the values of "number of doer stimulus" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866847: fltTcalnfraReplicaPerfStats1yearDoerStimulusMax

Severity: variable

Explanation: This fault is caused by "number of doer stimulus maximum value" statistical property crossing threshold level.

Recommended Action: Check the values of "number of doer stimulus" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866848: fltTcalnfraReplicaPerfStats5minDoerStimulusAvg

Severity: variable

Explanation: This fault is caused by "number of doer stimulus average value" statistical property crossing threshold level.

Recommended Action: Check the values of "number of doer stimulus" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866849: fltTcalnfraReplicaPerfStats15minDoerStimulusAvg

Severity: variable

Explanation: This fault is caused by "number of doer stimulus average value" statistical property crossing threshold level.

Recommended Action: Check the values of "number of doer stimulus" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866850: fltTcalnfraReplicaPerfStats1hDoerStimulusAvg

Severity: variable

Explanation: This fault is caused by "number of doer stimulus average value" statistical property crossing threshold level.

Recommended Action: Check the values of "number of doer stimulus" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866851: fltTcalnfraReplicaPerfStats1dDoerStimulusAvg

Severity: variable

Explanation: This fault is caused by "numer of doer stimulus average value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of doer stimulus" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866852: fltTcalnfraReplicaPerfStats1wDoerStimulusAvg

Severity: variable

Explanation: This fault is caused by "numer of doer stimulus average value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of doer stimulus" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866853: fltTcalnfraReplicaPerfStats1moDoerStimulusAvg

Severity: variable

Explanation: This fault is caused by "numer of doer stimulus average value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of doer stimulus" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866854: fltTcalnfraReplicaPerfStats1qtrDoerStimulusAvg

Severity: variable

Explanation: This fault is caused by "numer of doer stimulus average value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of doer stimulus" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866855: fltTcalnfraReplicaPerfStats1yearDoerStimulusAvg

Severity: variable

Explanation: This fault is caused by "numer of doer stimulus average value" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of doer stimulus" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866880: fltTcalnfraReplicaPerfStats5minDoerStimulusTr

Severity: variable

Explanation: This fault is caused by "numer of doer stimulus trend" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of doer stimulus" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866881: fltTcalnfraReplicaPerfStats15minDoerStimulusTr

Severity: variable

Explanation: This fault is caused by "numer of doer stimulus trend" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of doer stimulus" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866882: fltTcalnfraReplicaPerfStats1hDoerStimulusTr

Severity: variable

Explanation: This fault is caused by "numer of doer stimulus trend" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of doer stimulus" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866883: fltTcalnfraReplicaPerfStats1dDoerStimulusTr

Severity: variable

Explanation: This fault is caused by "numer of doer stimulus trend" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of doer stimulus" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866884: fltTcalnfraReplicaPerfStats1wDoerStimulusTr

Severity: variable

Explanation: This fault is caused by "numer of doer stimulus trend" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of doer stimulus" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866885: fltTcalnfraReplicaPerfStats1moDoerStimulusTr

Severity: variable

Explanation: This fault is caused by "numer of doer stimulus trend" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of doer stimulus" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866886: fltTcalnfraReplicaPerfStats1qtrDoerStimulusTr

Severity: variable

Explanation: This fault is caused by "numer of doer stimulus trend" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of doer stimulus" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866887: fltTcalnfraReplicaPerfStats1yearDoerStimulusTr

Severity: variable

Explanation: This fault is caused by "numer of doer stimulus trend" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of doer stimulus" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866888: fltTcalnfraReplicaPerfStats5minDoerStimulusRate

Severity: variable

Explanation: This fault is caused by "numer of doer stimulus rate" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of doer stimulus" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866889: fltTcalnfraReplicaPerfStats15minDoerStimulusRate

Severity: variable

Explanation: This fault is caused by "numer of doer stimulus rate" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of doer stimulus" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866890: fltTcalnfraReplicaPerfStats1hDoerStimulusRate

Severity: variable

Explanation: This fault is caused by "numer of doer stimulus rate" statistical property crossing threshold level.

Recommended Action: Check the values of "numer of doer stimulus" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866891: fltTcalnfraReplicaPerfStats1dDoerStimulusRate

Severity: variable

Explanation: This fault is caused by "number of doer stimulus rate" statistical property crossing threshold level.

Recommended Action: Check the values of "number of doer stimulus" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866892: fltTcalnfraReplicaPerfStats1wDoerStimulusRate

Severity: variable

Explanation: This fault is caused by "number of doer stimulus rate" statistical property crossing threshold level.

Recommended Action: Check the values of "number of doer stimulus" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866893: fltTcalnfraReplicaPerfStats1moDoerStimulusRate

Severity: variable

Explanation: This fault is caused by "number of doer stimulus rate" statistical property crossing threshold level.

Recommended Action: Check the values of "number of doer stimulus" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866894: fltTcalnfraReplicaPerfStats1qtrDoerStimulusRate

Severity: variable

Explanation: This fault is caused by "number of doer stimulus rate" statistical property crossing threshold level.

Recommended Action: Check the values of "number of doer stimulus" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866895: fltTcalnfraReplicaPerfStats1yearDoerStimulusRate

Severity: variable

Explanation: This fault is caused by "number of doer stimulus rate" statistical property crossing threshold level.

Recommended Action: Check the values of "number of doer stimulus" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866968: fltTcalnfraReplicaStats5minDoerTLast

Severity: variable

Explanation: This fault is caused by "liveliness of doer current value" statistical property crossing threshold level.

Recommended Action: Check the values of "liveliness of doer" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866969: fltTcalInfraReplicaStats15minDoerTLast

Severity: variable

Explanation: This fault is caused by "liveliness of doer current value" statistical property crossing threshold level.

Recommended Action: Check the values of "liveliness of doer" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866970: fltTcalInfraReplicaStats1hDoerTLast

Severity: variable

Explanation: This fault is caused by "liveliness of doer current value" statistical property crossing threshold level.

Recommended Action: Check the values of "liveliness of doer" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866971: fltTcalInfraReplicaStats1dDoerTLast

Severity: variable

Explanation: This fault is caused by "liveliness of doer current value" statistical property crossing threshold level.

Recommended Action: Check the values of "liveliness of doer" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866972: fltTcalInfraReplicaStats1wDoerTLast

Severity: variable

Explanation: This fault is caused by "liveliness of doer current value" statistical property crossing threshold level.

Recommended Action: Check the values of "liveliness of doer" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866973: fltTcalInfraReplicaStats1moDoerTLast

Severity: variable

Explanation: This fault is caused by "liveliness of doer current value" statistical property crossing threshold level.

Recommended Action: Check the values of "liveliness of doer" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866974: fltTcalnfraReplicaStats1qtrDoerTLast

Severity: variable

Explanation: This fault is caused by "liveliness of doer current value" statistical property crossing threshold level.

Recommended Action: Check the values of "liveliness of doer" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866975: fltTcalnfraReplicaStats1yearDoerTLast

Severity: variable

Explanation: This fault is caused by "liveliness of doer current value" statistical property crossing threshold level.

Recommended Action: Check the values of "liveliness of doer" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866976: fltTcalnfraReplicaStats5minDoerTMin

Severity: variable

Explanation: This fault is caused by "liveliness of doer minimum value" statistical property crossing threshold level.

Recommended Action: Check the values of "liveliness of doer" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866977: fltTcalnfraReplicaStats15minDoerTMin

Severity: variable

Explanation: This fault is caused by "liveliness of doer minimum value" statistical property crossing threshold level.

Recommended Action: Check the values of "liveliness of doer" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866978: fltTcalnfraReplicaStats1hDoerTMin

Severity: variable

Explanation: This fault is caused by "liveliness of doer minimum value" statistical property crossing threshold level.

Recommended Action: Check the values of "liveliness of doer" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866979: fltTcalnfraReplicaStats1dDoerTMin

Severity: variable

Explanation: This fault is caused by "liveliness of doer minimum value" statistical property crossing threshold level.

Recommended Action: Check the values of "liveliness of doer" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866980: fltTcalnfraReplicaStats1wDoerTMin

Severity: variable

Explanation: This fault is caused by "liveliness of doer minimum value" statistical property crossing threshold level.

Recommended Action: Check the values of "liveliness of doer" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866981: fltTcalnfraReplicaStats1moDoerTMin

Severity: variable

Explanation: This fault is caused by "liveliness of doer minimum value" statistical property crossing threshold level.

Recommended Action: Check the values of "liveliness of doer" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866982: fltTcalnfraReplicaStats1qtrDoerTMin

Severity: variable

Explanation: This fault is caused by "liveliness of doer minimum value" statistical property crossing threshold level.

Recommended Action: Check the values of "liveliness of doer" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866983: fltTcalnfraReplicaStats1yearDoerTMin

Severity: variable

Explanation: This fault is caused by "liveliness of doer minimum value" statistical property crossing threshold level.

Recommended Action: Check the values of "liveliness of doer" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866984: fltTcalnfraReplicaStats5minDoerTMax

Severity: variable

Explanation: This fault is caused by "liveliness of doer maximum value" statistical property crossing threshold level.

Recommended Action: Check the values of "liveliness of doer" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866985: fltTcalnfraReplicaStats15minDoerTMax

Severity: variable

Explanation: This fault is caused by "liveliness of doer maximum value" statistical property crossing threshold level.

Recommended Action: Check the values of "liveliness of doer" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866986: fltTcalnfraReplicaStats1hDoerTMax

Severity: variable

Explanation: This fault is caused by "liveliness of doer maximum value" statistical property crossing threshold level.

Recommended Action: Check the values of "liveliness of doer" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866987: fltTcalnfraReplicaStats1dDoerTMax

Severity: variable

Explanation: This fault is caused by "liveliness of doer maximum value" statistical property crossing threshold level.

Recommended Action: Check the values of "liveliness of doer" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866988: fltTcalnfraReplicaStats1wDoerTMax

Severity: variable

Explanation: This fault is caused by "liveliness of doer maximum value" statistical property crossing threshold level.

Recommended Action: Check the values of "liveliness of doer" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866989: fltTcalnfraReplicaStats1moDoerTMax

Severity: variable

Explanation: This fault is caused by "liveliness of doer maximum value" statistical property crossing threshold level.

Recommended Action: Check the values of "liveliness of doer" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866990: fltTcalnfraReplicaStats1qtrDoerTMax

Severity: variable

Explanation: This fault is caused by "liveliness of doer maximum value" statistical property crossing threshold level.

Recommended Action: Check the values of "liveliness of doer" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866991: fltTcalnfraReplicaStats1yearDoerTMax

Severity: variable

Explanation: This fault is caused by "liveliness of doer maximum value" statistical property crossing threshold level.

Recommended Action: Check the values of "liveliness of doer" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866992: fltTcalnfraReplicaStats5minDoerTAvg

Severity: variable

Explanation: This fault is caused by "liveliness of doer average value" statistical property crossing threshold level.

Recommended Action: Check the values of "liveliness of doer" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866993: fltTcalnfraReplicaStats15minDoerTAvg

Severity: variable

Explanation: This fault is caused by "liveliness of doer average value" statistical property crossing threshold level.

Recommended Action: Check the values of "liveliness of doer" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866994: fltTcalnfraReplicaStats1hDoerTAvg

Severity: variable

Explanation: This fault is caused by "liveliness of doer average value" statistical property crossing threshold level.

Recommended Action: Check the values of "liveliness of doer" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866995: fltTcalnfraReplicaStats1dDoerTAvg

Severity: variable

Explanation: This fault is caused by "liveliness of doer average value" statistical property crossing threshold level.

Recommended Action: Check the values of "liveliness of doer" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866996: fltTcalnraReplicaStats1wDoerTAvg

Severity: variable

Explanation: This fault is caused by "liveliness of doer average value" statistical property crossing threshold level.

Recommended Action: Check the values of "liveliness of doer" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866997: fltTcalnraReplicaStats1moDoerTAvg

Severity: variable

Explanation: This fault is caused by "liveliness of doer average value" statistical property crossing threshold level.

Recommended Action: Check the values of "liveliness of doer" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866998: fltTcalnraReplicaStats1qtrDoerTAvg

Severity: variable

Explanation: This fault is caused by "liveliness of doer average value" statistical property crossing threshold level.

Recommended Action: Check the values of "liveliness of doer" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F866999: fltTcalnraReplicaStats1yearDoerTAvg

Severity: variable

Explanation: This fault is caused by "liveliness of doer average value" statistical property crossing threshold level.

Recommended Action: Check the values of "liveliness of doer" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F867032: fltTcalnraReplicaStats5minDoerTTr

Severity: variable

Explanation: This fault is caused by "liveliness of doer trend" statistical property crossing threshold level.

Recommended Action: Check the values of "liveliness of doer" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F867033: fltTcalnfraReplicaStats15minDoerTTr

Severity: variable

Explanation: This fault is caused by "liveliness of doer trend" statistical property crossing threshold level.

Recommended Action: Check the values of "liveliness of doer" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F867034: fltTcalnfraReplicaStats1hDoerTTr

Severity: variable

Explanation: This fault is caused by "liveliness of doer trend" statistical property crossing threshold level.

Recommended Action: Check the values of "liveliness of doer" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F867035: fltTcalnfraReplicaStats1dDoerTTr

Severity: variable

Explanation: This fault is caused by "liveliness of doer trend" statistical property crossing threshold level.

Recommended Action: Check the values of "liveliness of doer" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F867036: fltTcalnfraReplicaStats1wDoerTTr

Severity: variable

Explanation: This fault is caused by "liveliness of doer trend" statistical property crossing threshold level.

Recommended Action: Check the values of "liveliness of doer" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F867037: fltTcalnfraReplicaStats1moDoerTTr

Severity: variable

Explanation: This fault is caused by "liveliness of doer trend" statistical property crossing threshold level.

Recommended Action: Check the values of "liveliness of doer" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F867038: fltTcalnfraReplicaStats1qtrDoerTTr

Severity: variable

Explanation: This fault is caused by "liveliness of doer trend" statistical property crossing threshold level.

Recommended Action: Check the values of "liveliness of doer" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.

F867039: fltTcalnraReplicaStats1yearDoerTTr

Severity: variable

Explanation: This fault is caused by "liveliness of doer trend" statistical property crossing threshold level.

Recommended Action: Check the values of "liveliness of doer" statistical counter and either correct the conditions that cause the counter values to cross certain threshold levels, or adjust the threshold values in monitoring policies.