



## **Cisco APIC and Proxy ARP**

**[New and Changed Information](#) 2**

**[About Proxy ARP](#) 2**

**[Guidelines and Limitations](#) 10**

**[Proxy ARP Supported Combinations](#) 11**

**[Configuring Proxy ARP Using the Advanced GUI](#) 11**

**[Configuring Proxy ARP Using the Cisco NX-OS Style CLI](#) 12**

**[Configuring Proxy ARP Using the REST API](#) 13**

Revised: January 19, 2017,

## New and Changed Information

The following table provides an overview of the significant changes up to this current release. The table does not provide an exhaustive list of all changes or of the new features up to this release.

**Table 1: New Features and Changed Behavior in Cisco APIC**


<b>Cisco APIC Release Version</b>	<b>Feature</b>	<b>Description</b>
Release 2.0(2f)	-	This feature is introduced.

## About Proxy ARP

Proxy ARP in Cisco ACI enables endpoints within a network or subnet to communicate with other endpoints without knowing the real MAC address of the endpoints. Proxy ARP is aware of the location of the traffic destination, and offers its own MAC address as the final destination instead.

To enable Proxy ARP, intra-EPG endpoint isolation must be enabled on the EPG see the following figure for details. For more information about intra-EPG isolation and Cisco ACI, see the *Cisco ACI Virtualization Guide*.

**Figure 1: Proxy ARP and Cisco APIC**

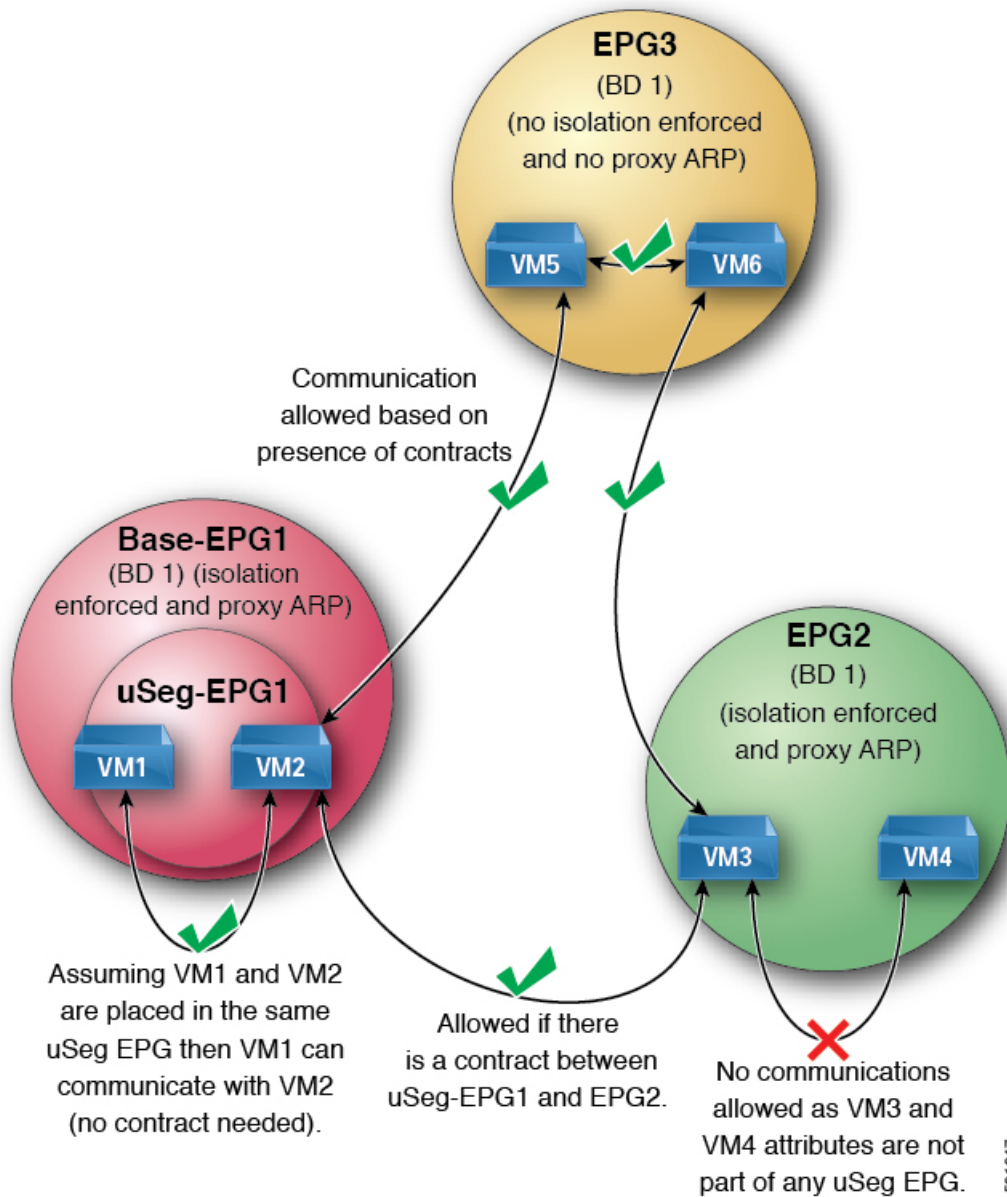


Proxy ARP within the Cisco ACI fabric is different from the traditional proxy ARP. As an example of the communication process, when proxy ARP is enabled on an EPG, if an endpoint A sends an ARP request for endpoint B and if endpoint B is learned within the fabric, then endpoint A will receive a proxy ARP response from the bridge domain (BD) MAC. If endpoint A sends an ARP request for endpoint B, and if endpoint B is not learned within the ACI fabric already, then the fabric will send a proxy ARP request within the BD. Endpoint B will respond to this proxy ARP request back to the fabric. At this point, the fabric does not send a proxy ARP response to endpoint A, but endpoint B is learned within the fabric. If endpoint A sends another ARP request to endpoint B, then the fabric will send a proxy ARP response from the BD MAC.

The following example describes the proxy ARP resolution steps for communication between clients VM1 and VM2:

- 1 VM1 to VM2 communication is desired.

**Figure 2: VM1 to VM2 Communication is Desired.**

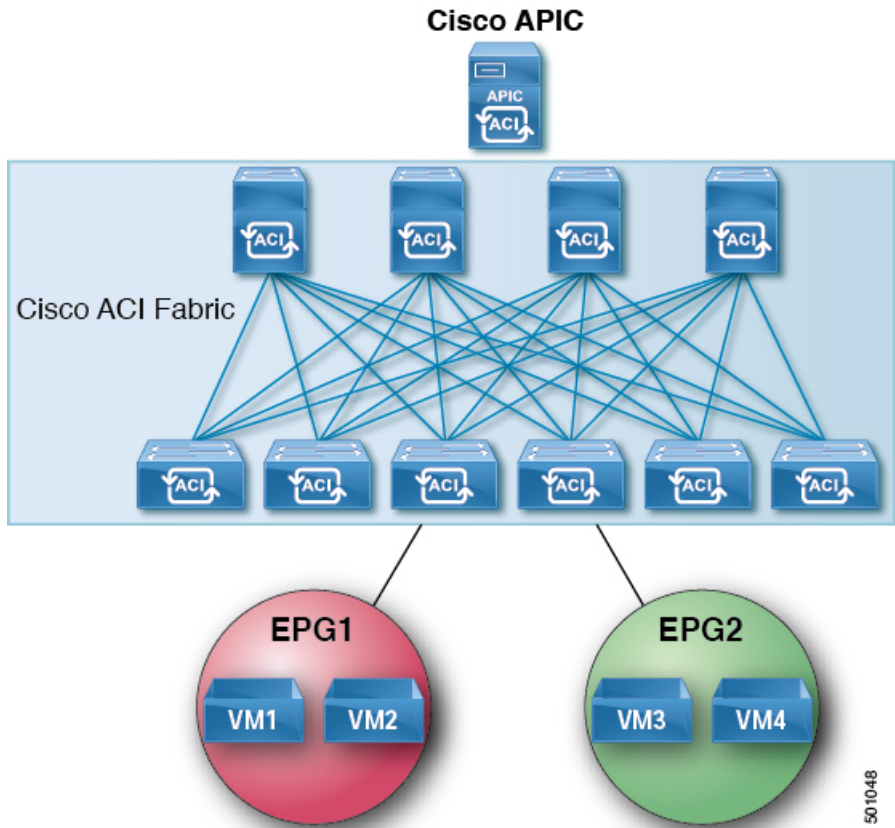


**Table 2: ARP Table State**

Device	State
VM1	IP = * MAC = *
ACI fabric	IP = * MAC = *
VM2	IP = * MAC = *

- 2 VM1 sends an ARP request with a broadcast MAC address to VM2.

**Figure 3: VM1 sends an ARP Request with a Broadcast MAC address to VM2**

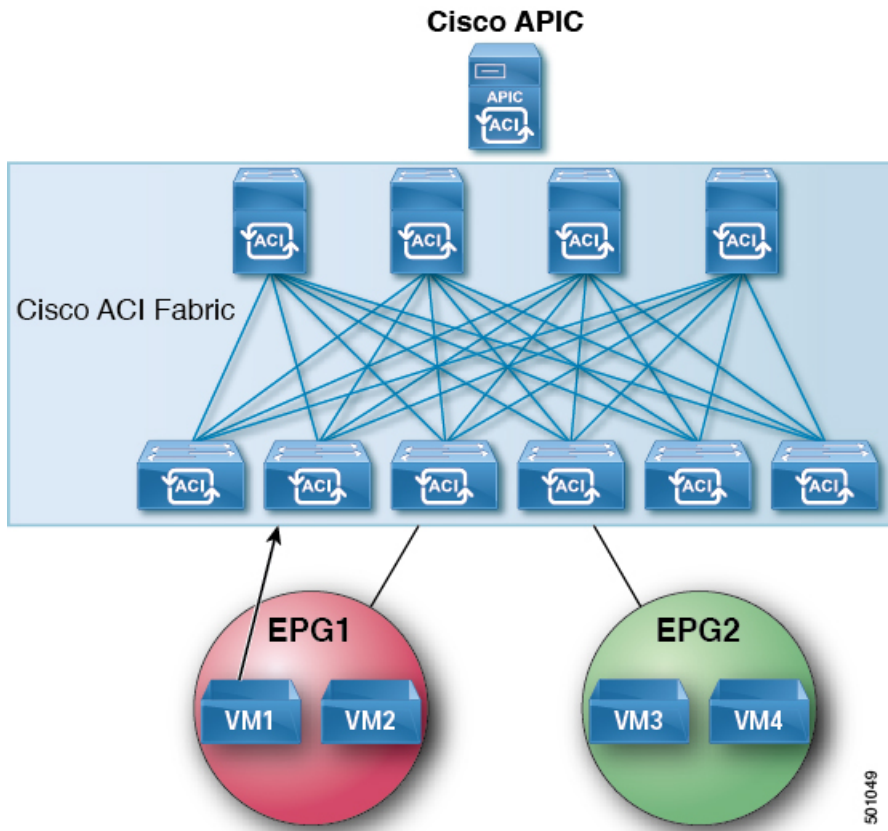


**Table 3: ARP Table State**

Device	State
VM1	IP = VM2 IP; MAC = ?
ACI fabric	IP = VM1 IP; MAC = VM1 MAC
VM2	IP = * MAC = *

- The ACI fabric floods the proxy ARP request within the bridge domain (BD).

**Figure 4: ACI Fabric Floods the Proxy ARP Request within the BD**

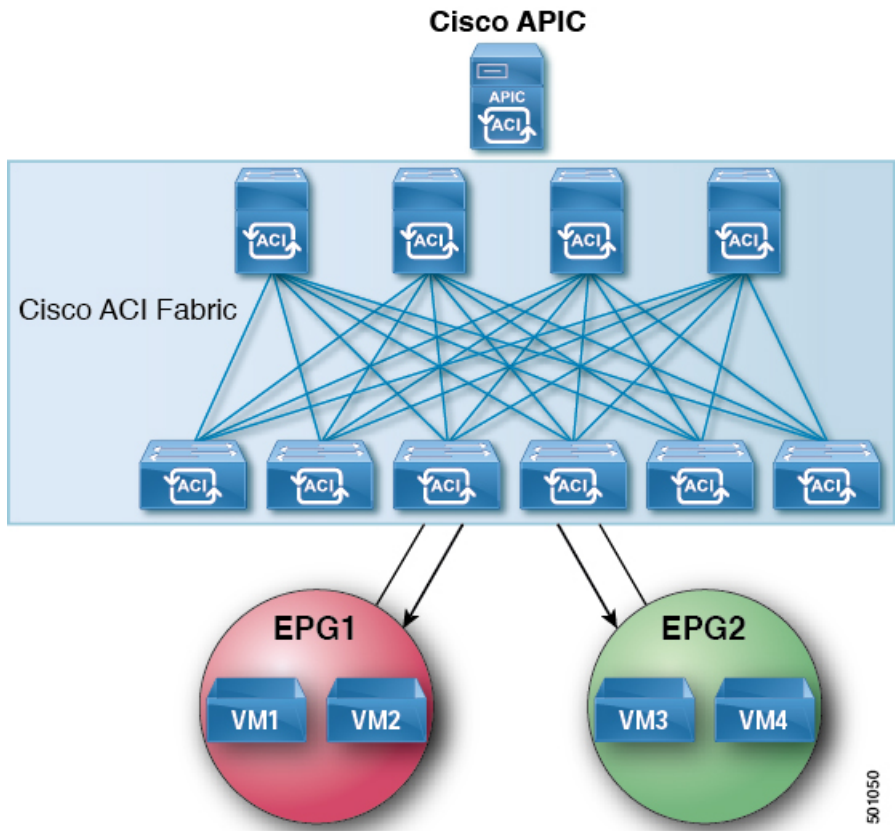


**Table 4: ARP Table State**

Device	State
VM1	IP = VM2 IP; MAC = ?
ACI fabric	IP = VM1 IP; MAC = VM1 MAC
VM2	IP = VM1 IP; MAC = BD MAC

- 4 VM2 sends an ARP response to the ACI fabric.

**Figure 5: VM2 Sends an ARP Response to the ACI Fabric**

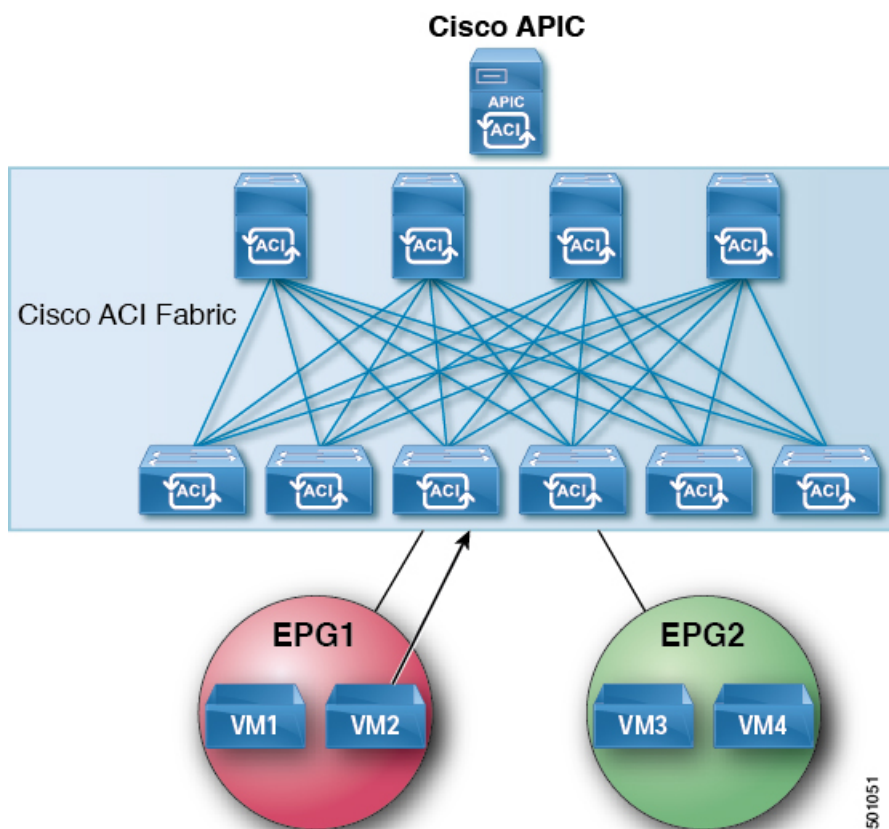

**Table 5: ARP Table State**

Device	State
VM1	IP = VM2 IP; MAC = ?
ACI fabric	IP = VM1 IP; MAC = VM1 MAC
VM2	IP = VM1 IP; MAC = BD MAC

5 VM2 is learned.

Figure 6: VM2 is Learned

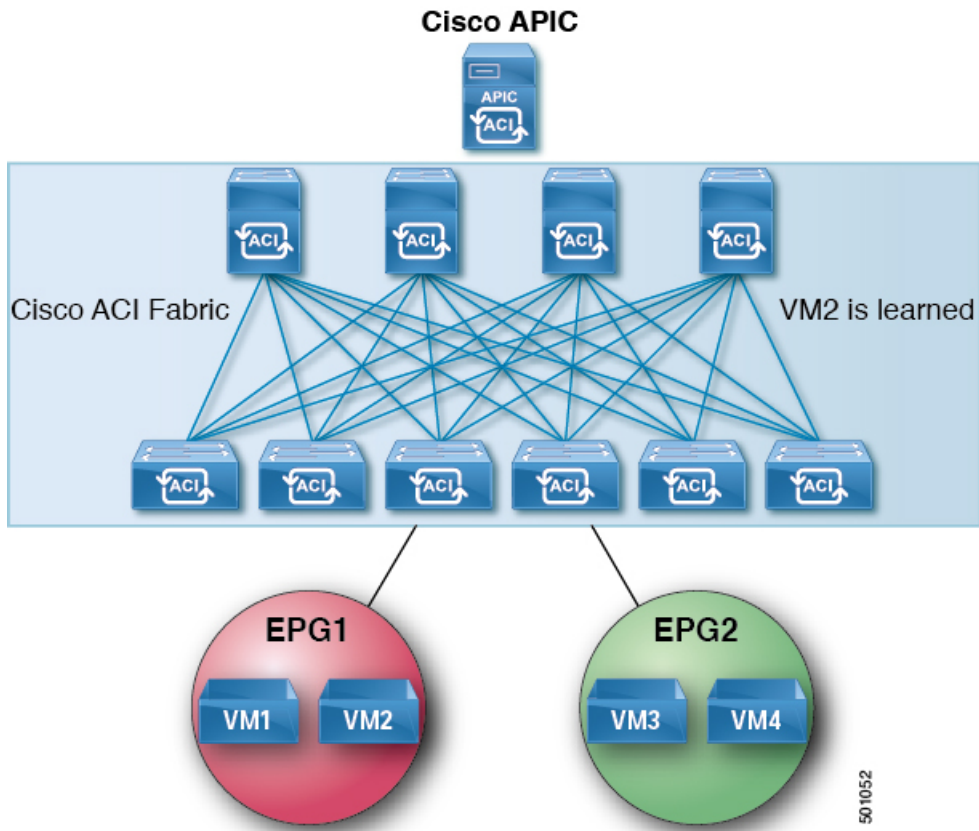



Table 6: ARP Table State

Device	State
VM1	IP = VM2 IP; MAC = ?
ACI fabric	IP = VM1 IP; MAC = VM1 MAC IP = VM2 IP; MAC = VM2 MAC
VM2	IP = VM1 IP; MAC = BD MAC



- 6 VM1 sends an ARP request with a broadcast MAC address to VM2.

**Figure 7: VM1 Sends an ARP Request with a Broadcast MAC Address to VM2**

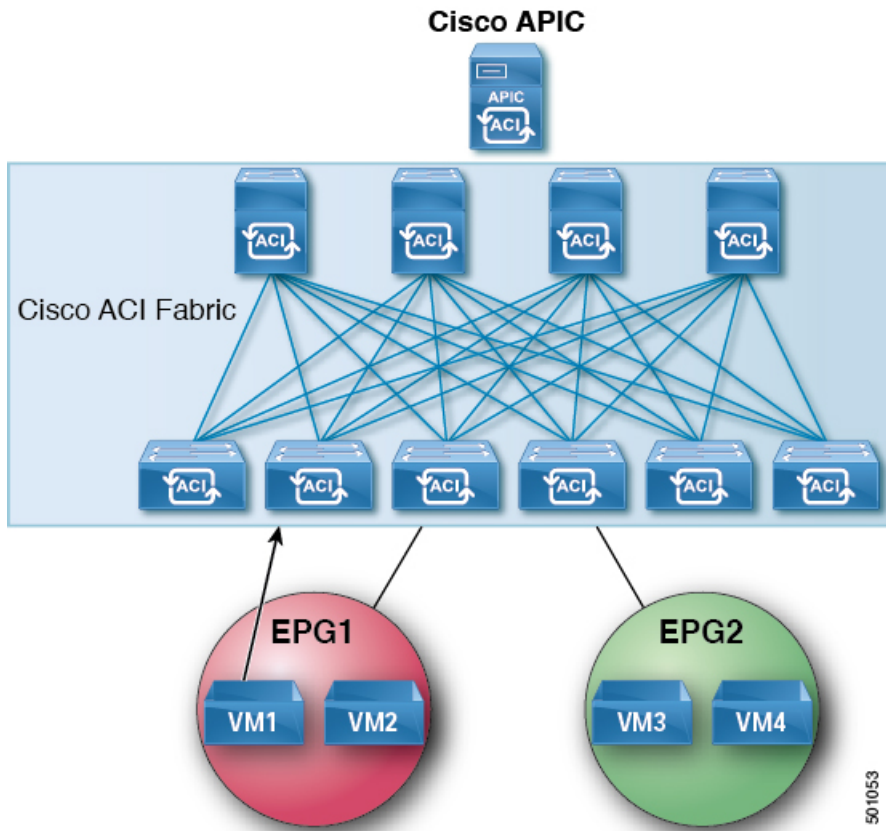


**Table 7: ARP Table State**

Device	State
VM1	IP = VM2 IP MAC = ?
ACI fabric	IP = VM1 IP; MAC = VM1 MAC IP = VM2 IP; MAC = VM2 MAC
VM2	IP = VM1 IP; MAC = BD MAC

7 The ACI fabric sends a proxy ARP response to VM1.

**Figure 8: ACI Fabric Sends a Proxy ARP Response to VM1**

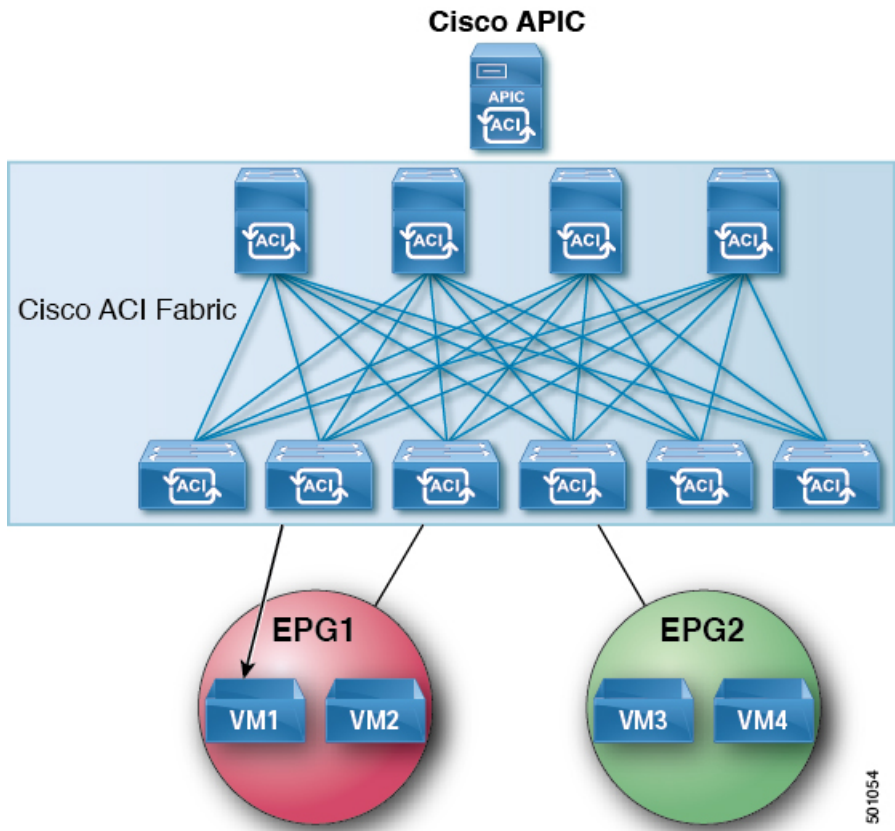

501054

**Table 8: ARP Table State**

Device	State
VM1	IP = VM2 IP; MAC = BD MAC
ACI fabric	IP = VM1 IP; MAC = VM1 MAC IP = VM2 IP; MAC = VM2 MAC
VM2	IP = VM1 IP; MAC = BD MAC

## Guidelines and Limitations

Consider these guidelines and limitations when using Proxy ARP:

- Proxy ARP is supported only on isolated EPGs. If an EPG is not isolated, a fault will be raised. For communication to happen within isolated EPGs with proxy ARP enabled, you must configure uSeg EPGs. For example, within the isolated EPG, there could be multiple VMs with different IP addresses, and you can configure a uSeg EPG with IP attributes matching the IP address range of these VMs.
- ARP requests from isolated endpoints to regular endpoints and from regular endpoints to isolated endpoints do not use proxy ARP. In such cases, endpoints communicate using the real MAC addresses of destination VMs.

## Proxy ARP Supported Combinations

The following proxy ARP table provides the supported combinations:

ARP From/To	Regular EPG	Isolated Enforced EPG with Proxy ARP
Regular EPG	ARP	ARP
Isolated Enforced EPG with Proxy ARP	ARP	Proxy ARP

## Configuring Proxy ARP Using the Advanced GUI

Intra-EPG isolation must be enabled on the EPG where proxy ARP has to be enabled.

### Before You Begin

- The appropriate tenant, VRF, bridge domain, application profile and EPG must be created.

### Procedure

- 
- Step 1** On the menu bar, click **Tenant > Tenant\_name**.
  - Step 2** In the **Navigation** pane, expand the **Tenant\_name > Application Profiles > Application\_Profile\_name > Application EPGs**, right click **Create Application EPG** dialog box to perform the following actions in the **Create Application EPG** dialog box:
    - a) In the **Name** field, add an EPG name.
  - Step 3** In the **Intra EPG Isolation** field, choose **Enforced**.  
When Intra EPG isolation is enforced, the **Forwarding Control** field becomes available.
  - Step 4** In the **Forwarding Control** field, check the check box for **proxy-arp**.  
This enables proxy-arp.
  - Step 5** In the **Bridge Domain** field, choose the appropriate bridge domain to associate from the drop-down list.
  - Step 6** Choose the remaining fields in the dialog box as appropriate, and click **Finish**.
-

# Configuring Proxy ARP Using the Cisco NX-OS Style CLI

## Before You Begin

- The appropriate tenant, VRF, bridge domain, application profile and EPG must be created.
- Intra-EPG isolation must be enabled on the EPG where proxy ARP has to be enabled.

## Procedure

	Command or Action	Purpose
<b>Step 1</b>	<b>configure</b>  <b>Example:</b> apicl# <b>configure</b>	Enters configuration mode.
<b>Step 2</b>	<b>tenant</b> <i>tenant-name</i>  <b>Example:</b> apicl(config)# <b>tenant</b> Tenant1	Enters the tenant configuration mode.
<b>Step 3</b>	<b>application</b> <i>application-profile-name</i>  <b>Example:</b> apicl(config-tenant)# <b>application</b> Tenant1-App	Creates an application profile and enters the application mode.
<b>Step 4</b>	<b>epg</b> <i>application-profile-EPG-name</i>  <b>Example:</b> apicl(config-tenant-app)# <b>epg</b> Tenant1-epg1	Creates an EPG and enter the EPG mode.
<b>Step 5</b>	<b>proxy-arp enable</b>  <b>Example:</b> apicl(config-tenant-app-epg)# <b>proxy-arp enable</b>	Enables proxy ARP.  <b>Note</b> You can disable proxy-arp with the <b>no proxy-arp</b> command.
<b>Step 6</b>	<b>exit</b>  <b>Example:</b> apicl(config-tenant-app-epg)# <b>exit</b>	Returns to application profile mode.
<b>Step 7</b>	<b>exit</b>  <b>Example:</b> apicl(config-tenant-app)# <b>exit</b>	Returns to tenant configuration mode.
<b>Step 8</b>	<b>exit</b>  <b>Example:</b> apicl(config-tenant)# <b>exit</b>	Returns to global configuration mode.

## Examples

This example shows how to configure proxy ARP.

```
apicl# conf t
apicl(config)# tenant Tenant1
apicl(config-tenant)# application Tenant1-App
apicl(config-tenant-app)# epg Tenant1-epg1
apicl(config-tenant-app-epg)# proxy-arp enable
apicl(config-tenant-app-epg)#
apicl(config-tenant)#
```

## Configuring Proxy ARP Using the REST API

### Before You Begin

- Intra-EPG isolation must be enabled on the EPG where proxy ARP has to be enabled.

### Procedure

Configure proxy ARP.

#### Example:

```
<polUni>
  <fvTenant name="Tenant1" status="">
    <fvCtx name="EngNet"/>
    <!-- bridge domain -->
    <fvBD name="BD1">
      <fvRsCtx tnFvCtxName="EngNet" />
      <fvSubnet ip="1.1.1.1/24"/>
    </fvBD>
    <fvAp name="Tenant1_app">
      <fvAEPg name="Tenant1_epg" pcEnfPref="enforced" fwdCtrl="proxy-arp">
        <fvRsBd tnFvBDName="BD1" />
        <fvRsDomAtt tDn="uni/vmmp-VMware/dom-dom9"/>
      </fvAEPg>
    </fvAp>
  </fvTenant>
</polUni>
```





**Americas Headquarters**  
Cisco Systems, Inc.  
San Jose, CA 95134-1706  
USA

**Asia Pacific Headquarters**  
Cisco Systems (USA) Pte. Ltd.  
Singapore

**Europe Headquarters**  
Cisco Systems International BV  
Amsterdam, The Netherlands

Cisco has more than 200 offices worldwide. Addresses, phone numbers, and fax numbers are listed on the Cisco Website at [www.cisco.com/go/offices](http://www.cisco.com/go/offices).