



INDEX

A

AC-input power supplies

connection guidelines [B-5](#)

removing [2-29, 2-31](#)

airflow

specifications [B-3](#)

B

bracket

C, re-install [2-6, 2-13, 2-14](#)

brackets

front rack mount, installation [2-6, 2-13, 2-14](#)

C

cabinet and rack

requirements [A-1](#)

cabinets

perforated [A-2](#)

solid-walled [A-3](#)

cables

port pinouts [C-1](#)

cabling

console port [C-2](#)

chassis

description [2-1](#)

Cisco MDS 9120 switch [1-6](#)

installing rear-facing in cabinet [2-15](#)

Cisco MDS 9124 switch [1-5](#)

installing rear-facing in cabinet [2-17](#)

Cisco MDS 9134 Switch [1-3](#)

Cisco MDS 9134 switch

installing rear-facing in cabinet [2-17](#)

Cisco MDS 9140 switch [1-5](#)

installing rear-facing in cabinet [2-15](#)

Cisco MDS 9148 Switch [1-3](#)

components

removing and installing [2-25](#)

connector specifications

10/100BASE-T [C-4](#)

RJ-45 [3-4](#)

twisted-pair cables schematic (figure) [C-4](#)

console port

cabling [C-2](#)

connecting [3-1](#)

connecting to a modem [3-3](#)

connecting to a PC [3-2](#)

pinouts [C-2](#)

conventions

cautions [1-10](#)

description [1-10](#)

notes [1-10](#)

CWDM transceivers

description [1-18](#)

SFP transceiver specifications [B-10, B-12](#)

E

equipment

required [2-4](#)

Ethernet management port

connecting [3-4](#)

Send documentation comments to mdsfeedback-doc@cisco.com

F

- fan modules [1-8](#)
 - Cisco MDS 9124 and Cisco MDS 9134 switch [2-32](#)
 - Cisco MDS 9140 and Cisco MDS 9120 switch [2-32](#)
 - installing [2-34](#)
 - removing [2-32](#)
 - verifying [2-35](#)
- fiber optic cables
 - maintaining [3-9](#)
- Fibre Channel
 - SFP transceiver specifications [B-6](#)
 - supported SFP transceivers [1-17](#)
- Fibre Channel/Gigabit Ethernet
 - combination SFP transceivers [1-17](#)
- Fibre Channel Bladeswitch [1-6](#)
- Fibre Channel ports
 - checking [3-8](#)
 - connecting [3-8](#)
- front rack-mount brackets
 - installing [2-13](#)

G

- Gigabit Ethernet/Fibre Channel
 - SFP transceiver specifications [B-9](#)

H

- humidity
 - specifications [B-1](#)

I

- IBM BladeCenter [1-6](#)
- installation
 - cabinet or rack installation [2-5](#)
 - guidelines [2-3](#)

- options [2-2](#)
- pre-installation [2-2](#)
- rear-facing [2-15](#)

ISL [1-11](#)

L

- LC-type cables
 - connecting to Fibre Channel ports [3-8](#)
 - figure [3-8](#)
- LEDs
 - descriptions [1-15](#)

N

- network connections
 - preparing [3-1](#)
- notched slider rails
 - Cisco MDS 9124 switch [2-7](#)

P

- physical specifications [B-1](#)
- pinouts
 - console port [C-2](#)
- ports
 - bandwidth optimized [1-12](#)
 - host optimized [1-12](#)
 - on-demand ports on the Cisco MDS 9124 switch [1-12](#)
 - on-demand ports on the Cisco MDS 9134 switch [1-10](#)
 - on-demand ports on the Cisco MDS 9148 switch [1-9](#)
 - port group mapping on the Cisco MDS 9134 switch [1-9, 1-10](#)
- power cord, jumper [C-6](#)
- power supplies [1-7](#)
 - power consumption [1-7](#)
 - removing and installing [2-29](#)
 - specifications [B-3](#)
 - voltage specifications [B-3, B-4](#)

Send documentation comments to mdsfeedback-doc@cisco.com

See also AC-input power supplies

R

racks

- mounting guidelines [A-4](#)
- standard open [A-3](#)
- Telco [A-3](#)

records

- chassis and network information [D-4](#)

RJ-45

- connecting [3-4](#)

S

safety instructions [2-2](#)

SFP transceivers

- CWDM [1-18](#)
- description [1-17, 1-18](#)
- Fibre Channel [1-17](#)
- Fibre Channel/Gigabit Ethernet combination [1-17](#)
- maintaining [3-9](#)
- removing and installing cables into [3-7](#)
- specifications [B-6](#)
- supported [1-16](#)

specifications

- CWDM SFP transceivers [B-10, B-12](#)
- Gigabit Ethernet/Fibre Channel SFP transceivers [B-9](#)
- power [B-3](#)
- SFP transceivers [B-6](#)
- switch [B-1](#)
- X2 transceivers [B-17](#)

starting up

- initial start up [2-24](#)

switch LEDs [1-13](#)

system ground

- location [2-23](#)

T

technical specifications

- airflow [B-3](#)
- humidity [B-1](#)
- power supplies [B-3](#)
- temperature [B-1](#)
- voltage [B-3, B-4](#)

temperature

- specifications [B-1](#)

V

voltage

- specifications (table) [B-3, B-4](#)

X

X2 transceivers [1-4](#)

- specifications [B-17](#)

Send documentation comments to mdsfeedback-doc@cisco.com