



## CHAPTER 6

# Device Manager

---

This chapter describes how to use the Cisco MDS 9000 Device Manager. This chapter contains the following sections:

- [About Device Manager, page 6-1](#)
- [Launching Device Manager, page 6-3](#)
- [Using Device Manager, page 6-4](#)
- [Setting Device Manager Preferences, page 6-10](#)

## About Device Manager

Device Manager provides a graphic representation of a Cisco MDS 9000 Family switch chassis or Cisco Nexus 5000 Series switch chassis, including the installed switching modules, the supervisor modules, the status of each port within each module, the power supplies, and the fan assemblies.

Device Manager provides a graphical representation of a Cisco MDS 9000 Family switch chassis or Cisco Nexus 5000 Series switch chassis, including the installed switching modules, the supervisor modules, the status of each port within each module, the power supplies, and the fan assemblies.

The tables in the Fabric Manager Information pane basically correspond to the dialog boxes that appear in Device Manager. However, while Fabric Manager tables show values for one or more switches, a Device Manager dialog box shows values for a single switch. Also, Device Manager provides more detailed information for verifying or troubleshooting device-specific configuration than Fabric Manager.

Device Manager Release 4.2 and later provides enhanced security using multiple perspectives (simple and advanced) allowing role based-access to its features. The Device Manager perspective filters out menu items that are not relevant to the user. Users with server admin role, can only access a subset of the fabric related features. The server admin role will not be able to manage Device Manager users or connected clients.

Device Manager Release 5.0 and later supports all the software features that are offered by Cisco NX-OS for managing Cisco MDS 9148 and 9124 Multilayer Fabric switches. Cisco MDS 9148 Multilayer Fabric Switch is a 48-port (1/2/4/8G) FC 1RU switch based on the Sabre ASIC and Cisco MDS 9124 Multilayer Fabric switch is a 1/2/4/8G switch module for HP BladeServer based on the Sabre ASIC. Device Manager and Fabric Manager allow you to discover, display, configure, monitor, and service both these new switches.

### Support for Cisco Nexus 5000 Series Switches

Device Manager allows you to discover, display, configure, monitor, and service the following Cisco Nexus 5000 Series switches:

## Send documentation comments to [fm-docfeedback@cisco.com](mailto:fm-docfeedback@cisco.com)

- Cisco NX-OS Release 4.2(1)N2(1) supports the 2 RU (rack unit) Cisco Nexus 5020 switch. It has 40 10-Gigabit Ethernet host interfaces for its downlink connection to servers or hosts and supports two optional expansion modules (GEMs). It does not support Fibre Channel over Ethernet (FCoE).
- Cisco NX-OS Release 5.0(2)N1(1) supports the 1 RU (rack unit) Cisco Nexus 5548 switch. It has 32 10-Gigabit Ethernet and FCoE ports with small form-factor pluggable (SFP+) interface adapters for its downlink connection to servers or hosts. You can put the optional following expansion modules into the Cisco Nexus 5548 switch:
  - N55-M16P module—It has 16 10-Gigabit Ethernet and FCoE ports with SFP+ interface adapters for its uplink connections.
  - N55-M8P8FP module—It has eight 8-Gbps Fibre Channel interfaces and eight 10-Gigabit Ethernet and FCoE ports with SFP+ interface adapters for its uplink connections.



**Note** You can configure Fibre Channel or FCoE on the switch by enabling the HTTP server application. Use the **feature http-server** command to enable the HTTP server on the switch.

### Support for Cisco Nexus 2000 Series Fabric Extenders

Device Manager supports the following Cisco Nexus 2000 Series Fabric Extenders on a Cisco Nexus 5000 Series switch that runs Cisco NX-OS Release 4.2(1)N2(1) or later releases:

- Cisco Nexus 2148T Fabric Extender—It has four 10-Gigabit Ethernet fabric interfaces for its uplink connection to the parent Cisco Nexus 5000 Series switch and 48 1000BASE-T (1-Gigabit) Ethernet host interfaces for its downlink connection to servers or hosts.
- Cisco Nexus 2232PP Fabric Extender—It has eight 10-Gigabit Ethernet fabric interfaces with small form-factor pluggable (SFP+) interface adapters for its uplink connection to the parent Cisco Nexus 5000 Series switch and 32 10-Gigabit Ethernet fabric interfaces with SFP+ interface adapters for its downlink connection to servers or hosts.
- Cisco Nexus 2248TP Fabric Extender—It has four 10-Gigabit Ethernet fabric interfaces with small form-factor pluggable (SFP+) interface adapters for its uplink connection to the parent Cisco Nexus 5000 Series switch and 48 1000BASE-T (1-Gigabit) Ethernet host interfaces for its downlink connection to servers or hosts.
- Cisco Nexus N2224TP Fabric Extender—It has two 10-Gigabit Ethernet fabric interfaces with small form-factor pluggable (SFP+) interface adapters for its uplink connection to the parent Cisco Nexus 5000 Series switch, and 24 1000BASE-T (1-Gigabit) Ethernet host interfaces for its downlink connection to servers or hosts. It does not support Fibre Channel over Ethernet (FCoE).

Device Manager allows you to discover, display, configure, monitor, and view these Fabric Extenders.

## Device Manager Features

Device Manager provides two views: Device View and Summary View. Use Summary View to monitor interfaces on the switch. Use Device View to perform switch-level configurations including the following:

- Configure virtual Fibre Channel interfaces.
- Configure Fibre Channel over Ethernet (FCoE).
- Configure zones for multiple VSANs.
- Manage ports, PortChannels, and trunking.
- Manage SNMPv3 security access to switches.

***Send documentation comments to [fm-docfeedback@cisco.com](mailto:fm-docfeedback@cisco.com)***

- Manage CLI security access to the switch.
- Manage alarms, events, and notifications.
- Save and copy configuration files and software image.
- View hardware configuration.
- View chassis, module, port status, and statistics.

## Launching Device Manager

To launch Device Manager from your desktop, double-click the **Device Manager** icon and follow the instructions described in the “[Integrating Cisco Fabric Manager with Other Management Tools](#)” section on page 2-42.

To launch Device Manager, follow these steps:

- Step 1** You can choose one of the following:
- Right-click the switch you want to manage on the Fabric pane map and choose **Device Manager** from the menu that appears.
  - Double-click a switch in the Fabric pane map.
  - Select a switch in the Fabric pane map and choose **Tools > Device Manager**.

You see the Device Manager open dialog box as shown in [Figure 6-1](#)

**Figure 6-1** Device Manager: Open Dialog Box



- Step 2** Enter the IP address of the device.
- Step 3** Enter the user name and password.
- Step 4** Check the Proxy SNMP through FMS check box if you want Device Manager Client to use a TCP-based proxy server.


**Send documentation comments to [fm-docfeedback@cisco.com](mailto:fm-docfeedback@cisco.com)**

- Step 5** Choose the Auth-Privacy option according to the privacy protocol you have configured on your switch:
- If you have not configured the switch with a privacy protocol, then choose Auth-Privacy option MD5 (no privacy).
  - If you have configured the switch with your privacy protocol, choose your Auth-Privacy choice.
- Step 6** Click **Open** to open the Device Manager.

## Using Device Manager

This section describes the Device Manager interface as shown in [Figure 6-2](#).

**Figure 6-2** Device Manager, Device Tab

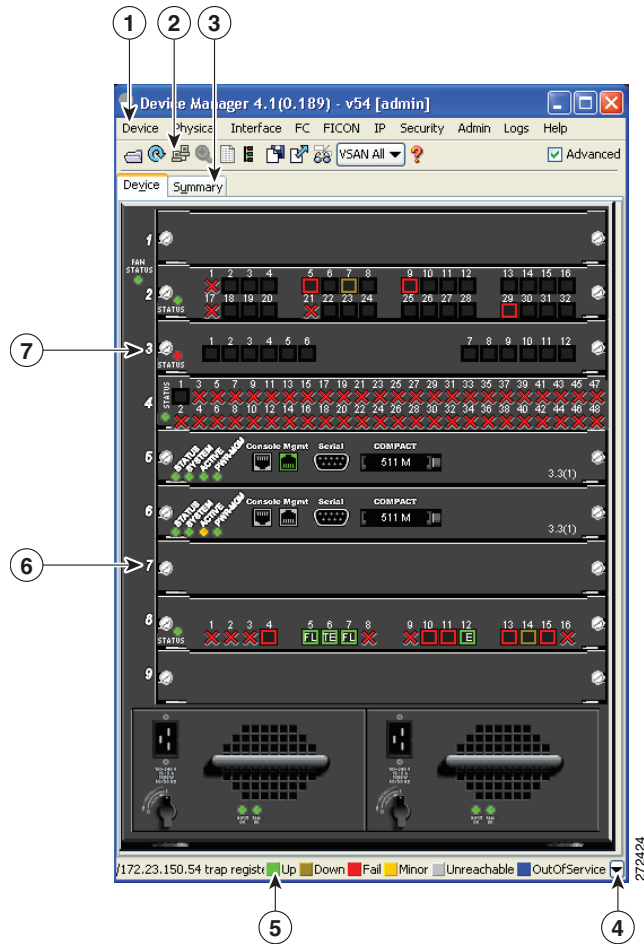

1 Menu bar

5 Status

***Send documentation comments to [fm-docfeedback@cisco.com](mailto:fm-docfeedback@cisco.com)***

2	Toolbar	6	Supervisor modules
3	Tabs	7	Switching or services modules
4	Legend		

## Menu Bar

The menu bar at the top of the Device Manager main window provides options for managing and troubleshooting a single switch. The menu bar provides the following options:

- **Device**—Opens an instance of Device Manager, sets management preferences, sets the page layout, opens a Telnet/SSH session with the current switch, exports a device image, and closes the Device Manager application.
- **Physical**—Allows you to view and manage inventory, modules, temperature sensors, power supplies, fans, and the entire system.
- **Interface**—Allows you to configure and manage PortChannels, as well as Fibre Channel, Ethernet, iSCSI, and FICON ports. Also provides diagnostic, management and monitoring capabilities, as well as SPAN and port tracking.



**Note** The Interface > Port Channels menu option does not appear if the Cisco Nexus 5000 Series switch is in NPV mode and runs a Cisco NX-OS release prior to 4.2(1).

- **FC**—Allows you to configure and manage VSAN, domain, and name server characteristics. Also provides advanced configuration capabilities.
- **FCoE**—Allows you to configure the FCoE parameters and map VSANs to VLANs on a Cisco Nexus 5000 Series switch.



**Note** The FCoE menu option appears only if the Cisco Nexus 5000 Series switch runs Cisco NX-OS Release 4.0(1a) or later releases.












- **FICON**—Allows you to configure and manage FICON VSANs, configure RLIR ERL information, swap selected FICON ports, and view FICON port numbers.
- **IP**—Allows you to configure and manage the following types of information: FCIP, iSCSI, iSNS, routes, VRRP, and CDP.
- **Security**—Allows you to configure and manage FCSP, port security, iSCSI security, SNMP security, common roles, SSH, AAA, and IP ACLs.
- **Admin**—Allows you to save, copy, edit, and erase the switch configuration, monitor events, manipulate Flash files, manage licenses, configure NTP, use CFS, and reset the switch. Also enables you to use the **show tech support**, **show cores**, and **show image** commands.
- **Logs**—Shows the various logs: message, hardware, events, and accounting. Also displays FICON link incidents, and allows you to configure the syslog setup.
- **Help**—Displays online help topics for specific dialog boxes in the Information pane.

***Send documentation comments to [fm-docfeedback@cisco.com](mailto:fm-docfeedback@cisco.com)***

## Toolbar Icons

The Device Manager toolbar provides quick access to many Device Manager features. Once the icon is selected, a dialog box may open that allows configuration of the feature. The toolbar provides the main Device and Summary View icons as shown in [Table 6-1](#).

**Table 6-1** Device Manager Main Toolbar

Icon	Description
 Open Device	Opens the Device Manager view for another switch, with the option to open this view in a separate window.
 Refresh Display	Communicates with the switch and displays the information in the Device Manager view.
 Command-Line Interface	Opens a separate CLI command window to the switch.
 Configure Selected	Opens a configuration dialog box for the selected component (line card or port).
 SysLog	Opens a window that lists the latest system messages that occurred on the switch.
 VSANs	Opens the VSAN dialog box that provides VSAN configuration for the switch.
 Save Configuration	Saves the current running configuration to the startup configuration.
 Copy	Copies configuration file between server and switch.
 Toggle FICON/Interface Port Labels	Toggles the FICON and interface port labels.
 Select VSAN	Filters the port display to show only those ports belonging to the selected VSAN.
 Help	Accesses online help for Device Manager.

[Send documentation comments to fm-docfeedback@cisco.com](mailto:fm-docfeedback@cisco.com)

## Dialog Boxes

If a toolbar icon is selected, a dialog box may open that allows configuration of the selected feature. The dialog box may include table manipulation icons. See the “[Information Pane](#)” section on page 5-13 for descriptions of these icons.

## Tabs

Click the **Device** tab on the Device Manager main window to see a graphical representation of the switch chassis and components.



**Note**

---

The Device view also shows the switch chassis information of the Cisco Nexus 2000 Series Fabric Extenders (FEXs) that are connected to a Cisco Nexus 5000 Series switch that runs Cisco NX-OS Release 4.2(1)N2(1) or later releases.

---

Click the **Summary** tab on the Device Manager main window to see a summary of active interfaces on a single switch, as well as Fibre Channel and IP neighbor devices. The Summary View also displays port speed, link utilization, and other traffic statistics. There are two buttons in the upper left corner of the Summary View tab used to monitor traffic. To monitor traffic for selected objects, click the **Monitor Selected Interface Traffic Util%** button. To display detailed statistics for selected objects, click the **Monitor Selected Interface Traffic Details** button. You can set the poll interval, the type or Rx/Tx display, and the thresholds.



**Note**

---

The Summary tab does not display the utilization statistics (Util%) of virtual Fibre Channel interfaces for Cisco Nexus 5000 Series switches that run Cisco NX-OS Release 4.2 or later releases.

---

## Legend

The legend at the bottom right of the Device Manager indicates port status, as follows:

### Colors

- Green—The port is up.
- Brown—The port is administratively down.
- Red—The port is down or has failed.
- Amber—The port has a minor fault condition.
- Gray—The port is unreachable.
- Blue—The port is out of service.

### Labels

- X—Link failure
- E—ISL
- TE—Multi-VSAN ISL
- F—Host/storage
- FL—F loop

## Send documentation comments to [fm-docfeedback@cisco.com](mailto:fm-docfeedback@cisco.com)

- I— iSCSI
- SD—SPAN destination
- CH—Channel
- CU—Control Unit
- NP—Proxy N-Port (NPV Mode)
- TNP—Trunking NP\_Port (NPV Mode)
- TF—Trunking F\_Port
- f—vFC Present (Cisco Nexus 5000 Series switches only)

## Supervisor and Switching Modules

In the Device View, you can right-click an object and get information on it, or configure it. If you right-click a module, the menu shows the module number and gives you the option to configure or reset the module. If you right-click a port, the menu shows the port number and gives you the option to configure, monitor, enable/disable, set beacon mode, or perform diagnostics on the port.



### Tip

You can select multiple ports in Device Manager and apply options to all the selected ports at one time. Either select the ports by clicking the mouse and dragging it around them, or hold down the **Control** key and click each port.

To enable or disable a port, right-click the port and click **Enable** or **Disable** from the pop-up menu. To enable or disable multiple ports, drag the mouse to select the ports and then right-click the selected ports. Then click **Enable** or **Disable** from the pop-up menu.

To manage trunking on one or more ports, right-click the ports and click **Configure**. In the dialog box that appears, right-click the current value in the Trunk column and click **nonTrunk**, **trunk**, or **auto** from the pull-down list.

To create PortChannels using Device Manager, click **PortChannels** from the Interface menu.



### Note

To create a PortChannel, all the ports on both ends of the link must have the same port speed, trunking type, and administrative state.

## Context Menus

Context menus are available in both Device Manager views by right-clicking a device or table.

From Device View:

- Device—Right-click a system, module, or power supply to bring up a menu that gives you the option to configure or reset the device.
- Port— Right-click a port to bring up a menu that shows you the number of the port you have clicked, and to give you the option to configure, monitor, enable, disable, set beacon mode, or perform diagnostics on the port.

From Summary View:



***Send documentation comments to [fm-docfeedback@cisco.com](mailto:fm-docfeedback@cisco.com)***

- Table— Right-click the table header to show a list of which columns to display in that table: Interface, Description, VSANs, Mode, Connected To, Speed (Gb), Rx, Tx, Errors, Discards, and Log. Click the Description field to bring up the appropriate configuration dialog box for the port type.

*Send documentation comments to [fm-docfeedback@cisco.com](mailto:fm-docfeedback@cisco.com)*

## Setting Device Manager Preferences

To set your preferences for the behavior of the Device Manager application, choose **Device > Preferences** from the Device menu. You can set the following preferences:

- **Retry Requests x Time(s) After x sec Timeout**—Allows you to set the retry request values. The default settings are 1 time after a 5-second timeout.
- **Enable Status Polling Every x secs**—Allows you to set the status polling value. The default setting is enabled (checked) with a time of 40 seconds.
- **Trace SNMP Packets in Message Log**—Allows you to set whether Device Manager traces SNMP packets and logs the trace. The default setting is disabled (unchecked).
- **Register for Events After Open, Listen on Port 1163**—Allows you to register this switch so that events are logged once you open Device Manager. The default setting is enabled (checked).
- **Show WorldWideName (WWN) Vendor**—Displays the world wide name vendor name in any table or listing displayed by Device Manager. If **Prepend** is checked, the name is displayed in front of the IP address of the switch. If **Replace** is checked, the name is displayed instead of the IP address. The default setting is enabled (checked) with the **Prepend** option.
- **Show Timestamps as Date/Time**—Displays timestamps in the date/time format. If this preference is not checked, timestamps are displayed as elapsed time. The default setting is enabled (checked).
- **Telnet Path**—Sets the path for the telnet.exe file on your system. The default is **telnet.exe**, but you need to browse for the correct location.




---

**Note** If you browse for a path or enter a path and you have a space in the pathname (for example, **c:\program files\telnet.exe**, then the path will not work. To get the path to work, manually place quotes around it (for example, "**c:\program files\telnet.exe**").

---

- **CLI Session Timeout x secs (0= disable)**—Specifies the timeout interval for a CLI session. Enter 0 to disable (no timeout value). The default setting is 30 seconds.
- **Show Tooltips in Physical View**—Determines whether tooltips are displayed in Physical (Device) View. The default setting is enabled (checked).
- **Label Physical View Ports With:**—Specifies the type of label to assign to the ports when you are in Physical (Device) View. The options are FICON and Interface. The default setting is Interface.
- **Export Table**—Specifies the type of file that is created when you export a table using Device Manager. The options are Tab-Delimited or XML. The default setting is Tab-Delimited.