

*Send documentation comments to [mdsfeedback-doc@cisco.com](mailto:mdsfeedback-doc@cisco.com)*



## CHAPTER **25**

# V Commands

---

The commands in this chapter apply to the Cisco MDS 9000 Family of multilayer directors and fabric switches. All commands are shown here in alphabetical order regardless of command mode. See [“About the CLI Command Modes”](#) section on page 1-3 to determine the appropriate mode for each command.

***Send documentation comments to [mdsfeedback-doc@cisco.com](mailto:mdsfeedback-doc@cisco.com)***

## virtual-domain (SDV virtual device configuration submode)

To configure a persistent virtual domain, use the **virtual-domain** command in SDV virtual device configuration submode. To remove a persistent virtual domain, use the **no** form of the command.

**virtual-domain** *domain-name*

**no virtual-domain** *domain-name*

<b>Syntax Description</b>	<i>domain-name</i>	Specifies the persistent virtual domain. The range is 1 to 239 or 0x1 to 0xef.						
<b>Defaults</b>	No virtual domains are configured by default.							
<b>Command Modes</b>	SDV virtual device configuration submode.							
<b>Command History</b>	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>3.1(2)</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	3.1(2)	This command was introduced.			
Release	Modification							
3.1(2)	This command was introduced.							
<b>Usage Guidelines</b>	None.							
<b>Examples</b>	<p>The following example shows how to configure a persistent virtual domain:</p> <pre>switch# <b>config terminal</b> Enter configuration commands, one per line. End with CNTL/Z. switch(config)# <b>sdv virtual-device name sqal vsan 1</b> switch(config-sdv-virt-dev)# <b>virtual-domain 1</b></pre>							
<b>Related Commands</b>	<table border="1"> <thead> <tr> <th>Command</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td><b>sdv enable</b></td> <td>Enables or disables SAN device virtualization.</td> </tr> <tr> <td><b>show sdv statistics</b></td> <td>Displays SAN device virtualization statistics.</td> </tr> </tbody> </table>	Command	Description	<b>sdv enable</b>	Enables or disables SAN device virtualization.	<b>show sdv statistics</b>	Displays SAN device virtualization statistics.	
Command	Description							
<b>sdv enable</b>	Enables or disables SAN device virtualization.							
<b>show sdv statistics</b>	Displays SAN device virtualization statistics.							

*Send documentation comments to [mdsfeedback-doc@cisco.com](mailto:mdsfeedback-doc@cisco.com)*

## virtual-fcid (SDV virtual device configuration submode)

To configure a persistent virtual FC ID, use the **virtual-fcid** command in SDV virtual device configuration submode. To remove a persistent virtual FC ID, use the **no** form of the command.

```
virtual-fcid fc-id
```

```
no virtual-fcid fc-id
```

<b>Syntax Description</b>	<i>fc-id</i>	Specifies the persistent virtual FC ID. The format is <i>0xhhhhhh</i> , where <i>h</i> is a hexadecimal number.
---------------------------	--------------	---

<b>Defaults</b>	No virtual FC IDs are configured by default.
-----------------	--

<b>Command Modes</b>	SDV virtual device configuration submode.
----------------------	---

Command History	Release	Modification
	3.1(2)	This command was introduced.

<b>Usage Guidelines</b>	None.
-------------------------	-------

**Examples** The following example shows how to configure a persistent virtual FC ID:

```
switch# config terminal
Enter configuration commands, one per line. End with CNTL/Z.
switch(config)# sdv virtual-device name sqal vsan 1
switch(config-sdv-virt-dev)# virtual-fcid 0xd66e54
```

Related Commands	Command	Description
	<b>sdv enable</b>	Enables or disables SAN device virtualization.
<b>show sdv statistics</b>	Displays SAN device virtualization statistics.	

[Send documentation comments to mdsfeedback-doc@cisco.com](mailto:mdsfeedback-doc@cisco.com)

## vrrp

To enable VRRP, use the **vrrp** command in configuration mode. Use the **no** form of the command to revert to the factory defaults or to negate a command.

```
vrrp ipv4-vr-group-number {address ip-address [secondary] | advertisement-interval seconds |
authentication {md5 keyname spi index | text password} | preempt | priority value |
shutdown | track interface {mgmt 0 | vsan vsan-id} ipv6 ipv6-vr-group-number {address
ipv6-address | advertisement-interval centiseconds | preempt | priority value | shutdown |
track interface {mgmt 0 | vsan vsan-id} }
```

```
vrrp ipv4-vr-group-number address ip-address [secondary] | advertisement-interval seconds |
authentication {md5 keyname spi index | text password} | preempt | priority value |
shutdown | track interface {mgmt 0 | vsan vsan-id} ipv6 ipv6-vr-group-number {address
ipv6-address | advertisement-interval centiseconds | preempt | priority value | shutdown |
track interface {mgmt 0 | vsan vsan-id} }
```

### Syntax Description

<i>ipv4-vr-group-number</i>	Specifies an IPv4 virtual router group number. The range is 1 to 255.
<b>address</b> <i>ip-address</i>	Adds or removes an IP address to the virtual router.
<b>secondary</b>	(Optional) Configures a virtual IP address without an owner.
<b>advertisement-interval</b> <i>seconds</i>	Sets the time interval between advertisements. For IPv4, the range is 1 to 255 seconds.
<b>authentication</b>	Configures the authentication method.
<b>md5</b> <i>keyname</i>	Sets the MD5 authentication key. Maximum length is 16 characters.
<b>spi</b> <i>index</i>	Sets the security parameter index. The range is 0x0 to 0xfffff.
<b>text</b> <i>password</i>	Sets an authentication password. Maximum length is 8 characters.
<b>preempt</b>	Enables preemption of lower priority master.
<b>priority</b> <i>value</i>	Configures the virtual router priority. The range is 1 to 254.
<b>shutdown</b>	Disables the VRRP configuration.
<b>track</b>	Tracks the availability of another interface.
<b>interface</b> <i>fc slot/port</i>	Adds a member using the Fibre Channel interface to a Cisco MDS 9000 Family switch.
<b>mgmt 0</b>	Specifies the management interface.
<b>vsan</b> <i>vsan-id</i>	Specifies a VSAN ID. The range is 1 to 4093.
<b>ipv6</b> <i>ipv6-vr-group-number</i>	Specifies VRRP IPv6 on the interface. The range is 1 to 255.
<b>address</b> <i>ipv6-address</i>	Adds or removes an IPv6 address to the virtual router.
<b>advertisement-interval</b> <i>centiseconds</i>	Sets the time interval between advertisements. For IPv6, the range is 100 to 4095 centiseconds.

### Defaults

Disabled.

### Command Modes

Interface configuration mode.

## Send documentation comments to [mdsfeedback-doc@cisco.com](mailto:mdsfeedback-doc@cisco.com)

Command History	Release	Modified
	1.0(2)	This command was introduced.
	3.0(1)	<ul style="list-style-type: none"> <li>Added the <b>IPv6</b> option.</li> <li>Added the <b>address</b> and <b>advertisement-interval</b> options that are specific to IPv6.</li> </ul>

### Usage Guidelines

You enter the Virtual Router configuration submode to access the options for this command. From the VSAN or mgmt0 (management) interface configuration submode, enter **vrrp number** to enter the switch(config-if-vrrp)# prompt. By default, a virtual router is always disabled (**shutdown**). VRRP can be configured only if this state is disabled. Be sure to configure at least one IP address before attempting to enable a virtual router.

The total number of of VRRP groups that can be configured on a Gigabit Ethernet port, including main interfaces and subinterfaces, cannot exceed seven. This limitation applies to both IPv4 and IPv6 groups.



#### Note

If you configure secondary VRRP IPv6 addresses on an IPFC VSAN interface, you must remove the secondary VRRP IPv6 addresses before downgrading to a release prior to Cisco Release 3.0(1). This is required only when you configure IPv6 addresses.

### Examples

The following example enables VRRP configuration:

```
switch(config-if-vrrp) # no shutdown
```

The following example disables VRRP configuration:

```
switch(config-if-vrrp) # shutdown
```

The following example configures an IPv4 address for the selected VRRP:

```
switch# config terminal
switch(config)# interface vsan 1
switch(config-if)# vrrp 250
switch(config-if-vrrp)# address 10.0.0.10
```

### Related Commands

Command	Description
<b>clear vrrp</b>	Clears all the software counters for the specified virtual router.
<b>show vrrp</b>	Displays VRRP configuration information.

***Send documentation comments to [mdsfeedback-doc@cisco.com](mailto:mdsfeedback-doc@cisco.com)***

## vsan (iSCSI initiator configuration and iSLB initiator configuration)

To assign an iSCSI or iSLB initiator to a VSAN other than the default VSAN, use the **vsan** command in iSCSI initiator configuration submode or iSLB initiator configuration submode. To disable this feature, use the **no** form of the command.

```
vsan vsan-id
```

```
no vsan vsan-id
```

<b>Syntax Description</b>	<i>vsan-id</i>	Specifies a VSAN ID. The range 1 to 4093.
---------------------------	----------------	---

<b>Defaults</b>	None.
-----------------	-------

<b>Command Modes</b>	iSCSI initiator configuration submode. iSLB initiator configuration submode.
----------------------	---

<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	1.3(2)	This command was introduced.
3.0(1)	Added iSLB initiator configuration submode.	

<b>Usage Guidelines</b>	When you configure an iSLB initiator in a VSAN other than VSAN 1 (the default VSAN), the initiator is automatically removed from VSAN 1. For example, if you configure an iSLB initiator in VSAN 2 and you also want it to be present in VSAN 1, you must explicitly configure the initiator in VSAN 1.
-------------------------	---

<b>Examples</b>	The following example assigns an iSCSI initiator to a VSAN other than the default VSAN:
-----------------	---

```
switch# config terminal
Enter configuration commands, one per line. End with CNTL/Z.
switch(config)# iscsi initiator name iqn.1987-02.com.cisco.initiator
switch(config-iscsi-init)# vsan 40
switch(config-iscsi-init)#
```

The following example assigns an iSLB initiator to a VSAN other than the default VSAN:

```
switch# config t
switch(config)# islb initiator ip-address 100.10.10.10
ips-hac2(config-islb-init)# vsan ?
<1-4093> Enter VSAN
ips-hac2(config-islb-init)# vsan 10
```

The following example removes the iSLB initiator:

```
switch (config-islb-init)# no vsan 10
```

***Send documentation comments to [mdsfeedback-doc@cisco.com](mailto:mdsfeedback-doc@cisco.com)***

<b>Related Commands</b>	<b>Command</b>	<b>Description</b>
	<b>iscsi initiator name</b>	Assigns an iSCSI name and changes to iSCSI initiator configuration submode.
	<b>show islb initiator</b>	Displays iSLB initiator information.
	<b>show iscsi initiator</b>	Displays information about a configured iSCSI initiator.
	<b>show iscsi initiator configured</b>	Displays iSCSI initiator information for the configured iSCSI initiator.
	<b>show iscsi initiator detail</b>	Displays detailed iSCSI initiator information.
	<b>show iscsi initiator summary</b>	Displays iSCSI initiator summary information.
	<b>show islb initiator</b>	Displays iSLB initiator information.
	<b>show islb initiator configured</b>	Displays iSLB initiator information for the configured iSLB initiator.
	<b>show islb initiator detail</b>	Displays detailed iSLB initiator information.
	<b>show islb initiator summary</b>	Displays iSLB initiator summary information.

[Send documentation comments to mdsfeedback-doc@cisco.com](mailto:mdsfeedback-doc@cisco.com)

## vsan database

To create multiple fabrics sharing the same physical infrastructure, assign ports to VSANs, turn on or off interop mode, load balance either per originator exchange or by source-destination ID, and enter VSAN database submode, enable the load balancing guarantee for the selected VSAN and direct the switch to use the source and destination ID for its path selection process, use the **vsan database** command. To remove a configuration, use the **no** command in VSAN database submode.

```
vsan database vsan vsan-id [interface fc slot/port | fcip fcip-id | fv slot/dpp-number/fv-port | iscsi
slot/port | port-channel portchannel-number.subinterface-number] | interop [mode]
[loadbalancing {src-dst-id | src-dst-ox-id}] | loadbalancing {src-dst-id | src-dst-ox-id} |
name name [interop [mode] [loadbalancing {src-dst-id | src-dst-ox-id}] | loadbalancing
{src-dst-id | src-dst-ox-id} | suspend [interop [mode] [loadbalancing {src-dst-id |
src-dst-ox-id}] | loadbalancing {src-dst-id | src-dst-ox-id}] | suspend [interop [mode]
[loadbalancing {src-dst-id | src-dst-ox-id}] | loadbalancing {src-dst-id | src-dst-ox-id}]]]
```

```
no vsan database vsan vsan-id [interface {fc slot/port | fcip fcip-id | fv slot/dpp-number/fv-port |
iscsi slot/port | port-channel portchannel-number.subinterface-number} | interop [mode]
[loadbalancing {src-dst-id | src-dst-ox-id}] | loadbalancing {src-dst-id | src-dst-ox-id} |
name name [interop [mode] [loadbalancing {src-dst-id | src-dst-ox-id}] | loadbalancing
{src-dst-id | src-dst-ox-id} | suspend [interop [mode] [loadbalancing {src-dst-id |
src-dst-ox-id}] | loadbalancing {src-dst-id | src-dst-ox-id}] | suspend [interop [mode]
[loadbalancing {src-dst-id | src-dst-ox-id}] | loadbalancing {src-dst-id | src-dst-ox-id}]]]
```



### Note

On a Cisco Fabric Switch for HP c-Class BladeSystem and on a Cisco Fabric Switch for IBM BladeCenter, the syntax differs as follows:

```
interface bay port | ext port
```

### Syntax Description

<b>vsan</b> <i>vsan-id</i>	Specifies the VSAN ID. The range is 1 to 4093.
<b>interface fc</b> <i>slot/port</i>	(Optional) Specifies the Fibre Channel interface by slot and port number on a Cisco MDS 9000 Family switch.
<b>interface bay</b> <i>port</i>   <b>ext</b> <i>port</i>	(Optional) Specifies the Fibre Channel interface by port number on a Cisco Fabric Switch for HP c-Class BladeSystem or on a Cisco Fabric Switch for IBM BladeCenter. The range is 0 to 48.
<b>fcip</b> <i>fcip-id</i>	(Optional) Specifies the FCIP interface on a Cisco MDS 9000 Family switch.
<b>fv</b> <i>slot/dpp-number/fv-port</i>	Configures the virtual F port (FV port) interface in the specified slot along with the data path processor (DPP) number and the FV port number.
<b>iscsi</b> <i>slot/port</i>	(Optional) Configures the iSCSI interface in the specified slot/port on a Cisco MDS 9000 Family switch.
<b>port-channel</b> <i>portchannel-number.subinterface-number</i>	Configures the PortChannel interface specified by the PortChannel number followed by a dot (.) indicator and the subinterface number.
<b>interop</b>	Turns on interoperability mode.
<i>mode</i>	Specifies the interop mode. The range is 1 to 4.
<b>loadbalancing</b>	Configures load-balancing scheme.



## Send documentation comments to [mdsfeedback-doc@cisco.com](mailto:mdsfeedback-doc@cisco.com)

<b>src-dst-id</b>	Sets src-id/dst-id for load-balancing.
<b>src-dst-ox-id</b>	Sets ox-id/src-id/dst-id for load-balancing (default).
<b>name</b> <i>name</i>	Assigns a name to the VSAN. Maximum length is 32 characters.
<b>suspend</b>	Suspends the VSAN.

### Defaults

None.

### Command Modes

Configuration mode.

### Command History

Release	Modification
1.2(2)	This command was introduced.
3.0(1)	Increased the interop mode range to 4.
3.1(2)	Added the <b>interface bay   ext</b> option.

### Usage Guidelines

Change to VSAN database submode to issue this command.

The interface range must be in ascending order and non-overlapping. You can specify a range using a hyphen and several interfaces using commas:

- The interface range format for a FC interface range is `fcslot/port - port , fcslot/port , fcslot/port`  
(For example, `show int fc1/1 - 3 , fc1/5 , fc2/5`)
- The interface range format for a FV interface range is `fvslot/dpp/fvport - fvport , fvslot/dpp/port , fvslot/dpp/port`  
(For example, `show int fv2/1/1 - 3 , fv2/1/5 , fv2/2/5`)
- The format for a PortChannel is `port-channel portchannel-number.subinterface-number`  
(For example, `show int port-channel 5.1`)

There are four interop modes:

- Interop mode 1 - Standards based interop mode that requires all other vendors in the fabric to be in interop mode.
- Interop mode 2 - Brocade native mode (Core PID 0).
- Interop mode 3 - Brocade native mode (Core PID 1).
- Interop mode 4 - McData native mode.



#### Note

Before you configure Interop mode 4 (or remove the configuration), you must suspend the VSAN. You should unsuspend the VSAN only after you configure a VSAN-dependent switch WWN with the McData OUI [08:00:88].

***Send documentation comments to [mdsfeedback-doc@cisco.com](mailto:mdsfeedback-doc@cisco.com)***

### Examples

The following examples show how to create multiple fabrics sharing the same physical infrastructure and how to assign ports to VSANs:

```
switch# config terminal
switch(config)# vsan database
switch(config-db)#
switch-config-db# vsan 2
switch(config-vsan-db)# vsan 2 name TechDoc
updated vsan 2
switch(config-vsan-db)# vsan 2 loadbalancing src-dst-id
switch(config-vsan-db)# vsan 2 loadbalancing src-dst-ox-id
switch(config-vsan-db)# vsan 2 suspend
switch(config-vsan-db)# no vsan 2 suspend
switch(config-vsan-db)# vsan 2 interface fv2/8/2
switch(config-vsan-db)# vsan 2 interface iscsi 2/1
switch(config-vsan-db)# end
switch#
```

The following example shows how to suspend a VSAN and enable interop mode 4:

```
switch# config t
switch(config)# vsan database
switch(config-vsan-db)# vsan 100 suspend
switch(config-vsan-db)# vsan 100 interop 4
switch(config-vsan-db)# exit
```

### Related Commands

Command	Description
<b>vsan wwn</b>	Configures a WWN for a suspended VSAN that has interop mode 4 enabled.

[Send documentation comments to mdsfeedback-doc@cisco.com](mailto:mdsfeedback-doc@cisco.com)

## vsan policy deny

To configure a VSAN-based role, use the **vsan policy deny** command in configuration mode. Use the **no** form of this command to delete a configured role.

**vsan policy deny permit vsan** *vsan-id*

**no vsan policy deny permit vsan** *vsan-id*

### Syntax Description

<b>permit</b>	Remove commands from the role.
<b>vsan</b> <i>vsan-id</i>	Specifies the VSAN ID. The range is 1 to 4093.

### Defaults

Permit.

### Command Modes

Configuration mode—role name submode.

### Command History

Release	Modification
1.2(1)	This command was introduced.

### Usage Guidelines

You can configure a role so that it only allows commands to be performed for a selected set of VSANs. By default, the VSAN policy of a role is **permit**. In other words, the role can perform commands configured by the **rule** command in all VSANs. In order to selectively allow VSANs for a role, the VSAN policy needs to be set to **deny** and then the appropriate VSANs need to be permitted.

### Examples

The following example places you in sangroup role submode:

```
switch# config t
switch(config)# role name sangroup
switch(config-role)#
```

The following example changes the VSAN policy of this role to deny and places you in a submode where VSANs can be selectively permitted:

```
switch(config)# vsan policy deny
switch(config-role-vsan)
```

The following example deletes the configured VSAN role policy and reverts to the factory default (permit):

```
switch(config-role)# no vsan policy deny
```

The following example permits this role to perform the allowed commands for VSANs 10 through 30:

```
switch(config-role)# permit vsan 10-30
```

The following example removes the permission for this role to perform commands for VSAN 15 to 20:

```
switch(config-role-vsan)# no permit vsan 15-20
```

***Send documentation comments to [mdsfeedback-doc@cisco.com](mailto:mdsfeedback-doc@cisco.com)***