



CHAPTER 5

Scheduling Maintenance Jobs

The Cisco MDS command scheduler feature helps you schedule configuration and maintenance jobs in any switch in the Cisco MDS 9000 Family. You can use this feature to schedule jobs on a one-time basis or periodically.

This chapter includes the following sections:

- [About the Command Scheduler, page 5-1](#)
- [Configuring the Command Scheduler, page 5-2](#)
- [Execution Logs, page 5-9](#)
- [Default Settings, page 5-10](#)

About the Command Scheduler

The Cisco NX-OS command scheduler provides a facility to schedule a job (set of CLI commands) or multiple jobs at a specified time in the future. The job(s) can be executed once at a specified time in the future or at periodic intervals.



Note

To use the command scheduler, you do not need to obtain any license.

You can use this feature to schedule zone set changes, make QoS policy changes, back up data, save the configuration and do other similar jobs.

Scheduler Terminology

The following terms are used in this chapter.

- **Job**—A job is a set of NX-OS CLI commands (EXEC and config mode) that are executed as defined in the schedule.
- **Schedule**—A schedule determines the time when the assigned jobs must be executed. Multiple jobs can be assigned to a schedule. A schedule executes in one of two modes: one-time or periodic.
- **Periodic mode**—A job is executed at the user-specified periodic intervals, until it is deleted by the administrator. The following types of periodic intervals are supported:
 - **Daily**—The job is executed once a day.
 - **Weekly**—The job is executed once a week.

Send documentation comments to mdsfeedback-doc@cisco.com

- Monthly—The job is executed once a month.
- Delta—The job is executed beginning at the specified start time and thereafter at user-specified intervals (days:hours:minutes).
- One-time mode—The job is executed once at a user-specified time.

Scheduling Guidelines

Before scheduling jobs on a Cisco MDS switch, be aware of the following guidelines:

- Prior to Cisco MDS SAN-OS Release 3.0(3), only users local to the switch could perform scheduler configuration. As of Cisco MDS SAN-OS Release 3.0(3), remote users can perform job scheduling using AAA authentication.
- Be aware that the scheduled job can fail if it encounters one of the following situations when executing the job:
 - If the license has expired for a feature at the time when a job containing commands pertaining to that feature is scheduled.
 - If a feature is disabled at the time when a job containing commands pertaining to that feature is scheduled.
 - If you have removed a module from a slot and the job has commands pertaining to the interfaces for that module or slot.
- Verify that you have configured the time. The scheduler does not have any default time configured. If you create a schedule and assign job(s) and do not configure the time, that schedule is not launched.
- While defining a job, verify that no interactive or disruptive commands (for example, **copy bootflash: file ftp: URI, write erase**, and other similar commands) are specified as part of a job because the job is executed noninteractively at the scheduled time.

Configuring the Command Scheduler

To configure the command scheduler, follow these steps:

-
- Step 1** Enable the scheduler.
 - Step 2** Authorize remote user access (optional).
 - Step 3** Define the job.
 - Step 4** Specify the schedule and assign jobs to the schedule.
 - Step 5** Specify the time for the schedule(s).
 - Step 6** Verify the scheduled configuration.
-

This section includes the following topics:

- [Enabling the Command Scheduler, page 5-3](#)
- [Configuring Remote User Authentication, page 5-3](#)
- [Defining a Job, page 5-4](#)

Send documentation comments to mdsfeedback-doc@cisco.com

- [Specifying a Schedule](#), page 5-6
- [Verifying the Command Scheduler Execution Status](#), page 5-9

Enabling the Command Scheduler

To use the scheduling feature, you must explicitly enable this feature on the required switches in the fabric. By default, this feature is disabled in all switches in the Cisco MDS 9000 Family.

The configuration and verification commands for the command scheduler feature are only available when this feature is enabled on a switch. When you disable this feature, all related configurations are automatically discarded.

To enable the command scheduling feature, follow these steps:

	Command	Purpose
Step 1	switch# config t	Enters configuration mode.
Step 2	switch(config)# feature scheduler	Enables the command scheduler.
	switch(config)# no feature scheduler	Discards the scheduler configuration and disables the command scheduler (default).

To display the command schedule status, use the **show scheduler config** command.

```
switch# show scheduler config
config terminal
  feature scheduler
  scheduler logfile size 16
end
```

Configuring Remote User Authentication

Prior to Cisco MDS SAN-OS Release 3.0(3), only users local to the switch could perform scheduler configuration. As of Cisco MDS SAN-OS Release 3.0(3), remote users can perform job scheduling using AAA authentication.



Note

AAA authentication requires the clear text password of the remote user before creating and configuring command scheduler jobs.

Send documentation comments to mdsfeedback-doc@cisco.com

To configure remote user authentication, follow these steps:

	Command	Purpose
Step 1	<code>switch# config t</code>	Enters configuration mode.
Step 2	<code>switch(config)# scheduler aaa-authentication password X12y34Z56a</code>	Configures a clear text password for remote users.
Step 3	<code>switch(config)# scheduler aaa-authentication password 0 X12y34Z56a</code>	Configures a clear text password for remote users.
Step 4	<code>switch(config)# no scheduler aaa-authentication password</code>	Removes the clear text password for remote users.
Step 5	<code>switch(config)#scheduler aaa-authentication user newuser password Z98y76X54b</code>	Configures a clear text password for remote user newuser.
Step 6	<code>switch(config)#scheduler aaa-authentication user newuser password 0 Z98y76X54b</code>	Configures a clear text password for remote user newuser.
Step 7	<code>switch(config)# no scheduler aaa-authentication password user newuser</code>	Removes the clear text password for remote user newuser.

To display the scheduler password configuration for remote users, use the **show running-config** command.

```
switch# show running-config | include "scheduler aaa-authentication"
scheduler aaa-authentication username newuser password 7 "C98d76S54e"
```



Note

The scheduler remote user passwords are always displayed in encrypted form in the **show running-config** command output. The encrypted option (7) in the command exists to support applying the ASCII configuration to the switch.

Defining a Job

To define a job, you must specify the job name. This action places you in the job definition (config-job) submode. In this submode, you can define the sequence of CLI commands that the job has to perform. Be sure to exit the config-job submode to complete the job definition.



Note

- Job configuration files created using MDS NX-OS or SAN-OS releases before Cisco MDS NX-OS Release 4.1(1b) are not supported. However, you can edit the job configuration file and combine the commands within a job into a single line using a semicolon (;).
- You must exit the config-job submode for the job definition to be complete.
- You cannot modify or remove a command after exiting the config-job submode. To make changes, you must explicitly delete the defined job name and then reconfigure the job with new commands.

Send documentation comments to mdsfeedback-doc@cisco.com

To define a job for the command scheduler, follow these steps:

	Command	Purpose
Step 1	switch# conf t switch(config)#	Enters the configuration mode.
Step 2	switch(config)# scheduler job name addMemVsan99 switch(config-job)#	Defines a job name and enters the job definition submode
Step 3	switch(config-job)# <i>command1</i> ; [<i>command2</i> ; <i>command3</i> ; ...] switch(config-job-submode)# end switch# Example 1: switch(config-job)# config terminal ;vsan database;vsan 99 interface fc1/1 - 4 switch(config-job-config-vsan-db)# end switch# Example 2: switch(config)# scheduler job name offpeakQOS switch(config-job)# conf t ; qos class-map offpeakbackupcmap match-all ; match source-wnn 23:15:00:05:30:00:2a:1f ; match destination-wnn 20:01:00:05:30:00:28:df ;exit ; qos policy-map offpeakbackuppolicy ; class offpeakbackupcmap ; priority high ; exit ; exit ; qos service policy offpeakbackuppolicy vsan 1 switch(config-job)# end switch#	Specifies a sequence of actions for the specified job. The defined commands are checked for validity and stored for future use. Note Be sure you exit the config-job submode.
Step 4	exit Example: switch(config-job)# exit switch(config)#	Exits the job configuration mode and saves the job.
Step 5	show scheduler job [<i>name</i>] Example: switch(config)# show scheduler job	(Optional) Displays the job information.
Step 6	copy running-config startup-config Example: switch(config)# copy running-config startup-config	(Optional) Saves this configuration change.

Verifying the Job Definition

To verify the job definition, use the **show scheduler job** command.

```
switch# show scheduler job addMemVsan99
Job Name: addMemVsan99
-----
config terminal
vsan database
vsan 99 interface fc1/1
vsan 99 interface fc1/2
vsan 99 interface fc1/3
```

Send documentation comments to mdsfeedback-doc@cisco.com

```
vsan 99 interface fc1/4
```

Deleting a Job

To delete a job for the command scheduler, follow these steps:

	Command	Purpose
Step 1	switch# conf t switch(config)#	Enters the configuration mode.
Step 2	switch(config)# no scheduler job name addMemVsan99	Deletes a defined job and all commands defined within that job.

Specifying a Schedule

After defining jobs, you can create schedules and assign jobs to the schedule. Subsequently, you can configure the time of execution. The execution can be one-time or periodic depending on your requirements. If the time for the schedule is not configured, then it will never be executed.

Specifying a Periodic Schedule

When you specify a periodic job execution, that job is executed periodically at the specified (daily, weekly, monthly, or delta) intervals.

To specify a periodic job for the command scheduler, follow these steps:

	Command	Purpose
Step 1	switch# conf t switch(config)#	Enters the configuration mode.
Step 2	switch(config)# scheduler schedule name weekendbackupqos switch(config-schedule)#	Defines a job schedule (weekendbackup) and enters the submode for that schedule.
	switch(config)# no scheduler schedule name weekendbackup	Deletes the defined schedule.
Step 3	switch(config-schedule)# job name offpeakZoning switch(config-schedule)# job name offpeakQOS	Assign two jobs offpeakZoning and offpeakQOS for this schedule.
Step 4	switch(config-schedule)# no job name addMem99	Deletes the job assigned for this schedule.

The following examples are for reference:

switch(config-schedule)# time daily 23:00	Executes the specified jobs at 11 p.m. every day.
switch(config-schedule)# time weekly Sun:23:00	Specifies a weekly execution every Sunday at 11 p.m.
switch(config-schedule)# time monthly 28:23:00	Specifies a monthly execution at 11 p.m on the 28th of each month. If you specify the date as either 29, 30, or 31, the command is automatically executed on the last day of each month.

Send documentation comments to mdsfeedback-doc@cisco.com

switch(config-schedule)# time start now repeat 48:00	Specifies a job to be executed every 48 hours beginning 2 minutes from <i>now</i> —if today is September 24, 2004, and the time is now 2:00 p.m., the command begins executing at 2 minutes past 2:00 p.m. on September 24, 2004, and continues to execute every 48 hours after that.
switch(config-schedule)# time start 14:00 repeat 14:00:00	If today is September 24, 2004, (Friday), this command specifies the job to be executed every alternate Friday at 2 p.m. (every 14 days).

The most significant fields in the **time** parameter are optional. If you omit the most significant fields, the values are assumed to be the same as the current time. For example, if the current time is September 24, 2004, 22:00 hours, then the commands are executed as follows:

- The **time start 23:00 repeat 4:00:00** command implies a start time of September 24, 2004, 23:00 hours.
- The **time daily 55** command implies every day at 22:55 hours.
- The **time weekly 23:00** command implies every Friday at 23:00 hours.
- The **time monthly 23:00** command implies the 24th of every month at 23:00 hours.



Note

If the time interval configured for any schedule is smaller than the time taken to execute its assigned job(s), then the subsequent schedule execution occurs only after the configured interval amount of time has elapsed following the completion time of the last iteration of the schedule. For example, a schedule is executed at 1-minute intervals and a job assigned to it takes 2 minutes to complete. If the first schedule is at 22:00 hours, the job finishes at 22:02 after which the 1-minute interval is observed, and the next execution occurs at 22:03 and finishes at 22:05.

Specifying a One-Time Schedule

When you specify a one-time job execution, that job is only executed once.

To specify a one-time job for the command scheduler, follow these steps:

	Command	Purpose
Step 1	switch# conf t switch(config)#	Enters the configuration mode.
Step 2	switch(config)# scheduler schedule name configureVsan99 switch(config-schedule)#	Defines a job schedule (configureVsan99) and enters the submode for that schedule.
Step 3	switch(config-schedule)# job name addMemVsan99	Assigns a predefined job name (addMemVsan99) for this schedule.
Step 4	switch(config-schedule)# time start 2004:12:14:23:00 switch(config-schedule)# no time	Specifies a one-time execution on December 14, 2004, at 11 p.m. Deletes the time assigned for this schedule.

Send documentation comments to mdsfeedback-doc@cisco.com

Verifying Scheduler Configuration

To display the scheduler configuration, use the **show scheduler config** command.

```
switch# show scheduler config
config terminal
  feature scheduler
  scheduler logfile size 512
end

config terminal
  scheduler job name addMemVsan99
  config terminal
    vsan database
    vsan 99 interface fc1/1
    vsan 99 interface fc1/2
    vsan 99 interface fc1/3
    vsan 99 interface fc1/4
  end

config terminal
  scheduler schedule name configureVsan99
  time start 2004:8:10:9:52
  job name addMemVsan99
end
```

Deleting a Schedule

To delete a schedule, follow these steps:

	Command	Purpose
Step 1	switch# conf t switch(config)#	Enters the configuration mode.
Step 2	switch(config)# no scheduler schedule name weekendbackup	Deletes the defined schedule.

Removing an Assigned Job

To remove an assigned job, follow these steps:

	Command	Purpose
Step 1	switch# conf t switch(config)#	Enters the configuration mode.
Step 2	switch(config)# scheduler schedule name weekendbackupqos switch(config-schedule)#	Specifies a job schedule (weekendbackupqos) and enters the submode for that schedule.
Step 3	switch(config-schedule)# no job name addMem99	Removes a job (addMem99) assigned to this schedule.

Send documentation comments to mdsfeedback-doc@cisco.com

Deleting a Schedule Time

To delete the schedule time, follow these steps:

	Command	Purpose
Step 1	switch# conf t switch(config)#	Enters the configuration mode.
Step 2	switch(config)# scheduler schedule name weekendbackupqos switch(config-schedule)#	Defines a job schedule (weekendbackup) and enters the submode for that schedule.
Step 3	switch(config-schedule)# no time	Deletes the schedule time configuration. The schedule will not be run until the time is configured again.

Verifying the Command Scheduler Execution Status

To verify the command scheduler execution status, use the **show scheduler schedule** command.

```
switch# show scheduler schedule configureVsan99
Schedule Name      : configureVsan99
-----
User Name         : admin
Schedule Type     : Run once on Tue Aug 10 09:48:00 2004
Last Execution Time: Tue Aug 10 09:48:00 2004
-----
                Job Name                Status
-----
addMemVsan99          Success (0)
```

Execution Logs

This section describes execution logs for the command scheduler and contains the following sections:

- [About Execution Logs, page 5-9](#)
- [Configuring Execution Logs, page 5-10](#)
- [Clearing the Execution Log File Contents, page 5-10](#)

About Execution Logs

The command scheduler maintains a log file. While you cannot modify the contents of this file, you can change the file size. This log file is a circular log that contains the output of the job executed. If the output of the job is greater than the log file, then the output stored in this file remains truncated.

You can configure the log file size to be a maximum of 1024 KB. The default size of the execution log file is 16 KB.

Send documentation comments to mdsfeedback-doc@cisco.com

Configuring Execution Logs

To configure the execution log file size, follow these steps:

	Command	Purpose
Step 1	switch# conf t switch(config)#	Enters the configuration mode.
Step 2	switch(config)# scheduler logfile size 1024	Configures the log file to be a maximum of 1024 KB
	switch(config)# no scheduler logfile size	Defaults to the log size of 16 KB.

To display the execution log file configuration, use the **show scheduler config** command.

```
switch# show scheduler config
config terminal
  feature scheduler
  scheduler logfile size 1024
end
```

Displaying Execution Log File Contents

To display the execution log for all jobs executed in the system, use the **show scheduler logfile** command.

```
switch# show scheduler logfile
Job Name       : addMemVsan99           Job Status: Success (0)
Schedule Name  : configureVsan99       User Name  : admin
Completion time: Tue Aug 10 09:48:00 2004
----- Job Output -----
`config terminal`
`vsan database`
`vsan 99 interface fc1/1`
`vsan 99 interface fc1/2`
`vsan 99 interface fc1/3`
`vsan 99 interface fc1/4`
```

Clearing the Execution Log File Contents

To clear the contents of the scheduler execution log file, issue the **clear scheduler logfile** command in EXEC mode.

```
switch# clear scheduler logfile
```

Default Settings

Table 5-1 lists the default settings for command scheduling parameters.

Send documentation comments to mdsfeedback-doc@cisco.com

Table 5-1 **Default Command Scheduler Parameters**

Parameters	Default
Command scheduler	Disabled.
Log file size	16 KB.

Send documentation comments to mdsfeedback-doc@cisco.com