



## Preface

---

This document lists and describes the system messages for Cisco Nexus 1000V InterCloud NX-OS including Cisco Virtual Security Gateway. The system software sends these messages to the console (and, optionally, to a logging server on another system) during operation. Not all messages indicate a problem with your system. Some messages are purely informational, while others might help diagnose problems with links, internal hardware, or the system software.

This document includes system messages for all Cisco Nexus 1000V InterCloud NX-OS software releases.

This preface describes the audience, organization, and conventions of this guide. It also provides information on how to obtain related documentation.

## Audience

This guide is for system administrators who are responsible for managing Cisco Nexus 1000v InterCloud NX-OS systems.

## Organization

This guide is organized as follows:

Chapter	Title	Description
Chapter 1	<a href="#">Introduction to System Messages for Cisco Nexus 1000V InterCloud</a>	Describes the structure of system messages and the format of system log files.
Chapter 2	<a href="#">System Messages and Recovery Procedures for the Cisco Nexus 1000V InterCloud NX-OS and Cisco Cloud Services Platform</a>	Lists the messages that may appear in log files, and indicates suggested remedies where applicable for the Cisco Nexus 1000V InteCloud NX-OS and Cloud Services Platform Family.
Chapter 3	<a href="#">System Messages and Recovery Procedures for the Cisco Virtual Ethernet Module</a>	Lists the messages that may appear in log files, and indicates suggested remedies where applicable for the Cisco Virtual Ethernet Module.

# Document Conventions

Command descriptions use these conventions:

Convention	Description
boldface font	Commands and keywords are in boldface.
italic font	Arguments for which you supply values are in italics.
[ ]	Elements in square brackets are optional.
[ x   y   z ]	Optional alternative keywords are grouped in brackets and separated by vertical bars.
string	A nonquoted set of characters. Do not use quotation marks around the string or the string will include the quotation marks.

Screen examples use these conventions:

Convention	Description
screen font	Terminal sessions and information that the switch displays are in screen font.
<b>boldface screen font</b>	Information that you must enter is in boldface screen font.
<i>italic screen font</i>	Arguments for which you supply values are in italic screen font.
< >	Nonprinting characters, such as passwords, are in angle brackets.
[ ]	Default responses to system prompts are in square brackets.
!, #	An exclamation point (!) or a pound sign (#) at the beginning of a line of code indicates a comment line.

This document uses the following conventions:



## Note

Means reader *take note*. Notes contain helpful suggestions or references to material not covered in the manual.



## Caution

Means *reader be careful*. In this situation, you might do something that could result in equipment damage or loss of data.

## Documentation Feedback

To provide technical feedback on this document, or to report an error or omission, please send your comments to [nexus1k-docfeedback@cisco.com](mailto:nexus1k-docfeedback@cisco.com). We appreciate your feedback.

## Obtaining Documentation and Submitting a Service Request

For information on obtaining documentation, submitting a service request, and gathering additional information, see the monthly *What's New in Cisco Product Documentation*, which also lists all new and revised Cisco technical documentation, at:

<http://www.cisco.com/en/US/docs/general/whatsnew/whatsnew.html>

Subscribe to the *What's New in Cisco Product Documentation* as a Really Simple Syndication (RSS) feed and set content to be delivered directly to your desktop using a reader application. The RSS feeds are a free service and Cisco currently supports RSS version 2.0.

## Related Documentation

This section lists the documents used with the Cisco Nexus 1000V InterCloud and available on Cisco.com at the following URL:

[http://www.cisco.com/en/US/partner/products/ps12904/tsd\\_products\\_support\\_series\\_home.html](http://www.cisco.com/en/US/partner/products/ps12904/tsd_products_support_series_home.html)

