



Preface

This preface contains the following sections:

- [Audience, page i](#)
- [Document Conventions, page i](#)
- [Related Documentation for Cisco Nexus 1000V InterCloud, page iii](#)
- [Documentation Feedback, page iii](#)
- [Obtaining Documentation and Submitting a Service Request, page iv](#)

Audience

This publication is for network administrators who configure and maintain Cisco Nexus devices.

This guide is for network and server administrators with the following experience and knowledge:

- An understanding of virtualization
- Using Virtual Machine Manager (VMM) software to create a virtual machine and configure a VMware vSwitch
- Ability to create an account on provider cloud such as Amazon Web Services (AWS).
- Knowledge of VMware vNetwork Distributed Switch is not required.

Document Conventions

Command descriptions use the following conventions:

Convention	Description
bold	Bold text indicates the commands and keywords that you enter literally as shown.
<i>Italic</i>	Italic text indicates arguments for which the user supplies the values.

Convention	Description
[x]	Square brackets enclose an optional element (keyword or argument).
[x y]	Square brackets enclosing keywords or arguments separated by a vertical bar indicate an optional choice.
{x y}	Braces enclosing keywords or arguments separated by a vertical bar indicate a required choice.
[x {y z}]	Nested set of square brackets or braces indicate optional or required choices within optional or required elements. Braces and a vertical bar within square brackets indicate a required choice within an optional element.
<i>variable</i>	Indicates a variable for which you supply values, in context where italics cannot be used.
string	A nonquoted set of characters. Do not use quotation marks around the string or the string will include the quotation marks.

Examples use the following conventions:

Convention	Description
<code>screen font</code>	Terminal sessions and information the switch displays are in screen font.
<code>boldface screen font</code>	Information you must enter is in boldface screen font.
<i><code>italic screen font</code></i>	Arguments for which you supply values are in italic screen font.
<>	Nonprinting characters, such as passwords, are in angle brackets.
[]	Default responses to system prompts are in square brackets.
!, #	An exclamation point (!) or a pound sign (#) at the beginning of a line of code indicates a comment line.

This document uses the following conventions:



Note

Means *reader take note*. Notes contain helpful suggestions or references to material not covered in the manual.



Caution

Means *reader be careful*. In this situation, you might do something that could result in equipment damage or loss of data.

Related Documentation for Cisco Nexus 1000V InterCloud

This section lists the documents used with the Cisco Nexus 1000V InterCloud and available on Cisco.com at the following URL:

http://www.cisco.com/en/US/partner/products/ps12904/tsd_products_support_series_home.html

General Information

Cisco Nexus 1000V InterCloud Release Notes

Install and Upgrade

Cisco Nexus 1000V InterCloud Installation Guide

Configuration Guides

Cisco Nexus 1000V InterCloud License Configuration Guide

Cisco Nexus 1000V InterCloud High Availability and Redundancy Configuration Guide

Cisco Nexus 1000V InterCloud Interface Configuration Guide

Cisco Nexus 1000V InterCloud Layer 2 Configuration Guide

Cisco Nexus 1000V InterCloud Port Profile Configuration Guide

Cisco Nexus 1000V InterCloud Security Configuration Guide

Cisco Nexus 1000V InterCloud System Management Configuration Guide

Reference Guides

Cisco Nexus 1000V InterCloud Command Reference

Cisco Nexus 1000V InterCloud Verified Scalability Reference

Cisco Nexus 1000V MIB Quick Reference

Troubleshooting and Alerts

Cisco Nexus 1000V Password Recovery Procedure

Cisco Nexus 1000V Documentation

Cisco Nexus 1000V for VMware vSphere Documentation

http://www.cisco.com/en/US/products/ps9902/tsd_products_support_series_home.html

Cisco Prime Network Services Controller Documentation

http://www.cisco.com/en/US/products/ps13213/tsd_products_support_series_home.html

Documentation Feedback

To provide technical feedback on this document, or to report an error or omission, please send your comments to one of the following:

- nexus1k-docfeedback@cisco.com

We appreciate your feedback.

Obtaining Documentation and Submitting a Service Request

For information on obtaining documentation, submitting a service request, and gathering additional information, see the monthly *What's New in Cisco Product Documentation*, which also lists all new and revised Cisco technical documentation, at:

<http://www.cisco.com/en/US/docs/general/whatsnew/whatsnew.html>

Subscribe to the *What's New in Cisco Product Documentation* as a Really Simple Syndication (RSS) feed and set content to be delivered directly to your desktop using a reader application. The RSS feeds are a free service and Cisco currently supports RSS version 2.0.