



---

## A

- appliance name
  - CLI setup [2-13](#)
- audience [iii-v](#)

---

## C

- CIMC
  - information about [1-1](#)
- CLI prompt, appliance [2-13](#)
- control and packet VLAN
  - about [2-8](#)
  - CLI setup [2-10, 2-16](#)
- conventions [iii-vi](#)

---

## D

- default gateway
  - CLI setup [2-13](#)
- documentation
  - additional publications [iii-vii](#)
  - related documents [iii-vi](#)

---

## F

- Flow Chart
  - Replacing a Cisco Nexus 1010 [2-24](#)

---

## H

- HA
  - redundancy role [2-6](#)

- redundancy state [2-7](#)

---

## M

- management software
  - verify setup [2-18](#)
- management VLAN
  - about [2-8](#)
  - CLI setup [2-11, 2-16](#)
- mgmt0
  - CLI setup [2-13](#)

---

## N

- name, appliance [2-13](#)
- NTP
  - CLI setup [2-13](#)

---

## P

- password strength [2-6](#)
- ports, uplinks [2-8](#)
- prompt, CLI [2-13](#)

---

## R

- redundancy
  - role [2-6](#)
  - state [2-7](#)
- related documents [iii-vii, iii-viii](#)
- replacing a Cisco Nexus 1010 [2-21](#)

***Send document comments to [nexus1k-docfeedback@cisco.com](mailto:nexus1k-docfeedback@cisco.com).***

---

## **S**

### SSH

CLI setup [2-13](#)

strong password [2-6](#)

---

## **T**

### Telnet

CLI setup [2-13](#)

---

## **U**

### uplinks

CLI setup [2-16](#)

port and VLAN assignments [2-8](#)

---

## **V**

### verify

management software setup [2-18](#)

### VLAN

about [2-8](#)

uplink port assignments [2-8](#)