



Preface

The preface contains the following sections:

- [Audience, on page i](#)
- [Document Conventions, on page i](#)
- [Related Documentation for Cisco Nexus 1000V for Microsoft Hyper-V Software, on page ii](#)
- [Documentation Feedback, on page iii](#)
- [Communications, Services, and Additional Information, on page iii](#)

Audience

This publication is for network administrators who configure and maintain Cisco Nexus devices.

Document Conventions



Note

As part of our constant endeavor to remodel our documents to meet our customers' requirements, we have modified the manner in which we document configuration tasks. As a result of this, you may find a deviation in the style used to describe these tasks, with the newly included sections of the document following the new format.

Command descriptions use the following conventions:

| Convention | Description |
|---------------|--|
| bold | Bold text indicates the commands and keywords that you enter literally as shown. |
| <i>Italic</i> | Italic text indicates arguments for which the user supplies the values. |
| [x] | Square brackets enclose an optional element (keyword or argument). |
| [x y] | Square brackets enclosing keywords or arguments separated by a vertical bar indicate an optional choice. |

| Convention | Description |
|-----------------|---|
| {x y} | Braces enclosing keywords or arguments separated by a vertical bar indicate a required choice. |
| [x {y z}] | Nested set of square brackets or braces indicate optional or required choices within optional or required elements. Braces and a vertical bar within square brackets indicate a required choice within an optional element. |
| <i>variable</i> | Indicates a variable for which you supply values, in context where italics cannot be used. |
| string | A nonquoted set of characters. Do not use quotation marks around the string or the string will include the quotation marks. |

Examples use the following conventions:

| Convention | Description |
|-----------------------------|---|
| <code>screen font</code> | Terminal sessions and information the switch displays are in screen font. |
| boldface screen font | Information you must enter is in boldface screen font. |
| <i>italic screen font</i> | Arguments for which you supply values are in italic screen font. |
| < > | Nonprinting characters, such as passwords, are in angle brackets. |
| [] | Default responses to system prompts are in square brackets. |
| !, # | An exclamation point (!) or a pound sign (#) at the beginning of a line of code indicates a comment line. |

This document uses the following conventions:



Note

Means *reader take note*. Notes contain helpful suggestions or references to material not covered in the manual.



Caution

Means *reader be careful*. In this situation, you might do something that could result in equipment damage or loss of data.

Related Documentation for Cisco Nexus 1000V for Microsoft Hyper-V Software

This section lists the documents used with the Cisco Nexus 1000V for Microsoft Hyper-V software:

General Information

Cisco Nexus 1000V for Microsoft Hyper-V Release Notes

Install and Upgrade

Cisco Nexus 1000V for Microsoft Hyper-V Installation and Upgrade Guide

Configuration Guides

Cisco Nexus 1000V for Microsoft Hyper-V High Availability and Redundancy Configuration Guide

Cisco Nexus 1000V for Microsoft Hyper-V Interface Configuration Guide

Cisco Nexus 1000V for Microsoft Hyper-V Layer 2 Switching Configuration Guide

Cisco Nexus 1000V for Microsoft Hyper-V License Configuration Guide

Cisco Nexus 1000V for Microsoft Hyper-V Network Segmentation Manager Configuration Guide

Cisco Nexus 1000V for Microsoft Hyper-V Port Profile Configuration Guide

Cisco Nexus 1000V for Microsoft Hyper-V Quality of Service Configuration Guide

Cisco Nexus 1000V for Microsoft Hyper-V Security Configuration Guide

Cisco Nexus 1000V for Microsoft Hyper-V System Management Configuration Guide

Cisco Nexus 1000V for Microsoft Hyper-V Verified Scalability Guide

Reference Guides

Cisco Nexus 1000V for Microsoft Hyper-V Command Reference

Troubleshooting and Alerts

Cisco Nexus 1000V for Microsoft Hyper-V Troubleshooting Guide

Documentation Feedback

To provide technical feedback on this document, or to report an error or omission, please send your comments to: .

We appreciate your feedback.

Communications, Services, and Additional Information

- To receive timely, relevant information from Cisco, sign up at [Cisco Profile Manager](#).
- To get the business impact you're looking for with the technologies that matter, visit [Cisco Services](#).
- To submit a service request, visit [Cisco Support](#).
- To discover and browse secure, validated enterprise-class apps, products, solutions and services, visit [Cisco Marketplace](#).
- To obtain general networking, training, and certification titles, visit [Cisco Press](#).
- To find warranty information for a specific product or product family, access [Cisco Warranty Finder](#).

Cisco Bug Search Tool

[Cisco Bug Search Tool](#) (BST) is a web-based tool that acts as a gateway to the Cisco bug tracking system that maintains a comprehensive list of defects and vulnerabilities in Cisco products and software. BST provides you with detailed defect information about your products and software.