



## X Commands

---

This chapter describes the Cisco Nexus 1010 commands that begin with the letter X.

### xml server max-session

To set the number of allowed XML server sessions, use the **xml server max-session** command.

**xml server max-session** *sessions*

<b>Syntax Description</b>	<i>sessions</i> Maximum number of XML sessions permitted at one time. The range is from 1 to 8.	
<b>Defaults</b>	The default maximum number of sessions is eight.	
<b>Command Modes</b>	Global configuration (config)	
<b>Supported User Roles</b>	network-admin	
<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	4.0(4)SP1(1)	This command was introduced.
<b>Examples</b>	<p>This example shows how to set the number of allowed XML server sessions to 6:</p> <pre>switch# config t switch# xml server max-session 6 switch#</pre>	

***Send document comments to [nexus1k-docfeedback@cisco.com](mailto:nexus1k-docfeedback@cisco.com).***

Related Commands	Command	Description
	<b>show xml server status</b>	Displays information about XML server settings and any active XML server sessions.
	<b>xml server terminate session</b>	Displays information about XML server settings and any active XML server sessions.
	<b>xml server timeout</b>	Sets the number of seconds after which an inactive XML server session is terminated.

***Send document comments to [nexus1k-docfeedback@cisco.com](mailto:nexus1k-docfeedback@cisco.com).***

# xml server terminate session

To terminate the specified XML server session, use the **xml server terminate session** command.

**xml server terminate session** *session-number*

<b>Syntax Description</b>	<i>session-number</i> Identifier for an existing XML server session. The range is from 0 to 214748364.
---------------------------	--

<b>Defaults</b>	None
-----------------	------

<b>Command Modes</b>	Any command mode
----------------------	------------------

<b>Supported User Roles</b>	network-admin
-----------------------------	---------------

<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	4.0(4)SP1(1)	This command was introduced.

<b>Examples</b>	<p>This example shows how to terminate the XML server session 8665:</p> <pre>switch# <b>xml server terminate 8665</b> switch#</pre>
-----------------	---

<b>Related Commands</b>	<b>Command</b>	<b>Description</b>
	<b>show xml server status</b>	Displays information about XML server settings and any active XML server sessions.
	<b>xml server max-session</b>	Sets the number of allowed XML server sessions.
	<b>xml server timeout</b>	Sets the number of seconds after which an inactive XML server session is terminated.

***Send document comments to [nexus1k-docfeedback@cisco.com](mailto:nexus1k-docfeedback@cisco.com).***

## xml server timeout

To set the number of seconds after which an inactive XML server session is terminated, use the **xml server timeout** command.

**xml server timeout** *seconds*

<b>Syntax Description</b>	<i>seconds</i>	Maximum time that the XML server can remain inactive before session termination. The range is from 0 to 1200 seconds.
<b>Defaults</b>	None	
<b>Command Modes</b>	Global configuration (config)	
<b>Supported User Roles</b>	network-admin	
<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	4.0(4)SP1(1)	This command was introduced.
<b>Examples</b>	<p>This example shows how to set the XML server timeout to 600 seconds:</p> <pre>switch# <b>config t</b> switch# <b>xml server timeout 600</b> switch#</pre>	
<b>Related Commands</b>	<b>Command</b>	<b>Description</b>
	<b>show xml server status</b>	Displays information about XML server settings and any active XML server sessions.
	<b>xml server max-session</b>	Sets the number of allowed XML server sessions.
	<b>xml server terminate session</b>	Displays information about XML server settings and any active XML server sessions.