



## Q Commands

---

This chapter describes the Cisco Nexus 1000V commands that begin with the letter Q.

### qos statistics

To enable the recording of QoS statistics, use the **qos statistics** command. To disable the recording of QoS statistics, use the **no** form of this command.

**qos statistics**

**no qos statistics**

---

**Syntax Description** This command has no arguments or keywords.

---

**Defaults** QoS statistics recording is enabled by default.

---

**Command Modes** Global configuration (config)

---

**Supported User Roles** network-admin

---

Command History	Release	Modification
	4.0(4)SV1(1)	This command was introduced.

---

---

**Examples** This example shows how to enable the recording of QoS statistics:

```
n1000v# configure terminal
n1000v(config)# qos statistics
n1000v(config)#
```

***Send document comments to [nexus1k-docfeedback@cisco.com](mailto:nexus1k-docfeedback@cisco.com).***

Related Commands	Command	Description
	<b>show policy-map</b>	Displays the policy map configuration for all policy maps or for a specified policy map.