



## X Commands

---

This chapter describes the Cisco Nexus 1010 commands that begin with the letter X.

### xml server max-session

To set the number of allowed XML server sessions, use the **xml server max-session** command.

**xml server max-session** *sessions*

---

<b>Syntax Description</b>	<i>sessions</i>	Maximum number of XML sessions permitted at one time. The range is from 1 to 8.
---------------------------	-----------------	---

---

---

<b>Defaults</b>	The default maximum number of sessions is eight.
-----------------	--

---

<b>Command Modes</b>	Global configuration (config)
----------------------	-------------------------------

---

<b>SupportedUserRoles</b>	network-admin
---------------------------	---------------

---

<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	4.0(4)SP1(1)	This command was introduced.

---

---

<b>Examples</b>	This example shows how to set the number of allowed XML server sessions to 6:
-----------------	---

```
n1010# config t
n1010# xml server max-session 6
n1010#
```

***Send document comments to [nexus1k-docfeedback@cisco.com](mailto:nexus1k-docfeedback@cisco.com).***

Related Commands	Command	Description
	<b>show xml server status</b>	Displays information about XML server settings and any active XML server sessions.
	<b>xml server terminate session</b>	Displays information about XML server settings and any active XML server sessions.
	<b>xml server timeout</b>	Sets the number of seconds after which an inactive XML server session is terminated.

***Send document comments to [nexus1k-docfeedback@cisco.com](mailto:nexus1k-docfeedback@cisco.com).***

## xml server terminate session

To terminate the specified XML server session, use the **xml server terminate session** command.

**xml server terminate session** *session-number*

<b>Syntax Description</b>	<i>session-number</i> Identifier for an existing XML server session. The range is from 0 to 214748364.
---------------------------	--

<b>Defaults</b>	None
-----------------	------

<b>Command Modes</b>	Any
----------------------	-----

<b>SupportedUserRoles</b>	network-admin
---------------------------	---------------

<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	4.0(4)SP1(1)	This command was introduced.

<b>Examples</b>	This example shows how to terminate the XML server session 8665:
-----------------	--

```
n1010# xml server terminate 8665
n1010#
```

<b>Related Commands</b>	<b>Command</b>	<b>Description</b>
		<b>show xml server status</b>
	<b>xml server max-session</b>	Sets the number of allowed XML server sessions.
	<b>xml server timeout</b>	Sets the number of seconds after which an inactive XML server session is terminated.

[Send document comments to nexus1k-docfeedback@cisco.com.](mailto:nexus1k-docfeedback@cisco.com)

## xml server timeout

To set the number of seconds after which an inactive XML server session is terminated, use the **xml server timeout** command.

**xml server timeout** *seconds*

### Syntax Description

<i>seconds</i>	Maximum time that the XML server can remain inactive before session termination. The range is from 0 to 1200 seconds.
----------------	---

### Defaults

None

### Command Modes

Global configuration (config)

### Supported User Roles

network-admin

### Command History

Release	Modification
4.0(4)SP1(1)	This command was introduced.

### Examples

This example shows how to set the XML server timeout to 600 seconds:

```
n1010# config t
n1010# xml server timeout 600
n1010#
```

### Related Commands

Command	Description
<b>show xml server status</b>	Displays information about XML server settings and any active XML server sessions.
<b>xml server max-session</b>	Sets the number of allowed XML server sessions.
<b>xml server terminate session</b>	Displays information about XML server settings and any active XML server sessions.