



## Q Commands

---

This chapter describes the Cisco Nexus 1000V commands that begin with the letter Q.

### qos statistics

To enable the recording of QoS statistics, use the **qos statistics** command. To disable the recording of QoS statistics, use the **no** form of this command.

**qos statistics**

**no qos statistics**

---

**Syntax Description** This command has no arguments or keywords.

---

**Defaults** QoS statistics are not recorded.

---

**Command Modes** Global configuration (config)

---

**Supported User Roles** network-admin

---

Command History	Release	Modification
	4.0(4)SV1(1)	This command was introduced.

---

---

**Examples** This example shows how to enable the recording of QoS statistics:

```
n1000v# configure terminal
n1000v(config)# qos statistics
n1000v(config)#
```

Related Commands	Command	Description
	<b>show policy-map</b>	Displays the policy map configuration for all policy maps or for a specified policy map.

# queue-limit

To configure the queue size in a number of packets, use the **queue-limit** command. To set the default, use the **no** form of this command.

**queue-limit** {*q-size* [**packets**]}

**no queue-limit** {*q-size* [**packets**]}

Syntax Description		
	<i>q-size</i>	Queue size in packets.
	<b>packets</b>	(Optional) Packets.

**Defaults** None

**Command Modes** policy-map type queuing class configuration (config-pmap-c-que)

**Supported User Roles** network-admin

Command History	Release	Modification
	4.2(1)SV1(4)	This command was introduced.

**Usage Guidelines** None

**Examples** This example shows how to configure the queue limit to 5000 packets:

```
n1000v(config-pmap-c-que)# queue-limit 5000 packets
```

Related Commands	Command	Description
	<b>bandwidth (policy map)</b>	Configures the minimum guaranteed bandwidth for a specific traffic class in a QoS policy map.
	<b>show policy-map type queuing</b>	

