



Verifying the Port Profile Configuration

This chapter contains the following sections:

- [Verifying the Port Profile Configuration, on page 1](#)
- [Feature History for Port Profile Verification, on page 5](#)

Verifying the Port Profile Configuration

Use one of the following commands to verify the configuration:

- **show port-profile [brief | expand-interface | usage] [name *profile-name*]**
- **show port-profile-role [name *port-profile-role-name*]**
- **show running-config port-profile [*profile-name*]**
- **show port-profile-role users**
- **show port-profile sync-status [interface *if-name*]**
- **show port-profile virtual usage [name *profile-name*]**

For detailed information about the command output, see the *Cisco Nexus 1000V Command Reference*.

show port profile

```
switch# show port-profile
port-profile UpLinkProfile1
  description:
  type: vethernet
  status: disabled
  pinning control-vlan: -
  pinning packet-vlan: -
  max ports: 32
  inherit:
  config attributes:
    channel-group auto mode on mac-pinning
  evaluated config attributes:
    channel-group auto mode on mac-pinning
  assigned interfaces:
  port-group:
  system vlans: none
  capability l3control: no
  capability iscsi-multipath: no
```

Verifying the Port Profile Configuration

```

capability vxlan: no
capability l3-vservice: no
port-profile role: none
port-binding: static
port-profile UpLinkProfile2
description:
type: vethernet
status: disabled
pinning control-vlan: -
pinning packet-vlan: -
max ports: 32
inherit:
config attributes:
    channel-group auto mode on sub-group cdp
evaluated config attributes:
    channel-group auto mode on sub-group cdp
assigned interfaces:
port-group:
system vlans: none
capability l3control: no
capability iscsi-multipath: no
capability vxlan: no
capability l3-vservice: no
port-profile role: none
port-binding: static
port-profile UpLinkProfile3
description:
type: vethernet
status: disabled
pinning control-vlan: -
pinning packet-vlan: -
max ports: 32
inherit:
config attributes:
    channel-group auto mode on sub-group manual
evaluated config attributes:
    channel-group auto mode on sub-group manual
assigned interfaces:
port-group:
system vlans: none
capability l3control: no
capability iscsi-multipath: no
capability vxlan: no
capability l3-vservice: no
port-profile role: none
port-binding: static
switch#

```

show port-profile name UpLinkProfile

```

switch# show port-profile name UpLinkProfile3
port-profile UpLinkProfile3
description:
type: vethernet
status: disabled
pinning control-vlan: -
pinning packet-vlan: -
max ports: 32
inherit:
config attributes:
    channel-group auto mode on sub-group manual
evaluated config attributes:
    channel-group auto mode on sub-group manual
assigned interfaces:

```

```

port-group:
system vlans: none
capability l3control: no
capability iscsi-multipath: no
capability vxlan: no
capability l3-vservice: no
port-profile role: none
port-binding: static

```

```
switch#
```

show port-profile brief

```
switch# show port-profile brief
```

Port Profile	Profile Type	Profile State	Conf Items	Eval Items	Assigned Intfs	Child Profs
UplinkProfile1	Vethernet	1	3	3	0	0
UplinkProfile2	Ethernet	1	3	3	0	0
Ubuntu-Profile	Vethernet	1	1	3	0	0
pvlan_uplink	Vethernet	1	1	1	0	0
VM_PP	Vethernet	0	0	0	0	0
L3_mode	Vethernet	1	3	3	0	0

```
switch#
```

show port-profile virtual usage

```
switch# show port-profile virtual usage
```

Port Profile	Port	Adapter	Owner
n1kv-uplink0	Po1		
	Eth3/2	vmmic1	localhost.
	Eth3/3	vmmic2	localhost.
vlan1767	Veth7	Net Adapter 1	all-tool-7
	Veth8	Net Adapter 1	all-tool-8
aipc1765	Veth4	Net Adapter 1	bl-h-s
inband1766	Veth6	Net Adapter 3	bl-h-s
mgmt1764	Veth5	Net Adapter 2	bl-h-s
vpc-mac-uplink	Po7		
	Eth5/2	vmmic1	localhost.
	Eth5/3	vmmic2	localhost.
ch-vpc-mac-uplink	Po2		
	Po3		
	Eth4/2	vmmic1	VDANIKLNCOS
	Eth4/3	vmmic2	VDANIKLNCOS
ch-aipc1765	Veth1	Net Adapter 1	bl-h-p
ch-mgmt1764	Veth2	Net Adapter 2	bl-h-p
ch-inband1766	Veth3	Net Adapter 3	bl-h-p

```
switch#
```

show port-profile expand-interface name UplinkProfile1

```

switch# show port-profile expand-interface name UplinkProfile1
port-profile UplinkProfile1
Ethernet2/2
    switchport mode trunk
    switchport trunk allowed vlan 110-119
    no shutdown
switch#

```

show port-profile expand-interface

```
switch# show port-profile expand-interface
port-profile UplinkProfile1
Ethernet2/2
    switchport mode trunk
    switchport trunk allowed vlan 110-119
    no shutdown

port-profile UplinkProfile2
Ethernet2/3
    switchport mode trunk
    switchport trunk allowed vlan 117
    no shutdown
Ethernet2/4
    switchport mode trunk
    switchport trunk allowed vlan 117
    no shutdown

port-profile Ubuntu-Profile
Vethernet439
    switchport mode access
    switchport access vlan 118
    no shutdown
switch#
```

show port-profile sync-status

```
switch# show port-profile sync-status interface ethernet 3/2
Ethernet3/2
port-profile: uplink
interface status: quarantine
sync status: out of sync
cached commands:
errors:
    command cache overrun
recovery steps:
    bring interface online
switch#
```

show running-config port-profile

```
switch# show running-config port-profile
port-profile type ethernet UplinkProfile1
    description "Profile for critical system ports"
    vmware port-group
    switchport mode access
    switchport access vlan 113
    switchport trunk native vlan 113
    channel-group auto mode on
    no shutdown
port-profile type vethernet UplinkProfile2
    vmware port-group
    max-ports 5
    switchport mode trunk
    switchport trunk native vlan 112
    channel-group auto mode on sub-group cdp
    no shutdown
switch#
```

show port-profile-role

```
switch# show port-profile-role name adminUser

Name: adminUser
Description: adminOnly
Users:
    hdbaar (user)
Assigned port-profiles:
    allaccess2
switch#
```

show port-profile-role users

```
switch# show port-profile-role users
Groups:
    Administrators
    TestGroupB
Users:
    dbaar
    fgreen
    suchen
    mariofr
switch#
```

Feature History for Port Profile Verification

Feature Name	Release	Feature Information
show port-profile-role users	4.2(1)SV1(4)	This command output shows the available users and groups.
show port-profile-role	4.2(1)SV1(4)	This command output shows the configuration for port profile roles.
show running-config port-profile	4.0(4)SV1(2)	This command output shows the configuration for port profiles.
show running-config	4.0(4)SV1(2)	This command output has the following changes: <ul style="list-style-type: none"> Shows the port profile type (Ethernet or vEthernet). Optionally, you can display the running configurations for all port profiles or a specific port profile.
show port-profile name	4.0(4)SV1(2)	This command output shows the port profile type, pinning, and channel-group configuration. The uplink capability is removed from the output of this command because port profiles used as uplinks are now configured as Ethernet type instead.
Port profile verification	4.0(4)SV1(1)	This feature was introduced.

