



New and Changed Information

This chapter provides release-specific information for each new and changed feature in the *Cisco Nexus 3000 Series NX-OS Fundamentals Command Reference*. The latest version of this document is available at the following Cisco website:

http://www.cisco.com/en/US/products/ps11541/tsd_products_support_series_home.html

To check for additional information about this Cisco NX-OS Release, see the *Cisco Nexus 3000 Series Switch Release Notes* available at the following Cisco website:

http://www.cisco.com/en/US/products/ps11541/prod_release_notes_list.html

Table 1 summarizes the new and changed features for Cisco NX-OS Release 6.x and tells you where they are documented.

Table 1 *New and Changed Information for Release 6.x*

Feature	Description	Changed in Release	Where Documented
Reload-tracker	Two new commands show system config reload-pending and system config reload-pending syslog-interval are introduced.	6.0(2)U6(7)	<ul style="list-style-type: none"> show system config reload-pending system config reload-pending syslog-interval
Fan details	The output for the show environment fan details command has changed.	7.0(3)I2(1)	<ul style="list-style-type: none"> show environment
Booting the N3000 platform	A single image binary is now used for booting the Cisco Nexus 3000 platform. Kickstart and system images are no longer used.	7.0(3)I2(1)	<ul style="list-style-type: none"> boot fast-reload
show tech-support	The command was enhanced to include the additional sub-options: biosd, bloggerd, and bloggerd-all. The show tech-support bcm-usd command is displayed after entering the attach module <module number> command	7.0(3)I2(1)	show tech-support
Show processes memory	Starting with Release 7.0(3)I2(1), the StkSize, RSSMem, and LibMem columns are no longer displayed in the table for memory allocation processes.	7.0(3)I2(1)	show processes memory

Table 1 *New and Changed Information for Release 6.x (continued)*

Feature	Description	Changed in Release	Where Documented
show tech-support	The command was enhanced to include output of the show policy-map int control-plane and show interface ethernet slot/port transceiver details commands.	6.0(2)U5(1)	show tech-support
Fast Reload	Added the fast-reload command.	6.0(2)U2(1)	fast-reload
Copy <i>file</i> start support	Added support for running the configuration file on startup.	6.0(2)U2(1)	copy