



# X Commands

---

- [show](#), on page 2
- [show xml server logging configuration](#), on page 3
- [show xml server status](#), on page 4

# show

show

## Syntax Description

show	Show trigger config
------	---------------------

## Command Mode

- /exec/elamns/se16

# show xml server logging configuration

show xml server logging configuration

## Syntax Description

show	Show running system information
xml	Show xmlagent logging configuration
server	xml agent server
logging	Show logging configuration and contents of logfile
configuration	Show facility logging configuration

## Command Mode

- /exec

## show xml server status

```
show xml server status [ __readonly__ { operational_status <o_status> } { maximum_sessions_configured
<max_session> } [ { TABLE_sessions <session_id> <user_name> <start_time> <sap_id> <timeout>
<time_remaining_to_timeout> <ip_addr> } ] ]
```

### Syntax Description

show	to display xml agent information
xml	xml agent
server	xml agent server
status	display xml agent information
<i>__readonly__</i>	(Optional)
<i>operational_status</i>	(Optional) run-time info about xml
<i>o_status</i>	(Optional) operational status of the xml
<i>maximum_sessions_configured</i>	(Optional) the max session configured
<i>max_session</i>	(Optional) max sessions number
<i>TABLE_sessions</i>	(Optional) all xml sessions
<i>session_id</i>	(Optional) one xml session id
<i>user_name</i>	(Optional) the xml session user name
<i>start_time</i>	(Optional) the xml session start time
<i>sap_id</i>	(Optional) the mts sap id
<i>timeout</i>	(Optional) inactivity timeout value
<i>time_remaining_to_timeout</i>	(Optional) time remaining to timeout
<i>ip_addr</i>	(Optional) ip address of the session

### Command Mode

- /exec