



D Commands

- dampen-igp-metric, on page 6
- dampening, on page 7
- dampening, on page 8
- data-pattern, on page 9
- data-pattern pad, on page 10
- data-source, on page 11
- database-mapping, on page 12
- databits, on page 13
- databits, on page 14
- datapath-id, on page 15
- datapath-id, on page 16
- datapath transport mts, on page 17
- db-jid, on page 18
- db-security user password, on page 19
- db-table, on page 20
- dead-interval, on page 21
- dead-interval, on page 22
- dead-interval, on page 23
- deadtime, on page 24
- deadtime, on page 25
- deadtime, on page 26
- dec, on page 27
- default-information originate, on page 28
- default-information originate, on page 29
- default-information originate, on page 30
- default-information originate, on page 31
- default-information originate, on page 32
- default-information originate, on page 33
- default-information originate always rd route-target, on page 34
- default-metric, on page 35
- default-metric, on page 36
- default-metric, on page 37
- default-metric, on page 38

- default-metric, on page 39
- default-miss, on page 40
- default-originate, on page 41
- default echo revision, on page 42
- define, on page 43
- delay-restore time, on page 44
- delay, on page 45
- delay, on page 46
- delay, on page 47
- delay peer-link, on page 48
- delay restore, on page 49
- delay restore interface-vlan, on page 50
- delay restore orphan-port, on page 51
- delay up, on page 52
- delete, on page 53
- delete ca-certificate, on page 54
- delete certificate, on page 55
- delete crl, on page 56
- demand-circuit, on page 57
- description, on page 58
- description, on page 59
- description, on page 60
- description, on page 61
- description, on page 62
- description, on page 63
- description, on page 64
- description, on page 65
- description, on page 66
- description, on page 67
- description, on page 68
- description, on page 69
- description, on page 70
- description, on page 71
- description, on page 72
- description, on page 73
- description, on page 74
- description, on page 75
- description, on page 76
- description, on page 77
- description, on page 78
- description, on page 79
- description, on page 80
- description, on page 81
- description, on page 82
- description, on page 83
- description, on page 84

- description, on page 85
- description, on page 86
- description, on page 87
- description, on page 88
- description, on page 89
- description description, on page 90
- dest-ipaddr, on page 91
- dest-ipaddr, on page 92
- dest-port, on page 93
- dest, on page 94
- destination-group, on page 95
- destination-profile, on page 96
- destination-profile, on page 97
- destination-profile CiscoTAC-1 alert-group, on page 98
- destination-profile CiscoTAC-1 email-addr, on page 99
- destination-profile CiscoTAC-1 http, on page 100
- destination-profile CiscoTAC-1 message-level, on page 101
- destination-profile CiscoTAC-1 message-size, on page 102
- destination-profile CiscoTAC-1 transport-method http, on page 103
- destination-profile CiscoTAC-1 transport-method email, on page 104
- destination-profile alert-group, on page 105
- destination-profile email-addr, on page 106
- destination-profile format, on page 107
- destination-profile full-txt-destination alert-group, on page 108
- destination-profile full-txt-destination email-addr, on page 109
- destination-profile full-txt-destination http, on page 110
- destination-profile full-txt-destination message-size, on page 111
- destination-profile full-txt-destination message-level, on page 112
- destination-profile full-txt-destination transport-method http, on page 113
- destination-profile full-txt-destination transport-method email, on page 114
- destination-profile http, on page 115
- destination-profile message-level, on page 116
- destination-profile message-size, on page 117
- destination-profile short-txt-destination alert-group, on page 118
- destination-profile short-txt-destination email-addr, on page 119
- destination-profile short-txt-destination http, on page 120
- destination-profile short-txt-destination message-level, on page 121
- destination-profile short-txt-destination message-size, on page 122
- destination-profile short-txt-destination transport-method http, on page 123
- destination-profile short-txt-destination transport-method email, on page 124
- destination-profile transport-method email, on page 125
- destination-profile transport-method http, on page 126
- destination, on page 127
- destination, on page 128
- destination, on page 129
- destination filter ip, on page 130

- destination filter ip any any, on page 131
- destination ip-address, on page 132
- destination udp-port, on page 133
- device-group, on page 134
- device-group, on page 135
- device-role, on page 136
- device-role, on page 137
- device-role, on page 138
- devtest sap, on page 139
- diagnostic bootup level, on page 140
- diagnostic bootup level bypass, on page 141
- diagnostic clear result module all diagnostic clear result module test, on page 142
- diagnostic eem action aggressive, on page 143
- diagnostic monitor interval module test all hour min second, on page 144
- diagnostic monitor module all, on page 145
- diagnostic monitor module test all, on page 146
- diagnostic ondemand action-on-failure continue failure-count diagnostic ondemand action-on-failure stop, on page 147
- diagnostic ondemand iteration, on page 148
- diagnostic ondemand test-parameter module test port_lb packet-length, on page 149
- diagnostic pss shrink, on page 150
- diagnostic start module test, on page 151
- diagnostic stop module test all, on page 152
- diagnostic test simulation module test diagnostic test simulation module test clear, on page 153
- diff-clean, on page 154
- diff-clean all-users, on page 155
- diff, on page 156
- dir, on page 157
- disable-connected-check, on page 158
- disable-memory-alert-check, on page 159
- disable-peer-as-check, on page 160
- disable-policy-batching, on page 161
- disable, on page 162
- discard-route external, on page 163
- discard-route external, on page 164
- discovery, on page 165
- distance, on page 166
- distance, on page 167
- distance, on page 168
- distance, on page 169
- distance, on page 170
- distance, on page 171
- distribute-list route in, on page 172
- distribute into route-map all, on page 173
- dns, on page 174
- domain-id, on page 175

- domain-id secondary, on page 176
- domain-tag, on page 177
- dont-capability-negotiate, on page 178
- dos2nxos, on page 179
- dot1q, on page 180
- dot1q, on page 181
- dot1q, on page 182
- dot1q default dynamic, on page 183
- down-bit-ignore, on page 184
- downlink delay, on page 185
- dscp, on page 186
- dscp, on page 187
- dst-grp, on page 188
- dual-active exclude interface-vlan, on page 189
- dual-stage translate xml, on page 190
- duplex, on page 191
- duplex, on page 192
- duplicate-message throttle, on page 193
- dynamic-capability, on page 194
- dynamic-med-interval, on page 195

dampen-igp-metric

dampen-igp-metric <sec> | no dampen-igp-metric

Syntax Description

no	Negate a command or set its defaults
dampen-igp-metric	Dampen IGP metric-related changes
<i>sec</i>	Time interval in seconds

Command Mode

- /exec/configure/router-bgp/router-bgp-af

dampening

```
[no] dampening [ { <half-life> <reuse-limit> <suppress-limit> <max-suppress-time> } | { route-map
<rmap-name> } ]
```

Syntax Description

<code>no</code>	(Optional) Negate a command or set its defaults
<code>dampening</code>	Configure route flap dampening
<code>half-life</code>	(Optional) Decay half life
<code>reuse-limit</code>	(Optional) Value to start reusing a route
<code>suppress-limit</code>	(Optional) Value to start suppressing a route
<code>max-suppress-time</code>	(Optional) Maximum suppress time for stable route
<code>route-map</code>	(Optional) Apply route-map to specify dampening criteria
<code>rmap-name</code>	(Optional) Route-map name

Command Mode

- `/exec/configure/router-bgp/router-bgp-af /exec/configure/router-bgp/router-bgp-af-vpnv4`
`/exec/configure/router-bgp/router-bgp-af-vpnv6 /exec/configure/router-bgp/router-bgp-af-link-state`
`/exec/configure/router-bgp/router-bgp-af-l2vpn-evpn /exec/configure/router-bgp/router-bgp-af-ipv4-mvpn`
`/exec/configure/router-bgp/router-bgp-af-ipv6-mvpn`

dampening

```
[no] dampening [ { <half-life> <reuse-limit> <suppress-limit> <max-suppress-time> } | { route-map
<rmap-name> } ]
```

Syntax Description

no	(Optional) Negate a command or set its defaults
dampening	Configure route flap dampening
<i>half-life</i>	(Optional) Decay half life
<i>reuse-limit</i>	(Optional) Value to start reusing a route
<i>suppress-limit</i>	(Optional) Value to start suppressing a route
<i>max-suppress-time</i>	(Optional) Maximum suppress time for stable route
route-map	(Optional) Apply route-map to specify dampening criteria
<i>rmap-name</i>	(Optional) Route-map name

Command Mode

- /exec/configure/router-bgp/router-bgp-af-ipv4-mdt /exec/configure/router-bgp/router-bgp-af-l2vpn-vpls

data-pattern

```
{ { no | default } data-pattern | data-pattern <hex-pattern> }
```

Syntax Description

no	
default	Set a command to its defaults
data-pattern	Data Pattern
<i>hex-pattern</i>	Data Pattern in Hex

Command Mode

- /exec/configure/ip-sla/udp

data-pattern pad

```
{ data-pattern pad <pad-val> }
```

Syntax Description

data-pattern	Configure NGOAM ping payload
pad	Configure NGOAM payload test pattern pad
<i>pad-val</i>	Configure NGOAM payload test pad value

Command Mode

- /exec/configure/configngoamconnectcheck

data-source

{ data-source <type> } | { no data-source [<type>] }

Syntax Description

no	Negate a command or set its defaults
data-source	Specify the data source
<i>type</i>	

Command Mode

- /exec/configure/telemetry/sensor-group

database-mapping

```
{ [ no ] database-mapping { <eid-prefix> | <eid-prefix6> } { redistribute | { { <locator> | <locator6> } priority <priority> weight <weight> } } }
```

Syntax Description

no	(Optional) Negate a command or set its defaults
database-mapping	Configure EID-prefix and locator-set for dynamic-EID
<i>eid-prefix</i>	IP EID-prefix for RLOC static mapping
<i>locator</i>	IP address of LISP-VM routers
priority	Configures which Locators from a set are preferred
<i>priority</i>	Lower priority Locator takes preference
weight	Traffic load-spreading among Locators
<i>weight</i>	Specified in a percentage from 0 to 100
redistribute	Used for redistributing into routing protocols

Command Mode

- /exec/configure/lisp-dynamic-eid /exec/configure/vrf/lisp-dynamic-eid

databits

[no] databits <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
databits	Set number of databits per character
<i>i0</i>	Number of data bits

Command Mode

- /exec/configure/com1

databits

[no] databits <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
databits	Set number of databits per character
<i>i0</i>	Number of data bits

Command Mode

- /exec/configure/console

datapath-id

datapath-id <datapathid-val> | no datapath-id

Syntax Description

no	Negate a command or set its defaults
datapath-id	Datapath ID
<i>datapathid-val</i>	64-bit hex value [0x1-0xffffffffffff]

Command Mode

- /exec/configure/openflow/switch

datapath-id

datapath-id <datapathid-val> | no datapath-id

Syntax Description

no	Negate a command or set its defaults
datapath-id	Datapath ID
<i>datapathid-val</i>	64-bit hex value [0x1-0xffffffffffffff]

Command Mode

- /exec/configure/openflow/switch/sub-switch

datapath transport mts

[no] datapath transport mts

Syntax Description

no	(Optional) Negate a command or set its defaults
datapath	One Platform datapath
transport	transport for datapath
mts	mts

Command Mode

- /exec/configure/onep

db-jid

[no] db-jid <jid> [key-type <key-type>]

Syntax Description

no	(Optional) Negate a command or set its defaults
db-jid	Jabber ID of database
<i>jid</i>	Enter Jabber ID of database
key-type	(Optional) Query key type for this database
<i>key-type</i>	(Optional)

Command Mode

- /exec/configure/fabric-db/server-xmpp

db-security user password

```
[no] db-security user <user> password { 0 <clear> | 7 <encrypted> | <password> } [ shared-secret { 10 <clear> | 7 <encrypted> | <secret> } ]
```

Syntax Description

no	(Optional) Negate a command or set its defaults
db-security	Database Security
user	User ID
<i>user</i>	Enter user ID
password	Password
0	Password that follows should be in clear text
<i>clear</i>	Password in clear text
7	Password that follows should be in encrypted text
<i>encrypted</i>	Encrypted password
<i>password</i>	Enter password in clear text
shared-secret	(Optional) Shared-secret
10	(Optional) Indicates that password that follows should be in clear text
<i>clear</i>	(Optional) Password in clear text
7	(Optional) Password that follows should be in encrypted text
<i>encrypted</i>	(Optional) Encrypted password
<i>secret</i>	(Optional) Enter shared-secret in clear text

Command Mode

- /exec/configure/fabric-db/server-ldap

db-table

[no] db-table <tablename> [key-type <key-type>]

Syntax Description

no	(Optional) Negate a command or set its defaults
db-table	Table name to search
<i>tablename</i>	Enter table name to search
key-type	(Optional) Query key type for this table
<i>key-type</i>	(Optional)

Command Mode

- /exec/configure/fabric-db/server-ldap

dead-interval

```
{ { dead-interval <interval> } | { no dead-interval [ <interval> ] } }
```

Syntax Description

no	Negate a command or set its defaults
dead-interval	Dead interval
<i>interval</i>	(seconds)

Command Mode

- /exec/configure/router-ospf/vrf/router-ospf-slink

dead-interval

```
{ { dead-interval <interval> } | { no dead-interval [ <interval> ] } }
```

Syntax Description

no	Negate a command or set its defaults
dead-interval	Dead interval
<i>interval</i>	(seconds)

Command Mode

- /exec/configure/router-ospf/router-ospf-vlink /exec/configure/router-ospf/vrf/router-ospf-vlink

dead-interval

```
{ { dead-interval <interval> } | { no dead-interval [ <interval> ] } }
```

Syntax Description

no	Negate a command or set its defaults
dead-interval	Dead interval
<i>interval</i>	(seconds)

Command Mode

- /exec/configure/router-ospf3/router-ospf3-vlink /exec/configure/router-ospf3/vrf/router-ospf3-vlink

deadtime

[no] deadtime <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
deadtime	duration for which non-reachable server is skipped
<i>i0</i>	Length of time, in minutes

Command Mode

- /exec/configure/ldap

deadtime

[no] deadtime <*i0*>

Syntax Description

no	(Optional) Negate a command or set its defaults
deadtime	duration for which non-reachable server is skipped
<i>i0</i>	Length of time, in minutes

Command Mode

- /exec/configure/radius

deadtime

[no] deadtime <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
deadtime	duration for which non-reachable server is skipped
<i>i0</i>	Length of time, in minutes

Command Mode

- /exec/configure/tacacs+

dec

dec <expr>

Syntax Description

dec	calculator with results in decimal format
<i>expr</i>	the expression to compute (integer arithmetics)

Command Mode

- /exec

default-information originate

[no] default-information originate [always] [route-map <map>]

Syntax Description

no	(Optional) Negate a command or set its defaults
default-information	Control origination of a default route
originate	Originate a default route
always	(Optional) Always advertise default route
route-map	(Optional) Use a route-map for default route metrics
<i>map</i>	(Optional) Route-map name

Command Mode

- /exec/configure/router-igrp/router-igrp-vrf-common /exec/configure/router-igrp/router-igrp-af-common

default-information originate

[no] default-information originate

Syntax Description

no	(Optional) Negate a command or set its defaults
default-information	Control distribution of default information
originate	Distribute a default route

Command Mode

- /exec/configure/router-bgp/router-bgp-af /exec/configure/router-bgp/router-bgp-af-ipv6-label
/exec/configure/router-bgp/router-bgp-af-ipv4-label

default-information originate

[no] default-information originate [always] [route-map <policy-name>]

Syntax Description

no	(Optional) Negate a command or set its defaults
default-information	Control distribution of default route
originate	Distribute a default route
always	(Optional) Always advertise default route
route-map	(Optional) Policy to control distribution of default route
<i>policy-name</i>	(Optional) Route-map name

Command Mode

- /exec/configure/router-ospf /exec/configure/router-ospf/vrf

default-information originate

[no] default-information originate [always] [route-map <policy-name>]

Syntax Description

no	(Optional) Negate a command or set its defaults
default-information	Control distribution of default route
originate	Distribute a default route
always	(Optional) Always advertise default route
route-map	(Optional) Policy to control distribution of default route
<i>policy-name</i>	(Optional) Route-map name

Command Mode

- /exec/configure/router-ospf3/router-ospf3-af-ipv6 /exec/configure/router-ospf3/vrf/router-ospf3-af-ipv6

default-information originate

[no] default-information originate [always] [route-map <map-name>]

Syntax Description

no	(Optional) Negate a command or set its defaults
default-information	Control origination of a default route
originate	Originate a default route
always	(Optional) Always advertise default route
route-map	(Optional) Route-map to announce default routes
<i>map-name</i>	(Optional) A 'routing-rules' route-map name

Command Mode

- /exec/configure/router-isis/router-isis-vrf-common /exec/configure/router-isis/router-isis-af-common

default-information originate

[no] default-information originate [always] [route-map <map-name>]

Syntax Description

no	(Optional) Negate a command or set its defaults
default-information	RIP control distribution of default route
originate	RIP distribute a default route
always	(Optional) RIP always advertise default route
route-map	(Optional) Policy to constrain redistribution
<i>map-name</i>	(Optional) Route-map name

Command Mode

- /exec/configure/router-rip/router-rip-af-common /exec/configure/router-rip/router-rip-vrf-af-common

default-information originate always rd route-target

```
[no] default-information originate always rd { <ext-comm-rd-aa2nn4> | <ext-comm-rd-aa4nn2> } route-target
{ <ext-comm-rt-aa2nn4> | <ext-comm-rt-aa4nn2> }
```

Syntax Description

no	(Optional) Negate a command or set its defaults
default-information	Control distribution of default information
originate	Distribute a default route
always	Always advertise default route
rd	VPN Route Distinguisher
<i>ext-comm-rd-aa4nn2</i>	VPN route distinguisher in aa4:nn or ip:nn format
<i>ext-comm-rd-aa2nn4</i>	VPN route distinguisher in aa:nn format
route-target	Specify Target VPN Extended Communities
<i>ext-comm-rt-aa4nn2</i>	RT extcommunity in aa4:nn or ip:nn format
<i>ext-comm-rt-aa2nn4</i>	RT extcommunity in aa:nn format

Command Mode

- /exec/configure/router-bgp/router-bgp-af-vpnv4 /exec/configure/router-bgp/router-bgp-af-vpnv6

default-metric

default-metric <metric> | no default-metric [<metric>]

Syntax Description

no	Negate a command or set its defaults
default-metric	RIP default metric
<i>metric</i>	RIP metric value

Command Mode

- /exec/configure/router-rip/router-rip-af-common /exec/configure/router-rip/router-rip-vrf-af-common

default-metric

[no] default-metric <metric>

Syntax Description

no	(Optional) Negate a command or set its defaults
default-metric	Set metric of redistributed routes
<i>metric</i>	Default Metric

Command Mode

- /exec/configure/router-bgp/router-bgp-af

default-metric

{ default-metric <cost> } | { no default-metric [<cost>] }

Syntax Description

no	Negate a command or set its defaults
default-metric	Specify default metric for redistributed routes
<i>cost</i>	Metric value

Command Mode

- /exec/configure/router-ospf /exec/configure/router-ospf/vrf

default-metric

{ default-metric <cost> } | { no default-metric [<cost>] }

Syntax Description

no	Negate a command or set its defaults
default-metric	Specify default metric for redistributed routes
<i>cost</i>	Metric value

Command Mode

- /exec/configure/router-ospf3/router-ospf3-af-ipv6 /exec/configure/router-ospf3/vrf/router-ospf3-af-ipv6

default-metric

```
{ { default-metric <bw> <delay> <rel> <load> <mtu> } | { no default-metric [ <bw> <delay> <rel> <load> <mtu> ] } }
```

Syntax Description

<code>no</code>	Negate a command or set its defaults
<code>default-metric</code>	Set metric of redistributed routes
<code>bw</code>	Bandwidth in Kbits per second
<code>delay</code>	Delay metric
<code>rel</code>	Reliability metric where 255 is 100% reliable
<code>load</code>	Effective bandwidth metric (Loading) where 255 is 100% loaded
<code>mtu</code>	Maximum Transmission Unit metric of the path

Command Mode

- /exec/configure/router-eigrp/router-eigrp-vrf-common /exec/configure/router-eigrp/router-eigrp-af-common

default-miss

default-miss { continue-drop | continue-normal | continue-controller | drop | normal | controller } | no default-miss

Syntax Description

no	Negate a command or set its defaults
default-miss	Set continue-drop/continue-normal/continue-controller/drop/normal/controller flow action
continue-drop	cascade drop to next table
continue-normal	cascade normal to next table
continue-controller	cascade punt to next table
drop	drop packet
normal	forward to normal dataplane
controller	punt to controller

Command Mode

- /exec/configure/openflow/switch

default-originate

[no | default] default-originate [route-map <rmap-name>]

Syntax Description

no	(Optional) Negate a command or set its defaults
default	(Optional) Inherit values from a peer template
default-originate	Originate a default toward this peer
route-map	(Optional) Route-map to specify criteria for originating default
<i>rmap-name</i>	(Optional) Route-map name

Command Mode

- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af
/exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-ipv4-label
/exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-ipv6-label

default echo revision

```
default echo { revision | vendor-extension }
```

Syntax Description

default	Set a command to its defaults
echo	Echo Request attributes
revision	Echo packet default revision
vendor-extension	Send Vendor Extension TLV with echo Req

Command Mode

- /exec/configure/mpls-oam

define

[no] define <paramname> [<paramtype>] [<paramdesc>]

Syntax Description

no	(Optional) Negate a command or set its defaults
define	Define a parameter
<i>paramname</i>	Enter the name of the parameter
<i>paramtype</i>	(Optional) param type
<i>paramdesc</i>	(Optional) Enter the parameter description

Command Mode

- /exec/configure/param-list

delay-restore time

[no] delay-restore time <sec>

Syntax Description

no	(Optional) Negate a command or set its defaults
delay-restore	delay-restore
time	time
<i>sec</i>	time in seconds

Command Mode

- /exec/configure/config-evpn-msite-bgw

delay

delay <delay_val> | no delay [<delay_val>]

Syntax Description

no	Negate a command or set its defaults
delay	Specify interface throughput delay
<i>delay_val</i>	Throughput delay (tens of microseconds)

Command Mode

- /exec/configure/if-ether-sub /exec/configure/if-ether-sub-p2p /exec/configure/if-port-channel-sub

delay

delay <delay_val> | no delay [<delay_val>]

Syntax Description

no	Negate a command or set its defaults
delay	Specify interface throughput delay
<i>delay_val</i>	Throughput delay (tens of microseconds)

Command Mode

- /exec/configure/if-ethernet-all /exec/configure/if-eth-non-member /exec/configure/if-port-channel
/exec/configure/if-ethernet-all /exec/configure/if-ethernet-p2p /exec/configure/if-remote-ethernet-sub
/exec/configure/if-port-channel-range

delay

delay <microseconds> | no delay

Syntax Description

no	Negate a command or set its defaults
delay	Specify interface throughput delay
<i>microseconds</i>	Throughput delay (tens of microseconds)

Command Mode

- /exec/configure/if-vlan-common

delay peer-link

delay peer-link <time> | no delay peer-link

Syntax Description

no	Negate a command or set its defaults
delay	Peer-link bringup delay
peer-link	Delay peer-link bringup
<i>time</i>	Delay in bringing up the peer-link (in seconds)

Command Mode

- /exec/configure/vpc-domain

delay restore

delay restore <time-out> | no delay restore

Syntax Description

no	Negate a command or set its defaults
delay	Initialization delay
restore	Delay after restoring peer-link
<i>time-out</i>	Delay in bringing up the vPC links (in seconds)

Command Mode

- /exec/configure/vpc-domain

delay restore interface-vlan

delay restore interface-vlan <time-out> | no delay restore interface-vlan

Syntax Description

no	Negate a command or set its defaults
delay	Initialization delay
restore	Delay after restoring peer-link
interface-vlan	Delay in bringing-up interface-vlan
<i>time-out</i>	Delay in bringing up the interface-vlan (in seconds)

Command Mode

- /exec/configure/vpc-domain

delay restore orphan-port

delay restore orphan-port <delay_time> | no delay restore orphan-port

Syntax Description

no	Negate a command or set its defaults
delay	Initialization delay
restore	Delay after restoring peer-link
orphan-port	Configure vPC orphan-port delay bring-up timer
<i>delay_time</i>	Specify delay time in seconds

Command Mode

- /exec/configure/vpc-domain

delay up

delay { { up <up_delay> [down <down_delay>] } | { down <down_delay> [up <up_delay>] } } | no delay

Syntax Description

no	Negate a command or set its defaults
delay	Tracking delay
up	Delay up change notification
<i>up_delay</i>	Seconds to delay
down	(Optional) Delay down change notification
<i>down_delay</i>	(Optional) Seconds to delay

Command Mode

- /exec/configure/track /exec/configure/tr-list-bool /exec/configure/tr-list-thrp /exec/configure/tr-list-thrw

delete

delete { <uri0> | <uri1> | <uri2> } [no-prompt]

Syntax Description

delete	delete a file or directory
<i>uri0</i>	Delete a file or directory
<i>uri1</i>	Delete a file or directory on expansion flash
<i>uri2</i>	Directory or filename on logflash
no-prompt	(Optional) Do not prompt for multiple deletion of files

Command Mode

- /exec

delete ca-certificate

delete ca-certificate

Syntax Description

delete	Delete the certificates
ca-certificate	Delete the ca certificates

Command Mode

- /exec/configure/trustpoint

delete certificate

delete certificate [force]

Syntax Description

delete	Delete the certificates
certificate	Delete the identity certificate
force	(Optional) Force delete the identity certificate

Command Mode

- /exec/configure/trustpoint

delete crl

delete crl

Syntax Description

delete	Delete the certificates
crl	Delete the CRL

Command Mode

- /exec/configure/trustpoint

demand-circuit

[no] demand-circuit

Syntax Description

no	(Optional) Negate a command or set its defaults
demand-circuit	OSPF Demand circuit

Command Mode

- /exec/configure/router-ospf/vrf/router-ospf-slink

description

description <desc_line> | no description [<desc_line>]

Syntax Description

no	Negate a command or set its defaults
description	Enter description of maximum 254 characters
<i>desc_line</i>	Description of maximum 254 characters

Command Mode

- /exec/configure/if-nve

description

description <describe> | no description

Syntax Description

no	Negate a command or set its defaults
description	Description for the BMP server
<i>describe</i>	Upto 80 characters describing this server

Command Mode

- /exec/configure/router-bgp/router-bgp-bmp-server

description

description <describe> | { no | default } description [<describe>]

Syntax Description

no	Negate a command or set its defaults
default	Inherit values from a peer template
description	Neighbor specific description
<i>describe</i>	Upto 80 characters describing this neighbor

Command Mode

- /exec/configure/router-bgp/router-bgp-neighbor-sess

description

description <desc_line> | no description [<desc_line>]

Syntax Description

no	Negate a command or set its defaults
description	Enter description of maximum 254 characters
<i>desc_line</i>	Description of maximum 254 characters

Command Mode

- /exec/configure/if-eth-base /exec/configure/if-port-channel /exec/configure/if-eth-port-channel /exec/configure/if-ether-sub /exec/configure/if-ether-sub-p2p /exec/configure/if-port-channel-sub /exec/configure/if-loopback /exec/configure/if-ethernet-all /exec/configure/if-ethernet-p2p /exec/configure/if-remote-ethernet-sub /exec/configure/if-port-channel-range

description

description <desc_line> | no description [<desc_line>]

Syntax Description

no	Negate a command or set its defaults
description	Enter description of maximum 254 characters
<i>desc_line</i>	Description of maximum 254 characters

Command Mode

- /exec/configure/if-mgmt-ether

description

description <desc_line> | no description [<desc_line>]

Syntax Description

no	Negate a command or set its defaults
description	Enter description of maximum 80 characters
<i>desc_line</i>	Description of maximum 80 characters

Command Mode

- /exec/configure/if-overlay /exec/configure/if-te /exec/configure/if-nve

description

description <desc_line> | no description

Syntax Description

no	Negate a command or set its defaults
description	Interface specific description
<i>desc_line</i>	Up to 255 characters describing this interface

Command Mode

- /exec/configure/if-vlan-common

description

```
{ [ no ] description <descrip-string> }
```

Syntax Description

no	(Optional) Negate a command or set its defaults
description	Provide a description string for the LISP site
<i>descrip-string</i>	Description string

Command Mode

- /exec/configure/lisp-site /exec/configure/vrf/lisp-site

description

{ description <descr> } | { no description }

Syntax Description

description	Configure description of the profile
<i>descr</i>	Description of maximum 64 characters

Command Mode

- /exec/configure/configngoamprofile

description

[no] description <description>

Syntax Description

no	(Optional) Negate a command or set its defaults
description	Configure description for the policy
<i>description</i>	Description for the policy

Command Mode

- /exec/configure/event-manager-applet

description

[no] description

Syntax Description

no	Negate a command or set its defaults
description	Configure description for the policy

Command Mode

- /exec/configure/event-manager-applet

description

description <line> | no description

Syntax Description

no	Negate a command or set its defaults
description	Add a description for the role
<i>line</i>	Enter the description string(can include spaces)

Command Mode

- /exec/configure/role

description

{ [no] description <line> | no description }

Syntax Description

description	Provide a description for this Flow Record
<i>line</i>	Record description string (63 characters maximum)

Command Mode

- /exec/configure/config-fte-record

description

{ [no] description <line> | no description }

Syntax Description

description	Provide a description for this FTE Monitor
<i>line</i>	Monitor description string (63 characters maximum)

Command Mode

- /exec/configure/config-fte-monitor

description

{ [no] description <line> | no description }

Syntax Description

description	Provide a description for this FTE Eveny
<i>line</i>	Event description string (63 characters maximum)

Command Mode

- /exec/configure/config-fte-event

description

description <desc_line> | no description [<desc_line>]

Syntax Description

no	Negate a command or set its defaults
description	Enter description of maximum 254 characters
<i>desc_line</i>	Description of maximum 254 characters

Command Mode

- /exec/configure/if-any-tunnel

description

{ description <desc-str> | no description [<desc-str>] }

Syntax Description

no	Negate a command or set its defaults
description	Class-Map description
<i>desc-str</i>	Description of this class-map (up to 200 characters)

Command Mode

- /exec/configure/class-map

description

[no] description <desc-str>

Syntax Description

no	(Optional) Negate a command or set its defaults
description	Class-Map description
<i>desc-str</i>	Description of this class-map (up to 200 characters)

Command Mode

- /exec/configure/class-map/type/queuing

description

{ description <desc-str> | no description [<desc-str>] }

Syntax Description

no	Negate a command or set its defaults
description	Table-Map description
<i>desc-str</i>	Description of this table-map (up to 200 characters)

Command Mode

- /exec/configure/table-map

description

```
{ description <desc-str> | no description [ <desc-str> ] }
```

Syntax Description

no	Negate a command or set its defaults
description	Policy-Map description
<i>desc-str</i>	Description of this policy-map (up to 200 characters)

Command Mode

- /exec/configure/policy-map

description

{ description <desc-str> | no description [<desc-str>] }

Syntax Description

no	Negate a command or set its defaults
description	Policy-Map description
<i>desc-str</i>	Description of this policy-map (up to 200 characters)

Command Mode

- /exec/configure/policy-map/type/queuing

description

```
{ [ no ] description <text> }
```

Syntax Description

description	description for this profile
<i>text</i>	description

Command Mode

- /exec/configure/dot1x-cred

description

[no] description [<desc>] | description <desc>

Syntax Description

no	Negate a command or set its defaults
description	Group description
<i>desc</i>	(Optional) Up to 80 characters describing this group

Command Mode

- /exec/configure/if-eth-any/vrrpv3

description

{ [no] description <line> | no description }

Syntax Description

description	Provide a description for this Flow Record
<i>line</i>	Record description string (63 characters maximum)

Command Mode

- /exec/configure/nfm-record

description

{ [no] description <line> | no description }

Syntax Description

description	Provide a description for this Flow Monitor
<i>line</i>	Monitor description string (63 characters maximum)

Command Mode

- /exec/configure/nfm-monitor

description

{ [no] description <line> | no description }

Syntax Description

description	Provide a description for this Flow Exporter
<i>line</i>	Monitor description string (63 characters maximum)

Command Mode

- /exec/configure/nfm-exporter

description

description [port-profile] <desc_line> | no description [port-profile] [<desc_line>]

Syntax Description

no	Negate a command or set its defaults
description	Enter port-profile description of maximum 80 characters
port-profile	(Optional) Hack for conf-sync
<i>desc_line</i>	Enter port-profile description of maximum 80 characters

Command Mode

- /exec/configure/port-profile

description

```
{ description <desc-str> | no description [ <desc-str> ] }
```

Syntax Description

no	Negate a command or set its defaults
description	Class-Map description
<i>desc-str</i>	Description of this class-map (up to 200 characters)

Command Mode

- /exec/configure/class-map/type/uf

description

{ description <desc-str> | no description [<desc-str>] }

Syntax Description

no	Negate a command or set its defaults
description	Policy-Map description
<i>desc-str</i>	Description of this policy-map (up to 200 characters)

Command Mode

- /exec/configure/policy-map/type/uf

description

{ description <line> } | { no description }

Syntax Description

no	Negate a command or set its defaults
description	Description of the VRF
<i>line</i>	VRF description string

Command Mode

- /exec/configure/vrf

description

{ description <line> | no description }

Syntax Description

no	Negate a command or set its defaults
description	Description of the route-map
<i>line</i>	Route-map description string

Command Mode

- /exec/configure/route-map

description

```
{ description <description_text> | no description [ <description_text> ] }
```

Syntax Description

no	Negate a command or set its defaults
description	Virtual service description
<i>description_text</i>	Description of this virtual service

Command Mode

- /exec/configure/virt-serv

description description

[no] description | description <desc>

Syntax Description

no	(Optional) Negate a command or set its defaults
description	Pathway description
<i>desc</i>	Up to 80 characters describing this pathway

Command Mode

- /exec/configure/if-eth-any/vrrs

dest-ipaddr

```
{ dest-ipaddr { <ip-address> | <hostname> | <ipv6-address> } }
```

Syntax Description

dest-ipaddr	Destination ip address
<i>ip-address</i>	IP address, broadcast disallowed
<i>hostname</i>	IP Hostname, broadcast disallowed

Command Mode

- /exec/configure/ip-sla/tcp

dest-ipaddr

```
{ dest-ipaddr { <ip-address> | <hostname> } }
```

Syntax Description

<code>dest-ipaddr</code>	Destination ip address
<i>ip-address</i>	IP address, broadcast disallowed
<i>hostname</i>	IP Hostname, broadcast disallowed

Command Mode

- /exec/configure/ip-sla/udp /exec/configure/ip-sla/jitter

dest-port

{ dest-port <port> }

Syntax Description

dest-port	Destination port
<i>port</i>	udp port number

Command Mode

- /exec/configure/ip-sla/udp /exec/configure/ip-sla/jitter /exec/configure/ip-sla/tcp

dest

```
{ dest { { ip { <numeric10> | <numeric11> | unknown } } | { mac <dmac> <dot1qid> [ <intfid> ] } } }
```

Syntax Description

dest	destination node
ip	ip address
<i>numeric10</i>	Ipv4 address of remote host / VTEP
unknown	Peer vtep ip is unknown, Applicable only for channel Nv03
mac	Mac
<i>dmac</i>	Destination mac address
<i>dot1qid</i>	Encapsulation dot1q/bd on which the mac is learnt
<i>intfid</i>	(Optional) Name of the interface for ngoam ping on which dot1q is configured

Command Mode

- /exec/configure/configngoamconnectcheck

destination-group

[no] destination-group <dgrp-id>

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-group	Create destination group
<i>dgrp-id</i>	Identifier

Command Mode

- /exec/configure/telemetry

destination-profile

[no] destination-profile

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Specify the default destination profile

Command Mode

- /exec/configure/telemetry

destination-profile

[no] destination-profile <s0>

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
s0	User defined destination profile name

Command Mode

- /exec/configure/callhome

destination-profile CiscoTAC-1 alert-group

[no] destination-profile CiscoTAC-1 alert-group { All | Configuration | Diagnostic | EEM | Cisco-TAC | Environmental | Inventory | License | Linecard-Hardware | Supervisor-Hardware | Syslog-group-port | System | Test }

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
CiscoTAC-1	Configure destination profile for XML message
alert-group	Add alert group
All	This alert group consists of all of the callhome messages
Cisco-TAC	Events which are meant for Cisco TAC only
Environmental	Power, fan, temperature related events
Inventory	Inventory status events
License	Events related to licensing
Linecard-Hardware	Linecard related events
Supervisor-Hardware	Supervisor related events
Syslog-group-port	Events related to syslog messages filed by port manager
System	Software related events
Test	User generated test events
Configuration	Events related to Configuration
Diagnostic	Events related to Diagnostic
EEM	EEM events

Command Mode

- /exec/configure/callhome

destination-profile CiscoTAC-1 email-addr

[no] destination-profile CiscoTAC-1 email-addr <s0>

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
CiscoTAC-1	Configure destination profile for XML message
email-addr	Add email addr
s0	Provide email address, example: jdow@xyz.com

Command Mode

- /exec/configure/callhome

destination-profile CiscoTAC-1 http

[no] destination-profile CiscoTAC-1 http <s0>

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
CiscoTAC-1	Configure destination profile for XML message
http	Add http or https url
s0	Provide http or https url, example1: http://site.com/services/callserv example2: https://site2.com/serv/CALL

Command Mode

- /exec/configure/callhome

destination-profile CiscoTAC-1 message-level

[no] destination-profile CiscoTAC-1 message-level <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
CiscoTAC-1	Configure destination profile for XML message
message-level	Callhome message level(0-lowest urgency, 9-highest urgency)
<i>i0</i>	

Command Mode

- /exec/configure/callhome

destination-profile CiscoTAC-1 message-size

[no] destination-profile CiscoTAC-1 message-size <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
CiscoTAC-1	Configure destination profile for XML message
message-size	Configure maximum message size (default 5000000)
<i>i0</i>	Provide maximum possible message size

Command Mode

- /exec/configure/callhome

destination-profile CiscoTAC-1 transport-method http

[no] destination-profile CiscoTAC-1 transport-method http

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
CiscoTAC-1	Configure destination profile for XML message
transport-method	Callhome message sending transport-method
http	http transport-method

Command Mode

- /exec/configure/callhome

destination-profile CiscoTAC-1 transport-method email

[no] destination-profile CiscoTAC-1 transport-method email

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
CiscoTAC-1	Configure destination profile for XML message
transport-method	Callhome message sending transport-method
email	email transport-method

Command Mode

- /exec/configure/callhome

destination-profile alert-group

[no] destination-profile <s0> alert-group { All | Configuration | Diagnostic | EEM | Cisco-TAC | Environmental | Inventory | License | Linecard-Hardware | Supervisor-Hardware | Syslog-group-port | System | Test }

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
s0	User defined destination profile name
alert-group	Add alert group
All	This alert group consists of all of the callhome messages
Cisco-TAC	Events which are meant for Cisco TAC only
Environmental	Power,fan,temperature related events
Inventory	Inventory status events
License	Events related to licensing
Linecard-Hardware	Linecard related events
Supervisor-Hardware	Supervisor related events
Syslog-group-port	Events related to syslog messages filed by port manager
System	Software related events
Test	User generated test events
Configuration	Events related to Configuration
Diagnostic	Events related to Diagnostic
EEM	EEM events

Command Mode

- /exec/configure/callhome

destination-profile email-addr

[no] destination-profile <s0> email-addr <s1>

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
s0	User defined destination profile name
email-addr	Add email addr
s1	Provide email address, example: jdow@xyz.com

Command Mode

- /exec/configure/callhome

destination-profile format

destination-profile <s0> format { full-txt | short-txt | XML }

Syntax Description

destination-profile	Configure destination profiles
<i>s0</i>	User defined destination profile name
format	Callhome message format (default XML)
full-txt	Plain text message format
short-txt	Short text message format
XML	XML message format

Command Mode

- /exec/configure/callhome

destination-profile full-txt-destination alert-group

[no] destination-profile full-txt-destination alert-group { All | Configuration | Diagnostic | EEM | Cisco-TAC | Environmental | Inventory | License | Linecard-Hardware | Supervisor-Hardware | Syslog-group-port | System | Test }

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
full-txt-destination	Configure destination profile for plain txt message
alert-group	Add alert group
All	This alert group consists of all of the callhome messages
Cisco-TAC	Events which are meant for Cisco TAC only
Environmental	Power, fan, temperature related events
Inventory	Inventory status events
License	Events related to licensing
Linecard-Hardware	Linecard related events
Supervisor-Hardware	Supervisor related events
Syslog-group-port	Events related to syslog messages filed by port manager
System	Software related events
Test	User generated test events
Configuration	Events related to Configuration
Diagnostic	Events related to Diagnostic
EEM	EEM events

Command Mode

- /exec/configure/callhome

destination-profile full-txt-destination email-addr

[no] destination-profile full-txt-destination email-addr <s0>

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
full-txt-destination	Configure destination profile for plain txt message
email-addr	Add email addr
s0	Provide email address, example: jdow@xyz.com

Command Mode

- /exec/configure/callhome

destination-profile full-txt-destination http

[no] destination-profile full-txt-destination http <s0>

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
full-txt-destination	Configure destination profile for plain txt message
http	Add http or https url
s0	Provide http or https url, example1: http://site.com/services/callserv example2: https://site2.com/serv/CALL

Command Mode

- /exec/configure/callhome

destination-profile full-txt-destination message-size

[no] destination-profile full-txt-destination message-size <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
full-txt-destination	Configure destination profile for plain txt message
message-size	Configure maximum message size (default 2500000)
<i>i0</i>	Provide maximum possible message size

Command Mode

- /exec/configure/callhome

destination-profile full-txt-destination message-level

[no] destination-profile full-txt-destination message-level <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
full-txt-destination	Configure destination profile for plain txt message
message-level	Callhome message level(0-lowest urgency, 9-highest urgency)
<i>i0</i>	

Command Mode

- /exec/configure/callhome

destination-profile full-txt-destination transport-method http

[no] destination-profile full-txt-destination transport-method http

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
full-txt-destination	Configure destination profile for plain txt message
transport-method	Callhome message sending transport-method
http	http transport-method

Command Mode

- /exec/configure/callhome

destination-profile full-txt-destination transport-method email

[no] destination-profile full-txt-destination transport-method email

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
full-txt-destination	Configure destination profile for plain txt message
transport-method	Callhome message sending transport-method
email	email transport-method

Command Mode

- /exec/configure/callhome

destination-profile http

[no] destination-profile <s4> { http <s2> }

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
s4	User defined destination profile name
http	Add http or https url
s2	Provide http or https url, example1: http://site.com/services/callserv example2: https://site2.com/serv/CALL

Command Mode

- /exec/configure/callhome

destination-profile message-level

[no] destination-profile <s0> message-level <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
s0	User defined destination profile name
message-level	Callhome message level(0-lowest urgency, 9-highest urgency)
i0	

Command Mode

- /exec/configure/callhome

destination-profile message-size

[no] destination-profile <s0> message-size <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
s0	User defined destination profile name
message-size	Configure maximum message size (default 2500000)
i0	Provide maximum possible message size

Command Mode

- /exec/configure/callhome

destination-profile short-txt-destination alert-group

[no] destination-profile short-txt-destination alert-group { All | Configuration | Diagnostic | EEM | Cisco-TAC | Environmental | Inventory | License | Linecard-Hardware | Supervisor-Hardware | Syslog-group-port | System | Test }

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
short-txt-destination	Configure destination profile for short txt message
alert-group	Add alert group
All	This alert group consists of all of the callhome messages
Cisco-TAC	Events which are meant for Cisco TAC only
Environmental	Power, fan, temperature related events
Inventory	Inventory status events
License	Events related to licensing
Linecard-Hardware	Linecard related events
Supervisor-Hardware	Supervisor related events
Syslog-group-port	Events related to syslog messages filed by port manager
System	Software related events
Test	User generated test events
Configuration	Events related to Configuration
Diagnostic	Events related to Diagnostic
EEM	EEM events

Command Mode

- /exec/configure/callhome

destination-profile short-txt-destination email-addr

[no] destination-profile short-txt-destination email-addr <s0>

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
short-txt-destination	Configure destination profile for short txt message
email-addr	Add email addr
s0	Provide email address, example: jdow@xyz.com

Command Mode

- /exec/configure/callhome

destination-profile short-txt-destination http

[no] destination-profile short-txt-destination http <s0>

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
short-txt-destination	Configure destination profile for short txt message
http	Add http or https url
s0	Provide http or https url, example1: http://site.com/services/callserv example2: https://site2.com/serv/CALL

Command Mode

- /exec/configure/callhome

destination-profile short-txt-destination message-level

[no] destination-profile short-txt-destination message-level <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
short-txt-destination	Configure destination profile for short txt message
message-level	Callhome message level(0-lowest urgency, 9-highest urgency)
<i>i0</i>	

Command Mode

- /exec/configure/callhome

destination-profile short-txt-destination message-size

[no] destination-profile short-txt-destination message-size <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
short-txt-destination	Configure destination profile for short txt message
message-size	Configure maximum message size (default 4000)
<i>i0</i>	

Command Mode

- /exec/configure/callhome

destination-profile short-txt-destination transport-method http

[no] destination-profile short-txt-destination transport-method http

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
short-txt-destination	Configure destination profile for short txt message
transport-method	Callhome message sending transport-method
http	http transport-method

Command Mode

- /exec/configure/callhome

destination-profile short-txt-destination transport-method email

[no] destination-profile short-txt-destination transport-method email

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
short-txt-destination	Configure destination profile for short txt message
transport-method	Callhome message sending transport-method
email	email transport-method

Command Mode

- /exec/configure/callhome

destination-profile transport-method email

[no] destination-profile <s5> transport-method email

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
s5	User defined destination profile name
transport-method	Callhome message sending transport-method
email	email transport-method

Command Mode

- /exec/configure/callhome

destination-profile transport-method http

[no] destination-profile <s6> transport-method http

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
s6	User defined destination profile name
transport-method	Callhome message sending transport-method
http	http transport-method

Command Mode

- /exec/configure/callhome

destination

[no] destination | destination <ipaddr>

Syntax Description

no	Negate a command or set its defaults
destination	destination of tunnel
<i>ipaddr</i>	ip address (A.B.C.D)

Command Mode

- /exec/configure/if-te

destination

```
{ [ no ] destination { <ipaddr> | <ipv6addr> } [ use-vrf { <vrf_name> | <vrf-known-name> } ] | no destination }
```

Syntax Description

<code>destination</code>	Specify the destination address
<code>ipaddr</code>	Destination IP address for collector
<code>use-vrf</code>	(Optional) Optional VRF label
<code>vrf_name</code>	(Optional) VRF name
<code>vrf-known-name</code>	(Optional) Known VRF name

Command Mode

- /exec/configure/config-fte-exporter

destination

```
{ [ no ] destination { <ipaddr> | <ipv6addr> } [ use-vrf { <vrf_name> | <vrf-known-name> } ] | no destination }
```

Syntax Description

<code>destination</code>	Specify the destination address
<code>ipaddr</code>	Destination IP address for collector
<code>use-vrf</code>	(Optional) Optional VRF label
<code>vrf_name</code>	(Optional) VRF name
<code>vrf-known-name</code>	(Optional) Known VRF name

Command Mode

- /exec/configure/nfm-exporter

destination filter ip

```
[no] destination filter ip { <ip-addr> <ip-mask> } [ ip | { { udp | tcp } { <port_num> | any } } ] [ { arp | advertise } { enable | disable } ]
```

Syntax Description

no	(Optional) Negate a command or set its defaults
destination	destination ip configuration
filter	list of ips to filter
ip	destination ip
<i>ip-addr</i>	IP address in format i.i.i.i
<i>ip-mask</i>	IP network mask in format m.m.m.m
ip	(Optional) IP Protocol
udp	(Optional) UDP Protocol
tcp	(Optional) TCP Protocol
<i>port_num</i>	(Optional) Port Number
any	(Optional) Any Port Number
arp	(Optional) ARP
advertise	(Optional) advertise
enable	(Optional) Enable
disable	(Optional) Disable

Command Mode

- /exec/configure/smartc

destination filter ip any any

[no] destination filter ip any any

Syntax Description

no	(Optional) Negate a command or set its defaults
destination	destination ip configuration
filter	list of ips to filter
ip	destination ip
any	Any IP

Command Mode

- /exec/configure/smartc

destination ip-address

```
{ [ no ] destination ip-address <ipaddr> } [ vrf { <vrf-name> | <vrf-known-name> } ]
```

Syntax Description

destination	Destination configuration
ip-address	IP Address
<i>ipaddr</i>	IP Address to be configured
vrf	(Optional) VRF label
<i>vrf-name</i>	(Optional) VRF name
<i>vrf-known-name</i>	(Optional) Known VRF name

Command Mode

- /exec/configure/config-ssx-collector

destination udp-port

[no] destination udp-port <udpport>

Syntax Description

destination	Destination configuration
udp-port	UDP Port
<i>udpport</i>	UDP port to be configured, default 49153

Command Mode

- /exec/configure/config-ssx-collector

device-group

[no] device-group <group-name>

Syntax Description

no	(Optional) Negate a command or set its defaults
device-group	PLB device group
<i>group-name</i>	Specify device-group name

Command Mode

- /exec/configure/plb

device-group

{ device-group <name> } | { no device-group <name> }

Syntax Description

no	Negate a command or set its defaults
device-group	ITD device group
<i>name</i>	ITD device group name

Command Mode

- /exec/configure/itd

device-role

[no] device-role <dev_role>

Syntax Description

no	(Optional) Negate a command or set its defaults
<i>dev_role</i>	

Command Mode

- /exec/configure/config-ra-guard

device-role

[no] device-role <dev_role>

Syntax Description

no	(Optional) Negate a command or set its defaults
<i>dev_role</i>	

Command Mode

- /exec/configure/config-snoop-policy

device-role

[no] device-role <devrole>

Syntax Description

no	(Optional) Negate a command or set its defaults
<i>devrole</i>	

Command Mode

- /exec/configure/config-dhcp-guard

devtest sap

devtest sap <sap> [exec <func>]

Syntax Description

devtest	Remote API invocation (helps testing and debugging)
sap	Specify the SAP address of the destination queue
<i>sap</i>	SAP address of the destination queue (0 == Registry)
exec	(Optional) Specify the API name to be invoked on the remote feature
<i>func</i>	(Optional) Examples:

Command Mode

- /exec

diagnostic bootup level

[no] diagnostic bootup level

Syntax Description

no	Negate a command or set its defaults
diagnostic	Diagnostic commands
bootup	Configure Diagnostic for bootup
level	Select diagnostic level

Command Mode

- /exec/configure

diagnostic bootup level bypass

diagnostic bootup level { bypass | complete }

Syntax Description

diagnostic	Diagnostic commands
bootup	Configure Diagnostic for bootup
level	Select diagnostic level
bypass	Skip all bootup test
complete	Complete level

Command Mode

- /exec/configure

diagnostic clear result module all diagnostic clear result module test

diagnostic clear result module all | diagnostic clear result module <module> test { <test-id> | all }

Syntax Description

diagnostic	Diagnostic commands
clear	Erase Diagnostic Test Results/Stats
result	Diagnostic test result
module	Module keyword
<i>module</i>	Module number
all	Select all
test	Diagnostic test selection
<i>test-id</i>	

Command Mode

- /exec

diagnostic eem action aggressive

[no] diagnostic eem action aggressive

Syntax Description

no	(Optional) Negate a command or set its defaults
diagnostic	Diagnostic commands
eem	Configure Diagnostic for eem
action	Select diagnostic action
aggressive	Take aggressive default actions

Command Mode

- /exec/configure

diagnostic monitor interval module test all hour min second

diagnostic monitor interval module <module> test { all | <name> | <test-id> } hour <hour-cntr> min <min-cntr> second <sec-cntr> | no diagnostic monitor interval module <module> test { all | <name> | <test-id> }

Syntax Description

no	Negate a command or set its defaults
diagnostic	Diagnostic commands
monitor	Configure diagnostic monitoring test
interval	Configure diagnostic monitoring tests interval
module	Module Keyword
<i>module</i>	Module number
test	Diagnostic test selection
all	Select all test ID
<i>test-id</i>	
<i>name</i>	Test name
hour	Hour of the day
<i>hour-cntr</i>	Interval in hours
min	Minute of an hour
<i>min-cntr</i>	Interval in minutes
second	Second of a minute
<i>sec-cntr</i>	Interval in seconds

Command Mode

- /exec/configure

diagnostic monitor module all

[no] diagnostic monitor module all [test <name>]

Syntax Description

no	(Optional) Negate a command or set its defaults
diagnostic	Diagnostic commands
monitor	Configure diagnostic monitoring test
module	Module Keyword
all	Select all module ID
test	(Optional) Diagnostic test selection
<i>name</i>	(Optional) Test name

Command Mode

- /exec/configure

diagnostic monitor module test all

```
diagnostic monitor module <module> test { all | <name> | <test-id> } | no diagnostic monitor module <module>
test { all | <name> | <test-id> }
```

Syntax Description

no	Negate a command or set its defaults
diagnostic	Diagnostic commands
monitor	Configure diagnostic monitoring test
module	Module Keyword
<i>module</i>	Module number
test	Diagnostic test selection
all	Select all test ID
<i>test-id</i>	
<i>name</i>	Test name

Command Mode

- /exec/configure

diagnostic ondemand action-on-failure continue failure-count diagnostic ondemand action-on-failure stop

diagnostic ondemand action-on-failure continue failure-count <failure-cnt> | diagnostic ondemand action-on-failure stop

Syntax Description

diagnostic	Diagnostic commands
ondemand	On demand diagnostic setting
action-on-failure	Set action to take if test fails
continue	Continue ondemand test until test failure limit is reached
failure-count	Continue failing tests this many times
stop	Stop ondemand tests immediately if a test fails
<i>failure-cnt</i>	Maximum number of test failures allowed

Command Mode

- /exec

diagnostic ondemand iteration

diagnostic ondemand iteration <iteration-count>

Syntax Description

diagnostic	Diagnostic commands
ondemand	On demand diagnostic setting
iteration	Set number of times to repeat ondemand test list
<i>iteration-count</i>	Number of times to repeat ondemand test list

Command Mode

- /exec

diagnostic ondemand test-parameter module test port_lb packet-length

diagnostic ondemand test-parameter module <module> test port_lb packet-length <size>

Syntax Description

diagnostic	Diagnostic commands
ondemand	Ondemand command
test-parameter	Set test parameter
module	Module keyword
<i>module</i>	Module number
test	Diagnostic test selection
port_lb	Port loop back test
packet-length	Size of the packet
<i>size</i>	Packet size for the selected module

Command Mode

- /exec

diagnostic pss shrink

diagnostic pss shrink

Syntax Description

diagnostic	Diagnostic commands
pss	PSS command
shrink	compact the diag_port_lb PSS

Command Mode

- /exec

diagnostic start module test

diagnostic start module <module> test { all | <name> | <test-id> | non-disruptive | per-port } [port { iall | <port-id> }]

Syntax Description

diagnostic	Diagnostic commands
start	Starting on demand diagnostic
module	Module keyword
<i>module</i>	Module Number
test	Diagnostic test selection
all	Select all test ID
<i>name</i>	Test name
<i>test-id</i>	
non-disruptive	Select the Non-Disruptive test suite [Attribute = N]
per-port	Select the Per-Port test suite [Attribute = P]
port	(Optional) Interface port selection
iall	(Optional) Select all ports
<i>port-id</i>	(Optional)

Command Mode

- /exec

diagnostic stop module test all

```
diagnostic stop module <module> test { all | <name> | <test-id> }
```

Syntax Description

diagnostic	Diagnostic commands
stop	Stopping diagnostic
module	Module keyword
<i>module</i>	Module Number
test	Diagnostic test selection
all	Select all test ID
<i>test-id</i>	
<i>name</i>	Test name

Command Mode

- /exec

diagnostic test simulation module test diagnostic test simulation module test clear

```
diagnostic test simulation module <module> test <test-id> [ port { <port-id> | all } ] { success | fail | random-fail } | diagnostic test simulation module <module> test <test-id> clear
```

Syntax Description

diagnostic	Diagnostic commands
test	Diagnostic test selection
simulation	Simulating Diagnostic result
module	Module keyword
<i>module</i>	Module Number
test	Diagnostic test selection
<i>test-id</i>	
port	(Optional) Interface port selection
all	(Optional) Select all ports
<i>port-id</i>	(Optional)
success	pass test result
fail	fail test result
random-fail	fail test result randomly
clear	Stop simulation

Command Mode

- /exec

diff-clean

diff-clean [all-sessions]

Syntax Description

diff-clean	remove temp files created by ' diff' filters
all-sessions	(Optional) remove ' diff' temp files from all sessions (past and present!) of current user

Command Mode

- /exec

diff-clean all-users

diff-clean all-users

Syntax Description

diff-clean	remove temp files created by ' diff' filters
all-users	remove ' diff' temp files from all sessions (past and present!) of all users

Command Mode

- /exec

diff

| diff [again | echo | -c [<lines>] | -b | -B | -i | -I <regexp> | -y | --left-column | -W <columns> | -q | -s] +

Syntax Description

	Pipe command output to filter
diff	show difference between current and previous invocation (creates temp files: remove them with 'diff-clean' command and dont use it on commands with big outputs, like 'show tech!')
again	(Optional) dont create new file: use old ones, just change display options or add more filters
echo	(Optional) echo the current file (only effective if no old file)
-c	(Optional) set number of lines of context (default 3)
<i>lines</i>	(Optional) number of lines of context
-b	(Optional) Ignore changes in amount of white space
-B	(Optional) Ignore changes that just insert or delete blank lines
-i	(Optional) Ignore changes in case
-I	(Optional) Ignore changes that just insert or delete lines that match regexp
<i>regexp</i>	(Optional) regexp of lines to ignore
-y	(Optional) Use the side by side output format
--left-column	(Optional) Print only the left column of two common lines in side by side format
-W	(Optional) Use an output width of <columns> in side by side format
<i>columns</i>	(Optional) Use an output width of <columns> in side by side format
-q	(Optional) Report only whether the files differ, not the details of the differences
-s	(Optional) Report when two files are the same

Command Mode

- /output

dir

```
dir [ <uri0> | <uri1> | <uri2> ] [ __readonly__ { TABLE_dir <fsize> <timestring> <fname> } { <usage>
<bytesused> <bytesfree> <bytestotal> } ]
```

Syntax Description

<code>dir</code>	list files in a directory
<code>uri0</code>	(Optional) Directory or filename
<code>uri1</code>	(Optional) Directory or filename on expansion flash
<code>uri2</code>	(Optional) Directory or filename on log flash
<code>__readonly__</code>	(Optional) Read Only
<code>TABLE_dir</code>	(Optional) show dir
<code>fsize</code>	(Optional) filesize
<code>timestring</code>	(Optional) time string
<code>fname</code>	(Optional) filename
<code>usage</code>	(Optional) usage
<code>bytesused</code>	(Optional) bytes used
<code>bytesfree</code>	(Optional) bytes free
<code>bytestotal</code>	(Optional) bytes total

Command Mode

- /exec

disable-connected-check

[no | default] disable-connected-check

Syntax Description

no	(Optional) Negate a command or set its defaults
default	(Optional) Inherit values from a peer template
disable-connected-check	Disable check for directly connected peer

Command Mode

- /exec/configure/router-bgp/router-bgp-neighbor-sess

disable-memory-alert-check

[no] disable-memory-alert-check

Syntax Description

no	(Optional) Negate a command or set its defaults
disable-memory-alert-check	Disables the system memory alert handling in BGP

Command Mode

- /exec/configure/router-bgp

disable-peer-as-check

[no | default] disable-peer-as-check

Syntax Description

no	(Optional) Negate a command or set its defaults
default	(Optional) Inherit values from a peer template
disable-peer-as-check	Disable checking of peer AS-number while advertising

Command Mode

- /exec/configure/router-bgp/router-bgp-vrf-neighbor/router-bgp-vrf-neighbor-af-ipv4
- /exec/configure/router-bgp/router-bgp-vrf-neighbor/router-bgp-vrf-neighbor-af-ipv6
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-l2vpn-evpn
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-ipv4-label
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-ipv6-label
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-ipv4-mvpn
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-ipv6-mvpn

disable-policy-batching

[no] disable-policy-batching [nexthop | { { ipv4 | ipv6 } prefix-list <prfxlist-name> }]

Syntax Description

no	(Optional) Negate a command or set its defaults
disable-policy-batching	Disable batching evaluation of outbound policy for a peer
nexthop	(Optional) batching based on nexthop
ipv4	(Optional) IPv4 address-family
ipv6	(Optional) IPv6 address-family
prefix-list	(Optional) Apply prefix-list
<i>prfxlist-name</i>	(Optional) Name of prefix-list

Command Mode

- /exec/configure/router-bgp

disable

disable

Syntax Description

disable	disable callhome
---------	------------------

Command Mode

- /exec/configure/callhome

discard-route external

[no] discard-route { external | internal }

Syntax Description

no	(Optional) Negate a command or set its defaults
discard-route	Install discard route
external	External route
internal	Internal route

Command Mode

- /exec/configure/router-ospf /exec/configure/router-ospf/vrf

discard-route external

[no] discard-route { external | internal }

Syntax Description

no	(Optional) Negate a command or set its defaults
discard-route	Install discard route
external	External route
internal	Internal route

Command Mode

- /exec/configure/router-ospf3 /exec/configure/router-ospf3/vrf

discovery

```
discovery { quick-start | hello { holdtime <link-hello-holdtime> | interval <link-hello-intvl> } | targeted-hello
{ accept [ from <pfx-list> ] | tgt-holdtime <tgt-hello-holdtime> | tgt-interval <tgt-hello-intvl> } |
ignore-transport-address | omit-transport-address | spoofing } | no discovery { quick-start | hello { holdtime |
interval } | targeted-hello { accept | tgt-holdtime | tgt-interval } | ignore-transport-address | omit-transport-address
| spoofing }
```

Syntax Description

no	Negate a command or set its defaults
discovery	LDP discovery
quick-start	Enable quick LDP Hello transmissions on interface up
hello	LDP discovery Hello
interval	LDP discovery Hello interval
holdtime	LDP discovery Hello holdtime
<i>link-hello-holdtime</i>	Holdtime in seconds
<i>link-hello-intvl</i>	Hello interval in seconds
targeted-hello	LDP discovery Targeted Hello
accept	Accept targeted hellos
from	(Optional) Prefix list to specify acceptable targeted hello sources
<i>pfx-list</i>	(Optional) Name of prefix list
tgt-holdtime	LDP discovery Targeted Hello holdtime
<i>tgt-hello-holdtime</i>	Holdtime in seconds
tgt-interval	LDP discovery Targeted Hello interval
<i>tgt-hello-intvl</i>	Hello interval in seconds
ignore-transport-address	
omit-transport-address	
spoofing	

Command Mode

- /exec/configure/ldp

distance

distance <admin-dist> | no distance [<admin-dist>]

Syntax Description

no	Negate a command or set its defaults
distance	Administrative distance
<i>admin-dist</i>	Distance value

Command Mode

- /exec/configure/router-isis/router-isis-vrf-common /exec/configure/router-isis/router-isis-af-ipv6

distance

distance <ebgp-dist> <ibgp-dist> <local-dist> | no distance [<ebgp-dist> <ibgp-dist> <local-dist>]

Syntax Description

no	Negate a command or set its defaults
distance	Configure administrative distance
<i>ebgp-dist</i>	Distance for EBGp routes
<i>ibgp-dist</i>	Distance for IBGP routes
<i>local-dist</i>	Distance for local routes

Command Mode

- /exec/configure/router-bgp/router-bgp-af

distance

distance <admin-dist> | no distance [<admin-dist>]

Syntax Description

no	Negate a command or set its defaults
distance	OSPF administrative distance
<i>admin-dist</i>	administrative distance value

Command Mode

- /exec/configure/router-ospf /exec/configure/router-ospf/vrf

distance

distance <admin-dist> | no distance [<admin-dist>]

Syntax Description

no	Negate a command or set its defaults
distance	OSPFv3 administrative distance
<i>admin-dist</i>	administrative distance value

Command Mode

- /exec/configure/router-ospf3/router-ospf3-af-ipv6 /exec/configure/router-ospf3/vrf/router-ospf3-af-ipv6

distance

distance <distance> | no distance [<distance>]

Syntax Description

no	Negate a command or set its defaults
distance	RIP administrative distance
<i>distance</i>	RIP administrative distance

Command Mode

- /exec/configure/router-rip/router-rip-af-common /exec/configure/router-rip/router-rip-vrf-af-common

distance

```
{ { distance <int-distance> <ext-distance> } | { no distance [ <int-distance> <ext-distance> ] } }
```

Syntax Description

no	Negate a command or set its defaults
distance	Define an administrative distance
<i>int-distance</i>	Distance for internal routes
<i>ext-distance</i>	Distance for external routes

Command Mode

- /exec/configure/router-eigrp/router-eigrp-vrf-common /exec/configure/router-eigrp/router-eigrp-af-common

distribute-list route in

[no] distribute-list { { route-map <map> } | { prefix-list <list> } } { in | out } <interface>

Syntax Description

no	(Optional) Negate a command or set its defaults
distribute-list	Filter networks in routing updates
route-map	Use a route-map for route filtering
<i>map</i>	Route-map name
prefix-list	Use a prefix-list for route filtering
<i>list</i>	Reference to prefix-list name
in	Filter incoming routing updates
out	Filter outgoing routing updates
<i>interface</i>	Interface name

Command Mode

- /exec/configure/router-eigrp/router-eigrp-vrf-common /exec/configure/router-eigrp/router-eigrp-af-common

distribute into route-map all

```
{ { distribute <src-level> into <dst-level> { { route-map { <map-name> | <rtr_pol_name> } } | all } } | { no
distribute <src-level> into <dst-level> [ { route-map { <map-name> | <rtr_pol_name> } } | all ] } }
```

Syntax Description

no	Negate a command or set its defaults
distribute	Distribute routes between ISIS levels
<i>src-level</i>	Route-distribution between levels
<i>dst-level</i>	Route-distribution between levels
route-map	Route Map to constrain distribution
into	from level-n into level-m
<i>map-name</i>	A 'routing-rules' route-map name
<i>rtr_pol_name</i>	An existing routing-rules policy
all	Distribute all level-n routes

Command Mode

- /exec/configure/router-isis/router-isis-vrf-common /exec/configure/router-isis/router-isis-af-common

dns

```
[no] dns { <WORD> } { name-server { <hostname> | <ip-address> } } { [ source-ip { <source-ip-hostname> | <source-ip-address> } ] [ source-port <src-port> ] } +
```

Syntax Description

no	(Optional)
<i>source-ip</i>	(Optional) source-port
<i>src-port</i>	(Optional)
dns	DNS Operation
<i>WORD</i>	Target IP Address or Hostname
name-server	Name Server
<i>hostname</i>	Destination hostname, broadcast disallowed
<i>ip-address</i>	Destination IP address, broadcast disallowed
<i>source-ip-hostname</i>	(Optional) source IP hostname, broadcast disallowed
<i>source-ip-address</i>	(Optional) source IP address, broadcast disallowed
source-port	(Optional) Source Port

Command Mode

- /exec/configure/ip-sla

domain-id

domain-id { <id> | { type <dtype> value <dvalue> } | Null } | no domain-id [<id> | { type <dtype> value <dvalue> } | Null]

Syntax Description

no	Negate a command or set its defaults
domain-id	OSPF domain-ID
<i>id</i>	OSPF domain ID in IP address format
type	OSPF domain ID type in Hex format
<i>dtype</i>	OSPF domain ID type in Hex format
value	OSPF domain ID ext. community value in Hex
<i>dvalue</i>	
Null	Null Domain-ID

Command Mode

- /exec/configure/router-ospf/vrf

domain-id secondary

domain-id { <id> | { type <dtype> value <dvalue> } | Null } secondary | no domain-id [<id> | { type <dtype> value <dvalue> } | Null] secondary

Syntax Description

no	Negate a command or set its defaults
domain-id	OSPF domain-ID
<i>id</i>	OSPF domain ID in IP address format
type	OSPF domain ID type in Hex format
<i>dtype</i>	OSPF domain ID type in Hex format
value	OSPF domain ID ext. community value in Hex
<i>dvalue</i>	
Null	Null Domain-ID
secondary	Secondary Domain-ID

Command Mode

- /exec/configure/router-ospf/vrf

domain-tag

[no] domain-tag <as-number>

Syntax Description

no	(Optional) Negate a command or set its defaults
domain-tag	Set OSPF process domain-tag
<i>as-number</i>	AS number

Command Mode

- /exec/configure/router-ospf/vrf

dont-capability-negotiate

[no | default] dont-capability-negotiate

Syntax Description

no	(Optional) Negate a command or set its defaults
default	(Optional) Inherit values from a peer template
dont-capability-negotiate	Don't negotiate capability with this neighbor

Command Mode

- /exec/configure/router-bgp/router-bgp-neighbor-sess

dos2nxos

dos2nxos <uri0>

Syntax Description

dos2nxos	DOS to NXOS text file format converter
<i>uri0</i>	Filename to be displayed

Command Mode

- /exec

dot1q

[no] dot1q <vlan-id-sh>

Syntax Description

no	(Optional) Negate a command or set its defaults
dot1q	Configure a dot1q-based static host
<i>vlan-id-sh</i>	

Command Mode

- /exec/configure/static-host

dot1q

{ dot1q <dot1q-id> [<intf-id>] } | { no dot1q }

Syntax Description

no	Negate a command or set its defaults
dot1q	Encapsulation dot1q/bd
<i>dot1q-id</i>	Encapsulation dot1q/bd value
<i>intf-id</i>	(Optional) Name of the interface for ngoam on which dot1q is configured

Command Mode

- /exec/configure/configngoamprofile

dot1q

```
{ dot1q <vlan-id> [ cos <cos-val> ] } | { no dot1q }
```

Syntax Description

no	Negate a command or set its defaults
dot1q	specify flow profile to include dot1q tag
<i>vlan-id</i>	specify flow profile vlan-id
cos	(Optional) specify class of service
<i>cos-val</i>	(Optional) class of service value

Command Mode

- /exec/configure/configngoamprofileflow

dot1q default dynamic

{ dot1q default dynamic } | { no dot1q default }

Syntax Description

no	Negate a command or set its defaults
dynamic	Dynamic Profile Map: Retrieve profile name from the external server
dot1q	Dot1Q Encapsulation
default	Default (wildcard). Match any dot1q when there is no specific dot1q mapping configured

Command Mode

- /exec/configure/profile-map /exec/configure/profile-map-global

down-bit-ignore

{ down-bit-ignore } | { no down-bit-ignore }

Syntax Description

no	Negate a command or set its defaults
down-bit-ignore	Configure a PE router to ignore the DN bit for network summary, external and NSSA external LSA

Command Mode

- /exec/configure/router-ospf/vrf

downlink delay

downlink delay <ena-dis-flg> [timeout <time-out>] | no downlink delay

Syntax Description

no	Negate a command or set its defaults
downlink	Change downlink linkup time
delay	delay bringup of downlinks
<i>ena-dis-flg</i>	Enable/Disable downlink delay feature
timeout	(Optional) downlink ports enable delay in seconds
<i>time-out</i>	(Optional) Time out

Command Mode

- /exec/configure

dscp

{ [no] dscp <dscp> | no dscp }

Syntax Description

dscp	Optional DSCP
<i>dscp</i>	Differentiated services codepoint value

Command Mode

- /exec/configure/nfm-exporter

dscp

[no] dscp <dscp>

Syntax Description

dscp	DSCP
<i>dscp</i>	DSCP to be configured

Command Mode

- /exec/configure/config-ssx-collector

dst-grp

[no] dst-grp <d-grp-id>

Syntax Description

no	(Optional) Negate a command or set its defaults
dst-grp	Associated destination group
<i>d-grp-id</i>	Identifier

Command Mode

- /exec/configure/telemetry/subscription

dual-active exclude interface-vlan

dual-active exclude interface-vlan <allow-vlans> | no dual-active exclude interface-vlan

Syntax Description

no	Negate a command or set its defaults
dual-active	Configuration when peer link is down but peer is alive
interface-vlan	Interface vlan configuration
exclude	Interface vlans to exclude from suspension when dual-active
<i>allow-vlans</i>	Set allowed interface vlans

Command Mode

- /exec/configure/vpc-domain

dual-stage translate xml

dual-stage translate <dn> { xml | json } <in_file> <out_file> [exec-python] [delete-files]

Syntax Description

dual-stage	Related to 2 stage commit
translate	Convert from external restful format to internal JSON
xml	Input file has XML
json	Input file has JSON
<i>dn</i>	DN param
<i>in_file</i>	Input file name
<i>out_file</i>	Output file name
exec-python	(Optional) Execute python script after translation
delete-files	(Optional) Delete input and output files after translation

Command Mode

- /exec

duplex

duplex <duplex_mode> | no duplex [<duplex_mode>]

Syntax Description

no	Negate a command or set its defaults
duplex	Enter the port duplex mode
<i>duplex_mode</i>	Interface duplex mode

Command Mode

- /exec/configure/if-mgmt-ether

duplex

duplex <duplex_mode> | no duplex [<duplex_mode>]

Syntax Description

no	Negate a command or set its defaults
duplex	Enter the port duplex mode
<i>duplex_mode</i>	Interface duplex mode

Command Mode

- /exec/configure/if-ethernet-all /exec/configure/if-eth-non-member /exec/configure/if-port-channel

duplicate-message throttle

[no] duplicate-message throttle

Syntax Description

no	(Optional) Negate a command or set its defaults
duplicate-message	Configure throttling of duplicate callhome alert messages
throttle	Enable throttling of duplicate callhome alert messages

Command Mode

- /exec/configure/callhome

dynamic-capability

[no | default] dynamic-capability

Syntax Description

no	(Optional) Negate a command or set its defaults
default	(Optional) Inherit values from a peer template
dynamic-capability	Dynamic capability

Command Mode

- /exec/configure/router-bgp/router-bgp-neighbor-sess

dynamic-med-interval

[no] dynamic-med-interval <sec>

Syntax Description

no	(Optional) Negate a command or set its defaults
dynamic-med-interval	Sets the interval for dampening of med changes
<i>sec</i>	Time interval in seconds

Command Mode

- /exec/configure/router-bgp

