



0 Commands

- [oam-channel](#), on page 2
- [object-group ip address](#), on page 3
- [object-group ip port](#), on page 4
- [object-group ipv6 address](#), on page 5
- [object-group udp relay ip address](#), on page 6
- [object-group udp relay ip address](#), on page 7
- [of-port interface](#), on page 8
- [on-demand color](#), on page 9
- [openflow](#), on page 10
- [operation-packet-priority normal](#), on page 11
- [option exporter-stats timeout](#), on page 12
- [option interface-table timeout](#), on page 13
- [orib orib_api_init](#), on page 14
- [ospfv3 authentication](#), on page 15
- [ospfv3 bfd](#), on page 16
- [ospfv3 cost](#), on page 17
- [ospfv3 dead-interval](#), on page 18
- [ospfv3 hello-interval](#), on page 19
- [ospfv3 instance](#), on page 20
- [ospfv3 mtu-ignore](#), on page 21
- [ospfv3 network broadcast](#), on page 22
- [ospfv3 network point-to-point](#), on page 23
- [ospfv3 passive-interface](#), on page 24
- [ospfv3 priority](#), on page 25
- [ospfv3 retransmit-interval](#), on page 26
- [ospfv3 shutdown](#), on page 27
- [ospfv3 transmit-delay](#), on page 28
- [other-config-flag](#), on page 29
- [otv-isis](#), on page 30
- [overwrite-vlan](#), on page 31
- [owner](#), on page 32

oam-channel

{ oam-channel <val> } | { no oam-channel }

Syntax Description

oam-channel	oam-channel used
val	2 - nvo3 tissa

Command Mode

- /exec/configure/configngoamprofile

object-group ip address

[no] object-group ip address <name>

Syntax Description

no	(Optional) Negate a command or set its defaults
object-group	Configure ACL object groups
ip	IP Object groups
address	Address object group
name	object-group name

Command Mode

- /exec/configure

object-group ip port

[no] object-group ip port <name>

Syntax Description

no	(Optional) Negate a command or set its defaults
object-group	Configure ACL object groups
ip	IP Object groups
port	IP port object group (can be used in IPv4 and IPv6 access-lists)
name	object-group name

Command Mode

- /exec/configure

object-group ipv6 address

[no] object-group ipv6 address <name>

Syntax Description

no	(Optional) Negate a command or set its defaults
object-group	Configure ACL object groups
ipv6	IPv6 Object groups
address	Address object group
name	object-group name

Command Mode

- /exec/configure

object-group udp relay ip address

[no] object-group udp relay ip address <obj-grp-name>

Syntax Description

no	Negate a command or set its defaults
object-group	Configure object groups
udp	Configure UDP
relay	Configure UDP Relay
ip	IP Object groups
address	Address object group
obj-grp-name	object-group name

Command Mode

- /exec/configure

object-group udp relay ip address

object-group udp relay ip address <obj-grp-name>

Syntax Description

object-group	Configure object groups
udp	Configure UDP
relay	Configure UDP Relay
ip	IP Object groups
address	Address object group
obj-grp-name	object-group name

Command Mode

- /exec/configure

of-port interface

[no] of-port interface <ifname>

Syntax Description

no	(Optional) Negate a command or set its defaults
of-port	Add interfaces to openflow switch
interface	Interface
ifname	interface name

Command Mode

- /exec/configure/openflow/switch

on-demand color

[no] on-demand color <color>

Syntax Description

no	(Optional) Negate a command or set its defaults
on-demand	Configure on-demand color
color	Color
color	Color

Command Mode

- /exec/configure/sr/te

openflow

[no] openflow

Syntax Description

no	(Optional) Negate a command or set its defaults
openflow	OpenFlow configuration

Command Mode

- /exec/configure

operation-packet-priority normal

{ { no | default } operation-packet-priority | operation-packet-priority { normal | high } }

Syntax Description

no	
default	Set a command to its defaults
operation-packet-priority	Set operation packet properties
high	Priority high
normal	Priority normal

Command Mode

- /exec/configure/ip-sla/jitter

option exporter-stats timeout

{ [no] option exporter-stats timeout <time> | no option exporter-stats timeout }

Syntax Description

option	Version 9 Option Templates and Data
exporter-stats	Exporter Statistics Option
timeout	Option resend time
time	Time in seconds

Command Mode

- /exec/configure/nfm-exporter-v9

option interface-table timeout

{ [no] option interface-table timeout <time> | no option interface-table timeout }

Syntax Description

option	Version 9 Option Templates and Data
interface-table	Interface Table Option
timeout	Option resend time
time	Time in seconds

Command Mode

- /exec/configure/nfm-exporter-v9

orib orib_api_init

```
{ orib orib_api_init <client-name> } | { orib orib_api_close } | { orib orib_add_route <client-name> <mac>
[ <nh> | <nh6> ] <if-name> } | { orib orib_delete_route <client-name> <mac> [ <nh> | <nh6> ] <if-name> }
```

Syntax Description

orib	Use ORIB API routines from OTV process
orib_api_init	Call orib_api_init() from the OTV process
orib_api_close	Call orib_api_close() from the OTV process
orib_add_route	Call orib_add_route() from OTV process
orib_delete_route	Call orib_delete_route() from OTV process
client-name	Client name registered to ORIB process
mac	VLAN-ID/MAC Address tuple in vvvv-aaaa.bbbb.cccc format
nh	(Optional) Next-hop IPv4 address
if-name	Next-hop interface (iod)

Command Mode

- /exec

ospfv3 authentication

```
ospfv3 authentication { disable | ipsec spi <spi_id> { md5 <akey> | sha1 <akey> } } | no ospfv3 authentication
{ disable | ipsec spi <spi_id> }
```

Syntax Description

no	Negate a command or set its defaults
ospfv3	OSPFv3 configuration commands
authentication	Enable Authentication
disable	Disable Authentication
ipsec	IPSec
spi	Security Parameter Index
spi_id	SPI Value
md5	Use the MD5 algorithm
akey	Authentication Key
sha1	Use the SHA1 algorithm
akey	Authentication Key

Command Mode

- /exec/configure/if-igp /exec/configure/if-gre-tunnel /exec/configure/if-mpls-tunnel /exec/configure/if-mgmt-config

ospfv3 bfd

[no] ospfv3 bfd [disable]

Syntax Description

no	(Optional) Negate a command or set its defaults
ospfv3	OSPFv3 configuration commands
bfd	Enable BFD on this interface
disable	(Optional) Disable BFD on this interface

Command Mode

- /exec/configure/if-igp /exec/configure/if-gre-tunnel /exec/configure/if-mgmt-config

ospfv3 cost

```
{ ospfv3 cost <cost> } | { no ospfv3 cost [ <cost> ] }
```

Syntax Description

no	Negate a command or set its defaults
ospfv3	OSPFv3 configuration commands
cost	Cost associated with interface
cost	Cost value

Command Mode

- /exec/configure/if-igp /exec/configure/if-gre-tunnel /exec/configure/if-mpls-tunnel /exec/configure/if-mgmt-config

ospfv3 dead-interval

{ ospfv3 dead-interval <interval> } | { no ospfv3 dead-interval [<interval>] }

Syntax Description

no	Negate a command or set its defaults
ospfv3	OSPFv3 configuration commands
dead-interval	Dead interval
interval	(seconds)

Command Mode

- /exec/configure/if-igp /exec/configure/if-gre-tunnel /exec/configure/if-mpls-tunnel /exec/configure/if-mgmt-config

ospfv3 hello-interval

{ ospfv3 hello-interval <interval> } | { no ospfv3 hello-interval [<interval>] }

Syntax Description

no	Negate a command or set its defaults
ospfv3	OSPFv3 configuration commands
hello-interval	Hello interval
interval	(seconds)

Command Mode

- /exec/configure/if-igp /exec/configure/if-gre-tunnel /exec/configure/if-mpls-tunnel /exec/configure/if-mgmt-config

ospfv3 instance

```
{ ospfv3 instance <instance-id> } | { no ospfv3 instance [ <instance-id> ] }
```

Syntax Description

no	Negate a command or set its defaults
ospfv3	OSPFv3 configuration commands
instance	Instance identifier
instance-id	Instance identifier value

Command Mode

- /exec/configure/if-igp /exec/configure/if-gre-tunnel /exec/configure/if-mpls-tunnel /exec/configure/if-mgmt-config

ospfv3 mtu-ignore

[no] ospfv3 mtu-ignore

Syntax Description

no	(Optional) Negate a command or set its defaults
ospfv3	OSPFv3 configuration commands
mtu-ignore	Disable OSPF MTU mismatch detection

Command Mode

- /exec/configure/if-igp /exec/configure/if-gre-tunnel /exec/configure/if-mpls-tunnel /exec/configure/if-mgmt-config

ospfv3 network broadcast

```
{ ospfv3 network { broadcast | point-to-point } } | { no ospfv3 network [ { broadcast | point-to-point } ] }
```

Syntax Description

no	Negate a command or set its defaults
ospfv3	OSPFv3 configuration commands
network	Network type
broadcast	Specify OSPF broadcast multi-access network
point-to-point	Specify OSPF point-to-point network

Command Mode

- /exec/configure/if-broadcast /exec/configure/if-p2p /exec/configure/if-mgmt-config

ospfv3 network point-to-point

{ ospfv3 network point-to-point } | { no ospfv3 network [point-to-point] }

Syntax Description

no	Negate a command or set its defaults
ospfv3	OSPFv3 configuration commands
network	Network type
point-to-point	Specify OSPF point-to-point network

Command Mode

- /exec/configure/if-loopback

ospfv3 passive-interface

[default | no] ospfv3 passive-interface

Syntax Description

default	(Optional) Undo a command
no	(Optional) Negate a command or set its defaults
ospfv3	OSPFv3 configuration commands
passive-interface	Suppress routing updates on the interface

Command Mode

- /exec/configure/if-broadcast /exec/configure/if-p2p /exec/configure/if-mgmt-config

ospfv3 priority

{ ospfv3 priority <prio> } | { no ospfv3 priority [<prio>] }

Syntax Description

no	Negate a command or set its defaults
ospfv3	OSPFv3 configuration commands
priority	Router priority
prio	Router priority

Command Mode

- /exec/configure/if-igp /exec/configure/if-gre-tunnel /exec/configure/if-mpls-tunnel /exec/configure/if-mgmt-config

ospfv3 retransmit-interval

```
{ ospfv3 retransmit-interval <interval> } | { no ospfv3 retransmit-interval [ <interval> ] }
```

Syntax Description

no	Negate a command or set its defaults
ospfv3	OSPFv3 configuration commands
retransmit-interval	Packet retransmission interval
interval	(seconds)

Command Mode

- /exec/configure/if-igp /exec/configure/if-gre-tunnel /exec/configure/if-mpls-tunnel /exec/configure/if-mgmt-config

ospfv3 shutdown

[no] ospfv3 shutdown

Syntax Description

no	(Optional) Negate a command or set its defaults
ospfv3	OSPFv3 configuration commands
shutdown	Shutdown ospf on this interface

Command Mode

- /exec/configure/if-igp /exec/configure/if-gre-tunnel /exec/configure/if-mgmt-config

ospfv3 transmit-delay

{ ospfv3 transmit-delay <delay> } | { no ospfv3 transmit-delay [<delay>] }

Syntax Description

no	Negate a command or set its defaults
ospfv3	OSPFv3 configuration commands
transmit-delay	Packet transmission delay
delay	(seconds)

Command Mode

- /exec/configure/if-igp /exec/configure/if-gre-tunnel /exec/configure/if-mpls-tunnel /exec/configure/if-mgmt-config

other-config-flag

[no] other-config-flag <state>

Syntax Description

no	(Optional) Negate a command or set its defaults
state	

Command Mode

- /exec/configure/config-ra-guard

otv-isis

otv-isis <tag>

Syntax Description

otv-isis	Intermediate System to Intermediate System (IS-IS)
tag	Routing process tag

Command Mode

- /exec/configure

overwrite-vlan

[no] overwrite-vlan <ow-vlan-id>

Syntax Description

no	(Optional) Negate a command or set its defaults
overwrite-vlan	Overwrite the system generated vlan
ow-vlan-id	

Command Mode

- /exec/configure/static-host/vni

owner

```
{ { no | default } owner | owner <text> }
```

Syntax Description

no	
default	Set a command to its defaults
owner	Owner of Entry
text	Owner String

Command Mode

- /exec/configure/ip-sla/udp /exec/configure/ip-sla/jitter /exec/configure/ip-sla/tcp
/exec/configure/ip-sla/icmpEcho /exec/configure/ip-sla/dns /exec/configure/ip-sla/fabricPathEcho
/exec/configure/ip-sla/http