



XML Management Interface

This section contains the following topics:

- [About the XML Management Interface, on page 1](#)
- [Licensing Requirements for the XML Management Interface, on page 2](#)
- [Prerequisites to Using the XML Management Interface, on page 3](#)
- [Using the XML Management Interface, on page 3](#)
- [Information About Example XML Instances, on page 16](#)
- [Additional References, on page 22](#)

About the XML Management Interface

About the XML Management Interface

You can use the XML management interface to configure a device. The interface uses the XML-based Network Configuration Protocol (NETCONF), which allows you to manage devices and communicate over the interface with an XML management tool or program. The Cisco NX-OS implementation of NETCONF requires you to use a Secure Shell (SSH) session for communication with the device.

NETCONF is implemented with an XML Schema (XSD) that allows you to enclose device configuration elements within a remote procedure call (RPC) message. From within an RPC message, you select one of the NETCONF operations that matches the type of command that you want the device to execute. You can configure the entire set of CLI commands on the device with NETCONF. For information about using NETCONF, see the [Creating NETCONF XML Instances, on page 6](#) and [RFC 4741](#).

For more information about using NETCONF over SSH, see [RFC 4742](#).

This section includes the following topics:

- [NETCONF Layers, on page 1](#)
- [SSH xmllagent, on page 2](#)

NETCONF Layers

The following are the NETCONF layers:

Table 1: NETCONF Layers

Layer	Example
Transport protocol	SSHv2
RPC	<rpc>, <rpc-reply>
Operations	<get-config>, <edit-config>
Content	show or configuration command

The following is a description of the four NETCONF layers:

- SSH transport protocol—Provides a secure, encrypted connection between a client and the server.
- RPC tag—Introduces a configuration command from the requestor and the corresponding reply from the XML server.
- NETCONF operation tag—Indicates the type of configuration command.
- Content—Indicates the XML representation of the feature that you want to configure.

SSH xmagent

The device software provides an SSH service that is called xmagent that supports NETCONF over SSH Version 2.



Note

The xmagent service is referred to as the XML server in the Cisco NX-OS software.

NETCONF over SSH starts with the exchange of a hello message between the client and the XML server. After the initial exchange, the client sends XML requests, which the server responds to with XML responses. The client and server terminate requests and responses with the character sequence >. Because this character sequence is not valid in XML, the client and the server can interpret when the messages end, which keeps communication in sync.

The XML schemas that define XML configuration instances that you can use are described in the [Creating NETCONF XML Instances, on page 6](#) section.

Licensing Requirements for the XML Management Interface

Product	Product
Cisco NX-OS	The XML management interface requires no license. Any feature not included in a license package is bundled with the Cisco NX-OS image and is provided at no extra charge to you. For a complete explanation of the Cisco NX-OS licensing scheme, see the <i>Cisco NX-OS Licensing Guide</i> .

Prerequisites to Using the XML Management Interface

The XML management interface has the following prerequisites:

- You must install SSHv2 on the client PC.
- You must install an XML management tool that supports NETCONF over SSH on the client PC.
- You must set the appropriate options for the XML server on the device.

Using the XML Management Interface

This section describes how to manually configure and use the XML management interface. Use the XML management interface with the default settings on the device.

Configuring SSH and the XML Server Options Through the CLI

By default, the SSH server is enabled on the device. If you disable SSH, you must enable it before you start an SSH session on the client PC.

You can configure XML server options to control the number of concurrent sessions and the timeout for active sessions. You can also enable XML document validation and terminate XML sessions.



Note The XML server timeout applies only to active sessions.

For more information about configuring SSH, see the Cisco NX-OS security configuration guide for your platform.

For more information about the XML commands, see the Cisco NX-OS system management configuration guide for your platform.

Procedure

	Command or Action	Purpose
Step 1	configure terminal	Enters global configuration mode.
Step 2	show xml server status	(Optional) Displays information about XML server settings and active XML server sessions. You can find session numbers in the command output.
Step 3	xml server validate all	Causes validation of XML documents for the specified server session.
Step 4	xml server terminate session	Terminates the specified XML server session.
Step 5	no feature ssh	(Optional) Disables the SSH server so that you can generate keys.

Starting an SSH Session

	Command or Action	Purpose
Step 6	feature ssh	Enables the SSH server. The default is enabled.
Step 7	show ssh server	(Optional) Displays the status of the SSH server.
Step 8	xml server max-session sessions	Sets the number of allowed XML server sessions. The default is 8. The range is from 1 to 8.
Step 9	xml server timeout seconds	Sets the number of seconds after which the XML server session is terminated. The default is 1200 seconds. The range is from 1 to 1200.
Step 10	show xml server status	(Optional) Displays information about the XML server settings and active XML server sessions.
Step 11	copy running-config startup-config	(Optional) Saves the running configuration to the startup configuration.

Example

The following example shows how to configure SSH and XML server options through CLI

```
switch# configure terminal
switch(config)# xml server validate all
switch(config)# xml server terminate 8665
switch(config)# no feature ssh
switch(config)# feature ssh server
switch(config)# xml server max-session 6
switch(config)# xml server timeout 2400
switch(config)# copy running-config startup-config
```

Starting an SSH Session

You can start an SSHv2 session on the client PC with a command similar to the following:

```
ssh2 username@ip-address -s xmlagent
```

Enter the login username, the IP address of the device, and the service to connect to. The `xmlagent` service is referred to as the XML server in the device software.



Note

The SSH command syntax can differ from the SSH software on the client PC.

If you do not receive a hello message from the XML server, verify the following conditions:

- The SSH server is enabled on the device.

- The XML server max-sessions option is adequate to support the number of SSH connections to the device.
- The active XML server sessions on the device are not all in use.

Sending the Hello Message

When you start an SSH session to the XML server, the server responds immediately with a hello message that informs the client of the server's capabilities. You must advertise your capabilities to the server with a hello message before the server processes any other requests. The XML server supports only base capabilities and expects support only for the base capabilities from the client.

The following are sample hello messages from the server and the client.

**Note**

You must end all XML documents with]]>]]> to support synchronization in NETCONF over SSH.

Hello Message from the server

```
<?xml version="1.0"?>
<hello xmlns="urn:ietf:params:xml:ns:netconf:base:1.0">
  <capabilities>
    <capability>urn:ietf:params:xml:ns:netconf:base:1.0</capability>
  </capabilities>
  <session-id>25241</session-id>
</hello>]]>]]>
```

Hello Message from the Client

```
<?xml version="1.0"?>
<nc:hello xmlns:nc="urn:ietf:params:xml:ns:netconf:base:1.0">
  <nc:capabilities>
    <nc:capability>urn:ietf:params:xml:ns:netconf:base:1.0</nc:capability>
  </nc:capabilities>
</nc:hello>]]>]]>
```

Obtaining the XSD Files

Procedure

-
- Step 1** From your browser, navigate to the Cisco software download site at the following URL:
<http://software.cisco.com/download/navigator.html>
The Download Software page opens.
- Step 2** In the Select a Product list, choose **Switches > Data Center Switches > platform > model**.
- Step 3** If you are not already logged in as a registered Cisco user, you are prompted to log in now.

- Step 4** From the Select a Software Type list, choose **NX-OS XML Schema Definition**.
- Step 5** Find the desired release and click **Download**.
- Step 6** If you are requested, follow the instructions to apply for eligibility to download strong encryption software images.
- The Cisco End User License Agreement opens.
- Step 7** Click **Agree** and follow the instructions to download the file to your PC.
-

Sending an XML Document to the XML Server

To send an XML document to the XML server through an SSH session that you opened in a command shell, you can copy the XML text from an editor and paste it into the SSH session. Although typically you use an automated method to send XML documents to the XML server, you can verify the SSH connection to the XML server with this method.

Follow these guidelines for this method:

- Verify that the XML server sent the hello message immediately after you started the SSH session by looking for the hello message text in the command shell output.
- Send the client hello message before you send any XML requests. Because the XML server sends the hello response immediately, no additional response is sent after you send the client hello message.
- Always terminate the XML document with the character sequence **]]>]]>**.

Creating NETCONF XML Instances

You can create NETCONF XML instances by enclosing XML device elements within an RPC tag and NETCONF operation tags. The XML device elements are defined in feature-based XML schema definition (XSD) files, which enclose available CLI commands in an XML format.

The following are the tags that are used in the NETCONF XML request in a framework context. Tag lines are marked with the following letter codes:

- X—XML declaration
- R—RPC request tag
- N—NETCONF operation tags
- D—Device tags

NETCONF XML Framework Context

```
X <?xml version="1.0"?>
R <nc:rpc message-id="1" xmlns:nc="urn:ietf:params:xml:ns:netconf:base:1.0"
R xmlns="http://www.cisco.com/nxos:1.0:nfcli">
N <nc:get>
N <nc:filter type="subtree">
D <show>
D <xml>
D <server>
D <status/>
D </server>
D </xml>
D </show>
N </nc:filter>
```

```
N </nc:get>
R </nc:rpc>]]>]]>
```



Note You must use your own XML editor or XML management interface tool to create XML instances.

RPC Request Tag rpc

All NETCONF XML instances must begin with the RPC request tag `<rpc>`. The example *RPC Request Tag <rpc>* shows the `<rpc>` element with its required **message-id** attribute. The message-id attribute is replicated in the `<rpc-reply>` and can be used to correlate requests and replies. The `<rpc>` node also contains the following XML namespace declarations:

- NETCONF namespace declaration—The `<rpc>` and NETCONF tags that are defined in the "urn:ietf:params:xml:ns:netconf:base:1.0" namespace, are present in the netconf.xsd schema file.
- Device namespace declaration—Device tags encapsulated by the `<rpc>` and NETCONF tags are defined in other namespaces. Device namespaces are feature-oriented. Cisco NX-OS feature tags are defined in different namespaces. *RPC Request Tag <rpc>* is an example that uses the nfcli feature. It declares that the device namespace is "xmlns=http://www.cisco.com/nxos:1.0:nfcli". nfcli.xsd contains this namespace definition. For more information, see section on *Obtaining the XSD Files*.

RPC Tag Request

```
<nc:rpc message-id="315" xmlns:nc="urn:ietf:params:xml:ns:netconf:base:1.0"
  xmlns=http://www.cisco.com/nxos:1.0:nfcli">
  ...
</nc:rpc>]]>]]>
```

Configuration Request

The following is an example of a configuration request.

```
<?xml version="1.0"?>
<nc:rpc message-id="16" xmlns:nc="urn:ietf:params:xml:ns:netconf:base:1.0"
  xmlns="http://www.cisco.com/nxos:1.0:if_manager">
  <nc:edit-config>
    <nc:target>
      <nc:running/>
    </nc:target>
    <nc:config>
      <configure>
        <__XML__MODE__exec_configure>
          <interface>
            <ethernet>
              <interface>2/30</interface>
              <__XML__MODE_if-ethernet>
                <__XML__MODE_if-eth-base>
                  <description>
                    <desc_line>Marketing Network</desc_line>
                  </description>
                </__XML__MODE_if-eth-base>
              </__XML__MODE_if-ethernet>
            </ethernet>
          </interface>
        </__XML__MODE__exec_configure>
      </configure>
    </nc:config>
  </nc:edit-config>
```

NETCONF Operations Tags

```
</nc:rpc>]]>]]>
```

__XML__MODE tags are used internally by the NETCONF agent. Some tags are present only as children of a certain __XML__ MODE. By examining the schema file, you can find the correct mode tag that leads to the tags representing the CLI command in XML.

NETCONF Operations Tags

NETCONF provides the following configuration operations:

Table 2: NETCONF Operations in Cisco NX-OS

NETCONF Operation	Description	Example
close-session	Closes the current XML server session.	NETCONF Close Session Instance, on page 16
commit	Sets the running configuration to the current contents of the candidate configuration.	NETCONF Commit Instance - Candidate Configuration Capability, on page 21
confirmed-commit	Provides parameters to commit the configuration for a specified time. If this operation is not followed by a commit operation within the confirm-timeout period, the configuration is reverted to the state before the confirmed-commit operation.	NETCONF Confirmed-commit Instance , on page 21
copy-config	Copies the content of source configuration datastore to the target datastore.	NETCONF copy-config Instance, on page 17
delete-config	Operation not supported.	—
edit-config	Configures features in the running configuration of the device. You use this operation for configuration commands.	NETCONF edit-config Instance, on page 17 NETCONF rollback-on-error Instance , on page 21
get	Receives configuration information from the device. You use this operation for show commands. The source of the data is the running configuration.	Creating NETCONF XML Instances, on page 6
get-config	Retrieves all or part of a configuration	NETCONF get-config Instance, on page 19

NETCONF Operation	Description	Example
kill-session	Closes the specified XML server session. You cannot close your own session. See the close-session NETCONF operation.	NETCONF Kill-session Instance, on page 17
lock	Allows the client to lock the configuration system of a device.	NETCONF Lock Instance, on page 19
unlock	Releases the configuration lock that the session issued.	NETCONF unlock Instance, on page 20
validate	Checks a candidate configuration for syntactical and semantic errors before applying the configuration to the device.	NETCONF validate Capability Instance , on page 22

Device Tags

The XML device elements represent the available CLI commands in XML format. The feature-specific schema files contain the XML tags for CLI commands of that particular feature. See the [Obtaining the XSD Files, on page 5](#) section.

Using this schema, it is possible to build an XML instance. In the following examples, the relevant portions of the nfcli.xsd schema file that was used to build [Creating NETCONF XML Instances, on page 6](#) is shown.

The following example shows XML device tags.

show xml Device Tags

```
<xs:element name="show" type="show_type_Cmd_show_xml"/>
<xs:complexType name="show_type_Cmd_show_xml">
<xs:annotation>
<xs:documentation>to display xml agent information</xs:documentation>
</xs:annotation>
<xs:sequence>
<xs:choice maxOccurs="1">
<xs:element name="xml" minOccurs="1" type="xml_type_Cmd_show_xml"/>
<xs:element name="debug" minOccurs="1" type="debug_type_Cmd_show_debug"/>
</xs:choice>
</xs:sequence>
<xs:attribute name="xpath-filter" type="xs:string"/>
<xs:attribute name="uses-namespace" type="nxos:bool_true"/>
</xs:complexType>
```

The following example shows the server status device tags.

server status Device Tags

```
<xs:complexType name="xml_type_Cmd_show_xml">
<xs:annotation>
<xs:documentation>xml agent</xs:documentation>
</xs:annotation>
<xs:sequence>
<xs:element name="server" minOccurs="1" type="server_type_Cmd_show_xml"/>
</xs:sequence>
</xs:complexType>
```

Device Tags

```
<xs:complexType name="server_type_Cmd_show_xml">
<xs:annotation>
<xs:documentation>xml agent server</xs:documentation>
</xs:annotation>
<xs:sequence>
<xs:choice maxOccurs="1">
<xs:element name="status" minOccurs="1" type="status_type_Cmd_show_xml"/>
<xs:element name="logging" minOccurs="1" type="logging_type_Cmd_show_logging_facility"/>
</xs:choice>
</xs:sequence>
</xs:complexType>
```

The following example shows the device tag response.

Device Tag Response

```
<xs:complexType name="status_type_Cmd_show_xml">
<xs:annotation>
<xs:documentation>display xml agent information</xs:documentation>
</xs:annotation>
<xs:sequence>
<xs:element name="__XML__OPT_Cmd_show_xml__readonly__" minOccurs="0">
<xs:complexType>
<xs:sequence>
<xs:group ref="og_Cmd_show_xml__readonly__" minOccurs="0" maxOccurs="1"/>
</xs:sequence>
</xs:complexType>
</xs:element>
</xs:sequence>
</xs:complexType>
<xs:group name="og_Cmd_show_xml__readonly__">
<xs:sequence>
<xs:element name="__readonly__" minOccurs="1" type="__readonly__type_Cmd_show_xml"/>
</xs:sequence>
</xs:group>
<xs:complexType name="__readonly__type_Cmd_show_xml">
<xs:sequence>
<xs:group ref="bg_Cmd_show_xml_operational_status" maxOccurs="1"/>
<xs:group ref="bg_Cmd_show_xml_maximum_sessions_configured" maxOccurs="1"/>
<xs:group ref="og_Cmd_show_xml_TABLE_sessions" minOccurs="0" maxOccurs="1"/>
</xs:sequence>
</xs:complexType>
```



Note “__XML__OPT_Cmd_show_xml__readonly__” is optional. This tag represents the response. For more information on responses, see the [RPC Response Tag, on page 15](#) section.

You can use the | XML option to find the tags you can use to execute a <get>. The following is an example of the | XML option.

XML Example

```
Switch#> show xml server status | xml
<?xml version="1.0" encoding="ISO-8859-1"?>
<nfc:rpc-reply xmlns:nfc="urn:ietf:params:xml:ns:netconf:base:1.0"
  xmlns="http://www.cisco.com/nxos:1.0:nfcli">
<nfc:data>
<show>
<xml>
<server>
<status>
```

```

<__XML__OPT_Cmd_show_xml__readonly__
<__readonly__
<operational_status>
<o_status>enabled</o_status>
</operational_status>
<maximum_sessions_configured>
<max_session>8</max_session>
</maximum_sessions_configured>
</__readonly__
<__XML__OPT_Cmd_show_xml__readonly__
</status>
</server>
</xml>
</show>
</nf:data>
</nf:rpc-reply>
]]>]]>

```

From this response, you can see that the namespace defining tag to execute operations on this component is <http://www.cisco.com/nxos:1.0:nfcli> and the nfcli.xsd file can be used to build requests for this feature.

You can enclose the NETCONF operation tags and the device tags within the RPC tag. The </rpc> end-tag is followed by the XML termination character sequence.

Extended NETCONF Operations

Cisco NX-OS supports an <rpc> operation named <exec-command>. The operation allows client applications to send CLI configuration and show commands and to receive responses to those commands as XML tags.

The following is an example of the tags that are used to configure an interface. Tag lines are marked with the following letter codes:

- X —XML declaration
- R—RPC request tag
- EO—Extended operation

Configuration CLI Commands Sent Through <exec-command>

```

X <?xml version="1.0"?>
R <nf:rpc xmlns:nf="urn:ietf:params:xml:ns:netconf:base:1.0"
           xmlns:nxos="http://www.cisco.com/nxos:1.0" message-id="3">
EO <nxos:exec-command>
EO <nxos:cmd>conf t ; interface ethernet 2/1 </nxos:cmd>
EO <nxos:cmd>channel-group 2000 ; no shut; </nxos:cmd>
EO </nxos:exec-command>
R </nf:rpc>]]>]]>

```

The following is the response to the operation:

Response to CLI Commands Sent Through <exec-command>

```

<?xml version="1.0" encoding="ISO-8859-1"?>
<nf:rpc-reply xmlns:nf="urn:ietf:params:xml:ns:netconf:base:1.0"
           xmlns:nxos="http://www.cisco.com/nxos:1.0" message-id="3">
<nf:ok/>
</nf:rpc-reply>
]]>]]>

```

The following example shows how the show CLI commands that are sent through the <exec-command> can be used to retrieve data.

show CLI Commands Sent Through <exec-command>

```
<?xml version="1.0"?>
<nf:rpc xmlns:nf="urn:ietf:params:xml:ns:netconf:base:1.0"
  xmlns:nxos="http://www.cisco.com/nxos:1.0" message-id="110">
  <nxos:exec-command>
    <nxos:cmd>show interface brief</nxos:cmd>
  </nxos:exec-command>
</nf:rpc>]]>]]>
```

The following is the response to the operation.

Response to the show CLI commands Sent Through <exec-command>

```
<?xml version="1.0" encoding="ISO-8859-1"?>
<nf:rpc-reply xmlns:nf="urn:ietf:params:xml:ns:netconf:base:1.0"
  xmlns:nxos="http://www.cisco.com/nxos:1.0"
  xmlns:mod="http://www.cisco.com/nxos:1.0:if_manager" message-id="110">
  <nf:data>
    <mod:show>
      <mod:interface>
        <mod:__XML_OPT_Cmd_show_interface_brief__readonly__>
        <mod:__readonly__>
        <mod:TABLE_interface>
        <mod:ROW_interface>
          <mod:interface>mgmt0</mod:interface>
          <mod:state>up</mod:state>
          <mod:ip_addr>172.23.152.20</mod:ip_addr>
          <mod:speed>1000</mod:speed>
          <mod:mtu>1500</mod:mtu>
        </mod:ROW_interface>
        <mod:ROW_interface>
          <mod:interface>Ethernet2/1</mod:interface>
          <mod:vlan>--</mod:vlan>
          <mod:type>eth</mod:type>
          <mod:portmode>routed</mod:portmode>
          <mod:state>down</mod:state>
          <mod:state_rsn_desc>Administratively down</mod:state_rsn_desc>
          <mod:speed>auto</mod:speed>
          <mod:ratemode>D</mod:ratemode>
        </mod:ROW_interface>
        </mod:TABLE_interface>
        <mod:__readonly__>
      </mod:__XML_OPT_Cmd_show_interface_brief__readonly__>
    </mod:interface>
  </mod:show>
</nf:data>
</nf:rpc-reply>
]]>]]>
```

The following table provides a detailed explanation of the operation tags:

Table 3: Tags

Tag	Description
<exec-command>	Executes a CLI command.

Tag	Description
<cmd>	Contains the CLI command. A command can be a show or configuration command. Separate multiple configuration commands by using a semicolon “;”. Multiple show commands are not supported. You can send multiple configuration commands in different <cmd> tags as part of the same request. For more information, see the Example in <i>Configuration CLI Commands Sent Through <exec-command></i> .

Replies to configuration commands that are sent through the <cmd> tag are as follows:

- <nf:ok>: All configure commands are executed successfully.
- <nf:rpc-error>: Some commands have failed. The operation stops on the first error, and the <nf:rpc-error> subtree provides more information on what configuration failed. Notice that any configuration that is executed before the failed command would have been applied to the running configuration.

The following example shows a failed configuration:

Failed Configuration

```
<?xml version="1.0"?>
<nf:rpc xmlns:nf="urn:ietf:params:xml:ns:netconf:base:1.0"
  xmlns:nxos="http://www.cisco.com/nxos:1.0" message-id="3">
  <nxos:exec-command>
    <nxos:cmd>configure terminal ; interface ethernet2/1 </nxos:cmd>
    <nxos:cmd>ip address 1.1.1.2/24 </nxos:cmd>
    <nxos:cmd>no channel-group 2000 ; no shut; </nxos:cmd>
  </nxos:exec-command>
</nf:rpc>]]>]]>
<?xml version="1.0" encoding="ISO-8859-1"?>
<nf:rpc-reply xmlns:nf="urn:ietf:params:xml:ns:netconf:base:1.0"
  xmlns:nxos="http://www.cisco.com/nxos:1.0" message-id="3">
  <nf:rpc-error>
    <nf:error-type>application</nf:error-type>
    <nf:error-tag>invalid-value</nf:error-tag>
    <nf:error-severity>error</nf:error-severity>
    <nf:error-message>Ethernet2/1: not part of port-channel 2000
    </nf:error-message>
    <nf:error-info>
      <nf:bad-element>cmd</nf:bad-element>
    </nf:error-info>
  </nf:rpc-error>
</nf:rpc-reply>
]]>]]>
```

Because of a command execution, the interface IP address is set, but the administrative state is not modified (the no shut command is not executed). The reason the administrative state is not modified is because the no port-channel 2000 command results in an error.

The <rpc-reply> results from a show command that is sent through the <cmd> tag that contains the XML output of the show command.

You cannot combine configuration and show commands on the same <exec-command> instance. The following example shows a configuration and **show** command that are combined in the same instance.

Combination of Configuration and show Commands

```
<?xml version="1.0"?>
<nf:rpc xmlns:nf="urn:ietf:params:xml:ns:netconf:base:1.0"
xmlns:nxos="http://www.cisco.com/nxos:1.0" message-id="110">
<nxos:exec-command>
<nxos:cmd>conf t ; interface ethernet 2/1 ; ip address 1.1.1.4/24 ; show xml
server status </nxos:cmd>
</nxos:exec-command>
</nf:rpc>]]>]]>
<?xml version="1.0" encoding="ISO-8859-1"?>
<nf:rpc-reply xmlns:nf="urn:ietf:params:xml:ns:netconf:base:1.0"
xmlns:nxos="http://www.cisco.com/nxos:1.0" message-id="110">
<nf:rpc-error>
<nf:error-type>application</nf:error-type>
<nf:error-tag>invalid-value</nf:error-tag>
<nf:error-severity>error</nf:error-severity>
<nf:error-message>Error: cannot mix config and show in exec-command. Config cmds
before the show were executed.
Cmd:show xml server status</nf:error-message>
<nf:error-info>
<nf:bad-element>cmd</nf:bad-element>
</nf:error-info>
</nf:rpc-error>
</nf:rpc-reply>
]]>]]>
```

The show command must be sent in its own <exec-command> instance as shown in the following example:

Show CLI Commands Sent Through <exec-command>

```
<?xml version="1.0"?>
<nf:rpc xmlns:nf="urn:ietf:params:xml:ns:netconf:base:1.0"
xmlns:nxos="http://www.cisco.com/nxos:1.0" message-id="110">
<nxos:exec-command>
<nxos:cmd>show xml server status ; show xml server status </nxos:cmd>
</nxos:exec-command>
</nf:rpc>]]>]]>
<?xml version="1.0" encoding="ISO-8859-1"?>
<nf:rpc-reply xmlns:nf="urn:ietf:params:xml:ns:netconf:base:1.0"
xmlns:nxos="http://www.cisco.com/nxos:1.0" message-id="110">
<nf:rpc-error>
<nf:error-type>application</nf:error-type>
<nf:error-tag>invalid-value</nf:error-tag>
<nf:error-severity>error</nf:error-severity>
<nf:error-message>Error: show cmds in exec-command shouldn't be followed by anything
</nf:error-message>
<nf:error-info>
<nf:bad-element>&lt;cmd&gt;</nf:bad-element>
</nf:error-info>
</nf:rpc-error>
</nf:rpc-reply>
]]>]]>
```

NETCONF Replies

For every XML request sent by the client, the XML server sends an XML response enclosed in the RPC response tag <rpc-reply>.

This section contains the following topics:

- [RPC Response Tag, on page 15](#)
- [Interpreting Tags Encapsulated in the Data Tag, on page 15](#)

RPC Response Tag

The following example shows the RPC response tag <rpc-reply>.

RPC Response Elements

```
<nc:rpc-reply message-id="315" xmlns:nc="urn:ietf:params:xml:ns:netconf:base:1.0"
  xmlns=http://www.cisco.com/nxos:1.0:nfcli">
<ok/>
</nc:rpc-reply>]]>]]>
```

The elements <ok>, <data>, and <rpc-error> can appear in the RPC response. The following table describes the RPC response elements that can appear in the <rpc-reply> tag.

Table 4: RPC Response Elements

Element	Description
<ok>	The RPC request completed successfully. This element is used when no data is returned in the response.
<data>	The RPC request completed successfully. The data associated with the RPC request is enclosed in the <data> element.
<rpc-error>	The RPC request failed. Error information is enclosed in the <rpc-error> element.

Interpreting Tags Encapsulated in the Data Tag

The device tags encapsulated by the <data> tag contain the request followed by the response. A client application can safely ignore all tags before the <readonly> tag. The following is an example:

RPC-reply data

```
<?xml version="1.0" encoding="ISO-8859-1"?>
<nf:rpc-reply xmlns:nf="urn:ietf:params:xml:ns:netconf:base:1.0"
  xmlns="http://www.cisco.com/nxos:1.0:if_manager">
<nf:data>
<show>
<interface>
<__XML_Opt_Cmd_show_interface_brief__ readonly__>
<__readonly__>
<TABLE_interface>
<ROW_interface>
<interface>mgmt0</interface>
<state>up</state>
<ip_addr>xx.xx.xx.xx</ip_addr>
<speed>1000</speed>
<mtu>1500</mtu>
</ROW_interface>
<ROW_interface>
<interface>Ethernet2/1</interface>
```

Information About Example XML Instances

```

<vlan>--</vlan>
<type>eth</type>
<portmode>routed</portmode>
<state>down</state>
<state_rsn_desc>Administratively down</state_rsn_desc>
<speed>auto</speed>
<ratemode>D</ratemode>
</ROW_interface>
</TABLE_interface>
<!--readonly-->
<!--XML_OPT_Cmd_show_interface_brief__readonly-->
</interface>
</show>
</nf:data>
</nf:rpc-reply>
]]>]]>

```

<__XML__OPT.*> and <__XML__BLK.*> appear in responses and are sometimes used in requests. These tags are used by the NETCONF agent and are present in responses after the <__readonly__> tag. They are necessary in requests and should be added according to the schema file to reach the XML tag that represents the CLI command.

Information About Example XML Instances

Example XML Instances

This section provides the examples of the following XML instances:

- [NETCONF Close Session Instance, on page 16](#)
- [NETCONF Kill-session Instance, on page 17](#)
- [NETCONF copy-config Instance, on page 17](#)
- [NETCONF edit-config Instance, on page 17](#)
- [NETCONF get-config Instance, on page 19](#)
- [NETCONF Lock Instance, on page 19](#)
- [NETCONF unlock Instance, on page 20](#)
- [NETCONF Commit Instance - Candidate Configuration Capability, on page 21](#)
- [NETCONF Confirmed-commit Instance , on page 21](#)
- [NETCONF rollback-on-error Instance , on page 21](#)
- [NETCONF validate Capability Instance , on page 22](#)

NETCONF Close Session Instance

The following example shows the close-session request, followed by the close-session response.

Close-session Request

```

<?xml version="1.0"?>
<nc:rpc message-id="101" xmlns:nc="urn:ietf:params:xml:ns:netconf:base:1.0"
  xmlns="http://www.cisco.com/nxos:1.0">
  <nc:close-session/>
</nc:rpc>]]>]]>

```

Close-session Response

```
<nc:rpc-reply xmlns:nc="urn:ietf:params:xml:ns:netconf:base:1.0"
  xmlns="http://www.cisco.com/nxos:1.0" message-id="101">
<nc:ok/>
</nc:rpc-reply>]]>]]>
```

NETCONF Kill-session Instance

The following example shows the kill-session request followed by the kill-session response.

Kill-session Request

```
<nc:rpc message-id="101" xmlns:nc="urn:ietf:params:xml:ns:netconf:base:1.0"
  xmlns="http://www.cisco.com/nxos:1.0">
<nc:kill-session>
<nc:session-id>25241</nc:session-id>
</nc:kill-session>
</nc:rpc>]]>]]>
```

Kill-session Request

```
<nc:rpc message-id="101" xmlns:nc="urn:ietf:params:xml:ns:netconf:base:1.0"
  xmlns="http://www.cisco.com/nxos:1.0">
<nc:kill-session>
<nc:session-id>25241</nc:session-id>
</nc:kill-session>
</nc:rpc>]]>]]>
```

NETCONF copy-config Instance

The following example shows the copy-config request followed by the copy-config response.

Copy-config Request

```
<rpc message-id="101"
  xmlns="urn:ietf:params:xml:ns:netconf:base:1.0">
<copy-config>
<target>
<running/>
</target>
<source>
<url>https://user@example.com:passphrase/cfg/new.txt</url>
</source>
</copy-config>
</rpc>
```

Copy-config Response

```
xmlns="urn:ietf:params:xml:ns:netconf:base:1.0">
<ok/>
</rpc-reply>
```

NETCONF edit-config Instance

The following example shows the use of NETCONF edit-config.

Edit-config Request

```
<?xml version="1.0"?>
<nc:rpc message-id="16" xmlns:nc="urn:ietf:params:xml:ns:netconf:base:1.0"
  xmlns="http://www.cisco.com/nxos:1.0:if_manager">
  <nc:edit-config>
    <nc:target>
      <nc:running/>
    </nc:target>
    <nc:config>
      <configure>
        <_XML_MODE_exec_configure>
          <interface>
            <ethernet>
              <interface>2/30</interface>
              <_XML_MODE_if-ethernet>
              <_XML_MODE_if-eth-base>
                <description>
                  <desc_line>Marketing Network</desc_line>
                </description>
                </_XML_MODE_if-eth-base>
              </_XML_MODE_if-ethernet>
            </ethernet>
          </interface>
        </_XML_MODE_exec_configure>
      </configure>
    </nc:config>
  </nc:edit-config>
</nc:rpc>]]>]]>
```

Edit-config Response

```
<?xml version="1.0"?>
<nc:rpc-reply xmlns:nc="urn:ietf:params:xml:ns:netconf:base:1.0"
  xmlns="http://www.cisco.com/nxos:1.0:if_manager" message-id="16">
  <nc:ok/>
</nc:rpc-reply>]]>]]>
```

The operation attribute in edit-config identifies the point in configuration where the specified operation is performed. If the operation attribute is not specified, the configuration is merged into the existing configuration data store. Operation attribute can have the following values:

- create
- merge
- delete

The following example shows how to delete the configuration of interface Ethernet 0/0 from the running configuration.

Edit-config: Delete Operation Request

```
xmlns="urn:ietf:params:xml:ns:netconf:base:1.0">
<edit-config>
  <target>
    <running/>
  </target>
  <default-operation>none</default-operation>
  <config xmlns:xc="urn:ietf:params:xml:ns:netconf:base:1.0">
    <top xmlns="http://example.com/schema/1.2/config">
```

```
<interface xc:operation="delete">
<name>Ethernet0/0</name>
</interface>
</top>
</config>
</edit-config>
</rpc>]]>]]>
```

Response to edit-config: Delete Operation

```
<rpc-reply message-id="101"
xmlns="urn:ietf:params:xml:ns:netconf:base:1.0">
<ok/>
</rpc-reply>]]>]]>
```

NETCONF get-config Instance

The following example shows the use of NETCONF get-config.

Get-config Request to Retrieve the Entire Subtree

```
<rpc message-id="101"
xmlns="urn:ietf:params:xml:ns:netconf:base:1.0">
<get-config>
<source>
<running/>
</source>
<filter type="subtree">
<top xmlns="http://example.com/schema/1.2/config">
<users/>
</top>
</filter>
</get-config>
</rpc>]]>]]>
```

Get-config Response with Results of the Query

```
<rpc-reply message-id="101"
xmlns="urn:ietf:params:xml:ns:netconf:base:1.0">
<data>
<top xmlns="http://example.com/schema/1.2/config">
<users>
<user>
<name>root</name>
<type>superuser</type>
<full-name>Charlie Root</full-name>
<company-info>
<dept>1</dept>
<id>1</id>
</company-info>
</user>
<!-- additional <user> elements appear here... -->
</users>
</top>
</data>
</rpc-reply>]]>]]>
```

NETCONF Lock Instance

The following example shows the use of NETCONF lock operation.

NETCONF unlock Instance

The following examples show the lock request, a success response, and a response to an unsuccessful attempt.

Lock Request

```
<rpc message-id="101"
 xmlns="urn:ietf:params:xml:ns:netconf:base:1.0">
<lock>
<target>
<running/>
</target>
</lock>
</rpc>]]>]]>
```

Response to Successful Acquisition of Lock

```
<rpc-reply message-id="101"
 xmlns="urn:ietf:params:xml:ns:netconf:base:1.0">
<ok/> <!-- lock succeeded -->
</rpc-reply>]]>]]>
```

Response to Unsuccessful Attempt to Acquire the Lock

```
<rpc-reply message-id="101"
 xmlns="urn:ietf:params:xml:ns:netconf:base:1.0">
<rpc-error> <!-- lock failed -->
<error-type>protocol</error-type>
<error-tag>lock-denied</error-tag>
<error-severity>error</error-severity>
<error-message>
Lock failed, lock is already held
</error-message>
<error-info>
<session-id>454</session-id>
<!-- lock is held by NETCONF session 454 -->
</error-info>
</rpc-error>
</rpc-reply>]]>]]>
```

NETCONF unlock Instance

The following example shows the use of the NETCONF unlock operation.

unlock request

```
<rpc message-id="101"
 xmlns="urn:ietf:params:xml:ns:netconf:base:1.0">
<unlock>
<target>
<running/>
</target>
</unlock>
</rpc>
```

response to unlock request

```
<rpc-reply message-id="101"
 xmlns="urn:ietf:params:xml:ns:netconf:base:1.0">
```

```
<ok/>
</rpc-reply>
```

NETCONF Commit Instance - Candidate Configuration Capability

The following example shows the commit operation and the commit reply:

Commit Operation

```
<rpc message-id="101"
 xmlns="urn:ietf:params:xml:ns:netconf:base:1.0">
 <commit/>
</rpc>
```

Commit Reply

```
<rpc-reply message-id="101"
 xmlns="urn:ietf:params:xml:ns:netconf:base:1.0">
 <ok/>
</rpc-reply>
```

NETCONF Confirmed-commit Instance

The following example shows the confirmed-commit operation and the confirmed-commit reply.

Confirmed Commit Request

```
<rpc message-id="101"
 xmlns="urn:ietf:params:xml:ns:netconf:base:1.0">
 <commit>
 <confirmed/>
 <confirm-timeout>120</confirm-timeout>
 </commit>
</rpc>]]>]]>
```

Confirmed Commit Response

```
<rpc-reply message-id="101"
 xmlns="urn:ietf:params:xml:ns:netconf:base:1.0">
 <ok/>
</rpc-reply>]]>]]>
```

NETCONF rollback-on-error Instance

The following example shows the use of NETCONF rollback on error capability. The string urn:ietf:params:netconf:capability:rollback-on-error:1.0 identifies the capability.

The following example shows how to configure rollback on error and the response to this request.

Rollback-on-error capability

```
<rpc message-id="101"
 xmlns="urn:ietf:params:xml:ns:netconf:base:1.0">
 <edit-config>
 <target>
 <running/>
```

NETCONF validate Capability Instance

```
</target>
<error-option>rollback-on-error</error-option>
<config>
<top xmlns="http://example.com/schema/1.2/config">
<interface>
<name>Ethernet0/0</name>
<mtu>100000</mtu>
</interface>
</top>
</config>
</edit-config>
</rpc>]]>]]>
```

Rollback-on-error response

```
<rpc-reply message-id="101"
xmlns="urn:ietf:params:xml:ns:netconf:base:1.0">
<ok/>
</rpc-reply>]]>]]>
```

NETCONF validate Capability Instance

The following example shows the use of the NETCONF validate capability. The string **urn:ietf:params:netconf:capability:validate:1.0** identifies the capability.

Validate request

```
xmlns="urn:ietf:params:xml:ns:netconf:base:1.0">
<validate>
<source>
<candidate/>
</source>
</validate>
</rpc>]]>]]>
```

Response to validate request

```
<rpc-reply message-id="101"
xmlns="urn:ietf:params:xml:ns:netconf:base:1.0">
<ok/>
</rpc-reply>]]>]]>
```

Additional References

This section provides additional information that is related to implementing the XML management interface.

Standards

Standards	Title
No new or modified standards are supported by this feature. Support for existing standards has not been modified by this feature.	—

RFCs

RFCs	Title
RFC 4741	NETCONF Configuration Protocol
RFC 4742	Using the NETCONF Configuration Protocol over Secure Shell (SSH)

Additional References