



Configuring DHCP Snooping

This chapter contains the following sections:

- [Information About DHCP Snooping, on page 1](#)
- [Information About the DHCPv6 Relay Agent, on page 3](#)
- [Licensing Requirements for DHCP Snooping, on page 4](#)
- [Prerequisites for DHCP Snooping, on page 4](#)
- [Guidelines and Limitations for DHCP Snooping, on page 4](#)
- [Default Settings for DHCP Snooping, on page 4](#)
- [Configuring DHCP Snooping, on page 5](#)
- [Configuring DHCPv6 Relay Agent, on page 14](#)
- [Verifying the DHCP Snooping Configuration, on page 17](#)
- [Displaying DHCP Bindings, on page 18](#)
- [Clearing the DHCP Snooping Binding Database, on page 18](#)
- [Clearing DHCP Relay Statistics, on page 19](#)
- [Clearing DHCPv6 Relay Statistics, on page 19](#)
- [Monitoring DHCP, on page 20](#)
- [Configuration Examples for DHCP Snooping, on page 20](#)

Information About DHCP Snooping

DHCP snooping acts like a firewall between untrusted hosts and trusted DHCP servers. DHCP snooping performs the following activities:

- Validates DHCP messages received from untrusted sources and filters out invalid messages.
- Builds and maintains the DHCP snooping binding database, which contains information about untrusted hosts with leased IP addresses.
- Uses the DHCP snooping binding database to validate subsequent requests from untrusted hosts.

DHCP snooping is enabled on a per-VLAN basis. By default, the feature is inactive on all VLANs. You can enable the feature on a single VLAN or a range of VLANs.

Feature Enabled and Globally Enabled

When you are configuring DHCP snooping, it is important that you understand the difference between enabling the DHCP snooping feature and globally enabling DHCP snooping.

Feature Enablement

The DHCP snooping feature is disabled by default. When the DHCP snooping feature is disabled, you cannot configure it or any of the features that depend on DHCP snooping. The commands to configure DHCP snooping and its dependent features are unavailable when DHCP snooping is disabled.

When you enable the DHCP snooping feature, the switch begins building and maintaining the DHCP snooping binding database. Features dependent on the DHCP snooping binding database can now make use of it and can therefore also be configured.

Enabling the DHCP snooping feature does not globally enable it. You must separately enable DHCP snooping globally.

Disabling the DHCP snooping feature removes all DHCP snooping configuration from the switch. If you want to disable DHCP snooping and preserve the configuration, globally disable DHCP snooping but do not disable the DHCP snooping feature.

Global Enablement

After DHCP snooping is enabled, DHCP snooping is globally disabled by default. Global enablement is a second level of enablement that allows you to have separate control of whether the switch is actively performing DHCP snooping that is independent from enabling the DHCP snooping binding database.

When you globally enable DHCP snooping, on each untrusted interface of VLANs that have DHCP snooping enabled, the switch begins validating DHCP messages that are received and used the DHCP snooping binding database to validate subsequent requests from untrusted hosts.

When you globally disable DHCP snooping, the switch stops validating DHCP messages and validating subsequent requests from untrusted hosts. It also removes the DHCP snooping binding database. Globally disabling DHCP snooping does not remove any DHCP snooping configuration or the configuration of other features that are dependent upon the DHCP snooping feature.

Trusted and Untrusted Sources

You can configure whether DHCP snooping trusts traffic sources. An untrusted source might initiate traffic attacks or other hostile actions. To prevent such attacks, DHCP snooping filters messages from untrusted sources.

In an enterprise network, a trusted source is a switch that is under your administrative control. These switches include the switches, routers, and servers in the network. Any switch beyond the firewall or outside the network is an untrusted source. Generally, host ports are treated as untrusted sources.

In a service provider environment, any switch that is not in the service provider network is an untrusted source (such as a customer switch). Host ports are untrusted sources.

In a Cisco Nexus device, you indicate that a source is trusted by configuring the trust state of its connecting interface.

The default trust state of all interfaces is untrusted. You must configure DHCP server interfaces as trusted. You can also configure other interfaces as trusted if they connect to switches (such as switches or routers) inside your network. You usually do not configure host port interfaces as trusted.



Note For DHCP snooping to function properly, you must connect all DHCP servers to the switch through trusted interfaces.

DHCP Snooping Binding Database

Using information extracted from intercepted DHCP messages, DHCP snooping dynamically builds and maintains a database. The database contains an entry for each untrusted host with a leased IP address if the host is associated with a VLAN that has DHCP snooping enabled. The database does not contain entries for hosts that are connected through trusted interfaces.



Note The DHCP snooping binding database is also referred to as the DHCP snooping binding table.

DHCP snooping updates the database when the switch receives specific DHCP messages. For example, the feature adds an entry to the database when the switch receives a DHCPACK message from the server. The feature removes the entry in the database when the IP address lease expires or the switch receives a DHCPRELEASE message from the host.

Each entry in the DHCP snooping binding database includes the MAC address of the host, the leased IP address, the lease time, the binding type, and the VLAN number and interface information associated with the host.

You can remove entries from the binding database by using the **clear ip dhcp snooping binding** command.

Information About the DHCPv6 Relay Agent

DHCPv6 Relay Agent

You can configure the device to run a DHCPv6 relay agent, which forwards DHCPv6 packets between clients and servers. This feature is useful when clients and servers are not on the same physical subnet. Relay agents receive DHCPv6 messages and then generate a new DHCPv6 message to send out on another interface. The relay agent sets the gateway address (giaddr field of the DHCPv6 packet) and forwards it to the DHCPv6 server.

VRF Support for the DHCPv6 Relay Agent

You can configure the DHCPv6 relay agent to forward DHCPv6 broadcast messages from clients in a virtual routing and forwarding (VRF) instance to DHCPv6 servers in a different VRF. By using a single DHCPv6 server to provide DHCPv6 support to clients in multiple VRFs, you can conserve IP addresses by using a single IP address pool rather than one for each VRF.

Licensing Requirements for DHCP Snooping

This feature does not require a license. Any feature not included in a license package is bundled with the Cisco NX-OS system images and is provided at no extra charge to you. For a complete explanation of the Cisco NX-OS licensing scheme, see the *Cisco NX-OS Licensing Guide*.

Prerequisites for DHCP Snooping

You should be familiar with DHCP before you configure DHCP snooping or the DHCP relay agent .

Guidelines and Limitations for DHCP Snooping

Consider the following guidelines and limitations when configuring DHCP snooping:

- The same MAC address is permitted in the static DHCP binding across multiple IP and ports.
- The DHCP snooping database can store 2000 bindings.
- DHCP snooping is not active until you enable the feature, enable DHCP snooping globally, and enable DHCP snooping on at least one VLAN.
- Before globally enabling DHCP snooping on the switch, make sure that the switches that act as the DHCP server and the DHCP relay agent are configured and enabled.
- If a VLAN ACL (VACL) is configured on a VLAN that you are configuring with DHCP snooping, ensure that the VACL permits DHCP traffic between DHCP servers and DHCP hosts.
- DHCP snooping and DHCP relay feature are not supported on the same VLAN.
- DHCP snooping should not be followed by DHCP relay in the network (DHCP snooping does not work when the DHCP relay is configured on the same Nexus device).
- When you configure DHCPv6 server addresses on an interface, a destination interface cannot be used with global IPv6 addresses.
- For DHCPv6 relay, you can configure up to 32 DHCPv6 server addresses on an interface.

Default Settings for DHCP Snooping

This table lists the default settings for DHCP snooping parameters.

Table 1: Default DHCP Snooping Parameters

Parameters	Default
DHCP snooping feature	Disabled
DHCP snooping globally enabled	No

Parameters	Default
DHCP snooping VLAN	None
DHCP snooping Option 82 support	Disabled
DHCP snooping trust	Untrusted
VRF support for the DHCP relay agent	Disabled
VRF support for the DHCPv6 relay agent	Disabled
DHCP relay agent	Disabled
DHCPv6 relay agent	Disabled
DHCPv6 relay option type cisco	Disabled

Configuring DHCP Snooping

Minimum DHCP Snooping Configuration

1. Enable the DHCP snooping feature.
- 2.

Procedure

	Command or Action	Purpose
Step 1	Enable the DHCP snooping feature.	When the DHCP snooping feature is disabled, you cannot configure DHCP snooping. For details, see Enabling or Disabling the DHCP Snooping Feature , on page 5.
Step 2	Enable DHCP snooping globally.	For details, see Enabling or Disabling DHCP Snooping Globally , on page 6.
Step 3	Enable DHCP snooping on at least one VLAN.	By default, DHCP snooping is disabled on all VLANs. For details, see Enabling or Disabling DHCP Snooping on a VLAN , on page 7.
Step 4	Ensure that the DHCP server is connected to the switch using a trusted interface.	For details, see Configuring an Interface as Trusted or Untrusted , on page 9.

Enabling or Disabling the DHCP Snooping Feature

You can enable or disable the DHCP snooping feature on the switch. By default, DHCP snooping is disabled.

Before you begin

If you disable the DHCP snooping feature, all DHCP snooping configuration is lost. If you want to turn off DHCP snooping and preserve the DHCP snooping configuration, disable DHCP globally.

Procedure

	Command or Action	Purpose
Step 1	configure terminal Example: switch# configure terminal switch(config)#	Enters global configuration mode.
Step 2	[no] feature dhcp Example: switch(config)# feature dhcp	Enables the DHCP snooping feature. The no option disables the DHCP snooping feature and erases all DHCP snooping configuration.
Step 3	(Optional) show running-config dhcp Example: switch(config)# show running-config dhcp	Shows the DHCP snooping configuration.
Step 4	(Optional) copy running-config startup-config Example: switch(config)# copy running-config startup-config	Copies the running configuration to the startup configuration.

Enabling or Disabling DHCP Snooping Globally

You can enable or disable the DHCP snooping globally on the switch. Globally disabling DHCP snooping stops the switch from performing any DHCP snooping but preserves DHCP snooping configuration.

Before you begin

Ensure that you have enabled the DHCP snooping feature. By default, DHCP snooping is globally disabled.

Procedure

	Command or Action	Purpose
Step 1	configure terminal Example: switch# configure terminal switch(config)#	Enters global configuration mode.
Step 2	[no] ip dhcp snooping Example: switch(config)# ip dhcp snooping	Enables DHCP snooping globally. The no option disables DHCP snooping.

	Command or Action	Purpose
Step 3	(Optional) show running-config dhcp Example: switch(config)# show running-config dhcp	Shows the DHCP snooping configuration.
Step 4	(Optional) copy running-config startup-config Example: switch(config)# copy running-config startup-config	Copies the running configuration to the startup configuration.

Enabling or Disabling DHCP Snooping on a VLAN

You can enable or disable DHCP snooping on one or more VLANs.

Before you begin

By default, DHCP snooping is disabled on all VLANs.

Ensure that DHCP snooping is enabled.



Note If a VACL is configured on a VLAN that you are configuring with DHCP snooping, ensure that the VACL permits DHCP traffic between DHCP servers and DHCP hosts.

Procedure

	Command or Action	Purpose
Step 1	configure terminal Example: switch# configure terminal switch(config)#	Enters global configuration mode.
Step 2	[no] ip dhcp snooping vlan <i>vlan-list</i> Example: switch(config)# ip dhcp snooping vlan 100,200,250-252	Enables DHCP snooping on the VLANs specified by <i>vlan-list</i> . The no option disables DHCP snooping on the VLANs specified.
Step 3	(Optional) show running-config dhcp Example: switch(config)# show running-config dhcp	Shows the DHCP snooping configuration.
Step 4	(Optional) copy running-config startup-config Example:	Copies the running configuration to the startup configuration.

	Command or Action	Purpose
	<code>switch(config)# copy running-config startup-config</code>	

Enabling or Disabling Option 82 Data Insertion and Removal

You can enable or disable the insertion and removal of Option 82 information for DHCP packets forwarded without the use of the DHCP relay agent. By default, the device does not include Option 82 information in DHCP packets.



Note DHCP relay agent support for Option 82 is configured separately.

Before you begin

Ensure that the DHCP feature is enabled.

Procedure

	Command or Action	Purpose
Step 1	config t Example: <code>switch# config t</code> <code>switch(config)#</code>	Enters global configuration mode.
Step 2	[no] ip dhcp snooping information option Example: <code>switch(config)# ip dhcp snooping information option</code>	Enables the insertion and removal of Option 82 information for DHCP packets. The no option disables the insertion and removal of Option 82 information.
Step 3	(Optional) show running-config dhcp Example: <code>switch(config)# show running-config dhcp</code>	Displays the DHCP configuration.
Step 4	(Optional) copy running-config startup-config Example: <code>switch(config)# copy running-config startup-config</code>	Copies the running configuration to the startup configuration.

Enabling or Disabling Strict DHCP Packet Validation

You can enable or disable the strict validation of DHCP packets by the DHCP snooping feature. By default, strict validation of DHCP packets is disabled.

Procedure

	Command or Action	Purpose
Step 1	configure terminal Example: switch# configure terminal switch(config)#	Enters global configuration mode.
Step 2	[no] ip dhcp packet strict-validation Example: switch(config)# ip dhcp packet strict-validation	Enables the strict validation of DHCP packets by the DHCP snooping feature. The no option disables strict DHCP packet validation.
Step 3	(Optional) show running-config dhcp Example: switch(config)# show running-config dhcp	Shows the DHCP snooping configuration.
Step 4	(Optional) copy running-config startup-config Example: switch(config)# copy running-config startup-config	Copies the running configuration to the startup configuration.

Configuring an Interface as Trusted or Untrusted

You can configure whether an interface is a trusted or untrusted source of DHCP messages. You can configure DHCP trust on the following types of interfaces:

- Layer 2 Ethernet interfaces
- Layer 2 port-channel interfaces

Before you begin

By default, all interfaces are untrusted.

Ensure that DHCP snooping is enabled.

Procedure

	Command or Action	Purpose
Step 1	configure terminal Example: switch# configure terminal switch(config)#	Enters global configuration mode.
Step 2	Enter one of the following commands: <ul style="list-style-type: none"> • interface ethernet <i>port/slot</i> 	<ul style="list-style-type: none"> • Enters interface configuration mode, where <i>port / slot</i> is the Layer 2 Ethernet interface

	Command or Action	Purpose
	<ul style="list-style-type: none"> • interface port-channel <i>channel-number</i> Example: <pre>switch(config)# interface ethernet 2/1 switch(config-if)#</pre>	<p>that you want to configure as trusted or untrusted for DHCP snooping.</p> <ul style="list-style-type: none"> • Enters interface configuration mode, where <i>port / slot</i> is the Layer 2 port-channel interface that you want to configure as trusted or untrusted for DHCP snooping.
Step 3	[no] ip dhcp snooping trust Example: <pre>switch(config-if)# ip dhcp snooping trust</pre>	Configures the interface as a trusted interface for DHCP snooping. The no option configures the port as an untrusted interface.
Step 4	(Optional) show running-config dhcp Example: <pre>switch(config-if)# show running-config dhcp</pre>	Shows the DHCP snooping configuration.
Step 5	(Optional) copy running-config startup-config Example: <pre>switch(config-if)# copy running-config startup-config</pre>	Copies the running configuration to the startup configuration.

Enabling or Disabling the DHCP Relay Agent

You can enable or disable the DHCP relay agent. By default, the DHCP relay agent is enabled.

Before you begin

Ensure that the DHCP feature is enabled.

Procedure

	Command or Action	Purpose
Step 1	config t Example: <pre>switch# config t switch(config)#</pre>	Enters global configuration mode.
Step 2	[no] ip dhcp relay Example: <pre>switch(config)# ip dhcp relay</pre>	Enables the DHCP relay agent. The no option disables the relay agent.
Step 3	(Optional) show ip dhcp relay Example: <pre>switch(config)# show ip dhcp relay</pre>	Displays the DHCP relay configuration.

	Command or Action	Purpose
Step 4	(Optional) show running-config dhcp Example: switch(config)# show running-config dhcp	Displays the DHCP configuration.
Step 5	(Optional) copy running-config startup-config Example: switch(config)# copy running-config startup-config	Copies the running configuration to the startup configuration.

Enabling or Disabling Option 82 for the DHCP Relay Agent

You can enable or disable the device to insert and remove Option 82 information on DHCP packets forwarded by the relay agent.

By default, the DHCP relay agent does not include Option 82 information in DHCP packets.

Before you begin

Ensure that the DHCP feature is enabled.

Procedure

	Command or Action	Purpose
Step 1	configure terminal Example: switch# configure terminal switch(config)#	Enters global configuration mode.
Step 2	[no] ip dhcp relay information option Example: switch(config)# ip dhcp relay information option	Enables the DHCP relay agent to insert and remove Option 82 information on the packets that it forwards. The Option 82 information is in binary ifindex format by default. The no option disables this behavior.
Step 3	(Optional) [no] ip dhcp relay information sub-option circuit-id format-type string Example: switch(config)# ip dhcp relay information sub-option circuit-id format-type string	Configures Option 82 to use encoded string format instead of the default binary ifindex format.
Step 4	(Optional) show ip dhcp relay Example: switch(config)# show ip dhcp relay	Displays the DHCP relay configuration.

	Command or Action	Purpose
Step 5	(Optional) show running-config dhcp Example: switch(config)# show running-config dhcp	Displays the DHCP configuration.
Step 6	(Optional) copy running-config startup-config Example: switch(config)# copy running-config startup-config	Saves the change persistently through reboots and restarts by copying the running configuration to the startup configuration.

Configuring DHCP Server Addresses on an Interface

You can configure DHCP server IP addresses on an interface. When an inbound DHCP BOOTREQUEST packet arrives on the interface, the relay agent forwards the packet to all DHCP server IP addresses specified. The relay agent forwards replies from all DHCP servers to the host that sent the request.

Before you begin

Ensure that the DHCP feature is enabled.

Ensure that the DHCP server is correctly configured.

Determine the IP address for each DHCP server that you want to configure on the interface.

If the DHCP server is in a different VRF instance than the interface, ensure that you have enabled VRF support.



Note If an ingress router ACL is configured on an interface that you are configuring with a DHCP server address, ensure that the router ACL permits DHCP traffic between DHCP servers and DHCP hosts.

Procedure

	Command or Action	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters global configuration mode.
Step 2	Do one of the following options: <ul style="list-style-type: none"> • interface ethernet <i>slot/port</i>[, <i>number</i>] • interface vlan <i>vlan-id</i> • interface port-channel <i>channel-id</i>[.<i>subchannel-id</i>] Example: switch(config)# interface ethernet 2/3 switch(config-if)#	<ul style="list-style-type: none"> • Enters interface configuration mode, where <i>slot/port</i> is the physical Ethernet interface that you want to configure with a DHCP server IP address. If you want to configure a subinterface, include the <i>number</i> argument to specify the subinterface number. • Enters interface configuration mode, where <i>vlan-id</i> is the ID of the VLAN that you

	Command or Action	Purpose
		want to configure with a DHCP server IP address. • Enters interface configuration mode, where <i>channel-id</i> is the ID of the port channel that you want to configure with a DHCP server IP address. If you want to configure a subchannel, include the <i>subchannel-id</i> argument to specify the subchannel ID.
Step 3	ip dhcp relay address <i>IP-address</i> Example: <pre>switch(config-if)# ip dhcp relay address 10.132.7.120</pre>	Configures an IP address for a DHCP server to which the relay agent forwards BOOTREQUEST packets received on this interface. To configure more than one IP address, use the ip dhcp relay address command once per address.
Step 4	(Optional) show ip dhcp relay address Example: <pre>switch(config-if)# show ip dhcp relay address</pre>	Displays all the configured DHCP server addresses.
Step 5	(Optional) show running-config dhcp Example: <pre>switch(config-if)# show running-config dhcp</pre>	Displays the DHCP configuration.
Step 6	(Optional) copy running-config startup-config Example: <pre>switch(config-if)# copy running-config startup-config</pre>	Copies the running configuration to the startup configuration.

Creating a DHCP Static Binding

You can create a static DHCP source binding to a Layer 2 interface.

Before you begin

Ensure that you have enabled the DHCP snooping feature.

Procedure

	Command or Action	Purpose
Step 1	configure terminal Example:	Enters global configuration mode.

	Command or Action	Purpose
	switch# configure terminal switch(config)#	
Step 2	ip source binding <i>IP-address MAC-address</i> vlan <i>vlan-id</i> { interface ethernet slot/port port-channel channel-no } Example: switch(config)# ip source binding 10.5.22.7 001f.28bd.0013 vlan 100 interface ethernet 2/3	Binds the static source address to the Layer 2 Ethernet interface.
Step 3	(Optional) show ip dhcp snooping binding Example: switch(config)# ip dhcp snooping binding	Shows the DHCP snooping static and dynamic bindings.
Step 4	(Optional) show ip dhcp snooping binding dynamic Example: switch(config)# ip dhcp snooping binding dynamic	Shows the DHCP snooping dynamic bindings.
Step 5	(Optional) copy running-config startup-config Example: switch(config)# copy running-config startup-config	Copies the running configuration to the startup configuration.

Example

The following example shows how to create a static IP source entry associated with VLAN 100 on Ethernet interface 2/3:

```
switch# configure terminal
switch(config)# ip source binding 10.5.22.7 001f.28bd.0013 vlan 100 interface ethernet 2/3
switch(config)#
```

Configuring DHCPv6 Relay Agent

Enabling or Disabling the DHCPv6 Relay Agent

You can enable or disable the DHCPv6 relay agent. By default, the DHCPv6 relay agent is disabled.

Before you begin

Ensure that the DHCP feature is enabled.

Procedure

	Command or Action	Purpose
Step 1	configure terminal Example: switch# configure terminal switch(config)#	Enters global configuration mode.
Step 2	[no] ipv6 dhcp relay Example: switch(config)# ipv6 dhcp relay	Enables the DHCPv6 relay agent. The no option disables the relay agent.
Step 3	(Optional) show ipv6 dhcp relay [interface interface] Example: switch(config)# show ipv6 dhcp relay	Displays the DHCPv6 relay configuration.
Step 4	(Optional) show running-config dhcp Example: switch(config)# show running-config dhcp	Displays the DHCP configuration.
Step 5	(Optional) copy running-config startup-config Example: switch(config)# copy running-config startup-config	Copies the running configuration to the startup configuration.

Enabling or Disabling VRF Support for the DHCPv6 Relay Agent

You can configure the device to support the relaying of DHCPv6 requests that arrive on an interface in one VRF to a DHCPv6 server in a different VRF.

Before you begin

Ensure that the DHCP feature is enabled.

Ensure that the DHCPv6 relay agent is enabled.

Procedure

	Command or Action	Purpose
Step 1	configure terminal Example: switch# configure terminal switch(config)#	Enters global configuration mode.

	Command or Action	Purpose
Step 2	[no] ipv6 dhcp relay option vpn Example: switch(config)# ipv6 dhcp relay option vpn	Enables VRF support for the DHCPv6 relay agent. The no option disables this behavior.
Step 3	[no] ipv6 dhcp relay option type cisco Example: switch(config)# ipv6 dhcp relay option type cisco	Causes the DHCPv6 relay agent to insert virtual subnet selection (VSS) details as part of the vendor-specific option. The no option causes the DHCPv6 relay agent to insert VSS details as part of the VSS option (68), which is defined in RFC-6607. This command is useful when you want to use DHCPv6 servers that do not support RFC-6607 but allocate IPv6 addresses based on the client VRF name.
Step 4	(Optional) show ipv6 dhcp relay [interface interface] Example: switch(config)# show ipv6 dhcp relay	Displays the DHCPv6 relay configuration.
Step 5	(Optional) show running-config dhcp Example: switch(config)# show running-config dhcp	Displays the DHCP configuration.
Step 6	(Optional) copy running-config startup-config Example: switch(config)# copy running-config startup-config	Copies the running configuration to the startup configuration.

Configuring the DHCPv6 Relay Source Interface

You can configure the source interface for the DHCPv6 relay agent. By default, the DHCPv6 relay agent uses the relay agent address as the source address of the outgoing packet. Configuring the source interface enables you to use a more stable address (such as the loopback interface address) as the source address of relayed messages.

Before you begin

Ensure that the DHCP feature is enabled.

Ensure that the DHCPv6 relay agent is enabled.

Procedure

	Command or Action	Purpose
Step 1	configure terminal Example: switch# configure terminal switch(config)#	Enters global configuration mode.
Step 2	[no] ipv6 dhcp relay source-interface interface Example: switch(config)# ipv6 dhcp relay source-interface loopback 2	Configures the source interface for the DHCPv6 relay agent. Note The DHCPv6 relay source interface can be configured globally, per interface, or both. When both the global and interface levels are configured, the interface-level configuration overrides the global configuration.
Step 3	(Optional) show ipv6 dhcp relay [interface interface] Example: switch(config)# show ipv6 dhcp relay	Displays the DHCPv6 relay configuration.
Step 4	(Optional) show running-config dhcp Example: switch(config)# show running-config dhcp	Displays the DHCP configuration.
Step 5	(Optional) copy running-config startup-config Example: switch(config)# copy running-config startup-config	Copies the running configuration to the startup configuration.

Verifying the DHCP Snooping Configuration

To display DHCP snooping configuration information, perform one of the following tasks. For detailed information about the fields in the output from these commands, see the System Management Configuration Guide for your Cisco Nexus device.

Command	Purpose
show running-config dhcp	Displays the DHCP snooping configuration.
show ip dhcp relay	Displays the DHCP relay configuration.

Command	Purpose
<code>show ipv6 dhcp relay [interface interface]</code>	Displays the DHCPv6 relay global or interface-level configuration.
<code>show ip dhcp snooping</code>	Displays general information about DHCP snooping.

Displaying DHCP Bindings

Use the `show ip dhcp snooping binding` command to display the DHCP static and dynamic binding table. Use the `show ip dhcp snooping binding dynamic` to display the DHCP dynamic binding table.

For detailed information about the fields in the output from this command, see the *System Management Configuration Guide* for your Cisco Nexus device.

This example shows how to create a static DHCP binding and then verify the binding using the `show ip dhcp snooping binding` command.

```
switch# configuration terminal
switch(config)# ip source binding 10.20.30.40 0000.1111.2222 vlan 400 interface port-channel
500

switch(config)# show ip dhcp snooping binding
-----
MacAddress          IpAddress          LeaseSec  Type          VLAN  Interface
-----
00:00:11:11:22:22  10.20.30.40       infinite  static        400   port-channel500
```

Clearing the DHCP Snooping Binding Database

You can remove entries from the DHCP snooping binding database, including a single entry, all entries associated with an interface, or all entries in the database.

Before you begin

Ensure that DHCP snooping is enabled.

Procedure

	Command or Action	Purpose
Step 1	(Optional) <code>clear ip dhcp snooping binding</code> Example: switch# clear ip dhcp snooping binding	Clears all entries from the DHCP snooping binding database.
Step 2	(Optional) <code>clear ip dhcp snooping binding interface ethernet slot/port[.subinterface-number]</code> Example:	Clears entries associated with a specific Ethernet interface from the DHCP snooping binding database.

	Command or Action	Purpose
	<pre>switch# clear ip dhcp snooping binding interface ethernet 1/4</pre>	
Step 3	(Optional) clear ip dhcp snooping binding interface port-channel channel-number [.subchannel-number] Example: <pre>switch# clear ip dhcp snooping binding interface port-channel 72</pre>	Clears entries associated with a specific port-channel interface from the DHCP snooping binding database.
Step 4	(Optional) clear ip dhcp snooping binding vlan vlan-id mac mac-address ip ip-address interface {ethernet slot/port [.subinterface-number port-channel channel-number [.subchannel-number] } Example: <pre>switch# clear ip dhcp snooping binding vlan 23 mac 0060.3aeb.54f0 ip 10.34.54.9 interface ethernet 2/11</pre>	Clears a single, specific entry from the DHCP snooping binding database.
Step 5	(Optional) show ip dhcp snooping binding Example: <pre>switch# show ip dhcp snooping binding</pre>	Displays the DHCP snooping binding database.

Clearing DHCP Relay Statistics

Use the **clear ip dhcp relay statistics** command to clear the global DHCP relay statistics.

Use the **clear ip dhcp relay statistics interface interface** command to clear the DHCP relay statistics for a particular interface.

Use the **clear ip dhcp relay statistics interface interface serverip ip-address** [**use-vrf vrf-name**] command to clear the DHCP relay statistics at the server level for a particular interface.

Clearing DHCPv6 Relay Statistics

Use the **clear ipv6 dhcp relay statistics** command to clear the global DHCPv6 relay statistics.

Use the **clear ipv6 dhcp relay statistics interface interface** command to clear the DHCPv6 relay statistics for a particular interface.

Use the **clear ipv6 dhcp relay statistics interface interface server-ip ip-address** [**use-vrf vrf-name**] command to clear the DHCPv6 relay statistics at the server level for a particular interface.

Monitoring DHCP

Use the **show ip dhcp snooping statistics** command to monitor DHCP snooping.

Use the **show ip dhcp relay statistics** [**interface** *interface* [**serverip** *ip-address* [**use-vrf** *vrf-name*]]] command to monitor DHCP relay statistics at the global, server, or interface level.

Use the (Optional) **show ip dhcp snooping statistics vlan** [*vlan-id*] **interface** [**ethernet**|*port-channel*][*id*] command to know the exact statistics about snooping statistics per interface under a vlan.

Configuration Examples for DHCP Snooping

The following example shows how to enable DHCP snooping on two VLANs, with Option 82 support enabled and Ethernet interface 2/5 trusted because the DHCP server is connected to that interface:

```
feature dhcp
ip dhcp snooping
ip dhcp snooping info option

interface Ethernet 2/5
 ip dhcp snooping trust
ip dhcp snooping vlan 1
ip dhcp snooping vlan 50
```