



## Spare Parts Table

- [Spares Support Table, on page 1](#)

### Spares Support Table

Product	Chassis Height (Rack Units)	Power Supply Options	Fan Options	Module Options	Accessory Kits
Nexus 3408-S	4 RU	AC port-side intake (NXA-PAC-2KW-PI) DC port-side intake (NXA-PDC-2KW-PI) HVAC/HVDC port-side intake (NXA-PHV-2KW-PI)	Port-side intake (NXA-FAN-300CFM-PI) Port-side intake (NXA-SFAN-300CFM-PI) <sup>1</sup>	Central processing unit (CPU) module (NXB-CPU-FRU} Line-card expansion module (LEM) (NXM-X16C) LEM (NXM-X4D)	Rack mount kit (N3K-C3408-RMK) Filler blank module (NXM-XBLNK)
Nexus 3432D-S	1 RU	AC port-side exhaust (NXA-PAC-1500W-PE) AC port-side intake (NXA-PAC-1500W-PI) HVAC/HVDC port-side intake (NXA-PHV-1100W-PI) HVAC/HVDC port-side exhaust (NXA-PHV-1100W-PE)	Port-side exhaust (NXA-FAN-35CFM-PE) Port-side intake (NXA-FAN-35CFM-PI)	N/A	Rack mount kit (N9K-C9300-RMK) Rack mount kit (C3850-RACK-KIT) Rack mount kit (NXK-ACC-KIT-1RU)

<sup>1</sup> This fan is supported beginning with Cisco NX-OS Release 9.3(6). To enable or disable the display of the fan's serial number, enter the **[no] hardware fan-sprom** command.

