



Configuring Layer 3 Virtualization

This chapter describes how to configure Layer 3 virtualization on the Cisco NX-OS device.

This chapter includes the following sections:

- [About Layer 3 Virtualization, on page 1](#)
- [Prerequisites for VRF, on page 4](#)
- [Guidelines and Limitations for VRFs, on page 4](#)
- [Guidelines and Limitations for VRF Route Leaking, on page 5](#)
- [Default Settings, on page 5](#)
- [Configuring VRFs, on page 6](#)
- [Verifying the VRF Configuration, on page 11](#)
- [Configuration Examples for VRFs, on page 12](#)
- [Additional References, on page 18](#)

About Layer 3 Virtualization

Cisco NX-OS supports multiple virtual routing and forwarding instances (VRFs). Each VRF contains a separate address space with unicast and multicast route tables for IPv4 and IPv6 and makes routing decisions independent of any other VRF.

Each router has a default VRF and a management VRF.

Management VRF

- The management VRF is for management purposes only.
- Only the mgmt 0 interface can be in the management VRF.
- The mgmt 0 interface cannot be assigned to another VRF.
- No routing protocols can run in the management VRF (static only).

Default VRF

- All Layer 3 interfaces exist in the default VRF until they are assigned to another VRF.
- Routing protocols run in the default VRF context unless another VRF context is specified.
- The default VRF uses the default routing context for all show commands.


- The default VRF is similar to the global routing table concept in Cisco IOS.

VRF and Routing

All unicast and multicast routing protocols support VRFs. When you configure a routing protocol in a VRF, you set routing parameters for the VRF that are independent of routing parameters in another VRF for the same routing protocol instance.

You can assign interfaces and route protocols to a VRF to create virtual Layer 3 networks. An interface exists in only one VRF. The following figure shows one physical network split into two virtual networks with two VRFs. Routers Z, A, and B exist in VRF Red and form one address domain. These routers share route updates that do not include Router C because Router C is configured in a different VRF.

Figure 1: VRFs in a Network

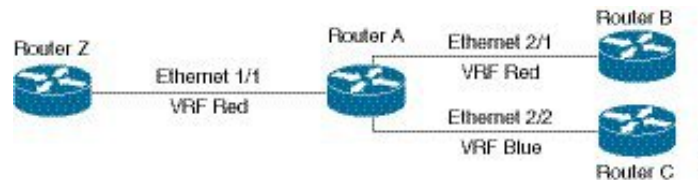

By default, Cisco NX-OS uses the VRF of the incoming interface to select which routing table to use for a route lookup. You can configure a route policy to modify this behavior and set the VRF that Cisco NX-OS uses for incoming packets.

Cisco NX-OS supports route leaking (import or export) between VRFs.

Route Leaking and Importing Routes from the Default VRF

Cisco NX-OS supports route leaking (import or export) between VRFs.

You can import IP prefixes from the global routing table (the default VRF) into any other VRF by using an import policy. The VRF import policy uses a route map to specify the prefixes to be imported into a VRF. The policy can import IPv4 and IPv6 unicast prefixes.



Note Routes in the BGP default VRF can be imported directly. Any other routes in the default VRF should be redistributed into BGP first.

IP prefixes are defined as match criteria for the import route map through standard route policy filtering mechanisms. For example, you can create an IP prefix list or an as-path filter to define an IP prefix or IP prefix range and use that prefix list or as-path filter in a match clause for the route map. Prefixes that pass through the route map are imported into the specified VRF using the import policy. IP prefixes that are imported into a VRF through this import policy cannot be reimported into another VRF.

VRF-Aware Services

A fundamental feature of the Cisco NX-OS architecture is that every IP-based feature is VRF aware.

The following VRF-aware services can select a particular VRF to reach a remote server or to filter information based on the selected VRF:

- AAA—See the *Cisco Nexus 3400-S NX-OS Security Configuration Guide* for more information.
- Call Home—See the *Cisco Nexus 3400-S NX-OS System Management Configuration Guide* for more information.
- DNS—See [Configuring DNS](#) for more information.
- HSRP—See [Configuring HSRP](#) for more information.
- HTTP—See the *Cisco Nexus 3400-S NX-OS Fundamentals Configuration Guide* for more information.
- NTP—See the *Cisco Nexus 3400-S NX-OS System Management Configuration Guide* for more information.
- Ping and Traceroute—See the *Cisco Nexus 3400-S NX-OS Fundamentals Configuration Guide* for more information.
- RADIUS—See the *Cisco Nexus 3400-S NX-OS Security Configuration Guide* for more information.
- SNMP—See the *Cisco Nexus 3400-S NX-OS System Management Configuration Guide* for more information.
- SSH—See the *Cisco Nexus 3400-S NX-OS Security Configuration Guide* for more information.
- Syslog—See the *Cisco Nexus 3400-S NX-OS System Management Configuration Guide* for more information.
- TACACS+—See the *Cisco Nexus 3400-S NX-OS Security Configuration Guide* for more information.
- TFTP—See the *Cisco Nexus 3400-S NX-OS Fundamentals Configuration Guide* for more information.
- VRRP—See [Configuring VRRP](#) for more information.
- XML—See the *Cisco Nexus 3400-S NX-OS Programmability Guide* for more information.


See the appropriate configuration guide for each service for more information on configuring VRF support in that service.

Reachability

Reachability indicates which VRF contains the routing information necessary to get to the server providing the service. For example, you can configure an SNMP server that is reachable on the management VRF. When you configure that server address on the router, you also configure which VRF Cisco NX-OS must use to reach the server.

The following figure shows an SNMP server that is reachable over the management VRF. You configure Router A to use the management VRF for SNMP server host 192.0.2.1.


Figure 2: Service VRF Reachability

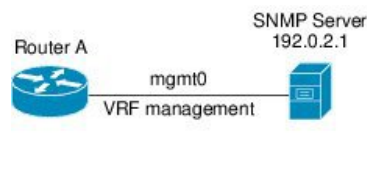

Filtering

Filtering allows you to limit the type of information that goes to a VRF-aware service based on the VRF. For example, you can configure a syslog server to support a particular VRF. The following figure shows two syslog servers with each server supporting one VRF. Syslog server A is configured in VRF Red, so Cisco NX-OS sends only system messages generated in VRF Red to syslog server A.

Figure 3: Service VRF Filtering

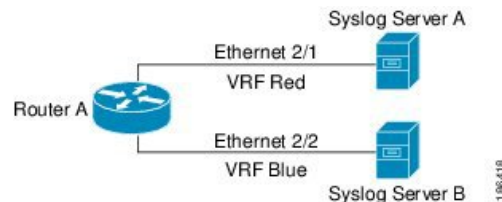


Combining Reachability and Filtering

You can combine reachability and filtering for VRF-aware services. You can configure the VRF that Cisco NX-OS uses to connect to that service as well as the VRF that the service supports. If you configure a service in the default VRF, you can optionally configure the service to support all VRFs.

The following figure shows an SNMP server that is reachable on the management VRF. You can configure the SNMP server to support only the SNMP notifications from VRF Red, for example.

Figure 4: Service VRF Reachability Filtering

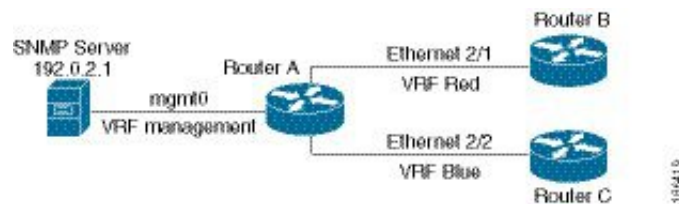

Prerequisites for VRF

You must install the Advanced Services license to use VDCs besides the default VDC.

Guidelines and Limitations for VRFs

VRFs have the following configuration guidelines and limitations:

- By default, when you make an interface a member of an existing VRF, Cisco NX-OS removes all Layer 3 configurations. You can retain the Layer 3 configuration for an interface that is a member of an existing VRF by using either of the following:
 - Issue the **system vrf-member-change retain-l3-config** command before adding the interface to the VRF
 - Configure all Layer 3 parameters after adding an interface to a VRF.

- You should add the mgmt0 interface to the management VRF and configure the mgmt0 IP address and other parameters after you add it to the management VRF.
- If you configure an interface for a VRF before the VRF exists, the interface is operationally down until you create the VRF.
- Cisco NX-OS creates the default and management VRFs by default. You should make the mgmt0 interface a member of the management VRF.
- The **write erase boot** command does not remove the management VRF configurations. You must use the **write erase** command and then the **write erase boot** command.
- The Cisco Nexus 3400-S platform switches support a maximum of 254 VRFs.

Guidelines and Limitations for VRF Route Leaking

VRF route leaking has the following configuration guidelines and limitations:

- Route leaking is supported between any two non-default VRFs and from the default VRF to a non-default VRF.
- Route leaking to the default VRF is not allowed because it is the global VRF.
- Route leaking between VRFs is not supported for SR MPLS.
- You can restrict route leaking to specific routes using route map filters to match designated IP addresses.
- By default, the maximum number of IP prefixes that can be imported from the default VRF into a non-default VRF is 1000 routes.
- There is no limit on the number of routes that can be leaked between two non-default VRFs.
- VRF route leaking requires an Enterprise license, and BGP must be enabled.

Default Settings

The table lists the default settings for VRF parameters.

Table 1: Default VRF Parameters

Parameters	Default
Configured VRFs	Default, management
Routing context	Default VRF

Configuring VRFs



Note If you are familiar with the Cisco IOS CLI, be aware that the Cisco NX-OS commands for this feature might differ from the Cisco IOS commands that you would use.

Creating a VRF

You can create a VRF.



Note Any commands available in global configuration mode are also available in VRF configuration mode.

Procedure

	Command or Action	Purpose
Step 1	configure terminal Example: <pre>switch# configure terminal switch(config)#</pre>	Enters global configuration mode.
Step 2	[no] vrf context name Example: <pre>switch(config)# vrf context Enterprise switch(config-vrf)#</pre>	Creates a new VRF and enters VRF configuration mode. The <i>name</i> can be any case-sensitive, alphanumeric string up to 32 characters. Using the no option with this command deletes the VRF and all associated configurations.
Step 3	(Optional) ip route <i>{ip-prefix ip-addr ip-mask}</i> <i>{[next-hop nh-prefix] [interface next-hop nh-prefix]}</i> [tag tag-value [preference] Example: <pre>switch(config-vrf)# ip route 192.0.2.0/8 ethernet 1/2 192.0.2.4</pre>	Configures a static route and the interface for this static route. You can optionally configure the next-hop address. The <i>preference</i> value sets the administrative distance. The range is from 1 to 255. The default is 1.
Step 4	(Optional) show vrf [vrf-name] Example: <pre>switch(config-vrf)# show vrf Enterprise</pre>	Displays VRF information.
Step 5	(Optional) copy running-config startup-config Example: <pre>switch(config-vrf)# copy running-config startup-config</pre>	Saves this configuration change.

Example

This example shows how to create a VRF and add a static route to the VRF:

```
switch# configure terminal
switch(config)# vrf context Enterprise
switch(config-vrf)# ip route 192.0.2.0/8 ethernet 1/2
switch(config-vrf)# exit
switch(config)# copy running-config startup-config
```

Assigning VRF Membership to an Interface

You can make an interface a member of a VRF.

Before you begin

Assign the IP address for an interface after you have configured the interface for a VRF.

Procedure

	Command or Action	Purpose
Step 1	configure terminal Example: switch# configure terminal switch(config)#	Enters global configuration mode.
Step 2	interface <i>interface-type slot/port</i> Example: switch(config)# interface ethernet 1/2 switch(config-if)#	Enters interface configuration mode.
Step 3	vrf member <i>vrf-name</i> Example: switch(config-if)# vrf member RemoteOfficeVRF	Adds this interface to a VRF.
Step 4	ip address <i>ip-prefix/length</i> Example: switch(config-if)# ip address 192.0.2.1/16	Configures an IP address for this interface. You must do this step after you assign this interface to a VRF.
Step 5	(Optional) show vrf <i>vrf-name interface interface-type number</i> Example: switch(config-vrf)# show vrf Enterprise interface ethernet 1/2	Displays VRF information.
Step 6	(Optional) copy running-config startup-config Example:	Saves this configuration change.

	Command or Action	Purpose
	switch(config-vrf)# copy running-config startup-config	

Example

This example shows how to add an interface to the VRF:

```
switch# configure terminal
switch(config)# interface ethernet 1/2
switch(config-if)# vrf member RemoteOfficeVRF
switch(config-if)# ip address 192.0.2.1/16
switch(config-if)# copy running-config startup-config
```

Configuring VRF Parameters for a Routing Protocol

You can associate a routing protocol with one or more VRFs. See the appropriate chapter for information on how to configure VRFs for the routing protocol. This section uses OSPFv2 as an example protocol for the detailed configuration steps.

Procedure

	Command or Action	Purpose
Step 1	configure terminal Example: switch# configure terminal switch(config)#	Enters global configuration mode.
Step 2	router ospf instance-tag Example: switch (config-vrf)# router ospf 201 switch(config-router)#	Creates a new OSPFv2 instance with the configured instance tag.
Step 3	vrf vrf-name Example: switch(config-router)# vrf RemoteOfficeVRF switch(config-router-vrf)#	Enters VRF configuration mode.
Step 4	(Optional) maximum-paths paths Example: switch(config-router-vrf)# maximum-paths 4	Configures the maximum number of equal OSPFv2 paths to a destination in the route table for this VRF. This command is used for load balancing.
Step 5	exit Example: switch(config-router-vrf)# exit switch(config-router)#	Exits VRF configuration mode.

	Command or Action	Purpose
Step 6	exit Example: switch(config-router)# exit switch(config)#	Exits router configuration mode.
Step 7	interface interface-type slot/port Example: switch(config)# interface ethernet 1/2 switch(config-if)#	Enters interface configuration mode.
Step 8	vrf member vrf-name Example: switch(config-if)# vrf member RemoteOfficeVRF	Adds this interface to a VRF.
Step 9	ip address ip-prefix/length Example: switch(config-if)# ip address 192.0.2.1/16	Configures an IP address for this interface. You must do this step after you assign this interface to a VRF.
Step 10	ip router ospf instance-tag area area-id Example: switch(config-if)# ip router ospf 201 area 0	Assigns this interface to the OSPFv2 instance and area configured.
Step 11	(Optional) copy running-config startup-config Example: switch(config-if)# copy running-config startup-config	Copies the running configuration to the startup configuration.

Example

This example shows how to create a VRF and add an interface to the VRF:

```
switch# configure terminal
switch(config)# vrf context RemoteOfficeVRF
switch(config-vrf)# exit
switch(config)# router ospf 201
switch(config-router)# vrf RemoteOfficeVRF
switch(config-router-vrf)# maximum-paths 4
switch(config-router-vrf)# interface ethernet 1/2
switch(config-if)# vrf member RemoteOfficeVRF
switch(config-if)# ip address 192.0.2.1/16
switch(config-if)# ip router ospf 201 area 0
switch(config-if)# exit
switch(config)# copy running-config startup-config
```

Configuring a VRF-Aware Service

You can configure a VRF-aware service for reachability and filtering.

This section uses SNMP and IP domain lists as example services for the detailed configuration steps.

Procedure

	Command or Action	Purpose
Step 1	configure terminal Example: switch# configure terminal switch(config)#	Enters global configuration mode.
Step 2	snmp-server host ip-address [filter-vrf vrf-name] [use-vrf vrf-name] Example: switch(config)# snmp-server host 192.0.2.1 use-vrf Red	Configures a global SNMP server and configures the VRF that Cisco NX-OS uses to reach the service. Use the filter-vrf keyword to filter information from the selected VRF to this server.
Step 3	vrf context vrf-name Example: switch(config)# vrf context Blue switch(config-vrf)#	Creates a new VRF.
Step 4	ip domain-list domain-name [all-vrfs] [use-vrf vrf-name] Example: switch(config-vrf)# ip domain-list List all-vrfs use-vrf Blue	Configures the domain list in the VRF and optionally configures the VRF that Cisco NX-OS uses to reach the domain name listed.
Step 5	(Optional) copy running-config startup-config Example: switch(config-vrf)# copy running-config startup-config	Saves this configuration change.

Example

This example shows how to send SNMP information for all VRFs to SNMP host 192.0.2.1, reachable on VRF Red:

```
switch# configure terminal
switch(config)# snmp-server host 192.0.2.1 for-all-vrfs use-vrf Red
switch(config)# copy running-config startup-config
```

This example shows how to filter SNMP information for VRF Blue to SNMP host 192.0.2.12, reachable on VRF Red:

```
switch# configure terminal
switch(config)# vrf context Blue
```

```
switch(config-vrf)# snmp-server host 192.0.2.12 use-vrf Red
switch(config)# copy running-config startup-config
```

Setting the VRF Scope

You can set the VRF scope for all EXEC commands (for example, **show** commands). Doing so automatically restricts the scope of the output of EXEC commands to the configured VRF. You can override this scope by using the VRF keywords available for some EXEC commands.

Procedure

	Command or Action	Purpose
Step 1	routing-context vrf <i>vrf-name</i> Example: <pre>switch# routing-context vrf red switch%red#</pre>	Sets the routing context for all EXEC commands. The default routing context is the default VRF. Note Use the routing-context vrf default command to return to the default VRF scope.

Example

To return to the default VRF scope, use the following command in EXEC mode:

Command	Purpose
routing-context vrf default Example: <pre>switch%red# routing-context vrf default switch#</pre>	Sets the default routing context.

Verifying the VRF Configuration

To display VRF configuration information, perform one of the following tasks:

Command	Purpose
show bgp process vrf [<i>vrf-name</i>]	Displays the information for all or one VRF.
show vrf [<i>vrf-name</i>]	Displays the information for all or one VRF.
show vrf [<i>vrf-name</i>] detail	Displays detailed information for all or one VRF.
show vrf [<i>vrf-name</i>] [interface <i>interface-type slot/port</i>]	Displays the VRF status for an interface.

Configuration Examples for VRFs

This example shows how to configure VRF Red, add an SNMP server to that VRF, and add an instance of OSPF to VRF Red:

```
configure terminal
vrf context Red
    snmp-server host 192.0.2.12 use-vrf Red
    router ospf 201

vrf Red
    interface ethernet 1/2
    vrf member Red
    ip address 192.0.2.1/16
    ip router ospf 201 area 0
```

This example shows how to configure VRF Red and Blue, add an instance of OSPF to each VRF, and create an SNMP context for each OSPF instance in each VRF:

```
vrf context Red
vrf context Blue
vrf context Green

feature ospf
    router ospf Lab
    vrf Red

router ospf Production
    vrf Blue
    router-id 1.1.1.1
    vrf Green
    router-id 2.2.2.2

interface ethernet 1/2
    vrf member Red
    ip address 192.0.2.1/16
    ip router ospf Lab area 0
    no shutdown

interface ethernet 10/2
    vrf member Blue
    ip address 192.0.2.1/16
    ip router ospf Production area 0
    no shutdown

interface ethernet 10/3
    vrf member Green
    ip address 192.0.2.1/16
    ip router ospf Production area 0
    no shutdown

snmp-server user admin network-admin auth md5 nbv-12345
snmp-server community public ro
snmp-server context lab instance Lab vrf Red
snmp-server context production instance Production vrf Blue
```

Use the SNMP context **lab** to access the OSPF-MIB values for the OSPF instance Lab in VRF Red in this example.

This example shows how to configure route leaking between two non-default VRFs and from the default VRF to a non-default VRF:

```

feature bgp
vrf context Green
  ip route 33.33.33.33/32 35.35.1.254
  address-family ipv4 unicast
  route-target import 3:3
  route-target export 2:2
  export map test
  import map test
  import vrf default map test

interface Ethernet1/7
  vrf member Green
  ip address 35.35.1.2/24

vrf context Shared
  ip route 44.44.44.44/32 45.45.1.254
  address-family ipv4 unicast
  route-target import 1:1
  route-target import 2:2
  route-target export 3:3
  export map test
  import map test
  import vrf default map test

interface Ethernet1/11
  vrf member Shared
  ip address 45.45.1.2/24

router bgp 100
  address-family ipv4 unicast
  redistribute static route-map test
  vrf Green
  address-family ipv4 unicast
  redistribute static route-map test
  vrf Shared
  address-family ipv4 unicast
  redistribute static route-map test

ip prefix-list test seq 5 permit 0.0.0.0/0 le 32
  route-map test permit 10
  match ip address prefix-list test

ip route 100.100.100.100/32 55.55.55.1
switch# show ip route vrf all
IP Route Table for VRF "default"
 '*' denotes best ucast next-hop
 *** denotes best mcast next-hop
 '[x/y]' denotes [preference/metric]
 '%<string>' in via output denotes VRF <string>
55.55.55.0/24, ubest/mbest: 1/0, attached
 *via 55.55.55.5, Lo0, [0/0], 00:07:59, direct
55.55.55.5/32, ubest/mbest: 1/0, attached
 *via 55.55.55.5, Lo0, [0/0], 00:07:59, local
100.100.100.100/32, ubest/mbest: 1/0
 *via 55.55.55.1, [1/0], 00:07:42, static

IP Route Table for VRF "management"
 '*' denotes best ucast next-hop
 *** denotes best mcast next-hop
 '[x/y]' denotes [preference/metric]
 '%<string>' in via output denotes VRF <string>

```

```

0.0.0.0/0, ubest/mbest: 1/0
  *via 10.29.176.1, [1/0], 12:53:54, static
  10.29.176.0/24, ubest/mbest: 1/0, attached
  *via 10.29.176.233, mgmt0, [0/0], 13:11:57, direct
  10.29.176.233/32, ubest/mbest: 1/0, attached
  *via 10.29.176.233, mgmt0, [0/0], 13:11:57, local

IP Route Table for VRF "Green"
  '*' denotes best ucast next-hop
  '**' denotes best mcast next-hop
  '[x/y]' denotes [preference/metric]
  '%<string>' in via output denotes VRF <string>
  33.33.33.33/32, ubest/mbest: 1/0
  *via 35.35.1.254, [1/0], 00:23:44, static
  35.35.1.0/24, ubest/mbest: 1/0, attached
  *via 35.35.1.2, Eth1/7, [0/0], 00:26:46, direct
  35.35.1.2/32, ubest/mbest: 1/0, attached
  *via 35.35.1.2, Eth1/7, [0/0], 00:26:46, local
  44.44.44.44/32, ubest/mbest: 1/0
  *via 45.45.1.254%Shared, [20/0], 00:12:08, bgp-100, external, tag 100
  100.100.100.100/32, ubest/mbest: 1/0
  *via 55.55.55.1%default, [20/0], 00:07:41, bgp-100, external, tag 100

IP Route Table for VRF "Shared"
  '*' denotes best ucast next-hop
  '**' denotes best mcast next-hop
  '[x/y]' denotes [preference/metric]
  '%<string>' in via output denotes VRF <string>

33.33.33.33/32, ubest/mbest: 1/0
  *via 35.35.1.254%Green, [20/0], 00:12:34, bgp-100, external, tag 100
  44.44.44.44/32, ubest/mbest: 1/0
  *via 45.45.1.254, [1/0], 00:23:16, static
  45.45.1.0/24, ubest/mbest: 1/0, attached
  *via 45.45.1.2, Eth1/11, [0/0], 00:25:53, direct
  45.45.1.2/32, ubest/mbest: 1/0, attached
  *via 45.45.1.2, Eth1/11, [0/0], 00:25:53, local
  100.100.100.100/32, ubest/mbest: 1/0
  *via 55.55.55.1%default, [20/0], 00:07:41, bgp-100, external, tag 100
switch(config)#

```

The following example shows how to allow re-importation of already imported routes that is introduced in the “export vrf default” command to allow VPN imported routes to be re-imported into the default-VRF.

```

vrf context vpn1
  address-family ipv4 unicast
    export vrf default [<prefix-limit>] map <route-map> [allow-vpn]
  address-family ipv6 unicast
    export vrf default [<prefix-limit>] map <route-map> [allow-vpn]

```

The following example shows a border-leaf configuration.

```

ip prefix-list DEFAULT_ROUTE seq 5 permit 0.0.0.0/0
route-map NO_DEFAULT_ROUTE deny 5
  match ip address prefix-list DEFAULT_ROUTE
route-map NO_DEFAULT_ROUTE permit 10
route-map allow permit 10

vrf context vni100
  vni 100
  ip route 0.0.0.0/0 Null0
  rd auto

```

```

address-family ipv4 unicast
  route-target import 100:200
  route-target import 100:200 evpn
  route-target both auto
  route-target both auto evpn
  import vrf default map allow
  export vrf default map NO_DEFAULT_ROUTE allow-vpn
vrf context vni200
vni 200
ip route 0.0.0.0/0 Null0
rd auto
address-family ipv4 unicast
  route-target import 100:100
  route-target import 100:100 evpn
  route-target both auto
  route-target both auto evpn
  import vrf default map allow
  export vrf default map NO_DEFAULT_ROUTE

router bgp 100
  address-family ipv4 unicast
  redistribute direct route-map allow
  address-family ipv6 unicast
  redistribute direct route-map allow
  neighbor 101.101.101.101
  remote-as 100
  update-source loopback0
  address-family l2vpn evpn
  send-community extended
  neighbor 30.0.0.2
  remote-as 300
  address-family ipv4 unicast
vrf vni100
  address-family ipv4 unicast
  network 0.0.0.0/0
  advertise l2vpn evpn
  redistribute direct route-map allow
vrf vni200
  address-family ipv4 unicast
  network 0.0.0.0/0
  advertise l2vpn evpn
  redistribute direct route-map allow

```

The following example shows BGP IPv4 Unicast configuration.

```

bl1(config-vrf)# show bgp ipv4 unicast 11.11.11.11/32
BGP routing table information for VRF default, address family IPv4 Unicast
BGP routing table entry for 11.11.11.11/32, version 14
Paths: (1 available, best #1)
Flags: (0x08041a) on xmit-list, is in urib, is best urib route, is in HW

Advertised path-id 1
Path type: internal, path is valid, is best path, in rib
          Imported from 3.3.3.3:3:11.11.11.11/32 (VRF vni100)
AS-Path: 150 , path sourced external to AS
  1.1.1.1 (metric 81) from 101.101.101.101 (101.101.101.101)
    Origin incomplete, MED 0, localpref 100, weight 0
    Received label 100
    Extcommunity:
      RT:100:100
      ENCAP:8
      Router MAC:5254.004e.a437
    Originator: 1.1.1.1 Cluster list: 101.101.101.101

```

```

Path-id 1 advertised to peers:
  30.0.0.2

b11(config-vrf)# show bgp vrf vni100 ipv4 unicast 11.11.11.11/32
BGP routing table information for VRF vni100, address family IPv4 Unicast
BGP routing table entry for 11.11.11.11/32, version 8
Paths: (1 available, best #1)
Flags: (0x08041e) on xmit-list, is in urib, is best urib route, is in HW
      vpn: version 19, (0x100002) on xmit-list

Advertised path-id 1, VPN AF advertised path-id 1
Path type: internal, path is valid, is best path, in rib
          Imported from 1.1.1.1:3:[5]:[0]:[0]:[32]:[11.11.11.11]:[0.0.0.0]/224
AS-Path: 150 , path sourced external to AS
  1.1.1.1 (metric 81) from 101.101.101.101 (101.101.101.101)
    Origin incomplete, MED 0, localpref 100, weight 0
    Received label 100
    Extcommunity:
      RT:100:100
      ENCAP:8
      Router MAC:5254.004e.a437
    Originator: 1.1.1.1 Cluster list: 101.101.101.101

VRF advertise information:
Path-id 1 not advertised to any peer

VPN AF advertise information:
Path-id 1 not advertised to any peer

```

The following example shows BGP IPv6 Unicast configuration.

```

b11(config-vrf)# show bgp ipv6 unicast 11::11/128
BGP routing table information for VRF default, address family IPv6 Unicast
BGP routing table entry for 11::11/128, version 13
Paths: (1 available, best #1)
Flags: (0x08041a) on xmit-list, is in u6rib, is best u6rib route, is in HW

Advertised path-id 1
Path type: internal, path is valid, is best path
          Imported from 3.3.3.3:3:11::11/128 (VRF vni100)
AS-Path: 150 , path sourced external to AS
  ::ffff:1.1.1.1 (metric 81) from 101.101.101.101 (101.101.101.101)
    Origin incomplete, MED 0, localpref 100, weight 0
    Received label 100
    Extcommunity:
      RT:100:100
      ENCAP:8
      Router MAC:5254.004e.a437
    Originator: 1.1.1.1 Cluster list: 101.101.101.101

Path-id 1 advertised to peers:
  30::2

b11(config-vrf)# show bgp vrf vni100 ipv6 unicast 11::11/128
BGP routing table information for VRF vni100, address family IPv6 Unicast
BGP routing table entry for 11::11/128, version 6
Paths: (1 available, best #1)
Flags: (0x08041e) on xmit-list, is in u6rib, is best u6rib route, is in HW
      vpn: version 7, (0x100002) on xmit-list

Advertised path-id 1, VPN AF advertised path-id 1
Path type: internal, path is valid, is best path
          Imported from 1.1.1.1:3:[5]:[0]:[0]:[128]:[11::11]:[0::]/416
AS-Path: 150 , path sourced external to AS

```



```

::ffff:1.1.1.1 (metric 81) from 101.101.101.101 (101.101.101.101)
  Origin incomplete, MED 0, localpref 100, weight 0
  Received label 100
  Extcommunity:
    RT:100:100
    ENCAP:8
    Router MAC:5254.004e.a437
  Originator: 1.1.1.1 Cluster list: 101.101.101.101

VRF advertise information:
Path-id 1 not advertised to any peer

VPN AF advertise information:
Path-id 1 not advertised to any peer

```

The following example shows the output of show ipv4 route command

```

b11(config-if)# show ip route
IP Route Table for VRF "default"
 '*' denotes best ucast next-hop
 '**' denotes best mcast next-hop
 '[x/y]' denotes [preference/metric]
 '%<string>' in via output denotes VRF <string>

0.0.0.0/0, ubest/mbest: 1/0
  *via vrf vni100, Null0, [20/0], 1d04h, bgp-100, external, tag 100
1.1.1.1/32, ubest/mbest: 1/0
  *via 103.0.0.1, Eth1/1, [110/81], 1d04h, ospf-100, intra
2.2.2.2/32, ubest/mbest: 1/0
  *via 103.0.0.1, Eth1/1, [110/81], 1d04h, ospf-100, intra
3.3.3.3/32, ubest/mbest: 2/0, attached
  *via 3.3.3.3, Lo0, [0/0], 1d04h, local
  *via 3.3.3.3, Lo0, [0/0], 1d04h, direct
9.9.9.9/32, ubest/mbest: 1/0, attached
  *via 9.9.9.9%vni100, Lo9, [20/0], 1d03h, bgp-100, external, tag 100
10.0.0.0/24, ubest/mbest: 1/0
  *via 1.1.1.1, [200/0], 1d04h, bgp-100, internal, tag 100 (evpn) segid: 100 tunnelid:
0x1010101 encap: VXLAN
11.11.11.11/32, ubest/mbest: 1/0
  *via 1.1.1.1, [200/0], 1d04h, bgp-100, internal, tag 150 (evpn) segid: 100 tunnelid:
0x1010101 encap: VXLAN
20.0.0.0/24, ubest/mbest: 1/0
  *via 2.2.2.2, [200/0], 1d04h, bgp-100, internal, tag 100 (evpn) segid: 200 tunnelid:
0x2020202 encap: VXLAN
22.22.22.22/32, ubest/mbest: 1/0
  *via 2.2.2.2, [200/0], 1d04h, bgp-100, internal, tag 250 (evpn) segid: 200 tunnelid:
0x2020202 encap: VXLAN
30.0.0.0/24, ubest/mbest: 1/0, attached
  *via 30.0.0.1, Eth1/2, [0/0], 1d04h, direct
30.0.0.1/32, ubest/mbest: 1/0, attached
  *via 30.0.0.1, Eth1/2, [0/0], 1d04h, local
33.33.33.33/32, ubest/mbest: 1/0
  *via 30.0.0.2, [20/0], 1d04h, bgp-100, external, tag 300
100.0.0.0/24, ubest/mbest: 1/0, attached
  *via 100.0.0.3%vni100, Vlan100, [20/0], 1d04h, bgp-100, external, tag 100
101.0.0.0/24, ubest/mbest: 1/0
  *via 103.0.0.1, Eth1/1, [110/80], 1d04h, ospf-100, intra
101.101.101.101/32, ubest/mbest: 1/0
  *via 103.0.0.1, Eth1/1, [110/41], 1d04h, ospf-100, intra
102.0.0.0/24, ubest/mbest: 1/0
  *via 103.0.0.1, Eth1/1, [110/80], 1d04h, ospf-100, intra
103.0.0.0/24, ubest/mbest: 1/0, attached
  *via 103.0.0.2, Eth1/1, [0/0], 1d04h, direct
103.0.0.2/32, ubest/mbest: 1/0, attached

```

The following example shows the output of show ipv6 route command

```
b11(config-vrf)# show bgp ipv6 unicast 11::11/128
BGP routing table information for VRF default, address family IPv6 Unicast
BGP routing table entry for 11::11/128, version 13
Paths: (1 available, best #1)
Flags: (0x08041a) on xmit-list, is in u6rib, is best u6rib route, is in HW
```

```

Advertised path-id 1
Path type: internal, path is valid, is best path
          Imported from 3.3.3.3:3:11::11/128 (VRF vni100)
AS-Path: 150 , path sourced external to AS
          ::ffff:1.1.1.1 (metric 81) from 101.101.101.101 (101.101.101.101)
          Origin incomplete, MED 0, localpref 100, weight 0
          Received label 100
          Extcommunity:
            RT:100:100
            ENCAP:8
            Router MAC:5254.004e.a437
          Originator: 1.1.1.1 Cluster list: 101.101.101.101

```

```

Path-id 1 advertised to peers:
  30::2

```

```
b11(config-vrf)# show bgp vrf vni100 ipv6 unicast 11::11/128
BGP routing table information for VRF vni100, address family IPv6 Unicast
BGP routing table entry for 11::11/128, version 6
Paths: (1 available, best #1)
Flags: (0x08041e) on xmit-list, is in u6rib, is best u6rib route, is in HW
      vpn: version 7, (0x100002) on xmit-list
```

```

Advertised path-id 1, VPN AF advertised path-id 1
Path type: internal, path is valid, is best path
          Imported from 1.1.1.1:3:[5]:[0]:[0]:[128]:[11::11]:[0::]/416
AS-Path: 150 , path sourced external to AS
          ::ffff:1.1.1.1 (metric 81) from 101.101.101.101 (101.101.101.101)
          Origin incomplete, MED 0, localpref 100, weight 0
          Received label 100
          Extcommunity:
            RT:100:100
            ENCAP:8
            Router MAC:5254.004e.a437
          Originator: 1.1.1.1 Cluster list: 101.101.101.101

```

```

VRF advertise information:
Path-id 1 not advertised to any peer

```

```

VPN AF advertise information:
Path-id 1 not advertised to any peer

```

Additional References

For more information related to implementing virtualization, see the following sections:

Related Documents for VRFs

Related Topic	Document Title
VRFs	<i>Cisco Nexus 3400-S NX-OS Fundamentals Configuration Guide</i> <i>Cisco Nexus 3400-S NX-OS System Management Configuration Guide</i>

Standards

Standards	Title
No new or modified standards are supported by this feature, and support for existing standards has not been modified by this feature.	—

