



Cisco Nexus 3548 Switch NX-OS Quality of Service Command Reference

First Published: October 2012

Last Modified: May 2013

Cisco Systems, Inc.

www.cisco.com

Cisco has more than 200 offices worldwide. Addresses, phone numbers, and fax numbers are listed on the Cisco website at www.cisco.com/go/offices.

THE SPECIFICATIONS AND INFORMATION REGARDING THE PRODUCTS IN THIS MANUAL ARE SUBJECT TO CHANGE WITHOUT NOTICE. ALL STATEMENTS, INFORMATION, AND RECOMMENDATIONS IN THIS MANUAL ARE BELIEVED TO BE ACCURATE BUT ARE PRESENTED WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. USERS MUST TAKE FULL RESPONSIBILITY FOR THEIR APPLICATION OF ANY PRODUCTS.

THE SOFTWARE LICENSE AND LIMITED WARRANTY FOR THE ACCOMPANYING PRODUCT ARE SET FORTH IN THE INFORMATION PACKET THAT SHIPPED WITH THE PRODUCT AND ARE INCORPORATED HEREIN BY THIS REFERENCE. IF YOU ARE UNABLE TO LOCATE THE SOFTWARE LICENSE OR LIMITED WARRANTY, CONTACT YOUR CISCO REPRESENTATIVE FOR A COPY.

The Cisco implementation of TCP header compression is an adaptation of a program developed by the University of California, Berkeley (UCB) as part of UCB's public domain version of the UNIX operating system. All rights reserved. Copyright © 1981, Regents of the University of California.

NOTWITHSTANDING ANY OTHER WARRANTY HEREIN, ALL DOCUMENT FILES AND SOFTWARE OF THESE SUPPLIERS ARE PROVIDED "AS IS" WITH ALL FAULTS. CISCO AND THE ABOVE-NAMED SUPPLIERS DISCLAIM ALL WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING, WITHOUT LIMITATION, THOSE OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT OR ARISING FROM A COURSE OF DEALING, USAGE, OR TRADE PRACTICE.

IN NO EVENT SHALL CISCO OR ITS SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES, INCLUDING, WITHOUT LIMITATION, LOST PROFITS OR LOSS OR DAMAGE TO DATA ARISING OUT OF THE USE OR INABILITY TO USE THIS MANUAL, EVEN IF CISCO OR ITS SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: www.cisco.com/go/trademarks. Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1110R)

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, network topology diagrams, and other figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.

Cisco Nexus 3548 Switch NX-OS Quality of Service Command Reference
© 2012-2013 Cisco Systems, Inc. All rights reserved.



Preface	v
Audience	v
Document Conventions	v
Related Documentation	vi
Documentation Feedback	vii
Obtaining Documentation and Submitting a Service Request	vii

New and Changed Information ix

Quality of Service Commands	1
bandwidth (QoS)	2
class (policy map type qos)	3
class class-default	5
class-map type qos	6
class type network-qos	8
class type queuing	9
class-map	10
class-map type network-qos	12
class type qos (policy map)	13
class-map type queuing	14
clear qos statistics	16
congestion-control dctcp ecn-threshold	17
control-plane	18
description	19
flowcontrol	20
ip dscp (ERSPAN)	22
ip prec (ERSPAN)	23
ip ttl (ERSPAN)	24
match access-group	25
match cos	26
match dscp	27
match ip rtp	29

match precedence	30
match qos-group	32
mtu (interface)	34
pause no-drop	36
policy-map type network-qos	37
policy-map (type qos)	38
policy-map type queuing	39
service-policy (policy-map class)	40
service-policy (system qos)	42
service-policy type network-qos	43
service-policy type qos (system)	44
set cos (policy map type network-qos)	45
set dscp	46
set precedence	48
set qos-group	50
show class-map type network-qos	51
show class-map type qos	53
show class-map type queuing	54
show interface untagged-cos	55
show policy-map	56
show policy-map interface	59
show policy-map interface brief	61
show policy-map system	62
show queuing interface	64
show running-config ipqos	66
show startup-config ipqos	68
show wrr unicast-bandwidth	69
system jumbomtu	70
system qos	71
untagged cos	72
wrr unicast-bandwidth	73



Preface

This preface describes the audience, organization, and conventions of the *Cisco Nexus 3548 Switch NX-OS Quality of Service Command Reference* . It also provides information on how to obtain related documentation.

This preface includes the following sections:

- [Audience, page v](#)
- [Document Conventions, page v](#)
- [Related Documentation, page vi](#)
- [Documentation Feedback, page vii](#)
- [Obtaining Documentation and Submitting a Service Request, page vii](#)

Audience

This publication is for experienced network administrators who configure and maintain Cisco Nexus Series switches.

Document Conventions

Command descriptions use these conventions:

Convention	Description
boldface font	Commands and keywords are in boldface.
italic font	Arguments for which you supply values are in italics.
[]	Elements in square brackets are optional.
[x y z]	Optional alternative keywords are grouped in brackets and separated by vertical bars.
string	A nonquoted set of characters. Do not use quotation marks around the string or the string will include the quotation marks.

Screen examples use these conventions:

<code>screen font</code>	Terminal sessions and information that the switch displays are in screen font.
boldface screen font	Information that you must enter is in boldface screen font.
<i>italic screen font</i>	Arguments for which you supply values are in italic screen font.
< >	Nonprinting characters, such as passwords, are in angle brackets.
[]	Default responses to system prompts are in square brackets.
!, #	An exclamation point (!) or a pound sign (#) at the beginning of a line of code indicates a comment line.

This document uses the following conventions:



Note

Means reader *take note*. Notes contain helpful suggestions or references to material not covered in the manual.



Caution

Means *reader be careful*. In this situation, you might do something that could result in equipment damage or loss of data.

Related Documentation

Documentation for the Cisco Nexus 3000 Series Switch is available at the following URL:

http://www.cisco.com/en/US/products/ps11541/tsd_products_support_series_home.html

The documentation set is divided into the following categories:

Release Notes

The release notes are available at the following URL:

http://www.cisco.com/en/US/products/ps11541/prod_release_notes_list.html

Installation and Upgrade Guides

The installation and upgrade guides are available at the following URL:

http://www.cisco.com/en/US/products/ps11541/prod_installation_guides_list.html

Command References

The command references are available at the following URL:

http://www.cisco.com/en/US/products/ps11541/prod_command_reference_list.html

Technical References

The technical references are available at the following URL:

http://www.cisco.com/en/US/products/ps11541/prod_technical_reference_list.html

Configuration Guides

The configuration guides are available at the following URL:

http://www.cisco.com/en/US/products/ps11541/products_installation_and_configuration_guides_list.html

Error and System Messages

The system message reference guide is available at the following URL:

http://www.cisco.com/en/US/products/ps11541/products_system_message_guides_list.html

Documentation Feedback

To provide technical feedback on this document, or to report an error or omission, please send your comments to nexus3k-docfeedback@cisco.com. We appreciate your feedback.

Obtaining Documentation and Submitting a Service Request

For information on obtaining documentation, submitting a service request, and gathering additional information, see *What's New in Cisco Product Documentation* at:

<http://www.cisco.com/en/US/docs/general/whatsnew/whatsnew.html>.

Subscribe to *What's New in Cisco Product Documentation*, which lists all new and revised Cisco technical documentation, as an RSS feed and deliver content directly to your desktop using a reader application. The RSS feeds are a free service.



New and Changed Information

This chapter provides release-specific information for each new and changed feature in the *Cisco Nexus 3548 Switch NX-OS Quality of Service Command Reference*. The latest version of this document is available at the following Cisco website:

http://www.cisco.com/en/US/products/ps11541/tsd_products_support_series_home.html

To check for additional information about this Cisco NX-OS Release, see the *Cisco Nexus 3000 Series Switch Release Notes* available at the following Cisco website:

http://www.cisco.com/en/US/products/ps11541/prod_release_notes_list.html

Table 1 summarizes the new and changed features and tells you where they are documented.

Table 1 **New and Changed Information**

Feature	Description	Changed in Release	Where Documented
ERSPAN	This feature was introduced.	6.0(2)A1(1)	ip dscp (ERSPAN) ip ttl (ERSPAN) ip prec (ERSPAN)
Link Level Flow Control	This feature was introduced.	6.0(2)A1(1)	class type queuing class-map type qos flowcontrol pause no-drop service-policy type network-qos service-policy type qos (system)
ECN Threshold	The congestion-control random-detect ecn command was deprecated and was superseded by the congestion-control dctcp ecn-threshold command	6.0(2)A1(1)	congestion-control dctcp ecn-threshold



Quality of Service Commands

This chapter describes the Cisco NX-OS quality of service (QoS) commands available on the Cisco Nexus 3548 switch.

bandwidth (QoS)

To allocate a minimum percentage of the interface bandwidth to a queue, use the **bandwidth** command. To remove a bandwidth configuration, use the **no** form of this command.

bandwidth percent *percent*

no bandwidth percent *percent*

Syntax Description

percent	Specifies the percentage of bandwidth of the underlying link rate.
<i>percent</i>	Percent value. The range is from 0 to 100.

Command Default

None.

Command Modes

Policy map type queuing class configuration

Command History

Release	Modification
5.0(3)A1(1)	This command was introduced.

Examples

This example shows how to set the bandwidth for the specified queue:

```
switch(config)# policy-map type queuing my_policy1
switch(config-pmap-que)# class type queuing 1p7q4t-out-pq1
switch(config-pmap-c-que)# bandwidth percent 25
switch(config-pmap-c-que)#
```

This example shows how to remove the bandwidth for the specified queue:

```
switch(config)# policy-map type queuing my_policy1
switch(config-pmap-que)# class type queuing 1p7q4t-out-pq1
switch(config-pmap-c-que)# no bandwidth percent 25
switch(config-pmap-c-que)#
```

Related Commands

Command	Description
show class-map	Displays class maps.
show policy-map	Displays policy maps.

class (policy map type qos)

To add a reference to an existing qos class map in a policy map and enter the class mode, use the **class** command. To remove a class from the policy map, use the **no** form of this command.

class [**type qos**] *class-map-name*

no class *class-map-name*

Syntax Description	type qos	(Optional) Specifies the component type, which is qos for this class. By default, the type is qos.
	<i>class-map-name</i>	Reference to a class map. The class map name can be a maximum of 40 characters. The name is case sensitive and can only contain alphabetic characters, numbers, hyphens, and underscores.

Command Default None

Command Modes Qos policy map configuration

Command History	Release	Modification
	5.0(3)A1(1)	This command was introduced.

Usage Guidelines

Policy actions in the first class that matches the traffic type are performed.

By default, the class-default class of type qos is created under every policy map of type qos in the system and it is mapped to the QoS group 0. You cannot change this mapping.

You cannot remove the class-default of type qos. If you attempt to delete the class-default class, the switch returns an error message.

Examples This example shows how to add a reference to a qos class map at the end of a policy map:

```
switch(config)# policy-map my_policy1
switch(config-pmap-qos)# class traffic_class2
switch(config-pmap-c-qos)#
```

This example shows how to remove a class map reference in a policy map:

```
switch(config)# policy-map my_policy1
switch(config-pmap-qos)# no class traffic_class1
switch(config-pmap-qos)#
```

Related Commands	Command	Description
	set dscp	Assigns a DSCP value to the traffic class.
	set precedence	Assigns a IP precedence to the traffic class.
	set qos-group	Assigns a QoS group to the traffic class.
	show class-map type qos	Displays type qos class maps.
	show policy-map	Displays policy maps.

class class-default

To add a reference to the system default class that does not match any traffic class, use the **class class-default** command. To remove the system default class from the policy map, use the **no** form of this command.

class class-default

no class class-default

Syntax Description This command has no arguments or keywords.

Command Default None

Command Modes QoS policy map configuration

Command History	Release	Modification
	5.0(3)A1(1)	This command was introduced.

Usage Guidelines Traffic that fails to match any class is assigned to a default class of traffic called class-default. You cannot delete this class.

Examples This example shows how to add a reference to the system default class at the end of a policy map:

```
switch# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
switch(config)# policy-map type qos my_policy1
switch(config-pmap-qos)# class class-default
switch(config-pmap-c-qos)#
```

Related Commands	Command	Description
	set dscp	Sets the DSCP value for the QoS traffic.
	set precedence	Sets the IP precedence value for the QoS traffic.
	set qos-group	Assigns a QoS group identifier for a class of traffic.
	show policy-map	Displays policy maps.

class-map type qos

To create or modify a Quality of Service (QoS) class map and enter the class-map configuration mode, use the **class-map type qos** command in global configuration mode. To remove a QoS class map, use the **no** form of this command.

```
class-map type qos [match-all |match-any] class-map-name

no class-map type qos [match-all |match-any] class-map-name
```

Syntax Description

match-all	Specifies that if the packet matches all the criteria configured for this class map with the match command, then this class map is applied to the packet
match-any	Specifies that if the packet matches any of the criteria configured for this class map with the match command, then this class map is applied to the packet
	This is the default action if match-all is not specified.
<i>class-map-name</i>	Name of the QoS class map. The name can be a maximum of 40 characters. The name is case sensitive and can only contain alphanumeric characters, hyphens, and underscores. The name class-default is reserved.

Command Default

The class map is not created.

Command Modes

Global configuration (config#)

Command History

Release	Modification
6.0(2)A1(1)	This command was introduced.

Usage Guidelines

Use the **class-map type qos** command to create a QoS class map that contains QoS class match criteria. The **class-map type qos** command enables QoS class-map configuration mode, in which you can enter match commands to configure the match criteria for this class. Packets are checked against the match criteria configured for a class map to determine if the packet belongs to that QoS class.

After a QoS class map has been defined, use the **class type qos** command to associate the QoS class map with a service policy map. A service can contain one QoS class and the default class..

Examples

The following example shows how to create a QoS class map The following example shows the configuration of a QoS class map called "class1". The class map is defined so that traffic is matched on the basis of a Layer 2 class of service value. The traffic class map is then referenced in service policy map "my_qos_policy":

```
switch# configure terminal
switch(config)# class-map type qos class1
switch(config-cmap-qos)# match cos 2
switch(config-cmap-qos)# policy-map type qos my_qos_policy
```

```
switch(config-pmap-qos)# class type qos class1
switch(config-pmap-c-qos)# set qos-group 1
switch(config-pmap-c-qos)# system qos
switch(config-sys-qos)# system-policy type qos input my_qos_policy
```

Related Commands

Command	Description
class type qos	Associates a QoS class map with a QoS policy map.
policy-map-type qos	Creates or modifies a QoS policy map.
service-policy type qos	Attached a QoS policy map to a system policy.

class type network-qos

To add a reference to an existing network QoS class map in a policy map and enter the class mode, use the **class type network-qos** command. To remove a class from the policy map, use the **no** form of this command.

class type network-qos *class-map-name*

no class type network-qos *class-map-name*

Syntax Description

<i>class-map-name</i>	Reference to a network QoS class map. The class map name can be a maximum of 40 characters. The name is case sensitive and can only contain alphabetic characters, numbers, hyphens, and underscores.
-----------------------	---

Command Default

None

Command Modes

Policy map type network-qos configuration

Command History

Release	Modification
5.0(3)A1(1)	This command was introduced.

Usage Guidelines

Policy actions in the first class that matches the traffic type are performed.

Examples

This example shows how to add a reference to a class map in a type network-qos policy map:

```
switch(config)# policy-map type network-qos nqos_policy
switch(config-pmap-nq)# class type network-qos nqos_class
switch(config-pmap-nq-c)#
```

This example shows how to remove a class map reference in a type network-qos policy map:

```
switch(config)# policy-map type network-qos nqos_policy
switch(config-pmap-nq)# no class type network-qos nqos_class
switch(config-pmap-nq)#
```

Related Commands

Command	Description
mtu	Enables jumbo frames on a traffic class.
set cos	Assigns a CoS value for a class of traffic.
show class-map type network-qos	Displays type network-qos class maps.
show policy-map	Displays policy maps.

class type queuing

To add a reference to an existing queuing class map in a policy map and enter the class mode, use the **class type queuing** command. To remove a class from the policy map, use the **no** form of this command.

class type queuing *class-map-name*

no class type queuing *class-map-name*

Syntax Description	<i>class-map-name</i>	Reference to a queuing class map. The class map name can be a maximum of 40 characters. The name is case sensitive and can only contain alphabetic characters, numbers, hyphens, and underscores.
---------------------------	-----------------------	---

Command Default	None
------------------------	------

Command Modes	Policy map type queuing configuration
----------------------	---------------------------------------

Command History	Release	Modification
	5.0(3)A1(1)	This command was introduced.

Usage Guidelines	Policy actions in the first class that matches the traffic type are performed.
-------------------------	--

Examples This example shows how to add a reference to a class map in a type queuing policy map:

```
switch(config)# policy-map type queuing my_policy1
switch(config-pmap-que)# class type queuing 1p7q4t-out-q3
switch(config-pmap-c-que)#
```

This example shows how to remove a class map reference in a type queuing policy map:

```
switch(config)# policy-map type queuing my_policy1
switch(config-pmap-que)# no class type queuing 1p7q4t-out-q3
switch(config-pmap-c-que)#
```

Related Commands	Command	Description
	show class-map type queuing	Displays the type queuing class maps.
	show policy-map	Displays policy maps.

class-map

To create or modify a class map and enter the class-map configuration mode, use the **class-map** command. To remove a class map, use the **no** form of this command.

class-map [**type qos**] [**match-all** | **match-any**] *class-map-name*

no class-map [**type qos**] [**match-all** | **match-any**] *class-map-name*

Syntax Description	
type qos	(Optional) Specifies the component type qos for the class map. By default, the class map type is qos.
match-all	Specifies that if the packet matches all the criteria configured for this class map with the match command, then this class map is applied to the packet.
match-any	Specifies that if the packet matches any of the criteria configured for this class map with the match command, then this class map is applied to the packet. This is the default action if match-all is not specified.
<i>class-map-name</i>	Name assigned to the QoS class map. The name can be a maximum of 40 characters. The name is case sensitive and can only contain alphanumeric characters, hyphens, and underscores. The name class-default is reserved.

Command Default	type—qos match-all
-----------------	-----------------------

Command Modes	Release	Modification
	5.0(3)A1(1)	This command was introduced.

Usage Guidelines	You can define a class map for each class of traffic to be used in QoS policies. If the packet matches any of the criteria configured for this class map with the match command, then this class map is applied to the packet. If no execution strategy is specified (match-any or match-all), then the default value of match-any is applied to the traffic class.
------------------	--

Examples	This example shows how to create or modify a qos class map:
----------	---

```
switch(config)# class-map my_class1
switch(config-cmap-qos)#
```

This example shows how to create a qos class map to match all traffic packets:

```
switch(config)# class-map type qos match-all my_class2
switch(config-cmap-qos)#
```

This example shows how to remove a qos class map:

```
switch(config)# no class-map my_class1
```

```
switch(config)#
```

Related Commands

Command	Description
description	Adds a summary purpose for the class map.
match	Configures traffic class criteria.
policy-map type qos	Creates or modifies a qos policy map.
service-policy	Attaches a policy map to an interface or system policy.
show class-map type qos	Displays qos class maps.

class-map type network-qos

To create or modify a class map that defines a network QoS class of traffic and enter the class-map configuration mode, use the **class-map type network-qos** command. To remove a class map, use the **no** form of this command.

class-map type network-qos *class_map_name*

no class-map type network-qos *class_map_name*

Syntax Description

<i>class-map-name</i>	Name assigned to the class map. The name class-default is reserved. The name can be a maximum of 40 characters. The name is case sensitive and can only contain alphanumeric characters, hyphens, and underscores.
-----------------------	--

Command Default

None

Command Modes

Global configuration mode

Command History

Release	Modification
5.0(3)A1(1)	This command was introduced.

Usage Guidelines

Class maps of type network qos support only the **match qos-group** command. If a traffic packet matches any of the criteria configured for this class map with the **match** command, then this class map is applied to the packet. By default, traffic is filtered using the implicit match-any option.

Examples

This example shows how to create or modify a network qos class map named my_class1:

```
switch(config)# class-map type network-qos my_class1  
switch(config-cmap-ng)#
```

This example shows how to remove a network qos class map:

```
switch(config)# no class-map my_class1  
switch(config)#
```

Related Commands

Command	Description
match qos-group	Defines a traffic class that matches the QoS group values.
show class-map type network-qos	Displays network qos class maps configured in the system.

class type qos (policy map)

To associate a Quality of Service (QoS) class map with a QoS policy map and enter policy-map type qos class configuration mode, use the **class type qos** command in policy map type qos configuration mode. To remove the class from the service policy map, use the **no** form of this command.

class type qos *class-map-name*

no class type qos *class-map-name*

Syntax Description

<i>class-map-name</i>	Reference to a class map. The class map name can be a maximum of 40 characters. The name is case sensitive and can only contain alphabetic characters, numbers, hyphens, and underscores..
-----------------------	--

Command Default

Command Modes

Policy map type qos configuration (config-pmap-qos)#

Command History

Release	Modification
6.0(2)A1(1)	This command was introduced.

Usage Guidelines

Before you can associate a QoS class map with a QoS policy map, the class map must be configured using the **class-map type qos** command.

Examples

The following example shows how to configure the class1 class map, and associate the class map with the policy-map called my_qos_policy.

```
switch# configure terminal
switch(config)# class-map type qos class1
switch(config-cmap-qos)# match cos 2
switch(config-cmap-qos)# policy-map type qos my_qos_policy
switch(config-pmap-qos)# class type qos class1
switch(config-pmap-c-qos)# set qos-group 1
```

Related Commands

Command	Description
class-map type qos	Creates or modifies a Quality of Service (QoS) class map.
policy-map type qos	Creates or modifies a QoS policy map.
service-policy type qos	Attaches a QoS policy map to a system policy.

class-map type queuing

To create or modify a class map that defines a queuing class of traffic and enter the class-map configuration mode, use the **class-map type queuing** command. To remove the queuing class map, use the **no** form of this command.

```
class-map type queuing class_map_name

no class-map type queuing class_map_name
```

Syntax Description	class-map-name Name assigned to the class map or a system-defined queuing class map name. The name class-default is reserved. The name can be a maximum of 40 characters. The name is case sensitive and can only contain alphanumeric characters, hyphens, and underscores.
--------------------	---

Command Default	None
-----------------	------

Command Modes	Global configuration mode
---------------	---------------------------

Command History	Release	Modification
	5.0(3)A1(1)	This command was introduced.

Usage Guidelines	If you modify the queuing type class maps, the configuration for all ports of the specified port type also changes.
	You cannot delete the system-defined queuing class map names.
	Class maps of type queuing support only the match qos-group command. If a traffic packet matches any of the criteria configured for this class map with the match command, then this class map is applied to the packet. By default, traffic is filtered using the implicit match-any option.

Examples	This example shows how to create or modify a queuing class map: <pre>switch(config)# class-map type queuing my_class1 switch(config-cmap-que)#</pre>
	This example shows how to remove a queuing class map: <pre>switch(config)# no class-map type queuing my_class1 switch(config)#</pre>

Related Commands	Command	Description
	match qos-group	Configures a traffic class that matches the QoS group values.
	show class-map type queuing	Displays queuing class maps configured in the system.

clear qos statistics

To clear the quality of service (QoS) statistics, use the **clear qos statistics** command.

clear qos statistics

Syntax Description	This command has no arguments or keywords.
---------------------------	--

Command Default	None
------------------------	------

Command Modes	Any command mode
----------------------	------------------

Command History	Release	Modification
	5.0(3)A1(1)	This command was introduced.

Usage Guidelines	This command does not require a license.
-------------------------	--

Examples	This example shows how to clear all the QoS statistics: <pre>switch# clear qos statistics switch#</pre>
-----------------	--

Related Commands	Command	Description
	show queuing interface	Displays the queuing information on interfaces.

congestion-control dctcp ecn-threshold

To configure the Data Center TCP (DCTCP) threshold in bytes, use the **congestion-control dctcp ecn-threshold** command. This command sets an explicit congestion notification (ECN) threshold at which point ECN marking will start to happen. To remove the this configuration, use the no form of this command.

congestion-control dctcp ecn-threshold *value* bytes

no congestion-control dctcp ecn-threshold *value* bytes

Syntax Description	<i>value</i>	The number of bytes to be used as the ecn-threshold. When this threshold is reached, ECN marking begins.
	bytes	Indicates that the threshold value is in bytes.

Command Default	None
------------------------	------

Command Modes	Policy-map type network-qos configuration mode under class maps
----------------------	---

Command History	Release	Modification
	6.0(2)A1(1)	This command was introduced. This command supersedes the congestion-control random-detect ecn command.

Usage Guidelines	DCTCP marks the ECN bits when packets exceed the user specified ecn-threshold. This command does not require a license.
-------------------------	--

Examples	This example shows how to configure an ECN with a threshold value of 20000 bytes:
-----------------	---

```
switch# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
switch(config)# policy-map type network-qos my_policy
switch(config-pmap-nq)# class type network-qos ncl
switch(config-pmap-nq-c)# congestion-control dctcp ecn-threshold 20000 bytes
switch(config-pmap-nq-c)#
```

Related Commands	Command	Description
	class type network-qos	References a type network-qos class map in a policy map.
	show policy-map	Displays all policy maps.

control-plane

To enter control-plane configuration mode, which allows users to associate attributes that are associated with the control plane of the device, use the **control-plane** command.

control-plane

Syntax Description This command has no arguments or keywords.

Command Default None

Command Modes Global configuration mode

Command History	Release	Modification
	5.0(3)A1(1)	This command was introduced.

Usage Guidelines After you use the **control-plane** command, you can associate a service policy to police all traffic that is destined to the control plane.

Examples This example shows how to enter the control plane configuration mode:

```
switch# configure terminal
switch(config)# control-plane
switch(config-cp)#
```

description

To add a description to a class map, policy map, or table map, use the **description** command. To remove the description, use the **no description** form of this command.

description *text*

no description *text*

Syntax Description

<i>text</i>	Description for the class map, policy map, or table map. The description can be a maximum of 200 alphanumeric characters.
-------------	---

Command Default

None

Command Modes

Class map (type network qos, qos, queuing) configuration mode
Policy map (type network qos, qos, queuing) configuration mode

Command History

Release	Modification
5.0(3)A1(1)	This command was introduced.

Examples

This example shows how to add a description to a qos class map:

```
switch(config)# class-map my_class1
switch(config-cmap-qos)# description This class map filters packets that matches an ACL
switch(config-cmap-qos)#
```

Related Commands

Command	Description
class-map	Creates or modifies a class map.
policy-map	Creates or modifies a policy map.
show class-map	Displays class maps.
show policy-map	Displays policy maps.

flowcontrol

To configure a port to send or receive pause frames, use the **flowcontrol** command in interface configuration mode. To return to the default settings, use the **no** form of this command.

flowcontrol {**send** | **receive**} {**desired** | **off** | **on**}

no flowcontrol {**send** | **receive**} {**desired** | **off** | **on**}

Syntax Description

send	Specifies that a port sends pause frames.
receive	Specifies that a port processes pause frames.
desired	Obtains predictable results regardless of whether a remote port is set to on , off , or desired .
off	Prevents a local port from receiving and processing pause frames from remote ports or from sending pause frames to remote ports.
on	Enables a local port to receive and process pause frames from remote ports or send pause frames to remote ports.

Command Default

Flow control is disabled.

Flow-control defaults depend upon port speed. The defaults are as follows:

- Gigabit Ethernet ports default to off for receive and desired for send.
- Fast Ethernet ports default to off for receive and on for send.
- On the 24-port 100BASE-FX and 48-port 10/100 BASE-TX RJ-45 modules, the default is **off** for receive and **off** for send.
- You cannot configure how WS-X6502-10GE 10-Gigabit Ethernet ports respond to pause frames. WS-X6502-10GE 10-Gigabit Ethernet ports are permanently configured to respond to pause frames.

Command Modes

Interface configuration (config-if)

Command History

Release	Modification
6.0(2)A1(1)	This command was introduced.

Usage Guidelines

The send and desired keywords are supported on Gigabit Ethernet ports only.



Note

The **desired** keyword is not supported on the Cisco Nexus 3500 Series Switches.

Pause frames are special packets that signal a source to stop sending frames for a specific period of time because the buffers are full.

Gigabit Ethernet ports on the Catalyst 6500 series switches and on the Cisco 7600 series routers use flow control to inhibit the transmission of packets to the port for a period of time; other Ethernet ports use flow control to respond to flow-control requests.

If a Gigabit Ethernet port receive buffer becomes full, the port transmits a “pause” packet that tells remote ports to delay sending more packets for a specified period of time. All Ethernet ports (1000 Mbps, 100 Mbps, and 10 Mbps) can receive and act upon “pause” packets from other devices.

You can configure non-Gigabit Ethernet ports to ignore received pause frames (disable) or to react to them (enable).

When used with the **receive** keyword, the **on** and **desired** keywords have the same result.

All the Gigabit Ethernet ports on the Catalyst 6500 series switches and the Cisco 7600 series routers can receive and process pause frames from remote devices.

To obtain predictable results, follow these guidelines:

- Use **sendon** only when remote ports are set to receiveon or receivedesired.
- Use **sendoff** only when remote ports are set to receiveoff or receivedesired.
- Use **receiveon** only when remote ports are set to sendon or senddesired.
- Use **sendoff** only when remote ports are set to receiveoff or receivedesired.

Examples

This example shows how to configure the local port to not support any level of flow control by the remote port:

```
switch# configure terminal
switch(config)# interface GigabitEthernet1/9 10.4.9.157 255.255.255.0
switch(config-if)# flowcontrol receive off
switch(config-if)# flowcontrol send off
```

Related Commands

Command	Description
show interface flowcontrol	Displays flow-control information.

ip dscp (ERSPAN)

To configure the differentiated services code point (DSCP) value of the packets in the Encapsulated Remote Switched Port Analyzer (ERSPAN) traffic, use the **ip dscp** command. To revert to the default settings, use the **no** form of this command.

ip dscp *dscp_value*

no ip dscp *dscp_value*

Syntax Description	<i>dscp_value</i> DSCP value of the packets in the ERSPAN traffic. The range is from 0 to 63.	
Command Default	0	
Command Modes	ERSPAN session configuration mode	
Command History	Release	Modification
	6.0(2)A1(1)	This command was introduced.
Usage Guidelines	This command does not require a license.	
Examples	This example shows how to configure the DSCP value of the packets in the ESRSPAN traffic:	
	<pre>switch# configure terminal switch(config)# monitor session 1 type erspan-source switch(config-erspan-src)# ip dscp 10 switch(config-erspan-src)#</pre>	
Related Commands	Command	Description
	ip prec	Configures the IP precedence value of the ERSPAN traffic.
	ip ttl	Configures the IP time-to-live (TTL) value of the ERSPAN traffic.
	monitor-session	Enters the monitor configuration mode for configuring an ERSPAN session for analyzing traffic between ports.

ip prec (ERSPAN)

To configure the IP precedence value of the packets in the Encapsulated Remote Switched Port Analyzer (ERSPAN) traffic, use the **ip dscp** command. To revert to the default settings, use the **no** form of this command.

ip prec *prec_value*

no ip prec *prec_value*

Syntax Description	<i>prec_value</i>	IP precedence value of the packets in the ERSPAN traffic. The range is from 0 to 7.
---------------------------	-------------------	---

Command Default	0
------------------------	---

Command Modes	ERSPAN session configuration mode
----------------------	-----------------------------------

Command History	Release	Modification
	6.0(2)A1(1)	This command was introduced.

Usage Guidelines	This command does not require a license.
-------------------------	--

Examples	This example shows how to configure the IP precedence value of the packets in the ESRSPAN traffic: <pre>switch# configure terminal switch(config)# monitor session 1 type erspan-source switch(config-erspan-src)# ip prec 3 switch(config-erspan-src)#</pre>
-----------------	---

Related Commands	Command	Description
	ip dscp	Configures the differentiated services code point value of the ERSPAN traffic.
	ip ttl	Configures the IP time-to-live (TTL) value of the ERSPAN traffic.
	monitor-session	Enters the monitor configuration mode for configuring an ERSPAN session for analyzing traffic between ports.

ip ttl (ERSPAN)

To configure the IP time-to-live (TTL) value of the Encapsulated Remote Switched Port Analyzer (ERSPAN) traffic, use the **ip ttl** command. To revert to the default setting, use the **no** form of this command.

ip ttl *ttl_value*

no ip ttl *ttl_value*

Syntax Description	<i>ttl_value</i> IP TTL value of the ERSPAN traffic. The range is from 1 to 255.	
Command Default	255	
Command Modes	ERSPAN session configuration mode	
Command History	Release	Modification
	6.0(2)A1(1)	This command was introduced.
Usage Guidelines	This command does not require a license.	
Examples	This example shows how to configure the IP TTL value of the ESRSPAN source: <pre>switch# configure terminal switch(config)# monitor session 1 type erspan-source switch(config-erspan-src)# ip ttl 30 switch(config-erspan-src)#</pre>	
	This example shows how to remove the IP TTL value from the ESRSPAN source: <pre>switch# configure terminal switch(config)# monitor session 1 type erspan-source switch(config-erspan-src)# no ip ttl 30 switch(config-erspan-src)#</pre>	
Related Commands	Command	Description
	ip dscp	Configures the DSCP value of the packets in the ERSPAN traffic.
	monitor-session	Enters the monitor configuration mode for configuring an ERSPAN session for analyzing traffic between ports.

match access-group

To identify a specified access control list (ACL) group as a match criteria for a class map, use the **match access-group** command. To remove an ACL match criteria from a class map, use the **no** form of this command.

match access-group name *acl-name*

no match access-group name *acl-name*

Syntax Description

name *acl-name* Matches on the characteristics in the ACL name specified.

Command Default

None

Command Modes

QoS class-map configuration mode

Command History

Release	Modification
5.0(3)A1(1)	This command was introduced.

Usage Guidelines

You must create the IP ACLs before you reference them in this command.



Note

The **permit** and **deny** ACL keywords do not affect the matching of packets.

Examples

This example shows how to create a qos class map that matches characteristics of the ACL my_acl:

```
switch# configure terminal
switch(config)# class-map class_acl
switch(config-cmap-qos)# match access-group name my_acl
switch(config-cmap-qos)#
```

Related Commands

Command	Description
show class-map	Displays class maps.

match cos

To define the class of traffic using the class of service (CoS) value in a type qos class map, use the **match cos** command. To remove the match on the CoS value, use the **no** form of this command.

match [**not**] **cos** *cos-list*

no match [**not**] **cos** *cos-list*

Syntax Description	not	(Optional) Negates the specified match result.
	<i>cos-list</i>	Specified CoS value or list of specified CoS values. Valid values are from 0 to 7.

Command Default	None
------------------------	------

Command Modes	Class-map type qos configuration
----------------------	----------------------------------

Command History	Release	Modification
	5.0(3)A1(1)	This command was introduced.

Usage Guidelines	To specify a list of values, use one of the following options: - Specify a range of values separated by a dash - Specify a noncontiguous list of values separated by commas
-------------------------	---



Note

Only class maps of type qos support the optional **not** keyword form of this command. Class maps of type queuing do not support the **not** keyword.

Examples	This example shows how to match on the CoS value for a type qos class map:
-----------------	--

```
switch(config)# class-map type qos match-any class_acl
switch(config-cmap-qos)# match cos 5-7
switch(config-cmap-qos)#
```

Related Commands	Command	Description
	show class-map	Displays class maps.

match dscp

To identify specific differentiated services code point (DSCP) values as a match criteria, use the **match dscp** command. To remove specified DSCP values as a match criteria, use the **no** form of this command.

match [**not**] **dscp** *dscp-list*

no match [**not**] **dscp** *dscp-list*

Syntax Description	not	(Optional) Negates the specified match result.
	<i>dscp-list</i>	Specified DSCP value or list of DSCP values. See Table 1 for a list of valid DSCP values.
Command Default	None	
Command Modes	Class-map type qos configuration	
Command History	Release	Modification
	5.0(3)A1(1)	This command was introduced.
Usage Guidelines	The standard DSCP values are shown in Table 1 .	

Table 1 Standard DSCP Values

DSCP Value	Description
af11	AF11 dscp (001010)—decimal value 10
af12	AF12 dscp (001100)—decimal value 12
af13	AF13 dscp (001110)—decimal value 14
af21	AF21 dscp (010010)—decimal value 18
af22	AF22 dscp (010100)—decimal value 20
af23	AF23 dscp (010110)—decimal value 22
af31	AF31 dscp (011010)—decimal value 26
af32	AF40 dscp (011100)—decimal value 28
af33	AF33 dscp (011110)—decimal value 30
af41	AF41 dscp (100010)—decimal value 34
af42	AF42 dscp (100100)—decimal value 36
af43	AF43 dscp (100110)—decimal value 38
cs1	CS1 (precedence 1) dscp (001000)—decimal value 8
cs2	CS2 (precedence 2) dscp (010000)—decimal value 16

Table 1 **Standard DSCP Values (continued)**

DSCP Value	Description
cs3	CS3 (precedence 3) dscp (011000)—decimal value 24
cs4	CS4 (precedence 4) dscp (100000)—decimal value 32
cs5	CS5 (precedence 5) dscp (101000)—decimal value 40
cs6	CS6 (precedence 6) dscp (110000)—decimal value 48
cs7	CS7 (precedence 7) dscp (111000)—decimal value 56
default	Default dscp (000000)—decimal value 0
ef	EF dscp (101110)—decimal value 46

To specify a list of values, use one of the following options:

- Specify a range of values separated by a dash
- Specify a noncontiguous list of values separated by commas

Examples

This example shows how to match on DSCP value af21:

```
switch(config)# class-map type qos my_test
switch(config-cmap-qos)# match dscp af21
switch(config-cmap-qos)#
```

Related Commands

Command	Description
show class-map	Displays class maps.

match ip rtp

To configure a class map to use the Real-Time Protocol (RTP) port as a match criteria, use the **match ip rtp** command. To remove the RTP port as a match criteria, use the **no** form of this command.

match [not] ip rtp *port-list*

no match [not] ip rtp *port-list*

Syntax Description	not	(Optional) Negates the specified match result.
	<i>port-list</i>	Specified UDP port or list of UDP ports that are using RTP. Valid values range from 2000 to 65535.
Command Default	None	
Command Modes	Class-map type qos configuration	
Command History	Release	Modification
	5.0(3)A1(1)	This command was introduced.
Usage Guidelines	To specify a list of values, use one of the following options: - Specify a range of values separated by a dash - Specify a noncontiguous list of values separated by commas	
Examples	This example shows how to match on a port using RTP: <pre>switch(config)# class-map type qos my_test switch(config-cmap-qos)# match ip rtp 2300 switch(config-cmap-qos)#</pre>	
Related Commands	Command	Description
	show class-map	Displays class maps.

match precedence

To configure a class map to use the precedence value in the type of service (ToS) byte field of the IP header as a match criteria, use the **match precedence** command. To remove the precedence values as a match criteria, use the **no** form of this command.

match [**not**] **precedence** *precedence-list*

no match [**not**] **precedence** *precedence-list*

Syntax Description

not	(Optional) Negates the specified match result.
<i>precedence-list</i>	Specified IP precedence value or list of IP precedence values specified in bytes. Valid values are shown in Table 2 .

Command Default

None

Command Modes

Class-map type qos configuration

Command History

Release	Modification
5.0(3)A1(1)	This command was introduced.

Usage Guidelines

See [Table 2](#) for a list of precedence values.

Table 2 Precedence Values

Precedence Value	Description
<0-7>	IP precedence value
critical	Critical precedence (5)
flash	Flash precedence (3)
flash-override	Flash override precedence (4)
immediate	Immediate precedence (2)
internet	Internetwork control precedence (6)
network	Network control precedence (7)
routine	Routine precedence (0)

To specify a list of values, use one of the following options:

- Specify a range of values separated by a dash
- Specify a noncontiguous list of values separated by commas

Examples

This example shows how to match on an IP precedence value:

```
switch(config)# class-map my_test
switch(config-cmap-qos)# match precedence 7
switch(config-cmap-qos)#
```

Related Commands

Command	Description
show class-map	Displays class maps.

match qos-group

To configure a class map to use a specific QoS group value as a match criterion, use the **match qos-group** command. To remove the specified protocol as a match criteria, use the **no** form of this command.

```
match qos-group qos-group-list

no match qos-group qos-group-list
```

<i>qos-group-list</i>	Specified Qos group value or list of QoS group values specified in bytes. The valid values are from 1 to 4.
-----------------------	---

Command Default None

Command Modes Class map type network-qos configuration
Class map type queuing configuration

Command History	Release	Modification
	5.0(3)A1(1)	This command was introduced.

Usage Guidelines

The QoS group is an internal label and is not part of the packet payload or any packet header. The QoS group values have no mathematical significance. For example, a QoS group value of 2 is not greater than 1; the values are used only to internally differentiate QoS groups. As such, this value has local significance only.

You match on the QoS group only in egress policies because its value is undefined until you set it in an ingress policy.

To specify a list of values, use one of the following options:

- Specify a range of values separated by a dash
- Specify a noncontiguous list of values separated by commas

Examples

This example shows how to match on a specified QoS group value:

```
switch(config)# class-map type queuing my_test
switch(config-cmap-qos)# match qos-group 4
switch(config-cmap-qos)#
```

Related Commands	Command	Description
	class-map type network-qos	Creates or modifies a network qos class map.
	class-map type queuing	Creates or modifies a queuing class map.
	show class-map	Displays class maps.

mtu (interface)

To configure the maximum transmission unit (MTU) size for Layer 2 and Layer 3 Ethernet interfaces, use the **mtu** command. To remove the configured MTU, use the **no** form of this command.

mtu *mtu-value*

no mtu *mtu-value*

Syntax Description

<i>mtu-value</i>	MTU value for the class of service (CoS). Valid values are 1500 to 9216.
------------------	--

Command Default

Default MTU value is 1500.

Command Modes

Policy map type network-qos class configuration

Command History

Release	Modification
5.0(3)A1(1)	This command was introduced.

Usage Guidelines

You can specify the MTU value for either a single Layer 3 interface or a range of Layer 3 interfaces. When you change the Layer 3 interface MTU value to the Jumbo MTU value (1500 bytes or greater), you must also change the network QoS MTU value to 1500 bytes or greater. The device generates a syslog message to inform you of this requirement.

The MTU value you configure is determined by the MTU value configured on the class-default class map.



Note

Make sure you configure the same MTU value on all class maps in the system.

Examples

This example shows how to set an MTU value for a class in a type network-qos policy map:

```
switch(config)# class-map type network-qos my_class1
switch(config-cmap-nq)# match qos-group 1
switch(config-cmap-nq)# exit
switch(config)# policy-map type network-qos my_policy1
switch(config-pmap-nq)# class type network-qos my_class1
switch(config-pmap-nq-c)# mtu 5000
switch(config-pmap-nq-c)#
```

This example shows how to set an MTU value for a class in a network-qos policy map:

```
switch# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.

switch(config)# policy-map type network-qos sp-nwpolicy
switch(config-pmap-nq)# class type network-qos sp-nwpolicy-class
switch(config-pmap-nq-c)# mtu 3000
```

```
switch(config-pmap-nq-c) #
```

Related Commands

Command	Description
service-policy	Attaches a policy map to an interface or system policy.
show class-map	Displays class maps.
show policy-map	Displays policy maps.
system qos	Configures a system policy.

pause no-drop

To enable Link Level Flow Control (LLFC) pause characteristics on a class referenced in a type network-qos policy map, use the pause no-drop command in policy map type network-qos class configuration mode. To disable the LLFC pause characteristics on a class use the no form of the command.

pause no-drop

no pause no-drop

Command Default The pause action is undefined.

Command Modes Policy map type network-qos class configuration (config-pmap-nq-c)

Command History	Release	Modification
	6.0(2)A1(1)	This command was introduced.

Usage Guidelines

Examples This example shows how

```
switch# configure terminal
switch(config)# policy-map type network-qos my_network_policy
switch(config-pmap-nq)# class type network-qos class1
switch(config-pmap-nq-c)# pause no-drop
```

Related Commands	Command	Description
	class type network-qos	Adds a reference to an existing network QoS class map in a policy map.
	class-map type network-qos	Creates or modifies a class map that defines a network QoS class of traffic.
	policy-map type network-qos	Creates or modifies a QoS policy map.
	service-policy type network-qos	Attaches a QoS policy map to a system policy.

policy-map type network-qos

To create or modify a policy map and enter the policy map type network-qos configuration mode, use the **policy-map type network-qos** command. To remove a policy map, use the **no** form of this command.

policy-map type network-qos *policy-map-name*

no policy-map type network-qos *policy-map-name*

Syntax Description

<i>policy-map-name</i>	Name assigned to a type network-qos policy map. The name can be a maximum of 40 alphanumeric characters.
------------------------	--

Command Default

None

Command Modes

Global configuration mode

Command History

Release	Modification
5.0(3)A1(1)	This command was introduced.

Usage Guidelines

Use the **service-policy** command to assign policy maps to interfaces.
The Cisco Nexus 3548 switch supports up to 64 different QoS policies.

Examples

This example shows how to create or modify a type network-qos policy map:

```
switch(config)# policy-map type network-qos my_policy1
switch(config-pmap-nq)#
```

This example shows how to remove a type network-qos policy map:

```
switch(config)# no policy-map type network-qos my_policy1
switch(config)
```

Related Commands

Command	Description
class type network-qos	References a type network-qos class map in a policy map.
description	Adds a description to a class map or policy map.
set qos-group	Assigns a QoS group identifier for a class of traffic.
show policy-map	Displays policy maps.

policy-map (type qos)

To create or modify a policy map and enter the policy map type qos configuration mode, use the **policy-map** command. To remove a QoS policy map, use the **no** form of this command.

```
policy-map [type qos] qos-policy-map-name

no policy-map [type qos] qos-policy-map-name
```

Syntax Description

type qos	(Optional) Specifies the type qos policy map.
<i>qos-policy-map-name</i>	Name assigned to a type qos policy map. The name can be a maximum of 40 alphanumeric characters.

Command Default

The software enters the policy map type qos configuration mode if you enter the **policy-map** command without specifying a type.

Command Modes

Global configuration mode

Command History

Release	Modification
5.0(3)A1(1)	This command was introduced.

Usage Guidelines

Use the **service-policy** command to assign policy maps to interfaces.
The Cisco Nexus 3548 switch supports up to 64 different QoS policies.

Examples

This example shows how to create or modify a type qos policy map:

```
switch(config)# policy-map my_policy1
switch(config-pmap-qos)#
```

This example shows how to remove a type qos policy map:

```
switch(config)# no policy-map my_policy1
```

Related Commands

Command	Description
class-map type qos	Configures a qos class map.
service-policy	Attaches a policy map to an interface.
set dscp	Sets the DSCP value for the QoS traffic.
set precedence	Sets the IP precedence value for the QoS traffic.
set qos-group	Assigns a QoS group identifier for a class of traffic.
show policy-map	Displays policy maps.

policy-map type queuing

To create or modify a policy map and enter the policy map type queuing configuration mode, use the **policy-map type queuing** command. To remove a policy map, use the **no** form of this command.

policy-map type queuing *queuing-policy-map-name*

no policy-map type queuing *queuing-policy-map-name*

Syntax Description	<i>queuing-policy-map-name</i> Name assigned to a type queuing policy map. The name can be a maximum of 40 alphanumeric characters.
---------------------------	---

Command Default	None
------------------------	------

Command Modes	Global configuration mode
----------------------	---------------------------

Command History	Release	Modification
	5.0(3)A1(1)	This command was introduced.

Usage Guidelines	Use the service-policy command to assign policy maps to interfaces. The Cisco Nexus 3548 switch supports up to 64 different QoS policies.
-------------------------	---

Examples	This example shows how to create or modify a queuing policy map:
-----------------	--

```
switch(config)# policy-map type queuing my_policy1
switch(config-pmap-que)# class type queuing my_class1
switch(config-pmap-c-que)# bandwidth percent 75
switch(config-pmap-c-que)# exit
switch(config-pmap-que)#
```

This example shows how to remove a type queuing policy map:

```
switch(config)# no policy-map type queuing my_policy1
switch(config)#
```

Related Commands	Command	Description
	bandwidth	Configures the interface bandwidth.
	service-policy	Attaches a policy map to an interface.
	set qos-group	Assigns a QoS group identifier for a class of traffic.
	show policy-map	Displays policy maps.

service-policy (policy-map class)

To attach a policy map to an interface, use the **service-policy** command. To remove a service-policy from an interface, use the **no** form of this command.

service-policy { **input** | **type** { **qos input** | **queuing output** } } *policy-map-name*

no service-policy { **input** | **type** { **qos input** | **queuing output** } } *policy-map-name*

Syntax Description

input	Applies this policy map to packets coming into this interface.
type	Specifies whether the policy map is of type qos or queuing.
qos	Specifies a policy map of type qos.
queuing	Specifies a policy map of type queuing.
output	Applies this policy map to packets going out of this interface.
<i>policy-map-name</i>	Name of the policy map to attach to this interface. Only one policy map can be attached to the input and one to the output of a given interface for each of the policy type qos and queuing. The policy map name can be a maximum of 40 alphanumeric characters.

Command Default

None

Command Modes

Interface configuration mode
Subinterface configuration mode

Command History

Release	Modification
5.0(3)A1(1)	This command was introduced.

Usage Guidelines

You can attach one egress type queuing policy map to an interface of type port, and port channel. Only one policy map can be attached to the input of a given interface for the policy type qos.

Examples

This example shows how to attach qos type policy maps to the incoming packets of a Layer 2 interface:

```
switch# configure terminal
switch(config)# system qos
switch(config-sys-qos)# service-policy type qos input my_policy1
switch(config-sys-qos)#
```

This example shows how to attach a qos type policy map named set-dscp to the incoming packets of a Layer 2 interface:

```
switch# configure terminal
switch(config)# policy-map type qos set-dscp
switch(config-pmap-qos)# class class-0
switch(config-pmap-c-qos)# set dscp ef
```

```
switch(config-pmap-c-qos)# exit
switch(config-pmap-qos)# class class-1-2
switch(config-pmap-c-qos)# set precedence 4
switch(config-pmap-c-qos)# exit
switch(config-pmap-qos)# exit
switch(config)# interface ethernet 2/1
switch(config-if)# service-policy type qos input set-dscp
switch(config-if)#
```

Related Commands

Command	Description
no switchport	Configures an interface as a Layer 3 routed interface.
show policy-map interface brief	Displays all interfaces and VLANs with attached service policies in a brief format.
system qos	Configures a system policy.

service-policy (system qos)

To attach a policy map to a system policy, use the **service-policy** command. To remove a service-policy from a system policy, use the **no** form of this command.

service-policy { **input** | **type** { **network-qos** | **qos input** | **queuing output** } } *policy-map-name*

no service-policy { **input** | **type** { **network-qos** | **qos input** | **queuing output** } } *policy-map-name*

Syntax Description

input	Applies this policy map to packets coming into this interface.
type	Specifies whether the policy map is of type network-qos, qos, or queuing.
network-qos	Specifies a policy map of type network-qos.
qos	Specifies a policy map of type qos.
queuing	Specifies a policy map of type queuing.
output	Applies this policy map to packets going out of this interface.
<i>policy-map-name</i>	Name of the policy map to attach to this interface. The policy map name can be a maximum of 40 alphanumeric characters.

Command Default

None

Command Modes

System QoS configuration mode

Command History

Release	Modification
5.0(3)A1(1)	This command was introduced.

Examples

This example shows how to attach a queuing policy map to the system policy:

```
switch# configure terminal
switch(config)# system qos
switch(config-sys-qos)# service-policy type queuing output my_input_q_policy
switch(config-sys-qos)#
```

Related Commands

Command	Description
show policy-map	Displays policy maps.
system qos	Configures a system policy.

service-policy type network-qos

To create or modify a policy map and enter the policy map type network-qos configuration mode use the **policy-map type network-qos** command in global configuration mode. To remove a policy-map use the **no** form of the command.

policy-map type network-qos *policy-map-name*

no policy-map type network-qos *policy-map-name*

Syntax Description

<i>policy-map-name</i>	The name of the network-qos policy map.
------------------------	---

Command Default

No policy map is created

Command Modes

Global configuration (config)

Command History

Release	Modification
6.0(2)A1(1)	This command was introduced.

Usage Guidelines

After you create and configure the policy map, use the **service-policy** command to apply the network QoS policy map to a system policy.

Examples

The following example shows how to create the policy map and apply the map to the system policy.

```
switch# configure terminal
switch(config)# policy-map type network-qos my_network_policy
switch(config-pmap-nq)# class type network-qos class1
switch(config-pmap-nq-c)# pause no-drop
switch(config-pmap-nq-c)# system qos
```

Related Commands

Command	Description
class type network-qos	Associates a QoS class map with a QoS policy map.
class-map type network-qos	Creates or modifies a network QoS class map.
policy-map type network-qos	Creates or modifies a policy map.

service-policy type qos (system)

To attach a quality of service (QoS) policy map to a system policy, use the **service-policy type qos** command in QoS system configuration mode. To remove the QoS policy map, use the **no** form of this command.

service-policy type qos input *policy-map-name*

no service-policy type qos input *policy-map-name*

Syntax Description	input	Specifies an ingress QoS policy map.
	<i>policy-map-name</i>	The name of the policy map.

Command Default No QoS policy map is applied.

Command Modes QoS system configuration (config-sys-qos)

Command History	Release	Modification
	6.0(2)A1(1)	This command was introduced.

Usage Guidelines

The **input** keyword indicates the direction in which the policy map is applied.

The value for the *policy-map-name* argument represents a QoS policy map configured at the system level using the **policy-map type qos** *policy-map-name* command.

Examples

The following example attaches a QoS policy map to a system policy:

```
switch# configure terminal
switch(config)# system qos
switch(config-sys-qos)# service-policy type qos input my-in-policy
```

Related Commands	Command	Description
	class type qos	Associates a QoS class map with a QoS policy map.
	class-map type qos	Creates or modifies a Quality of Service (QoS) class map.
	policy-map type qos	Creates or modifies a QoS policy map.

set cos (policy map type network-qos)

To assign a class of service (CoS) value for a class of traffic in a type network-qos policy map, use the **set cos** command. To remove the assigned value from the class, use the **no** form of this command.

set cos *cos-value*

no set cos *cos-value*

Syntax Description	<i>cos-value</i> CoS value to assign for this class of traffic. The range is from 0 to 7.
---------------------------	---

Command Default	None
------------------------	------

Command Modes	Policy map type network-qos class configuration
----------------------	---

Command History	Release	Modification
	5.0(3)A1(1)	This command was introduced.

Usage Guidelines	You can use this command only on type network-qos policies that are attached to egress ports.
-------------------------	---

Examples	This example shows how to assign a CoS value for a class of traffic in a type network-qos policy map:
-----------------	---

```
switch(config)# policy-map type network-qos my_policy1
switch(config-pmap-nq)# class type network-qos traffic_class2
switch(config-pmap-nq-c)# set cos 3
switch(config-pmap-nq-c)#
```

This example shows how to remove the assignment of CoS for a class of traffic in a type network-qos policy map:

```
switch(config)# policy-map type network-qos my_policy1
switch(config-pmap-nq)# class type network-qos traffic_class2
switch(config-pmap-nq-c)# no set cos 3
switch(config-pmap-nq-c)#
```

Related Commands	Command	Description
	show policy-map	Displays policy maps.

set dscp

To assign a Differentiated Services Code Point (DSCP) value for a traffic class in a type qos policy map, use the **set dscp** command. To remove a previously set DSCP value, use the **no** form of this command.

```
set dscp dscp-value
no set dscp dscp-value
```

Syntax Description	dscp-value	DSCP value or parameter to assign for this class of traffic. Valid values are from 0 to 63. For a list of standard DSCP values, see Table 1 .
--------------------	------------	--

Command Default	None
-----------------	------

Command Modes	Policy map type qos configuration mode
---------------	--

Command History	Release	Modification
	5.0(3)A1(1)	This command was introduced.

Usage Guidelines

Marking is a method that you use to modify the QoS fields of the incoming and outgoing packets. You can set the value of standard QoS fields IP precedence, DSCP, class of service (CoS), and internal labels that can be used in subsequent actions. Marking is used to identify the traffic type for use in policing, queuing, and scheduling traffic (only CoS is used in scheduling).

Use this command to classify the traffic based on the DSCP packet header field. When you set the DSCP value for a packet, make sure that you use a traffic class other than the class-default system class. For example, you would use qos-group *x*, where *x* is any value from 1 to 7.



Note You cannot set the DSCP packet header field if the traffic is in the class-default system class (qos-group 0).

You can set the DSCP value in the six most significant bits of the DiffServ field of the IP header to a specified value. You can enter numeric values from 0 to 63, as well as the standard DSCP values shown in Table [Table 1](#).

If you set the values for more than two IP header fields, an error similar to the following appears:

```
ERROR: Only 2 sets out of qos-group/cos/dscp/precedence/discard-class are allowed. Please
remove other set action before applying this one.
```



Note You can set DSCP or IP precedence but you cannot set both values because they modify the same field in the IP packet.

After you set the DSCP value, for the QoS policy map to work correctly and create the specified QoS groups, make sure that you attach the QoS policy map to a system policy, define a network-qos policy map, and attach it to the system policy. Make sure that the QoS group of the QoS policy map matches the QoS group of the network-qos policy.

The Cisco Nexus 3548 switch supports up to 248 combinations of Differentiated Services Code Point (DSCP) and quality of service (QoS) group groups.

Examples

This example shows how to set the DSCP value for a QoS policy:

```
switch(config)# policy-map type qos my_policy
switch(config-pmap-qos)# class type qos my_class
switch(config-pmap-c-qos)# set dscp cs6
switch(config-pmap-c-qos)# set qos-group 2
switch(config-pmap-c-qos)# exit
switch(config-pmap-qos)# exit
switch(config)# system qos
switch(config-sys-qos)# service-policy type qos input my_policy
switch(config-sys-qos)# exit
switch(config)# class-map type network-qos nqos_class
switch(config-cmap-nq)# match qos-group 2
switch(config-cmap-nq)# exit
switch(config)# policy-map type network-qos nqos_policy
switch(config-pmap-nq)# class type network-qos nqos_class
switch(config-pmap-nq-c)# exit
switch(config-pmap-nq)# exit
switch(config)# system qos
switch(config-sys-qos)# service-policy type network-qos nqos_policy
switch(config-sys-qos)# exit
switch(config)#
```

Related Commands

Command	Description
copy running-config startup-config	Copies the running configuration to the startup configuration file.
show policy-map type qos	Displays the QoS policy maps.
show running-config ipqos	Displays the QoS running configuration.

set precedence

To set the precedence value in an IP header for a class of traffic in a type qos policy map, use the **set precedence** command. To leave the precedence value unchanged for the class, use the **no** form of this command.

set precedence *precedence-value*

no set precedence *precedence-value*

Syntax Description

<i>precedence-value</i>	IP precedence value to assign for this class of traffic. Valid values are from 0 to 7. For a list of standard precedence values, see Table 2 .
-------------------------	---

Command Default

None

Command Modes

Policy map type qos configuration

Command History

Release	Modification
5.0(3)A1(1)	This command was introduced.

Usage Guidelines

Marking is a method that you use to modify the QoS fields of the incoming and outgoing packets.

You can set the value of standard QoS fields IP precedence, DSCP, class of service (CoS), and internal labels that can be used in subsequent actions. Marking is used to identify the traffic type for use in policing, queuing, and scheduling traffic (only CoS is used in scheduling).

Use this command to classify the traffic based on the IP precedence packet header field. When you set the IP precedence value for a packet, make sure that you use a traffic class other than the class-default system class. For example, you would use qos-group *x*, where *x* is any value from 1 to 7.



Note

You cannot set the IP precedence packet header field if the traffic is in the class-default system class (qos-group 0).

If you set the values for more than two IP header fields, you see the following error message:

ERROR: Only 2 sets out of qos-group/cos/dscp/precedence/discard-class are allowed. Please remove other set action before applying this one.



Note

You can set DSCP or IP precedence but you cannot set both values because they modify the same field in the IP packet.

After you set the IP precedence value, for the QoS policy map to work correctly and create the specified QoS groups, make sure that you attach the QoS policy map to a system policy, define a network-qos policy map, and attach it to the system policy. Make sure that the QoS group of the QoS policy map matches the QoS group of the network-qos policy.

Examples

This example shows how to set the IP precedence value for a QoS policy:

```
switch(config)# policy-map type qos my_policy
switch(config-pmap-qos)# class type qos my_class
switch(config-pmap-c-qos)# set precedence 5
switch(config-pmap-c-qos)# set qos-group 1
switch(config-pmap-c-qos)# exit
switch(config-pmap-qos)# exit
switch(config)# system qos
switch(config-sys-qos)# service-policy type qos input my_policy
switch(config-sys-qos)# exit
switch(config)# class-map type network-qos nqos_class
switch(config-cmap-nq)# match qos-group 1
switch(config-cmap-nq)# exit
switch(config)# policy-map type network-qos nqos_policy
switch(config-pmap-nq)# class type network-qos nqos_class
switch(config-pmap-nq-c)# exit
switch(config-pmap-nq)# exit
switch(config)# system qos
switch(config-sys-qos)# service-policy type network-qos nqos_policy
switch(config-sys-qos)# exit
switch(config)#
```

Related Commands

Command	Description
copy running-config startup-config	Copies the running configuration to the startup configuration file.
show policy-map type qos	Displays the QoS policy maps.
show running-config ipqos	Displays the QoS running configuration.
show startup-config ipqos	Displays the QoS configuration stored in the startup file.

set qos-group

To assign the quality of service (QoS) group identifier for a class of traffic in a type qos policy map, use the **set qos-group** command. To remove the assigned value from the class, use the **no** form of this command.

```
set qos-group qos-group-value

no set qos-group qos-group-value
```

Syntax Description	<i>qos-group-value</i> QoS group value to assign for this class of traffic. The range is from 1 to 4.
--------------------	---

Command Default	None
-----------------	------

Command Modes	Policy map type qos class configuration
---------------	---

Command History	Release	Modification
	5.0(3)A1(1)	This command was introduced.

Usage Guidelines	You can set the QoS group identifier value only in ingress policies. You can set a maximum of seven QoS groups in ingress policies.
	The Cisco Nexus 3548 switch supports up to 248 combinations of Differentiated Services Code Point (DSCP) and quality of service (QoS) group groups.

Examples	This example shows how to assign a QoS group identifier for a class of traffic in a type qos policy map: <pre>switch(config)# policy-map my_policy1 switch(config-pmap-qos)# class traffic_class2 switch(config-pmap-c-qos)# set qos-group 3 switch(config-pmap-c-qos)#</pre>
----------	--

Related Commands	Command	Description
	copy running-config startup-config	Copies the running configuration to the startup configuration file.
	show policy-map type qos	Displays the QoS policy maps.
	show running-config ipqos	Displays the QoS running configuration.
	show startup-config ipqos	Displays the QoS configuration stored in the startup file.

show class-map type network-qos

To display type network-qos class maps, use the **show class-map type network-qos** command.

show class-map type network-qos [*class-map-name*]

Syntax Description	<i>class-map-name</i>	Name of the class map. The name can be a maximum of 40 alphanumeric characters.
---------------------------	-----------------------	---

Command Default	Displays all type network-qos class maps if no class map name is specified.
------------------------	---

Command Modes	Any command mode
----------------------	------------------

Command History	Release	Modification
	5.0(3)A1(1)	This command was introduced.

Usage Guidelines	If you do not specify the type, the command displays all the class maps configured in the system.
-------------------------	---

Examples	This example shows how to display all type network-qos class maps:
-----------------	--

```
switch# show class-map type network-qos

class-map type network-qos cn1
  match qos-group 1

class-map type network-qos cn2
  match qos-group 2

class-map type network-qos cn3
  match qos-group 3

class-map type network-qos cn4
  match qos-group 4

class-map type network-qos class-default
  match qos-group 0

switch#
```

This example shows how to display all network-qos class maps:

```
switch# show class-map

Type qos class-maps
=====

class-map type qos match-all cqos1
  match cos 1
```

show class-map type network-qos

```
class-map type qos match-all cqos4
  match cos 4

class-map type qos match-any class-default
  match any
```

Type queuing class-maps
=====

```
class-map type queuing cqu1
  match qos-group 1

class-map type queuing cqu4
  match qos-group 4

class-map type queuing class-default
  match qos-group 0
```

Type network-qos class-maps
=====

```
class-map type network-qos cnq1
  match qos-group 1

class-map type network-qos cnq4
  match qos-group 4

class-map type network-qos class-default
  match qos-group 0
```

switch#

Related Commands

Command	Description
class-map	Creates or modifies a class map.

show class-map type qos

To display type qos class maps, use the **show class-map type qos** command.

show class-map type qos [*class-map-name*]

Syntax Description	<i>class-map-name</i>	Named class map. The name <i>class-default</i> is reserved. The name can be a maximum of 40 alphanumeric characters.
---------------------------	-----------------------	--

Command Default	Displays all type qos class maps if no class map name is specified.
------------------------	---

Command Modes	Any command mode
----------------------	------------------

Command History	Release	Modification
	5.0(3)A1(1)	This command was introduced.

Examples This example shows how to display all type qos class maps:

```
switch(config)# show class-map type qos
```

```
Type qos class-maps
=====

class-map type qos match-all cq1
  match cos 1

class-map type qos match-all cq2
  match cos 2

class-map type qos match-all cq3
  match cos 3

class-map type qos match-all cq4
  match cos 4

class-map type qos match-all cl_acl
<--Output truncated-->
switch#
```

Related Commands	Command	Description
	class-map	Creates or modifies a class map.

show class-map type queuing

To display type queuing class maps, use the **show class-map type queuing** command.

show class-map type queuing [*class-map-name*]

Syntax Description	<i>class-map-name</i>	Named class map. The name can be a maximum of 40 alphanumeric characters.
---------------------------	-----------------------	---

Command Default	Displays all type queuing class maps if no class map name is specified.
------------------------	---

Command Modes	Any command mode
----------------------	------------------

Command History	Release	Modification
	5.0(3)A1(1)	This command was introduced.

Examples This example shows how to display all type queuing class maps:

```
switch(config)# show class-map type queuing
```

```
Type queuing class-maps
=====
```

```
class-map type queuing q1
  match qos-group 1
```

```
class-map type queuing q2
  match qos-group 2
```

```
class-map type queuing q3
  match qos-group 3
```

```
class-map type queuing q4
  match qos-group 4
```

```
class-map type queuing class-default
  match qos-group 0
```

```
switch(config)#
```

Related Commands	Command	Description
	class-map	Creates or modifies a class map.

show interface untagged-cos

To display the untagged class of service (CoS) values for a specified interface, use the **show interface untagged-cos** command.

show interface untagged-cos [*module module_no*]

Syntax Description	module	(Optional) Displays the interfaces on this module of the switch chassis.
	<i>module_no</i>	Module number in the switch chassis. The range is from 1 to 18.

Command Default	None
------------------------	------

Command Modes	EXEC mode
----------------------	-----------

Command History	Release	Modification
	5.0(3)A1(1)	This command was introduced.

Examples This example shows how to display the untagged CoS values for interfaces:

```
switch# show interface untagged-cos
=====

Interface      Untagged-CoS
=====

port-channel1
port-channel10
port-channel100
port-channel200
port-channel234
port-channel300
port-channel400
Ethernet1/1
Ethernet1/2
Ethernet1/3
Ethernet1/4
Ethernet1/5
<--Output truncated-->
switch#
```

Related Commands	Command	Description
	untagged cos	Sets a CoS value for untagged Ethernet frames.

show policy-map

To display policy maps, use the **show policy-map** command.

```
show policy-map [type {network-qos | qos | queuing}] [policy-map-name]
```

Syntax Description	type	(Optional) Specifies the component type to display.
	network-qos	Displays policy maps of type network-qos.
	qos	Displays policy maps of type qos only.
	queuing	Displays policy maps of type queuing only.
	<i>policy-map-name</i>	(Optional) Named policy map. The name can be a maximum of 40 alphanumeric characters.

Command Default	None
-----------------	------

Command Modes	Any command mode
---------------	------------------

Command History	Release	Modification
	5.0(3)A1(1)	This command was introduced.

Usage Guidelines	When you enter the show policy-map command with no arguments or keywords.
------------------	--

Examples This example shows how to display all configured policy maps on a switch that runs Cisco NX-OS Release 5.0(3)A1(1):

```
switch# show policy-map

Type qos policy-maps
=====

policy-map type qos pqos
  class type qos cqos1
    set qos-group 1
  class type qos cqos4
    set qos-group 4
  class type qos class-default
    set qos-group 0
policy-map type qos default-in-policy
  class type qos class-default
    set qos-group 0

Type queuing policy-maps
=====

policy-map type queuing pqu
```

```

class type queuing cqul
    bandwidth percent 10
class type queuing cqu6
    bandwidth percent 20
class type queuing class-default
    bandwidth percent 70
policy-map type queuing default-out-policy
    class type queuing class-default
        bandwidth percent 100

```

```

Type network-qos policy-maps
=====

```

```

policy-map type network-qos pnqos
    class type network-qos cnq1
        mtu 1500
        set cos 4
    class type network-qos cnq4
        mtu 1500
        set cos 5
        congestion-control random-detect ecn
    class type network-qos class-default
        mtu 1500
policy-map type network-qos default-nq-policy
    class type network-qos class-default
        mtu 1500

```

```
switch#
```

This example shows how to display a named network-qos policy map on a switch that runs Cisco NX-OS Release 5.0(3)A1(1):

```
switch# show policy-map type network-qos my_pnq
```

This example shows how to display all configured policy maps on a switch that runs Cisco NX-OS Release 5.0(3)A1(1):

```
switch# show policy-map
```

```

Type qos policy-maps
=====

```

```

policy-map type qos mix
    class type qos ip-rtp-2000-3000
        set qos-group 2
        set dscp 20
    class type qos ip-rtp-4000-5000
        set qos-group 3
        set prec 5
    class type qos cos-prec
        set qos-group 4
        set dscp 25
    class type qos class-default
        set qos-group 0

```

```
:
```

```
<--snip-->
```

```
:
```

```

Type queuing policy-maps
=====

```

```

policy-map type queuing qqg
    class type queuing q1

```

■ show policy-map

```

    bandwidth percent 10
    priority
class type queuing q2
    bandwidth percent 10
class type queuing q3
    bandwidth percent 10
class type queuing q4
    bandwidth percent 20
class type queuing q5
    bandwidth percent 20
class type queuing q6
    bandwidth percent 10
class type queuing q7
    bandwidth percent 10
class type queuing class-default
    bandwidth percent 10
policy-map type queuing default-out-policy
    class type queuing class-default
        bandwidth percent 100
switch#

```

Related Commands

Command	Description
policy-map	Creates or modifies a policy map.

show policy-map interface

To display the service policy maps configured on the interfaces, use the **show policy-map interface** command.

show policy-map interface [**ethernet** *slot/port* | **port-channel** *channel-number*] [**input** | **output**] [**type** {**qos** | **queuing**}]

Syntax Description	
ethernet	(Optional) Displays policy maps assigned to Ethernet interfaces.
<i>slot/port</i>	Ethernet interface slot number and port number. The slot number is from 1 to 255, and the port number is from 1 to 128.
port-channel	(Optional) Displays policy maps assigned to EtherChannels.
<i>channel-number</i>	EtherChannel number. The number is from 1 to 4096.
input	(Optional) Displays policy maps assigned to input traffic only.
output	(Optional) Displays policy maps assigned to output traffic only.
type	(Optional) Specifies the component type to display.
qos	Displays policy maps of type qos only.
queuing	Displays policy maps of type queuing only.

Command Default None

Command Modes Any command mode

Command History	Release	Modification
	5.0(3)A1(1)	This command was introduced.

Usage Guidelines Statistics are on by default.

Examples This example shows how to display policy maps assigned to a specified interface:

```
switch# show policy-map interface ethernet 1/1
```

```
Global statistics status : disabled
```

```
Ethernet1/1
```

```
Service-policy (qos) input: pqos
policy statistics status: disabled
```

```
Class-map (qos): cqos1 (match-all)
Match: cos 1
set qos-group 1
```

show policy-map interface

```

Class-map (qos):  c qos6 (match-all)
  Match: cos 6
  set qos-group 6

Class-map (qos):  class-default (match-any)
  Match: any
  set qos-group 0

Service-policy (queuing) output:  pqu
  policy statistics status:  disabled
<--Output truncated-->
switch#

```

This example shows how to display QoS policy maps assigned to a specified interface:

```
switch# show policy-map interface ethernet 1/1 type qos
```

```

Global statistics status :  disabled

Ethernet1/1

Service-policy (qos) input:  default-in-policy
  policy statistics status:  disabled

Class-map (qos):  class-default (match-any)
  Match: any
  set qos-group 0

switch#

```

This example shows how to display the policy maps assigned to the output traffic of a specified interface:

```
switch# show policy-map interface ethernet 3/1 output
```

```

Global statistics status :  disabled

Ethernet1/1

Service-policy (queuing) output:  default-out-policy
  policy statistics status:  disabled

Class-map (queuing):  class-default (match-any)
  Match: qos-group 0
  bandwidth percent 100

switch#

```

Related Commands

Command	Description
policy-map	Creates or modifies a policy map.

show policy-map interface brief

To display policy maps applied to interfaces in a brief format, use the **show policy-map interface brief** command.

show policy-map interface brief

Syntax Description This command has no arguments or keywords.

Command Default None

Command Modes Any command mode

Command History	Release	Modification
	5.0(3)A1(1)	This command was introduced.

Examples This example shows how to display assigned policy maps in a brief format:

```
switch(config)# show policy-map interface brief
```

```

Interface/VLAN [Status]:INP QOS      OUT QOS      INP QUE      OUT QUE
=====
Ethernet1/1    [Active]:default-in-po              default-out-p
Ethernet1/2    [Active]:default-in-po              default-out-p
Ethernet1/3    [Active]:default-in-po              default-out-p
Ethernet1/4    [Active]:default-in-po              default-out-p
Ethernet1/5    [Active]:default-in-po              default-out-p

```

```
<--output truncated-->
switch(config)#
```

Related Commands	Command	Description
	policy-map	Creates or modifies a policy map.
	show policy-map	Displays policy maps.

show policy-map system

To display all active policy maps in the system, use the **show policy-map system** command.

show policy-map system [**type** { **network-qos** | **qos** [**input**] | **queuing** [**input** | **output**] }]

Syntax Description

type	(Optional) Specifies the component type to display.
network-qos	Displays policy maps of type network-qos only.
qos	Displays policy maps of type qos only.
input	(Optional) Displays policy maps assigned to input traffic.
queuing	Displays policy maps of type queuing only.
output	(Optional) Displays policy maps assigned to output traffic.

Command Default

All policy maps

Command Modes

EXEC mode

Command History

Release	Modification
5.0(3)A1(1)	This command was introduced.

Usage Guidelines

If you do not specify a policy map type and name, the system displays all the active policy maps in the system.

Examples

This example shows how to display all active policy maps in the system:

```
switch# show policy-map system
```

```
Type network-qos policy-maps
=====
```

```
policy-map type network-qos pnqos
  class type network-qos cnq1      match qos-group 1

    mtu 1500
    set cos 4
  class type network-qos cnq4 match qos-group 4

    mtu 1500
    set cos 5
    congestion-control random-detect ecn
  class type network-qos class-default      match qos-group 0

    mtu 1500

Service-policy (qos) input:  pqos
```

```
policy statistics status: disabled

Class-map (qos):  cqs1 (match-all)
  Match: cos 1
  set qos-group 1

Class-map (qos):  cqs4 (match-all)
  Match: cos 6
  set qos-group 4

Class-map (qos):  class-default (match-any)
  Match: any
  set qos-group 0

Service-policy (queuing) output:  pqu
policy statistics status: disabled

Class-map (queuing):  cqu1 (match-any)
  Match: qos-group 1
  bandwidth percent 10

Class-map (queuing):  cqu4 (match-any)
  Match: qos-group 4
  bandwidth percent 20

Class-map (queuing):  class-default (match-any)
  Match: qos-group 0
  bandwidth percent 70

switch#
```

This example shows how to display active network-qos policy maps in the system:

```
switch# show policy-map system type network-qos
```

Related Commands

Command	Description
show policy-map	Displays all policy maps.

show queuing interface

To display the queuing information on interfaces, use the **show queuing interface** command.

show queuing interface [**ethernet** *slot-no/port-no*]

Syntax Description	ethernet	(Optional) Specifies that queuing information to be displayed for an Ethernet interface.
	<i>slot-no</i>	Slot number of the Ethernet interface. The range is from 1 to 255.
	<i>port-no</i>	Port number of the Ethernet interface. The range is from 1 to 128.

Command Default Displays the queuing information for all interfaces.

Command Modes EXEC mode

Command History	Release	Modification
	5.0(3)A1(1)	This command was introduced.

Examples This example shows how to display the queuing information for a specific interface:

```
switch# show queuing interface ethernet 1/7
Ethernet1/5 queuing information:
  TX Queuing
    qos-group    sched-type  oper-bandwidth
      0          WRR        100

  RX Queuing
    qos-group 0
    HW MTU: 1500 (1500 configured)
    drop-type: drop, xon: 0, xoff: 0
    Statistics:
      Ucast pkts dropped          : 0
      Mcast pkts dropped          : 0
switch#
```

Table 3 describes the significant fields shown in the display.

Table 3 *show queuing interface Field Descriptions*

Field	Description
Ethernet ...	Ethernet interface information.
qos-group	Information about QoS groups configured on the switch.
sched-type	Type of schedule.
WRR	Weighted round robin(WRR). Queue eight for scheduling.
MTU	Maximum transmit unit (MTU) for the queue.

Table 3 *show queuing interface Field Descriptions (continued)*

Field	Description
drop-type	Queue drop type can be either drop or no-drop.
Xon	Transmission on at this threshold.
Xoff	Transmission off at this threshold.

show running-config ipqos

To display information about the running-system configuration for quality of service (QoS), use the **show running-config ipqos** command.

show running-config ipqos [all]

Syntax Description	all (Optional) Displays configured and default information.	
Command Default	None	
Command Modes	EXEC mode	
Command History	Release	Modification
	5.0(3)A1(1)	This command was introduced.
Usage Guidelines	Use this command to view a list of default and configured class maps and policy maps and the policies attached to interfaces.	
Examples	This example shows how to display QoS information: <pre>switch# show running-config ipqos !Time: Fri Nov 2 07:22:09 2012 version 5.0(3)A1(1) policy-map type qos my_policy class-map type network-qos my_class1 match qos-group 1 policy-map type network-qos jumbo class type network-qos class-default mtu 9216 policy-map type network-qos my_policy1 class type network-qos my_class1 class type network-qos class-default policy-map type network-qos NetworkQoS-3048 class type network-qos class-default switch#</pre>	

Related Commands

Command	Description
copy running-config startup-config	Copies the running configuration to the startup configuration file.
show class-map	Displays information about class maps.
show policy-map	Displays information about policy maps.

show startup-config ipqos

To display quality of service (QoS) configuration information in the startup configuration, use the **show startup-config ipqos** command.

show startup-config ipqos [all]

Syntax Description	all	(Optional) Displays configured and default information.
--------------------	-----	---

Command Default	None
-----------------	------

Command Modes	EXEC mode
---------------	-----------

Command History	Release	Modification
	5.0(3)A1(1)	This command was introduced.

Examples This example shows how to display the QoS information in the startup configuration file:

```
switch# show startup-config ipqos
```

```
!Command: show startup-config ipqos
!Time: Fri Jun  4 06:10:27 2010
!Startup config saved at: Thu Jun  3 18:13:44 2010
```

```
version 5.0(3)A1(1)
policy-map type network-qos jumbo
  class type network-qos class-default
    mtu 9216
system qos
  service-policy type network-qos jumbo
```

```
switch#
```

Related Commands	Command	Description
	copy running-config startup-config	Copies the running configuration to the startup configuration file.
	show class-map	Displays information about class maps.
	show policy-map	Displays information about policy maps.

show wrr unicast-bandwidth

To display the weighted round robin (WRR) bandwidth information, use the **show wrr unicast-bandwidth** command.

show wrr unicast-bandwidth

Syntax Description	This command has no arguments or keywords.
---------------------------	--

Command Default	None
------------------------	------

Command Modes	EXEC mode
----------------------	-----------

Command History	Release	Modification
	5.0(3)A1(1)	This command was introduced.

Examples	This example shows how to display the WRR bandwidth value:	
	switch# show wrr unicast-bandwidth	
	UCAST Bandwidth percent:	75
	switch#	

Related Commands	Command	Description
	wrr unicast-bandwidth	Assigns a weighted round robin (WRR) bandwidth value for interfaces.

system jumbomtu

To define the upper bound of any maximum transmission unit (MTU) in the system, use the **system jumbomtu** command.

system jumbomtu [*value*]

Syntax Description	<i>value</i>	Jumbomtu value. The range is from 1500 to 9216.
---------------------------	--------------	---

Command Default	9216 bytes
------------------------	------------

Command Modes	Global configuration mode
----------------------	---------------------------

Command History	Release	Modification
	5.0(3)A1(1)	This command was introduced.

Examples	This example shows how to define the upper bound of any MTU in the system: <pre>switch(config)# system jumbomtu 9216 switch(config)#</pre>
	This example shows how to define the upper bound of any MTU in a switch: <pre>switch# configure terminal Enter configuration commands, one per line. End with CNTL/Z. switch(config)# system jumbomtu 3000 switch(config)#</pre>

Related Commands	Command	Description
	show interface	Displays the jumbo MTU frames sent and received on the specified interface.

system qos

To configure a system policy, use the **system qos** command.

system qos

Syntax Description	This command has no arguments or keywords.
---------------------------	--

Command Default	None
------------------------	------

Command Modes	Global configuration mode
----------------------	---------------------------

Command History	Release	Modification
	5.0(3)A1(1)	This command was introduced.

Usage Guidelines	The Cisco Nexus 3548 switch supports up to 64 different QoS policies.
-------------------------	---

Examples	This example shows how to configure a system qos to apply a queuing policy to all interfaces in the system: <pre>switch(config)# system qos switch(config-sys-qos)#</pre>
-----------------	---

Related Commands	Command	Description
	service-policy	Associates the system class policy-map to the service policy for the system.

untagged cos

To override the class of service (CoS) value for the selected interface, use the **untagged cos** command. To revert to the defaults, use the **no** form of this command.

untagged cos *cos-value*

no untagged cos *cos-value*

Syntax Description	<i>cos-value</i>	Class of service (CoS) value for untagged frames. Values can range from 0 to 7.
---------------------------	------------------	---

Command Default	None
------------------------	------

Command Modes	Interface configuration mode Subinterface configuration mode
----------------------	---

Command History	Release	Modification
	5.0(3)A1(1)	This command was introduced.

Usage Guidelines	Ethernet frames received with no CoS value are given a CoS value of 0.
-------------------------	--

Examples This example shows how to set the CoS value to 4 for untagged frames received on an interface:

```
switch# configure terminal
switch(config)# interface ethernet 1/2
switch(config-if)# untagged cos 4
```

This example shows how to set the CoS value to 3 for untagged frames received on a Layer 3 interface:

```
switch# configure terminal
switch(config)# interface ethernet 1/5
switch(config-if)# no switchport
switch(config-if)# untagged cos 3
switch(config-if)#
```

Related Commands	Command	Description
	match cos	Sets the CoS value to match for the selected class.
	no switchport	Configures an interface as a Layer 3 routed interface.
	show interface untagged-cos	Displays the untagged CoS values for interfaces.

wrr unicast-bandwidth

To assign weighted round robin (WRR) weights, as a percentage of the interface data rate, to the egress queues, use the **wrr unicast-bandwidth** command. To unassign the WRR bandwidth values, use the **no** form of this command.

wrr unicast-bandwidth *percentage-value*

no wrr unicast-bandwidth *percentage-value*

Syntax Description	<i>percentage-value</i> Percentage of the bandwidth. The range is from 0 to 100.	
Command Default	50	
Command Modes	Global configuration mode	
Command History	Release	Modification
	5.0(3)A1(1)	This command was introduced.
Usage Guidelines	Use this command to change the bandwidth allotted to unicast and multicast traffic on traffic congestion.	
Examples	This example shows how to set the bandwidth to 75 percent for a specific interface:	
	<pre>switch# configure terminal switch(config)# wrr unicast-bandwidth 75 switch(config)#</pre>	
Related Commands	Command	Description
	show wrr unicast-bandwidth	Displays the weighted round robin (WRR) bandwidth information.



B

bandwidth (QoS) command [2](#)

C

class (policy map type qos) command [3](#)
class class-default command [5](#)
class-map type network-qos command [12](#)
class-map type qos command [6, 10](#)
class-map type queuing command [14](#)
class type network-qos command [8](#)
class type qos (policy map) command [13](#)
class type queuing command [9](#)
clear qos statistics command [16](#)
congestion-control dctcp ecn-threshold command [17](#)
control-plane command [18](#)

D

description command [19](#)

F

flowcontrol command [20](#)

I

ip dscp (ERSPAN) command [22, 23](#)
ip ttl (ERSPAN) command [24](#)

M

match access-group command [25](#)
match cos command [26](#)
match dscp command [27](#)
match ip rtp command [29](#)
match precedence command [30](#)
match qos-group command [32](#)
mtu (interface) command [34](#)

P

pause no-drop command [36](#)
policy-map type network-qos command [37](#)
policy-map type qos command [38](#)
policy-map type queuing command [39](#)

S

service-policy (Layer 3 interface) command [42](#)
service-policy (policy-map class) command [40](#)
service-policy type network-qos command [43](#)
service-policy type qos (system) [44](#)
set cos (policy map type network-qos) command [45](#)
set dscp command [46](#)
set precedence command [48](#)
set qos-group command [50](#)
show class-map type network-qos command [51](#)
show class-map type qos command [53](#)
show class-map type queuing command [54](#)
show interface untagged-cos command [55](#)
show policy-map command [56](#)
show policy-map interface brief command [61](#)

show policy-map interface command [59](#)
show policy-map system command [62](#)
show queuing interface command [64](#)
show running-config ipqos command [66](#)
show startup-config ipqos command [68](#)
show wrt unicast-bandwidth command [69](#)
system jumbomtu command [70](#)
system qos command [71](#)

U

untagged cos command [72](#)

W

wrt unicast-bandwidth command [73](#)