



W Show Commands

- [show wred-queue qos-group-map](#), on page 2
- [show wrr unicast-bandwidth](#), on page 3

show wred-queue qos-group-map

show wred-queue qos-group-map

Syntax Description

show	Show running system information
wred-queue	Show WRED qos-group information
qos-group-map	Display mapping of the qos-group information

Command Mode

- /exec

show wrr unicast-bandwidth

show wrr unicast-bandwidth

Syntax Description

show	Show running system information
wrr	unicast bandwidth configuration
unicast-bandwidth	rate in percentage of data rate

Command Mode

- /exec

show wrr unicast-bandwidth