



L Show Commands

- [show l2 mroute](#), on page 7
- [show l2 multicast ftag](#), on page 9
- [show l2 multicast trees](#), on page 10
- [show l2 route](#), on page 12
- [show l2fwder l2rib info](#), on page 14
- [show l2fwder rmac](#), on page 15
- [show l2fwder statistics](#), on page 16
- [show l2rib clients](#), on page 17
- [show l2rib producers](#), on page 18
- [show l2rib registrations](#), on page 20
- [show l2route evpn ead all](#), on page 21
- [show l2route evpn ethernet-segment esi](#), on page 22
- [show l2route evpn fl all](#), on page 23
- [show l2route evpn fl evi](#), on page 24
- [show l2route evpn imet all](#), on page 25
- [show l2route evpn imet evi](#), on page 26
- [show l2route evpn mac-ip all](#), on page 27
- [show l2route evpn mac-ip evi](#), on page 29
- [show l2route evpn mac all](#), on page 31
- [show l2route evpn mac evi](#), on page 33
- [show l2route evpn path-list all](#), on page 35
- [show l2route evpn startup-route all](#), on page 36
- [show l2route evpn startup-route evi](#), on page 37
- [show l2route fl topology](#), on page 38
- [show l2route peerid](#), on page 39
- [show l2route summary](#), on page 40
- [show l2route topology](#), on page 41
- [show l2route topology](#), on page 43
- [show l2route topology](#), on page 45
- [show lacp counters](#), on page 47
- [show lacp interface](#), on page 48
- [show lacp issu-impact](#), on page 51
- [show lacp neighbor](#), on page 52

- [show lacp port-channel](#), on page 53
- [show lacp system-identifier](#), on page 54
- [show ldap-search-map](#), on page 55
- [show ldap-server](#), on page 56
- [show ldap-server groups](#), on page 57
- [show ldap-server statistics](#), on page 59
- [show license](#), on page 61
- [show license brief](#), on page 62
- [show license file](#), on page 63
- [show license host-id](#), on page 64
- [show license reserved](#), on page 65
- [show license usage](#), on page 66
- [show line](#), on page 67
- [show line console](#), on page 68
- [show line console connected](#), on page 69
- [show line console user-input-string](#), on page 70
- [show lisp ddt](#), on page 71
- [show lisp ddt queue](#), on page 72
- [show lisp ddt referral-cache](#), on page 73
- [show lisp dynamic-eid](#), on page 74
- [show lisp elp](#), on page 75
- [show lisp negative-prefix](#), on page 76
- [show lisp proxy-itr](#), on page 77
- [show lisp site](#), on page 78
- [show lisp site instance-id](#), on page 79
- [show lisp smr](#), on page 80
- [show lisp stats-cache](#), on page 81
- [show lldp all](#), on page 82
- [show lldp dcBX interface](#), on page 83
- [show lldp entry](#), on page 84
- [show lldp interface](#), on page 86
- [show lldp neighbors](#), on page 88
- [show lldp neighbors detail](#), on page 89
- [show lldp neighbors system-detail](#), on page 91
- [show lldp portid-subtype](#), on page 92
- [show lldp timers](#), on page 93
- [show lldp tlv-select](#), on page 94
- [show lldp traffic](#), on page 95
- [show lldp traffic interface](#), on page 96
- [show locator-led status](#), on page 97
- [show locator-led status](#), on page 98
- [show logging](#), on page 99
- [show logging console](#), on page 100
- [show logging info](#), on page 101
- [show logging ip access-list cache](#), on page 103
- [show logging ip access-list status](#), on page 105

- [show logging last](#), on page 106
- [show logging level](#), on page 107
- [show logging level aaa](#), on page 109
- [show logging level acllog](#), on page 110
- [show logging level aclmgr](#), on page 111
- [show logging level adbm](#), on page 112
- [show logging level adjmgr](#), on page 113
- [show logging level amt](#), on page 114
- [show logging level arp](#), on page 115
- [show logging level ascii-cfg](#), on page 116
- [show logging level bfd](#), on page 117
- [show logging level bgp](#), on page 118
- [show logging level bloggerd](#), on page 119
- [show logging level bootvar](#), on page 120
- [show logging level callhome](#), on page 121
- [show logging level capability](#), on page 122
- [show logging level cdp](#), on page 123
- [show logging level cert-enroll](#), on page 124
- [show logging level cert_enroll](#), on page 125
- [show logging level cfs](#), on page 126
- [show logging level clis](#), on page 127
- [show logging level clk_mgr](#), on page 128
- [show logging level confcheck](#), on page 129
- [show logging level copp](#), on page 130
- [show logging level core](#), on page 131
- [show logging level cts](#), on page 132
- [show logging level dhcp_snoop](#), on page 133
- [show logging level diagnostic device_test](#), on page 134
- [show logging level diagnostic diagclient](#), on page 135
- [show logging level diagnostic diagmgr](#), on page 136
- [show logging level dot1x](#), on page 137
- [show logging level eigrp](#), on page 138
- [show logging level eltm](#), on page 139
- [show logging level ethdstats](#), on page 140
- [show logging level ethpm](#), on page 141
- [show logging level evb](#), on page 142
- [show logging level evmc](#), on page 143
- [show logging level evmed](#), on page 144
- [show logging level evms](#), on page 145
- [show logging level fabric forwarding](#), on page 146
- [show logging level fabricpath isis](#), on page 147
- [show logging level fabricpath switch-id](#), on page 148
- [show logging level feature-mgr](#), on page 149
- [show logging level fex](#), on page 150
- [show logging level fs-daemon](#), on page 151
- [show logging level glbp](#), on page 152

- [show logging level gpixm, on page 153](#)
- [show logging level hsrp, on page 154](#)
- [show logging level im, on page 155](#)
- [show logging level imp, on page 156](#)
- [show logging level interface-vlan, on page 157](#)
- [show logging level ip igmp, on page 158](#)
- [show logging level ip msdp, on page 159](#)
- [show logging level ip sla responder, on page 160](#)
- [show logging level ip sla sender, on page 161](#)
- [show logging level ipconf, on page 162](#)
- [show logging level ipfib, on page 163](#)
- [show logging level ipqos, on page 164](#)
- [show logging level ipv6 icmp, on page 165](#)
- [show logging level iscm, on page 166](#)
- [show logging level iscm, on page 167](#)
- [show logging level isis, on page 168](#)
- [show logging level keystore, on page 169](#)
- [show logging level l2fm, on page 170](#)
- [show logging level l3vm, on page 171](#)
- [show logging level lacp, on page 172](#)
- [show logging level ldap, on page 173](#)
- [show logging level license, on page 174](#)
- [show logging level lim, on page 175](#)
- [show logging level lisp, on page 176](#)
- [show logging level lldp, on page 177](#)
- [show logging level m2rib, on page 178](#)
- [show logging level mfdm, on page 179](#)
- [show logging level mfwd, on page 180](#)
- [show logging level mmode, on page 181](#)
- [show logging level module, on page 182](#)
- [show logging level monitor, on page 183](#)
- [show logging level mpls ldp, on page 184](#)
- [show logging level mpls manager, on page 185](#)
- [show logging level mpls switching, on page 186](#)
- [show logging level mpls traffic-eng, on page 187](#)
- [show logging level mvsh, on page 188](#)
- [show logging level nat, on page 189](#)
- [show logging level nbm, on page 190](#)
- [show logging level netstack, on page 191](#)
- [show logging level nfm, on page 192](#)
- [show logging level ngoam, on page 193](#)
- [show logging level ntp, on page 194](#)
- [show logging level nve, on page 195](#)
- [show logging level nx sdk, on page 196](#)
- [show logging level onep, on page 197](#)
- [show logging level ospf, on page 198](#)

- [show logging level ospfv3](#), on page 199
- [show logging level otv](#), on page 200
- [show logging level pfstat](#), on page 201
- [show logging level pim](#), on page 202
- [show logging level pim](#), on page 203
- [show logging level pixm](#), on page 204
- [show logging level pktmgr](#), on page 205
- [show logging level platform](#), on page 206
- [show logging level plcmgr](#), on page 207
- [show logging level pltfm_config](#), on page 208
- [show logging level plugin](#), on page 209
- [show logging level poap](#), on page 210
- [show logging level port-channel](#), on page 211
- [show logging level port-profile](#), on page 212
- [show logging level port-security](#), on page 213
- [show logging level private-vlan](#), on page 214
- [show logging level ptp](#), on page 215
- [show logging level radius](#), on page 216
- [show logging level res_mgr](#), on page 217
- [show logging level rip](#), on page 218
- [show logging level routing ipv6 multicast](#), on page 219
- [show logging level routing multicast](#), on page 220
- [show logging level rpm](#), on page 221
- [show logging level rsvp](#), on page 222
- [show logging level sal](#), on page 223
- [show logging level scheduler](#), on page 224
- [show logging level security](#), on page 225
- [show logging level session-mgr](#), on page 226
- [show logging level sflow](#), on page 227
- [show logging level smm](#), on page 228
- [show logging level snmpd](#), on page 229
- [show logging level snmpmib_proc](#), on page 230
- [show logging level spanning-tree](#), on page 231
- [show logging level spm](#), on page 232
- [show logging level stripcl](#), on page 233
- [show logging level sysmgr](#), on page 234
- [show logging level tacacs](#), on page 235
- [show logging level telemetry](#), on page 236
- [show logging level track](#), on page 237
- [show logging level tunnel](#), on page 238
- [show logging level u2rib](#), on page 239
- [show logging level u6rib](#), on page 240
- [show logging level udld](#), on page 241
- [show logging level ufdm](#), on page 242
- [show logging level urib](#), on page 243
- [show logging level vdc_mgr](#), on page 244

- [show logging level virtual-service, on page 245](#)
- [show logging level vlan_mgr, on page 246](#)
- [show logging level vmm, on page 247](#)
- [show logging level vmtracker, on page 248](#)
- [show logging level vntag, on page 249](#)
- [show logging level vpc, on page 250](#)
- [show logging level vrrp-cfg, on page 251](#)
- [show logging level vrrp-eng, on page 252](#)
- [show logging level vrrpv3, on page 253](#)
- [show logging level vsfd, on page 254](#)
- [show logging level vtp, on page 255](#)
- [show logging level xbar, on page 256](#)
- [show logging logfile, on page 257](#)
- [show logging logfile duration, on page 258](#)
- [show logging logfile last-index, on page 259](#)
- [show logging logfile start-seqn, on page 260](#)
- [show logging logfile start-time, on page 261](#)
- [show logging loopback, on page 262](#)
- [show logging module, on page 263](#)
- [show logging monitor, on page 264](#)
- [show logging nvram, on page 265](#)
- [show logging onboard, on page 266](#)
- [show logging onboard, on page 269](#)
- [show logging onboard fex, on page 270](#)
- [show logging onboard kernel-trace, on page 271](#)
- [show logging origin-id, on page 272](#)
- [show logging pending-diff, on page 273](#)
- [show logging pending, on page 274](#)
- [show logging server, on page 275](#)
- [show logging session status, on page 276](#)
- [show logging source-interface, on page 277](#)
- [show logging status, on page 278](#)
- [show logging timestamp, on page 279](#)
- [show login on-failure log, on page 280](#)
- [show login on-successful log, on page 281](#)

show l2 mroute

```
show { l2 | fabricpath } mroute { [ vdc-omf ] { [ resolved ] } | [ vlan <vlanid> ] { { [ omf ] | [ flood ] | [ source
{ <srcaddr> | <v6srcaddr> | <macsrcaddr> } ] [ group { <groupaddr> | <v6groupaddr> | <macgroupaddr> }
] } [ resolved ] [ ftag <ftag-id> ] [ hex ] } } [ __readonly__ [ <hex2> ] { TABLE_gr [ <ftag> ] <vlan_id> [ {
<v4src> <v4grp> <macgrp> | <v6src> <v6grp> <macsrc> } ] [ <omf> | <flood> ] <rt-uptime> <owners>
<num_nh> TABLE_nh { <nh_if> | <nh_sw> } [ <stale> ] [ <exclude> ] [ <svi> ] <flags> <nh-uptime>
<owner> <rt_type> | <done> | <start> } ]
```

Syntax Description

show	Show running system information
l2	Layer2 information
fabricpath	fabricpath information
mroute	Show multicast route database
vdc-omf	(Optional) Display vdc omf route
vlan	(Optional) Show information for a vlan
omf	(Optional) Show catch-all entry consisting of mroute ports
flood	(Optional) Display vlan flood route
ftag	(Optional) Show ftag number
source	(Optional) Show (s, g) source IP address
group	(Optional) Show group address
hex	(Optional) Display switch-ids in hex
<i>vlanid</i>	(Optional) Vlan value
<i>ftag-id</i>	(Optional) ftag id
<i>groupaddr</i>	(Optional) Group address
<i>macgroupaddr</i>	(Optional) MAC Group address
<i>srcaddr</i>	(Optional) Source address
<i>macsrcaddr</i>	(Optional) MAC source address
resolved	(Optional) Resolve switchid nexthops into the underlying interfaces
__readonly__	(Optional) Read Only
<i>hex2</i>	(Optional)
TABLE_gr	(Optional)

<i>vlan_id</i>	(Optional) VLAN
<i>rt-uptime</i>	(Optional) Time route was created
<i>num_nh</i>	(Optional) Number of next-hops
<i>owners</i>	(Optional) Owners
<i>v4src</i>	(Optional) IPv4 Multicast traffic source
<i>v4grp</i>	(Optional) IPv4 Multicast Group address
<i>macsrc</i>	(Optional) MAC Multicast traffic source
<i>macgrp</i>	(Optional) MAC Multicast Group address
<i>ftag</i>	(Optional) ftag id
<i>omf</i>	(Optional) Is OMF route
<i>flood</i>	(Optional) Is flood to vlan route
TABLE_nh	(Optional)
<i>nh_if</i>	(Optional) The next hop interface
<i>nh_sw</i>	(Optional) The next hop switch id
<i>owner</i>	(Optional) Owner
<i>flags</i>	(Optional) flags
<i>nh-uptime</i>	(Optional) Time nexthop was created
<i>rt_type</i>	(Optional) Route type
<i>stale</i>	(Optional) Is stale
<i>exclude</i>	(Optional) exclude from post routing replication
<i>svi</i>	(Optional) SVI interface
<i>done</i>	(Optional) Done displaying route data
<i>start</i>	(Optional) Print header

Command Mode

- /exec

show l2 multicast ftag

```
show { l2 | fabricpath } multicast ftag [ <ftag-id> ] [ __readonly__ TABLE_topo <id> <topo_config>
TABLE_ftag <ftag> <topo_id> <config> ]
```

Syntax Description

show	Show running system information
l2	Layer2 information
fabricpath	fabricpath information
multicast	Multicast information
ftag	ftag number
<i>ftag-id</i>	(Optional) ftag id
<i>__readonly__</i>	(Optional) Read Only
TABLE_topo	(Optional)
<i>id</i>	(Optional) topo id
<i>topo_config</i>	(Optional) program ftag star route
TABLE_ftag	(Optional)
<i>ftag</i>	(Optional) ftag
<i>topo_id</i>	(Optional) topo id
<i>config</i>	(Optional) ftag config

Command Mode

- /exec

show l2 multicast trees

```
show { l2 | fabricpath } multicast trees [ topo <topo-id> ] [ ftag <ftag-id> ] [ hex ] [ __readonly__ [ <hex2> ] ] { TABLE_swid <ftag> <topo_id> <sw_id> <rt-uptime> <owners> <num_nh> TABLE_nh [ <preferred> ] { <nh_if> | <nh_sw> } [ <stale> ] <distance> <nh-uptime> <owner> <flags> <rt_type> | <start> | <done> } ]
```

Syntax Description

show	Show running system information
l2	Layer2 information
fabricpath	fabricpath information
multicast	Multicast information
trees	Show the broadcast/multicast tree database
topo	(Optional) Show topo instance
ftag	(Optional) Show ftag number
hex	(Optional) Display switch-ids in hex
<i>topo-id</i>	(Optional) topo id
<i>ftag-id</i>	(Optional) ftag id
<i>__readonly__</i>	(Optional) Read Only
<i>hex2</i>	(Optional)
TABLE_swid	(Optional)
<i>sw_id</i>	(Optional) switch id
<i>topo_id</i>	(Optional) topo id
<i>ftag</i>	(Optional) ftag id
<i>rt-uptime</i>	(Optional) Time route was created
<i>num_nh</i>	(Optional) Number of next-hops
<i>owners</i>	(Optional) Owners
TABLE_nh	(Optional)
<i>preferred</i>	(Optional) Is preferred interface
<i>nh_if</i>	(Optional) The next hop interface
<i>nh_sw</i>	(Optional) The next hop switch id

<i>owner</i>	(Optional) Owner
<i>flags</i>	(Optional) flags
<i>rt_type</i>	(Optional) Route type
<i>nh-uptime</i>	(Optional) Time nexthop was created
<i>distance</i>	(Optional) admin distance
<i>stale</i>	(Optional) Is stale
<i>start</i>	(Optional)
<i>done</i>	(Optional)

Command Mode

- /exec

show l2 route

```
show { l2 | fabricpath } route [ topology { <topo_val> [ switchid <switchid> ] | all } | switchid <switchid> ]
[ detail | hex ] + [ __readonly__ <line_marker> <is_hex> { TABLE_route <topo_id> <ftag_value> <swid>
<sswid> <num_paths> { TABLE_path <path_str> <admin_distance> <metric> <time> <time_detail> <uuid>
} } ]
```

Syntax Description

show	Show running system information
l2	Layer2 information
fabricpath	fabricpath information
route	Show FabricPath route information
topology	(Optional) topology
<i>topo_val</i>	(Optional) topology value
switchid	(Optional) switchid
<i>switchid</i>	(Optional) switchid value
all	(Optional) all topologies
detail	(Optional) detail
hex	(Optional) display in hex
__readonly__	(Optional) Read Only
<i>line_marker</i>	(Optional) line marker
<i>is_hex</i>	(Optional) print in hex
TABLE_route	(Optional) Route delimiter
<i>topo_id</i>	(Optional) topo-id value
<i>ftag_value</i>	(Optional) ftag value
<i>swid</i>	(Optional) switch-id
<i>sswid</i>	(Optional) sub-switch id
<i>num_paths</i>	(Optional) num of paths
TABLE_path	(Optional) Path delimiter
<i>path_str</i>	(Optional) paths
<i>admin_distance</i>	(Optional) admin distance

<i>metric</i>	(Optional) metric
<i>time</i>	(Optional) time
<i>time_detail</i>	(Optional) time_detail
<i>uuid</i>	(Optional) uuid

Command Mode

- /exec

show l2fwder l2rib info

show l2fwder l2rib info

Syntax Description

show	Show running system information
l2fwder	L2 software forwarding
l2rib	L2RIB
info	stats and info

Command Mode

- /exec

show l2fwder rmac

show l2fwder rmac <mac-address>

Syntax Description

show	Show running system information
l2fwder	Display L2FWDER forwarding information
rmac	router mac
<i>mac-address</i>	MAC address

Command Mode

- /exec

show l2fwder statistics

show l2fwder statistics

Syntax Description

show	Show running system information
l2fwder	Display L2FWDER forwarding information
statistics	Show L2FWDER packet counters

Command Mode

- /exec

show l2rib clients

```
show l2rib clients [ <client_id> ] [ __readonly__ TABLE_l2rib_clients <client-id> <uuid> <process-suffix> ]
```

Syntax Description

show	Show running system information
l2rib	Layer 2 routing information base
clients	L2RIB Clients
<i>client_id</i>	(Optional) Enter Client ID
<i>__readonly__</i>	(Optional)
<i>TABLE_l2rib_clients</i>	(Optional) L2RIB Clients Table
<i>client-id</i>	(Optional) Client ID
<i>uuid</i>	(Optional) Process ID
<i>process-suffix</i>	(Optional) Process Name Suffix

Command Mode

- /exec

show l2rib producers

```
show l2rib producers [ { topology | mac | mac-ip | ead | pl | imet | flood-list | startup-route | peerid | es } [ static
| local | bgp | vxlan | hmm | arp | ofa | lisp ] ] [ detail ] [ __readonly__ TABLE_l2rib_producers <prod-name>
<prod-id> <client-id> <obj-type> <admin-dist> <purge-time> <state> [ <prod-flags> ] ]
```

Syntax Description

show	Show running system information
l2rib	Layer 2 routing information base
producers	L2RIB Producers
detail	(Optional) Detailed information
topology	(Optional) Filter on Topology
mac	(Optional) Filter on MAC
mac-ip	(Optional) Filter on MAC-IP
ead	(Optional) Filter on Ethernet-AD
pl	(Optional) Filter on Path List
imet	(Optional) Filter on IMET Route
flood-list	(Optional) Filter on Flood List
startup-route	(Optional) Filter on Startup Route
peerid	(Optional) Filter on Peerid
es	(Optional) Filter on ES
static	(Optional) Static
local	(Optional) Local
bgp	(Optional) BGP
vxlan	(Optional) VXLAN
hmm	(Optional) HMM
arp	(Optional) ARP
ofa	(Optional) OFA
lisp	(Optional) lisp
__readonly__	(Optional)
TABLE_l2rib_producers	(Optional) L2RIB Producers Table

<i>prod-name</i>	(Optional) Producer Name
<i>prod-id</i>	(Optional) Producer ID
<i>client-id</i>	(Optional) Client ID
<i>obj-type</i>	(Optional) Object Type
<i>admin-dist</i>	(Optional) Admin Distance
<i>purge-time</i>	(Optional) Purge Time
<i>state</i>	(Optional) State
<i>prod-flags</i>	(Optional) Global Producer Flags

Command Mode

- /exec

show l2rib registrations

```
show l2rib registrations [ client <client_id> [ <topo_id> { mac | mac-ip | ead | pl | imet | flood-list | arp-signal
| startup-route | topo | es } ] ] [ __readonly__ TABLE_l2rib_registrations <client-id> <topo-id> <obj-type>
<prod> ]
```

Syntax Description

show	Show running system information
l2rib	Layer 2 routing information base
registrations	L2RIB Registrations
client	(Optional) Global Registraion Entries
<i>client_id</i>	(Optional) Enter Client ID
<i>topo_id</i>	(Optional) Enter Topology ID
mac	(Optional) Filter on MAC
mac-ip	(Optional) Filter on MAC-IP
ead	(Optional) Filter on Ethernet-AD
pl	(Optional) Filter on Path List
imet	(Optional) Filter on IMET Route
es	(Optional) Filter on Ethernet Segment ID
flood-list	(Optional) Filter on Flood List
startup-route	(Optional) Filter on Startup Route
arp-signal	(Optional) Filter on ARP Signal
topo	(Optional) Filter on Topo Subtype
__readonly__	(Optional)
TABLE_l2rib_registrations	(Optional) L2RIB Registrations Table
<i>client-id</i>	(Optional) Client ID
<i>topo-id</i>	(Optional) Topology ID
<i>obj-type</i>	(Optional) Object Type
<i>prod</i>	(Optional) Producer

Command Mode

- /exec

show l2route evpn ead all

```
show l2route evpn ead all [ detail ] [ __readonly__ TABLE_l2route_evpn_ead_all <topo-id> <prod> <esi>
<client-nfn> <num_pls> [ { <next-hop> } ] ]
```

Syntax Description

show	Show running system information
l2route	Layer 2 routing information base
evpn	EVPN
ead	EAD
all	Display all routes without filtering
detail	(Optional) Detailed information
__readonly__	(Optional)
TABLE_l2route_evpn_ead_all	(Optional) L2RIB EVPN EAD All Table
<i>topo-id</i>	(Optional) Topology ID
<i>prod</i>	(Optional) Producer
<i>esi</i>	(Optional) ESI
<i>client-nfn</i>	(Optional) Client Notification Bitmap
<i>num_pls</i>	(Optional) Number of Path lists
<i>next-hop</i>	(Optional) Next Hop

Command Mode

- /exec

show l2route evpn ethernet-segment esi

```
show l2route evpn ethernet-segment { esi <esi-id> | all } [ bgp | vxlan ] [ detail ] [ __readonly__
TABLE_l2route_es <ethernet-segment> <originating-rtr> <prod-name> <int-ifhdl> <client-nfn> ]
```

Syntax Description

show	Show running system information
l2route	Layer 2 routing information base
evpn	EVPN
ethernet-segment	Ethernet Segment ID
esi	ESI Value
<i>esi-id</i>	ESI ID
all	Display all entries without filtering
bgp	(Optional) Filter on BGP producer
vxlan	(Optional) Filter on VXLAN producer
detail	(Optional) Detailed information
<i>__readonly__</i>	(Optional)
TABLE_l2route_es	(Optional) L2RIB ES Table
<i>ethernet-segment</i>	(Optional) ESI
<i>originating-rtr</i>	(Optional) Originating Router
<i>prod-name</i>	(Optional) Producer Name
<i>int-ifhdl</i>	(Optional) Interface Handle
<i>client-nfn</i>	(Optional) Client Notification Bitmap

Command Mode

- /exec

show l2route evpn fl all

```
show l2route evpn fl all [ detail ] [ __readonly__ TABLE_l2route_fl_all <topo-id> <peer-id> <flood-list>
<is-service-node> [ <client-nfn> ] ]
```

Syntax Description

show	Show running system information
l2route	Layer 2 routing information base
evpn	EVPN
fl	Flood List
all	Display all routes without filtering
detail	(Optional) Detailed information
__readonly__	(Optional)
TABLE_l2route_fl_all	(Optional) L2RIB Flood List All Table
<i>topo-id</i>	(Optional) Topology ID
<i>peer-id</i>	(Optional) Peer-ID
<i>flood-list</i>	(Optional) Flood List
<i>is-service-node</i>	(Optional) Is Service Node
<i>client-nfn</i>	(Optional) Client Notification Bitmap

Command Mode

- /exec

show l2route evpn fl evi

```
show l2route evpn fl evi <vpn-id> [ detail ] [ __readonly__ TABLE_l2route_fl <peer-id> <flood-list>
<is-service-node> [ <client-nfn> ] ]
```

Syntax Description

show	Show running system information
l2route	Layer 2 routing information base
evpn	EVPN
fl	Flood List
evi	Filter on E-VPN identifier (VLAN-ID or BD-ID)
<i>vpn-id</i>	E-VPN identifier (VLAN-ID or BD-ID)
detail	(Optional) Detailed information
<i>__readonly__</i>	(Optional)
TABLE_l2route_fl	(Optional) L2RIB Flood List Table
<i>peer-id</i>	(Optional) Peer-ID
<i>flood-list</i>	(Optional) Flood List
<i>is-service-node</i>	(Optional) Is Service Node
<i>client-nfn</i>	(Optional) Client Notification Bitmap

Command Mode

- /exec

show l2route evpn imet all

```
show l2route evpn imet all [ detail ] [ __readonly__ TABLE_l2route_imet_all <topo-id> <vni> <prod-type>
<ip-addr> [ <eth-tag-id> ] [ <pmsi-flags> ] [ <flags> ] [ <type> ] [ <vni-label> ] [ <tunnel-id> ] [ <client-nfn>
]
```

Syntax Description

show	Show running system information
l2route	Layer 2 routing information base
evpn	EVPN
imet	IMET Route
all	Display all routes without filtering
detail	(Optional) Detailed information
__readonly__	(Optional)
TABLE_l2route_imet_all	(Optional) L2RIB IMET All Table
<i>topo-id</i>	(Optional) Topology ID
<i>vni</i>	(Optional) VNI
<i>prod-type</i>	(Optional) Producer Type
<i>ip-addr</i>	(Optional) IP Address
<i>eth-tag-id</i>	(Optional) Ethernet Tag ID
<i>pmsi-flags</i>	(Optional) PMSI Flags
<i>flags</i>	(Optional) Flags
<i>type</i>	(Optional) Type
<i>vni-label</i>	(Optional) VNI Label
<i>tunnel-id</i>	(Optional) Tunnel ID
<i>client-nfn</i>	(Optional) Client Notification Bitmap

Command Mode

- /exec

show l2route evpn imet evi

```
show l2route evpn imet evi <vpn-id> [ bgp | vxlan ] [ detail ] [ __readonly__ TABLE_l2route_imet <vni>
<prod-type> <ip-addr> [ <eth-tag-id> ] [ <pmsi-flags> ] [ <flags> ] [ <type> ] [ <vni-label> ] [ <tunnel-id>
] [ <client-nfn> ] ]
```

Syntax Description

show	Show running system information
l2route	Layer 2 routing information base
evpn	EVPN
imet	IMET Route
evi	Filter on E-VPN identifier (VLAN-ID or BD-ID)
<i>vpn-id</i>	E-VPN identifier (VLAN-ID or BD-ID)
bgp	(Optional) Filter on BGP producer (remote imet routes)
vxlan	(Optional) Filter on VXLAN producer (local imet routes)
detail	(Optional) Detailed information
__readonly__	(Optional)
TABLE_l2route_imet	(Optional) L2RIB IMET Table
<i>vni</i>	(Optional) VNI
<i>prod-type</i>	(Optional) Producer Type
<i>ip-addr</i>	(Optional) IP Address
<i>eth-tag-id</i>	(Optional) Ethernet Tag ID
<i>pmsi-flags</i>	(Optional) PMSI Flags
<i>flags</i>	(Optional) Flags
<i>type</i>	(Optional) Type
<i>vni-label</i>	(Optional) VNI Label
<i>tunnel-id</i>	(Optional) Tunnel ID
<i>client-nfn</i>	(Optional) Client Notification Bitmap

Command Mode

- /exec

show l2route evpn mac-ip all

```
show l2route evpn mac-ip all [ detail ] [ __readonly__ TABLE_l2route_mac_ip_all <topo-id> <mac-addr>
<prod-type> <flags> <seq-num> <host-ip> <next-hop1> [ <next-hop2> ] [ <l3-info> ] [ <fwd-state> ] [
<rte-res> ] [ <sent-to> ] [ <peerid> ] [ <peer-ifindex> ] [ <esi-id> ] [ <soo> ] [ <pcinfo> ] ]
```

Syntax Description

show	Show running system information
l2route	Layer 2 routing information base
evpn	EVPN
mac-ip	MAC-IP Route
all	Display all routes without filtering
detail	(Optional) Detailed information
__readonly__	(Optional)
TABLE_l2route_mac_ip_all	(Optional) L2RIB Mac-IP All Table
<i>topo-id</i>	(Optional) Topology ID
<i>mac-addr</i>	(Optional) Mac Address
<i>prod-type</i>	(Optional) Producer Type
<i>flags</i>	(Optional) Flags
<i>seq-num</i>	(Optional) Sequence Number
<i>host-ip</i>	(Optional) Host IP
<i>next-hop1</i>	(Optional) Next Hop 1
<i>next-hop2</i>	(Optional) Next Hop 2
<i>l3-info</i>	(Optional) L3 Information
<i>fwd-state</i>	(Optional) Forwarding State
<i>rte-res</i>	(Optional) Route Resolution
<i>sent-to</i>	(Optional) Active Clients
<i>peerid</i>	(Optional) Peer ID
<i>peer-ifindex</i>	(Optional) Peer Interface Index
<i>esi-id</i>	(Optional) ESI ID
<i>soo</i>	(Optional) SOO

<i>pcinfo</i>	(Optional) Port-Channel Info
---------------	------------------------------

Command Mode

- /exec

show l2route evpn mac-ip evi

```
show l2route evpn mac-ip evi <vpn-id> [ arp | bgp | hmm ] [ mac <mac_addr> ] [ host-ip { <ipv4_host> | <ipv6_host> } ] [ next-hop { <ipv4_addr> | <ipv6_addr> | <if-hdl> } ] [ detail ] [ __readonly__ ]
TABLE_l2route_mac_ip_evi <topo-id> <mac-addr> <prod-type> <seq-num> <host-ip> <next-hop1> [ <next-hop2> ] [ <l3-info> ] [ <fwd-state> ] [ <rte-res> ] [ <sent-to> ] [ <peerid> ] [ <peer-ifindex> ] [ <esi-id> ] [ <soo> ] [ <pcinfo> ] ]
```

Syntax Description

show	Show running system information
l2route	Layer 2 routing information base
evpn	EVPN
mac-ip	MAC-IP Route
evi	Filter on E-VPN identifier (VLAN-ID or BD-ID)
<i>vpn-id</i>	E-VPN identifier (VLAN-ID or BD-ID)
arp	(Optional) Filter on ARP producer
bgp	(Optional) Filter on BGP producer
hmm	(Optional) Filter on HMM producer
mac	(Optional) Filter on MAC address
<i>mac_addr</i>	(Optional) 48-bit MAC address value
host-ip	(Optional) Filter on Host IP address
<i>ipv4_host</i>	(Optional) IPv4 address
next-hop	(Optional) Filter on Next-Hop IP or Interface Name
<i>ipv4_addr</i>	(Optional) IPv4 address of Next Hop
<i>if-hdl</i>	(Optional) Interface index of Next Hop
detail	(Optional) Detailed information
<i>__readonly__</i>	(Optional)
TABLE_l2route_mac_ip_evi	(Optional) L2RIB Mac-IP Table
<i>topo-id</i>	(Optional) Topology ID
<i>mac-addr</i>	(Optional) Mac Address
<i>prod-type</i>	(Optional) Producer Type
<i>host-ip</i>	(Optional) Host IP

<i>seq-num</i>	(Optional) Sequence Number
<i>next-hop1</i>	(Optional) Next Hop 1
<i>next-hop2</i>	(Optional) Next Hop 2
<i>fwd-state</i>	(Optional) Forwarding State
<i>rte-res</i>	(Optional) Route Resolution
<i>sent-to</i>	(Optional) Active Clients
<i>esi-id</i>	(Optional) ESI ID
<i>soo</i>	(Optional) SOO
<i>pcinfo</i>	(Optional) Port-Channel Info
<i>l3-info</i>	(Optional) L3 Information
<i>peerid</i>	(Optional) Peer ID
<i>peer-ifindex</i>	(Optional) Peer Interface Index

Command Mode

- /exec

show l2route evpn mac all

```
show l2route evpn mac all [ detail ] [ __readonly__ TABLE_l2route_mac_all <topo-id> <mac-addr>
<prod-type> <flags> <seq-num> <next-hop1> [ <next-hop2> ] [ <rte-res> ] [ <fwd-state> ] [ <res-pl-next-hop1>
] [ <res-pl-next-hop2> ] [ <sent-to> ] [ <esi-id> ] [ <soo> ] [ <pcinfo> ] ]
```

Syntax Description

show	Show running system information
l2route	Layer 2 routing information base
evpn	EVPN
mac	MAC Route
all	Display all routes without filtering
detail	(Optional) Detailed information
__readonly__	(Optional)
TABLE_l2route_mac_all	(Optional) L2RIB Mac All Table
<i>topo-id</i>	(Optional) Topology ID
<i>mac-addr</i>	(Optional) Mac Address
<i>prod-type</i>	(Optional) Producer Type
<i>flags</i>	(Optional) Flags
<i>seq-num</i>	(Optional) Sequence Number
<i>fwd-state</i>	(Optional) Forwarding State
<i>res-pl-next-hop1</i>	(Optional) Resultant PL Next hop 1
<i>res-pl-next-hop2</i>	(Optional) Resultant PL Next hop 2
<i>rte-res</i>	(Optional) Route Resolution
<i>sent-to</i>	(Optional) Active Clients
<i>esi-id</i>	(Optional) ESI ID
<i>soo</i>	(Optional) SOO
<i>pcinfo</i>	(Optional) Port-Channel Info
<i>next-hop1</i>	(Optional) Next Hop 1
<i>next-hop2</i>	(Optional) Next Hop 2

Command Mode

```
show l2route evpn mac all
```

- /exec

show l2route evpn mac evi

```
show l2route evpn mac evi <vpn-id> [ static | local | bgp | vxlan | lisp ] [ mac <mac_addr> ] [ next-hop {
<ipv4_addr> | <ipv6_addr> | <if-hdl> } ] [ esi <esi-id> ] [ detail ] [ __readonly__ TABLE_l2route_mac_evi
<topo-id> <mac-addr> <prod-type> <flags> <seq-num> <next-hop1> [ <next-hop2> ] [ <rte-res> ] [ <fwd-state>
] [ <res-pl-next-hop1> ] [ <res-pl-next-hop2> ] [ <sent-to> ] [ <esi-id> ] [ <soo> ] [ <pcinfo> ] ]
```

Syntax Description

show	Show running system information
l2route	Layer 2 routing information base
evpn	EVPN
mac	MAC Route
evi	Filter on E-VPN identifier (VLAN-ID or BD-ID)
<i>vpn-id</i>	E-VPN identifier (VLAN-ID or BD-ID)
static	(Optional) Filter on Static producer
local	(Optional) Filter on Local producer
bgp	(Optional) Filter on BGP producer
vxlan	(Optional) Filter on VXLAN producer
lisp	(Optional) Filter on LISP producer
mac	(Optional) Filter on MAC address
esi	(Optional) Filter on ESI value
<i>mac_addr</i>	(Optional) Enter 48-bit MAC address value
next-hop	(Optional) Filter on Next-Hop IP or Interface Name
<i>ipv4_addr</i>	(Optional) IPv4 address of Next Hop
<i>if-hdl</i>	(Optional) Interface index of Next Hop
detail	(Optional) Detailed information
__readonly__	(Optional)
TABLE_l2route_mac_evi	(Optional) L2RIB Mac EVI Table
<i>topo-id</i>	(Optional) Topology ID
<i>mac-addr</i>	(Optional) Mac Address
<i>prod-type</i>	(Optional) Producer Type

<i>flags</i>	(Optional) Flags
<i>seq-num</i>	(Optional) Sequence Number
<i>next-hop1</i>	(Optional) Next Hop 1
<i>next-hop2</i>	(Optional) Next Hop 2
<i>fwd-state</i>	(Optional) Forwarding State
<i>res-pl-next-hop1</i>	(Optional) Resultant PL Next hop 1
<i>res-pl-next-hop2</i>	(Optional) Resultant PL Next hop 2
<i>rte-res</i>	(Optional) Route Resolution
<i>sent-to</i>	(Optional) Active Clients
<i>esi-id</i>	(Optional) ESI ID
<i>soo</i>	(Optional) SOO
<i>pcinfo</i>	(Optional) Port-Channel Info

Command Mode

- /exec

show l2route evpn path-list all

```
show l2route evpn path-list { all | esi <esi-id> } [ detail ] [ __readonly__ TABLE_l2route_evpn_pathlist_all
<topo-id> <prod> <esi> [ <ecmp_label> ] [ <flags> ] [ <client_ctx> ] <mac-cnt> <client-nfn> [ { <cp-next-hop>
} ] [ { <res-next-hop> } ] ]
```

Syntax Description

show	Show running system information
l2route	Layer 2 routing information base
evpn	EVPN
path-list	Path-List
all	Display all routes without filtering
esi	ESI Value
<i>esi-id</i>	ESI ID
detail	(Optional) Detailed information
__readonly__	(Optional)
TABLE_l2route_evpn_pathlist_all	(Optional) L2RIB EVPN Pathlist all Table
<i>topo-id</i>	(Optional) Topology ID
<i>prod</i>	(Optional) Producer
<i>esi</i>	(Optional) ESI
<i>ecmp_label</i>	(Optional) ECMP label
<i>flags</i>	(Optional) Flags
<i>client_ctx</i>	(Optional) Client context
<i>mac-cnt</i>	(Optional) Mac count
<i>client-nfn</i>	(Optional) Client Notification Bitmap
<i>cp-next-hop</i>	(Optional) Control plane Next hops
<i>res-next-hop</i>	(Optional) Resultant Next hops

Command Mode

- /exec

show l2route evpn startup-route all

```
show l2route evpn startup-route all [ detail ] [ __readonly__ TABLE_l2route_startup_route_all <topo-id>
<src-group> <del-src-group> [ <src-lpbk-ifhdl> ] [ <nve-ifhdl> ] [ <flags> ] [ <client-nfn> ] ]
```

Syntax Description

show	Show running system information
l2route	Layer 2 routing information base
evpn	EVPN
startup-route	Startup Route
all	Display all routes without filtering
detail	(Optional) Detailed information
__readonly__	(Optional)
TABLE_l2route_startup_route_all	(Optional) L2RIB Startup-Route All Table
<i>topo-id</i>	(Optional) Topology ID
<i>src-group</i>	(Optional) Source Group
<i>del-src-group</i>	(Optional) Delivery Source Group
<i>src-lpbk-ifhdl</i>	(Optional) Source Loopback Interface Handle
<i>nve-ifhdl</i>	(Optional) NVE Interface Handle
<i>flags</i>	(Optional) Flags
<i>client-nfn</i>	(Optional) Client Notification Bitmap

Command Mode

- /exec

show l2route evpn startup-route evi

```
show l2route evpn startup-route evi <vpn-id> [ detail ] [ __readonly__ TABLE_l2route_startup_route
<src-group> <del-src-group> [ <src-lpbk-ifhdl> ] [ <nve-ifhdl> ] [ <flags> ] [ <client-nfn> ] ]
```

Syntax Description

show	Show running system information
l2route	Layer 2 routing information base
evpn	EVPN
startup-route	Startup Route
evi	Filter on E-VPN identifier (VLAN-ID or BD-ID)
<i>vpn-id</i>	E-VPN identifier (VLAN-ID or BD-ID)
detail	(Optional) Detailed information
<i>__readonly__</i>	(Optional)
TABLE_l2route_startup_route	(Optional) L2RIB Startup-Route Table
<i>src-group</i>	(Optional) Source Group
<i>del-src-group</i>	(Optional) Delivery Source Group
<i>src-lpbk-ifhdl</i>	(Optional) Source Loopback Interface Handle
<i>nve-ifhdl</i>	(Optional) NVE Interface Handle
<i>flags</i>	(Optional) Flags
<i>client-nfn</i>	(Optional) Client Notification Bitmap

Command Mode

- /exec

show l2route fl topology

```
show l2route fl { topology <topo-id> | all } [ detail ] [ __readonly__ TABLE_l2route_fl [ <topo-id> ] <peer-id>
<flood-list> <is-service-node> [ <client-nfn> ] ]
```

Syntax Description

show	Show running system information
l2route	Layer 2 routing information base
fl	Flood List
all	Display all routes without filtering
topology	Filter on topology ID
<i>topo-id</i>	topology ID
detail	(Optional) Detailed information
<i>__readonly__</i>	(Optional)
TABLE_l2route_fl	(Optional) L2RIB Flood List Table
<i>topo-id</i>	(Optional) Topology ID
<i>peer-id</i>	(Optional) Peer-ID
<i>flood-list</i>	(Optional) Flood List
<i>is-service-node</i>	(Optional) Is Service Node
<i>client-nfn</i>	(Optional) Client Notification Bitmap

Command Mode

- /exec

show l2route peerid

show l2route peerid [__readonly__ TABLE_l2route_peerid <if-hdl> <ip-addr> <peer-id> <if-idx> <num-macs> <num-nhs>]

Syntax Description

show	Show running system information
l2route	Layer 2 routing information base
peerid	Display Peer ID DB
__readonly__	(Optional)
TABLE_l2route_peerid	(Optional) L2RIB Peer-ID Table
<i>if-hdl</i>	(Optional) Interface Handle
<i>ip-addr</i>	(Optional) IP Address
<i>if-idx</i>	(Optional) Peer Interface Index
<i>peer-id</i>	(Optional) Peer-ID
<i>num-macs</i>	(Optional) Number of Macs
<i>num-nhs</i>	(Optional) Number of NHs

Command Mode

- /exec

show l2route summary

```
show l2route summary [ __readonly__ { <total_memory> <numof_converged_tables> [ {
TABLE_l2route_summary <table_name> { TABLE_producer <producer_name> <id> <objects> <memory>
} <total><total_obj><total_mem> } ] } ]
```

Syntax Description

show	Show running system information
l2route	Layer 2 routing information base
summary	Summary
<i>__readonly__</i>	(Optional) Read only
<i>total_memory</i>	(Optional) Total memory
<i>numof_converged_tables</i>	(Optional) Number of converged tables
TABLE_l2route_summary	(Optional) L2route summary table
<i>table_name</i>	(Optional) Table name
TABLE_producer	(Optional) Producer table
<i>producer_name</i>	(Optional) Producer name
<i>id</i>	(Optional) id
<i>objects</i>	(Optional) objects
<i>memory</i>	(Optional) Memory

Command Mode

- /exec

show l2route topology

```
show l2route { mac-ip | openflow mac-ip } { topology <topo-id> | all } [ detail ] [ __readonly__
TABLE_l2route_mac_ip_openflow <topo-id> <mac-addr> <prod-type> <seq-num> <host-ip> <next-hop1>
[ <next-hop2> ] [ <l3-info> ] [ <fwd-state> ] [ <rte-res> ] [ <sent-to> ] [ <peerid> ] [ <peer-ifindex> ] [ <esi-id>
] [ <soo> ] [ <pcinfo> ] ]
```

Syntax Description

show	Show running system information
l2route	Layer 2 routing information base
mac-ip	MAC-IP Route
all	Display all routes without filtering
openflow	openflow
topology	Filter on topology ID
<i>topo-id</i>	topology ID
detail	(Optional) Detailed information
__readonly__	(Optional)
TABLE_l2route_mac_ip_openflow	(Optional) L2RIB Mac-IP Table
<i>topo-id</i>	(Optional) Topology ID
<i>mac-addr</i>	(Optional) Mac Address
<i>prod-type</i>	(Optional) Producer Type
<i>host-ip</i>	(Optional) Host IP
<i>next-hop1</i>	(Optional) Next Hop 1
<i>next-hop2</i>	(Optional) Next Hop 2
<i>seq-num</i>	(Optional) Sequence Number
<i>fwd-state</i>	(Optional) Forwarding State
<i>rte-res</i>	(Optional) Route Resolution
<i>sent-to</i>	(Optional) Active Clients
<i>esi-id</i>	(Optional) ESI ID
<i>soo</i>	(Optional) SOO
<i>pcinfo</i>	(Optional) Port-Channel Info

<i>l3-info</i>	(Optional) L3 Information
<i>peerid</i>	(Optional) Peer ID
<i>peer-ifindex</i>	(Optional) Peer Interface Index

Command Mode

- /exec

show l2route topology

```
show l2route topology [ <topo_id> ] [ detail ] [ __readonly__ TABLE_l2route_topology <topo-id> <topo-name>
<topo-type> [ <vni> ] [ <encap-type> ] [ <iod> ] [ <if-hdl> ] [ <vtep-ip> ] [ <emulated-ip> ] [ <emulated-ro-ip>
] [ <tx-id> ] [ <rcvd-flag> ] [ <rmac> ] [ <vrf-id> ] [ <vmac> ] [ <flags> ] [ <sub-flags> ] [ <prev-flags> ] ]
```

Syntax Description

show	Show running system information
l2route	Layer 2 routing information base
topology	Display topology IDs
<i>topo_id</i>	(Optional) Enter Topology ID
detail	(Optional) Detailed information
<i>__readonly__</i>	(Optional)
TABLE_l2route_topology	(Optional) L2RIB Topology Table
<i>topo-id</i>	(Optional) Topology ID
<i>topo-name</i>	(Optional) Topology Name
<i>topo-type</i>	(Optional) Topology Type
<i>vni</i>	(Optional) VNI
<i>encap-type</i>	(Optional) Encap Type
<i>iod</i>	(Optional) IOD
<i>if-hdl</i>	(Optional) Interface Handle
<i>vtep-ip</i>	(Optional) VTEP IP Address
<i>emulated-ip</i>	(Optional) Emulated VTEP IP Address
<i>emulated-ro-ip</i>	(Optional) Emulated RO VTEP IP Address
<i>tx-id</i>	(Optional) Transaction ID for Topology Ack
<i>rcvd-flag</i>	(Optional) Flag to Indicate Topology Ack
<i>rmac</i>	(Optional) Local Router MAC (For L3 VNIs)
<i>vrf-id</i>	(Optional) VRF ID (For L3 VNIs)
<i>vmac</i>	(Optional) Local Virtual MAC (For L3 VNIs)
<i>flags</i>	(Optional) Flags
<i>sub-flags</i>	(Optional) Sub Flags

<i>prev-flags</i>	(Optional) Previous Flags
-------------------	---------------------------

Command Mode

- /exec

show l2route topology

```
show l2route { mac | openflow mac | dataplane mac [ local | remote ] } { topology <topo-id> | all } [ detail ]
[ __readonly__ TABLE_l2route_mac <topo-id> <mac-addr> <prod-type> <flags> <seq-num> <next-hop1>
[ <next-hop2> ] [ <rte-res> ] [ <fwd-state> ] [ <res-pl-next-hop1> ] [ <res-pl-next-hop2> ] [ <sent-to> ] [
<esi-id> ] [ <soo> ] [ <pcinfo> ] ]
```

Syntax Description

show	Show running system information
l2route	Layer 2 routing information base
dataplane	dataplane
openflow	openflow
mac	MAC Route
all	Display all routes without filtering
local	(Optional) dataplane learnt local routes
remote	(Optional) dataplane learnt remote routes
topology	Filter on topology ID
<i>topo-id</i>	topology ID
detail	(Optional) Detailed information
<i>__readonly__</i>	(Optional)
TABLE_l2route_mac	(Optional) L2RIB Mac All Table
<i>topo-id</i>	(Optional) Topology ID
<i>mac-addr</i>	(Optional) Mac Address
<i>prod-type</i>	(Optional) Producer Type
<i>flags</i>	(Optional) Flags
<i>seq-num</i>	(Optional) Sequence Number
<i>next-hop1</i>	(Optional) Next Hop 1
<i>next-hop2</i>	(Optional) Next Hop 2
<i>fwd-state</i>	(Optional) Forwarding State
<i>res-pl-next-hop1</i>	(Optional) Resultant PL Next hop1
<i>res-pl-next-hop2</i>	(Optional) Resultant PL Next hop2

<i>rte-res</i>	(Optional) Route Resolution
<i>sent-to</i>	(Optional) Active Clients
<i>esi-id</i>	(Optional) ESI ID
<i>soo</i>	(Optional) SOO
<i>pcinfo</i>	(Optional) Port-Channel Info

Command Mode

- /exec

show lacp counters

```
show lacp counters [ interface <if0> ] [ __readonly__ TABLE_interface <interface> TABLE_member <port>
<pdu-sent> <pdu-rcvd> <marker-rcvd> <marker-resp-sent> <pkt-errors> [ <illegal-rcvd> ] [ <unknown-rcvd>
]]
```

Syntax Description

show	Show running system information
lacp	LACP protocol
counters	LACP counters
interface	(Optional) Specify a port-channel
<i>if0</i>	(Optional)
<i>__readonly__</i>	(Optional)
TABLE_interface	(Optional) Port channel table
<i>interface</i>	(Optional) Port channel
TABLE_member	(Optional) Member port info
<i>port</i>	(Optional) Member port
<i>pdu-sent</i>	(Optional) Number of PDUs sent
<i>pdu-rcvd</i>	(Optional) Number of PDUs received
<i>marker-rcvd</i>	(Optional) Number of Marker PDUs received
<i>marker-resp-sent</i>	(Optional) Number of Marker response PDUs sent
<i>pkt-errors</i>	(Optional) Number of packet errors
<i>illegal-rcvd</i>	(Optional) Number of illegal packets received
<i>unknown-rcvd</i>	(Optional) Number of unknown packets received

Command Mode

- /exec

show lacp interface

```
show lacp interface [ <if0> ] [ __readonly__ <interface> <operational-state> <channel-group> <port-channel>
<pdus-sent> <pdus-rcvd> <marker-sent> <marker-rcvd> <marker-resp-sent> <marker-resp-rcvd>
<unknown-rcvd> <illegal-rcvd> <lag-id> <active-time> { localport <local-interface> <local-mac-address>
<local-system-priority> <local-port-priority> <local-port-num> <local-op-key> <local-activity> <local-timeout>
<local-sync> <local-collecting> <local-distributing> <partner-info-timeout> <local-admin-state>
<local-oper-state> } { partnerport <partner-interface> <partner-mac-address> <partner-system-priority>
<partner-port-priority> <partner-port-num> <partner-op-key> <partner-activity> <partner-timeout>
<partner-sync> <partner-collecting> <partner-distributing> <partner-admin-state> <partner-oper-state> }
<agg-or-indiv> ]
```

Syntax Description

show	Show running system information
lacp	LACP protocol
interface	Specify a interface
<i>if0</i>	(Optional)
<i>__readonly__</i>	(Optional)
<i>interface</i>	(Optional) Interface ID
<i>channel-group</i>	(Optional) Channel Group
<i>port-channel</i>	(Optional) Port Channel
<i>lag-id</i>	(Optional) LAG Id
<i>active-time</i>	(Optional) active-time
<i>operational-state</i>	(Optional) Operational State
<i>agg-or-indiv</i>	(Optional) Aggregate or individual port
<i>pdus-rcvd</i>	(Optional) PDUs received
<i>pdus-sent</i>	(Optional) PDUs sent
<i>marker-rcvd</i>	(Optional) Markers received
<i>marker-sent</i>	(Optional) Markers sent
<i>marker-resp-rcvd</i>	(Optional) Marker response received
<i>marker-resp-sent</i>	(Optional) Marker response sent
<i>unknown-rcvd</i>	(Optional) Unknown pdus received
<i>illegal-rcvd</i>	(Optional) Illegal pdus received

<i>localport</i>	(Optional) Local port information
<i>local-interface</i>	(Optional) Interface
<i>local-mac-address</i>	(Optional) MAC Address
<i>local-system-priority</i>	(Optional) System Priority
<i>local-port-priority</i>	(Optional) Port Priority
<i>local-port-num</i>	(Optional) Port Number
<i>local-op-key</i>	(Optional) Operational Key
<i>local-admin-state</i>	(Optional) Local Admin State
<i>local-oper-state</i>	(Optional) Local Oper State
<i>local-activity</i>	(Optional) Mode
<i>local-timeout</i>	(Optional) Timeout
<i>local-sync</i>	(Optional) Synchronization
<i>local-distributing</i>	(Optional) Distributing
<i>local-collecting</i>	(Optional) Collecting
<i>partner-info-timeout</i>	(Optional) Partner information refresh timeout
<i>partnerport</i>	(Optional) Partner port information
<i>partner-interface</i>	(Optional) Partner Interface
<i>partner-mac-address</i>	(Optional) Partner MAC Address
<i>partner-system-priority</i>	(Optional) Partner System Priority
<i>partner-port-priority</i>	(Optional) Partner Port Priority
<i>partner-port-num</i>	(Optional) Partner Port Number
<i>partner-op-key</i>	(Optional) Operational Key
<i>partner-admin-state</i>	(Optional) Partner Admin State
<i>partner-oper-state</i>	(Optional) Partner Oper State
<i>partner-activity</i>	(Optional) Mode
<i>partner-timeout</i>	(Optional) Timeout
<i>partner-sync</i>	(Optional) Synchronization
<i>partner-distributing</i>	(Optional) Distributing
<i>partner-collecting</i>	(Optional) Collecting

Command Mode

- /exec

show lacp issu-impact

```
show lacp issu-impact [ __readonly__ TABLE_interface <interface> ]
```

Syntax Description

show	Show running system information
lacp	Show LACP information
issu-impact	Check for ISSU readiness
__readonly__	(Optional)
TABLE_interface	(Optional) Port-channel issu-impact member list
<i>interface</i>	(Optional) Port-channel Member

Command Mode

- /exec

show lacp neighbor

```
show lacp neighbor [ interface <if0> ] [ __readonly__ TABLE_interface <interface> TABLE_member <port>
<partner-system-id> <partner-port-num> <partner-age> <partner-flags> <partner-port-priority>
<partner-oper-key> <partner-port-state> ]
```

Syntax Description

show	Show running system information
lacp	LACP protocol
neighbor	LACP interface neighbor
interface	(Optional) Specify a port-channel
<i>if0</i>	(Optional)
<i>__readonly__</i>	(Optional)
TABLE_interface	(Optional) Port channel table
<i>interface</i>	(Optional) Port channel
TABLE_member	(Optional) Member port info
<i>port</i>	(Optional) Member port
<i>partner-system-id</i>	(Optional) Partner System ID
<i>partner-port-num</i>	(Optional) Partner Port Number
<i>partner-age</i>	(Optional) Partner age
<i>partner-flags</i>	(Optional) Partner flags
<i>partner-port-priority</i>	(Optional) Partner Port Priority
<i>partner-oper-key</i>	(Optional) Partner oper key
<i>partner-port-state</i>	(Optional) Partner port state

Command Mode

- /exec

show lacp port-channel

```
show lacp port-channel [ interface <if0> ] [ __readonly__ TABLE _interface <interface> <aggr-mac-address>
<local-system-priority> <local-system-id> <local-admin-key> <local-oper-key> <partner-system-priority>
<partner-system-id> <partner-oper-key> <max-delay> <agg-or-indiv> { <port-list> } + ]
```

Syntax Description

show	Show running system information
lacp	LACP protocol
port-channel	LACP port-channels
interface	(Optional) Specify a port-channel
<i>if0</i>	(Optional)
<i>__readonly__</i>	(Optional)
<i>TABLE _interface</i>	(Optional) Port channel table
<i>interface</i>	(Optional) Port channel
<i>aggr-mac-address</i>	(Optional) Mac Address of aggregator
<i>local-system-priority</i>	(Optional) Local System Priority
<i>local-system-id</i>	(Optional) Local System-Id
<i>local-admin-key</i>	(Optional) Local admin key
<i>local-oper-key</i>	(Optional) Local oper key
<i>partner-system-priority</i>	(Optional) Partner System Priority
<i>partner-system-id</i>	(Optional) Partner System-Id
<i>partner-oper-key</i>	(Optional) Partner oper key
<i>max-delay</i>	(Optional) Maximum delay between aggregator and mac-client
<i>agg-or-indiv</i>	(Optional) Aggregate or individual port
<i>port-list</i>	(Optional) List of port names for member ports

Command Mode

- /exec

show lacp system-identifier

show lacp system-identifier [__readonly__ <system-priority> <system-mac>]

Syntax Description

show	Show running system information
lacp	LACP protocol
system-identifier	Show system-identifier information
__readonly__	(Optional)
<i>system-priority</i>	(Optional) System priority
<i>system-mac</i>	(Optional) System mac address

Command Mode

- /exec

show ldap-search-map

```
show ldap-search-map [ __readonly__ { number_of_search_maps <search_map_count> } {
TABLE_ldap_searchmaps <map_name> [ <map_baseDN> <map_attr> <map_filter> ] } ]
```

Syntax Description

<i>__readonly__</i>	(Optional)
<i>number_of_search_maps</i>	(Optional) Total number of search maps configured
<i>search_map_count</i>	(Optional) Ldap Search map count
<i>TABLE_ldap_searchmaps</i>	(Optional) Ldap search map configuration
<i>map_name</i>	(Optional) Search map name
<i>map_baseDN</i>	(Optional) Ldap base DN
<i>map_attr</i>	(Optional) Search map attribute
<i>map_filter</i>	(Optional) Ldap Search filter
show	Show running system information
ldap-search-map	Show LDAP configuration information

Command Mode

- /exec

show ldap-server

```
show ldap-server [ __readonly__ { global_timeout <g_timeout> } { global_port <g_port> } { global_deadtime
<g_deadtime> } { total_number_of_server <g_servers_count> } { TABLE_ldap_hosts <ldap_host>
<h_idletime> <h_test_user> <h_test_passwd> [ <h_test_dn> ] <h_timeout> <h_port> <h_rootDN>
<h_ssl_enable> } ]
```

Syntax Description

<code>__readonly__</code>	(Optional)
<code>TABLE_ldap_hosts</code>	(Optional) Ldap host configuration
<code>global_timeout</code>	(Optional) Ldap host global timeout
<code>global_port</code>	(Optional) Ldap host global port
<code>global_deadtime</code>	(Optional) Ldap host global deadtime
<code>total_number_of_server</code>	(Optional) Total number of ldap hosts configured
<code>g_servers_count</code>	(Optional) Total number of ldap hosts configured
<code>g_timeout</code>	(Optional) global timeout value
<code>g_port</code>	(Optional) Global ldap port
<code>g_deadtime</code>	(Optional) Global deadtime value
<code>ldap_host</code>	(Optional) Ldap host
<code>h_idletime</code>	(Optional) Ldap host idletime
<code>h_test_user</code>	(Optional) Ldap host testuser
<code>h_test_passwd</code>	(Optional) Ldap host password
<code>h_test_dn</code>	(Optional) Ldap testuser dn
<code>h_timeout</code>	(Optional) Ldap host timeout
<code>h_port</code>	(Optional) Ldap host port
<code>h_rootDN</code>	(Optional) Ldap host RootDN
<code>h_ssl_enable</code>	(Optional) Ldap host ssl configuration
<code>show</code>	Show running system information
<code>ldap-server</code>	Show LDAP configuration information

Command Mode

- /exec

show ldap-server groups

```
show ldap-server groups [ __readonly__ { total_number_of_groups <total_groups_count> } { TABLE_groups
<g_name> <g_vrf> <g_mode> <is_bind_and_search> <g_append_with_baseDN> <g_compare_or_bind>
<g_cmp_passwd_attr> [ <user-server-group> ] [ <Cert-DN-match> ] <auth_mechanism> [ TABLE_g_servers
<g_server> <g_port> <g_timeout> ] [ <g_search_map> ] } ]
```

Syntax Description

show	Show running system information
ldap-server	Show LDAP configuration information
groups	Show LDAP server group configuration information
<i>__readonly__</i>	(Optional)
<i>total_number_of_groups</i>	(Optional) Total number of Ldap groups configured
<i>total_groups_count</i>	(Optional) Ldap group count
TABLE_groups	(Optional) LDAP Group information
<i>g_name</i>	(Optional) Ldap group name
<i>g_vrf</i>	(Optional) LDAP group vrf
<i>g_mode</i>	(Optional) LDAP group mode
<i>is_bind_and_search</i>	(Optional) Ldap Authentication bind or search
<i>g_append_with_baseDN</i>	(Optional) LDAP baseDN append information
<i>g_compare_or_bind</i>	(Optional) LDAP bind or compare
<i>g_cmp_passwd_attr</i>	(Optional) LDAP compare password attribute
<i>user-server-group</i>	(Optional) Ldap server group validation
<i>Cert-DN-match</i>	(Optional) Ldap group CERT-DN match
<i>auth_mechanism</i>	(Optional) Ldap server group authentication mechanism
TABLE_g_servers	(Optional) LDAP group server information
<i>g_server</i>	(Optional) LDAP group host
<i>g_port</i>	(Optional) LDAP group host port
<i>g_timeout</i>	(Optional) LDAP griup host timeout
<i>g_search_map</i>	(Optional) LDAP group search map

Command Mode

- /exec

show ldap-server statistics

```
show ldap-server statistics <host0> [ __readonly__ { <server_state> [ <clock_time> { monitoring_statistics
<time_in_pstate> <ndead> <tt_in_dstate> } ] } { auth_statistics <auth_failed_transactions>
<auth_succ_transactions> <auth_req_sent> <auth_req_timedout> <auth_resp_no_match>
<auth_resp_not_processed> <auth_resp_error> } { acct_statistics <acct_failed_transactions>
<acct_succ_transactions> <acct_req_sent> <acct_req_timedout> <acct_resp_no_match>
<acct_resp_not_processed> <acct_resp_error> } } ]
```

Syntax Description

show	Show running system information
ldap-server	Show LDAP configuration information
statistics	Show LDAP statistics
<i>host0</i>	DNS name or IP address
<i>__readonly__</i>	(Optional)
<i>server_state</i>	(Optional) Show state of server
<i>clock_time</i>	(Optional) Show clock time in terms of hours, minutes and seconds
<i>monitoring_statistics</i>	(Optional) Monitoring Statistics
<i>time_in_pstate</i>	(Optional) Time in previous state
<i>ndead</i>	(Optional) Number of times dead
<i>tt_in_dstate</i>	(Optional) Total time in dead state
<i>auth_statistics</i>	(Optional) Authentication Statistics
<i>acct_statistics</i>	(Optional) Accounting Statistics
<i>auth_failed_transactions</i>	(Optional) Authentication: Failed transactions
<i>auth_succ_transactions</i>	(Optional) Authentication: Successful transactions
<i>auth_req_sent</i>	(Optional) Authentication: Requests sent
<i>auth_req_timedout</i>	(Optional) Authentication: Requests timedout
<i>auth_resp_no_match</i>	(Optional) Authentication: Responses with no matching requests
<i>auth_resp_not_processed</i>	(Optional) Authentication: Responses not processed
<i>auth_resp_error</i>	(Optional) Authentication: Responses containing errors
<i>acct_failed_transactions</i>	(Optional) Accounting: Failed transactions
<i>acct_succ_transactions</i>	(Optional) Accounting: Successful transactions

<i>acct_req_sent</i>	(Optional) Accounting: Requests sent
<i>acct_req_timeout</i>	(Optional) Accounting: Requests timeout
<i>acct_resp_no_match</i>	(Optional) Accounting: Responses with no matching requests
<i>acct_resp_not_processed</i>	(Optional) Accounting: Responses not processed
<i>acct_resp_error</i>	(Optional) Accounting: Responses containing errors

Command Mode

- /exec

show license

```
show license [ __readonly__ { [ <lic_file_name> <lic_file_contents> ] + } ]
```

Syntax Description

show	Show running system information
license	show the contents of all the license files
<i>__readonly__</i>	(Optional) Read only
<i>lic_file_name</i>	(Optional) Name of the license file
<i>lic_file_contents</i>	(Optional) License file contents

Command Mode

- /exec

show license brief

```
show license brief [ __readonly__ { [ <lic_file_name> ] + } ]
```

Syntax Description

show	Show running system information
license	show the contents of all the license files
brief	Show a list of license files
__readonly__	(Optional) Read only
<i>lic_file_name</i>	(Optional) Name of the license file

Command Mode

- /exec

show license file

```
show license file <license-file> [ __readonly__ { [ <lic_file_contents> ] + } ]
```

Syntax Description

show	Show running system information
license	Show the contents of all the license files
file	Show contents of a license file
<i>license-file</i>	Show the contents of license file __nil__ Please install a license before using this command.
<i>__readonly__</i>	(Optional) Read only
<i>lic_file_contents</i>	(Optional) License file contents

Command Mode

- /exec

show license host-id

```
show license host-id [ __readonly__ { <host_id> } ]
```

Syntax Description

show	Show running system information
license	show the contents of all the license files
host-id	Show unique id for this host for licensing
__readonly__	(Optional) Read only
<i>host_id</i>	(Optional) unique id for this host for licensing

Command Mode

- /exec

show license reserved

show license reserved

Syntax Description

show	show commands
license	Display licensing information
reserved	Display reserved licenses information

Command Mode

- /exec

show license usage

```
show license usage [ { detail | <license-feature> } ] [ __readonly__ { TABLE_show_lic_usage <feature_name>
<lic_installed> <count> <status> <expiry_date> <comments> } <application_name> ]
```

Syntax Description

show	Show running system information
license	show the contents of all the license files
usage	Show license usage table
detail	(Optional) Show license usage table
<i>license-feature</i>	(Optional) Show services using license
<i>__readonly__</i>	(Optional) Read only
TABLE_show_lic_usage	(Optional) License usage
<i>feature_name</i>	(Optional) Name of the feature
<i>lic_installed</i>	(Optional) Is the license installed?
<i>count</i>	(Optional) License count
<i>status</i>	(Optional) License status
<i>expiry_date</i>	(Optional) Expiry date of the license
<i>comments</i>	(Optional) License comments
<i>application_name</i>	(Optional) Name of the application using the license

Command Mode

- /exec

show line

```
show line [ __readonly__ <speed> <databits> <stopbits> <parity> <modem_in> <modem_init_str> <stat> [
TABLE_ps_output <ps> ] [ <speed_aux> <databits_aux> <stopbits_aux> <parity_aux> <modem_in_aux>
<modem_init_str_aux> <hw_fc_aux> <stat_aux> [ TABLE_ps_output_aux <ps_aux> ] ] ]
```

Syntax Description

show	Show running system information
line	Show the line configuration
<i>__readonly__</i>	(Optional)
TABLE_ps_output	(Optional) Process info for console login
TABLE_ps_output_aux	(Optional) Process info for com1 login
<i>speed</i>	(Optional) Port speed(baud)
<i>databits</i>	(Optional) Bits per byte
<i>stopbits</i>	(Optional) Bits
<i>parity</i>	(Optional) Parity
<i>modem_in</i>	(Optional) Modem In
<i>modem_init_str</i>	(Optional) Modem Init-String
<i>stat</i>	(Optional) Statistics
<i>ps</i>	(Optional) Login process
<i>speed_aux</i>	(Optional) Port speed(baud)
<i>databits_aux</i>	(Optional) Bits per byte
<i>stopbits_aux</i>	(Optional) Bits
<i>parity_aux</i>	(Optional) Parity
<i>modem_in_aux</i>	(Optional) Modem In
<i>modem_init_str_aux</i>	(Optional) Modem Init-String
<i>hw_fc_aux</i>	(Optional) Hardware Flowcontrol
<i>stat_aux</i>	(Optional) Statistics
<i>ps_aux</i>	(Optional) Login process

Command Mode

- /exec

show line console

```
show line console [ __readonly__ <speed> <databits> <stopbits> <parity> <modem_in> <modem_init_str>
<stat> [ TABLE_ps_output <ps> ] ]
```

Syntax Description

show	Show running system information
line	Show the line configuration
console	Show console line configurations
__readonly__	(Optional)
TABLE_ps_output	(Optional) Process info for console login
<i>speed</i>	(Optional) Port speed(baud)
<i>databits</i>	(Optional) Bits per byte
<i>stopbits</i>	(Optional) Bits
<i>parity</i>	(Optional) Parity
<i>modem_in</i>	(Optional) Modem In
<i>modem_init_str</i>	(Optional) Modem Init-String
<i>stat</i>	(Optional) Statistics
<i>ps</i>	(Optional) Login process

Command Mode

- /exec

show line console connected

show line console connected [__readonly__ <output>]

Syntax Description

show	Show running system information
line	Show the line configuration
console	Show console line configurations
connected	Show whether the line is currently connected physically
__readonly__	(Optional)
<i>output</i>	(Optional) output string

Command Mode

- /exec

show line console user-input-string

show line console user-input-string [__readonly__ <input>]

Syntax Description

show	Show running system information
line	Show the line configuration
console	Show console line configurations
user-input-string	Show user-input init string
__readonly__	(Optional)
<i>input</i>	(Optional) user input string

Command Mode

- /exec

show lisp ddt

```
show lisp ddt [ vrf { <vrf-name> | <vrf-known-name> } ]
```

Syntax Description

show	Show running system information
lisp	LISP show commands
ddt	LISP Delegated Database Tree (LISP-DDT)
vrf	(Optional) Display information for vrf
<i>vrf-name</i>	(Optional) VRF name
<i>vrf-known-name</i>	(Optional) Known VRF name

Command Mode

- /exec

show lisp ddt queue

```
show lisp ddt queue [ [ instance-id <iid> ] { <eid> | <eid6> } ] [ vrf { <vrf-name> | <vrf-known-name> } ]
```

Syntax Description

show	Show running system information
lisp	LISP show commands
ddt	LISP Delegated Database Tree (LISP-DDT)
queue	Display LISP-DDT Map-Request queue in Map-Resolver
instance-id	(Optional) Show instance-ID summary display
<i>iid</i>	(Optional) Instance-ID for EID-prefix
<i>eid</i>	(Optional) IPv4 EID address
vrf	(Optional) Display information for vrf
<i>vrf-name</i>	(Optional) VRF name
<i>vrf-known-name</i>	(Optional) Known VRF name

Command Mode

- /exec

show lisp ddt referral-cache

```
{ show lisp ddt referral-cache [ [ instance-id <iid> ] { <eid> | <eid6> } ] [ vrf { <vrf-name> | <vrf-known-name> } ] } | { show lisp ddt referral-cache { ms-ack | ms-referral | node-referral | ms-not-registered | delegation-hole | not-authoritative } [ vrf { <vrf-name> | <vrf-known-name> } ] }
```

Syntax Description

show	Show running system information
lisp	LISP show commands
ddt	LISP Delegated Database Tree (LISP-DDT)
referral-cache	Display LISP-DDT referral cache
instance-id	(Optional) Show instance-ID summary display
<i>iid</i>	(Optional) Instance-ID for EID-prefix
<i>eid</i>	(Optional) IPv4 EID address
ms-ack	Referral cache entries to map-servers
ms-referral	Referral cache entries from parent of map-servers
node-referral	Referral cache entries from parent of DDT-nodes
ms-not-registered	Referral cache entries from map-servers
delegation-hole	Referral cache entries from any DDT-node
not-authoritative	Referral cache entries from any DDT-node
vrf	(Optional) Display information for vrf
<i>vrf-name</i>	(Optional) VRF name
<i>vrf-known-name</i>	(Optional) Known VRF name

Command Mode

- /exec

show lisp dynamic-eid

```
{ show lisp dynamic-eid { summary | { [ <dyn-eid-name> ] [ detail ] } } [ vrf { <vrf-name> | <vrf-known-name> } ] }
```

Syntax Description

show	Show running system information
lisp	LISP show commands
dynamic-eid	Display dynamic-EIDs configured and discovered
summary	One-line summary display of discovered dynamic-EIDs
<i>dyn-eid-name</i>	(Optional) Display a single dynamic-EID
vrf	(Optional) Display information for vrf
<i>vrf-name</i>	(Optional) VRF name
<i>vrf-known-name</i>	(Optional) Known VRF name
detail	(Optional) Display discovered dynamic-EIDs

Command Mode

- /exec

show lisp elp

```
show lisp elp [ vrf { <vrf-name> | <vrf-known-name> } ]
```

Syntax Description

show	Show running system information
lisp	LISP show commands
elp	Display LISP Explicit Locator Paths configured
vrf	(Optional) Display information for vrf
<i>vrf-name</i>	(Optional) VRF name
<i>vrf-known-name</i>	(Optional) Known VRF name

Command Mode

- /exec

show lisp negative-prefix

```
show lisp negative-prefix { <eid> | <eid6> } [ vrf { <vrf-name> | <vrf-known-name> } ]
```

Syntax Description

show	Show running system information
lisp	LISP show commands
negative-prefix	Compute negative-prefix for hole in EID space
<i>eid</i>	IPv4 EID address
vrf	(Optional) Display information for vrf
<i>vrf-name</i>	(Optional) VRF name
<i>vrf-known-name</i>	(Optional) Known VRF name

Command Mode

- /exec

show lisp proxy-itr

```
show lisp proxy-itr [ vrf { <vrf-name> | <vrf-known-name> } ]
```

Syntax Description

show	Show running system information
lisp	LISP show commands
proxy-itr	Display discovered proxy-ITRs (PITRs)
vrf	(Optional) Display information for vrf
<i>vrf-name</i>	(Optional) VRF name
<i>vrf-known-name</i>	(Optional) Known VRF name

Command Mode

- /exec

show lisp site

```
{ show lisp site [ { { <eid> | <eid6> } [ instance-id <iid> ] } | { { <eid-prefix> | <eid-prefix6> } [ instance-id <iid> ] } | <site-name> ] [ detail ] [ vrf { <vrf-name> | <vrf-known-name> } ] }
```

Syntax Description

show	Show running system information
lisp	LISP show commands
site	Display Map-Server site EID-prefixes configured
vrf	(Optional) Display information for vrf
<i>vrf-name</i>	(Optional) VRF name
<i>vrf-known-name</i>	(Optional) Known VRF name
<i>eid</i>	(Optional) Display mapping for IP destination EID
<i>eid-prefix</i>	(Optional) Display exact match for IP EID-prefix entry
instance-id	(Optional) Instance EID-prefix registered in
<i>iid</i>	(Optional) Instance-ID value
<i>site-name</i>	(Optional) Display a single site
detail	(Optional) Display allowed registered locator sources

Command Mode

- /exec

show lisp site instance-id

```
{ show lisp site instance-id [ <iid> ] [ vrf { <vrf-name> | <vrf-known-name> } ] }
```

Syntax Description

show	Show running system information
lisp	LISP show commands
site	Display Map-Server site EID-prefixes configured
instance-id	Show instance-ID summary display
<i>iid</i>	(Optional) Show detail for entries of a single Instance-ID
vrf	(Optional) Display information for vrf
<i>vrf-name</i>	(Optional) VRF name
<i>vrf-known-name</i>	(Optional) Known VRF name

Command Mode

- /exec

show lisp smr

```
show lisp smr [ vrf { <vrf-name> | <vrf-known-name> } ]
```

Syntax Description

show	Show running system information
lisp	LISP show commands
smr	Display SMR state for dynamic-EIDs
vrf	(Optional) Display information for vrf
<i>vrf-name</i>	(Optional) VRF name
<i>vrf-known-name</i>	(Optional) Known VRF name

Command Mode

- /exec

show lisp stats-cache

```
show lisp stats-cache [ vrf { <vrf-name> | <vrf-known-name> } ]
```

Syntax Description

show	Show running system information
lisp	LISP show commands
stats-cache	Show dynamic statistics cache
vrf	(Optional) Display per-VRF information
<i>vrf-name</i>	(Optional) VRF name
<i>vrf-known-name</i>	(Optional) Known VRF name

Command Mode

- /exec

show lldp all

show lldp all [*__readonly__* *TABLE_lldp_all* <*intf_desc*> <*lldp_tx*> <*lldp_rx*> <*lldp_dcbx*>]

Syntax Description

show	Show running system information
lldp	Show lldp Protocol information
all	Show all interfaces in lldp database
<i>__readonly__</i>	(Optional) Read only
<i>TABLE_lldp_all</i>	(Optional) output of show lldp all
<i>intf_desc</i>	(Optional) Interface desc
<i>lldp_tx</i>	(Optional) lldp tx status
<i>lldp_rx</i>	(Optional) lldp rx status
<i>lldp_dcbx</i>	(Optional) lldp dcbx status

Command Mode

- /exec

show lldp dcbx interface

```
show lldp dcbx interface <if0> [ __readonly__ <interface> [ <l_op_ver> <l_max_ver> <l_seq_no> <l_ack_no>
[ <l_feature> <l_cfg_len> <l_cfg> ]+ ] [ <p_op_ver> <p_max_ver> <p_seq_no> <p_ack_no> [ <p_tlv_type>
<p_tlv_len> <p_tlv_value> ]+ ] ]
```

Syntax Description

show	Show running system information
lldp	Show information about lldp
dcbx	Show dcbx information
interface	Show lldp interface information
<i>if0</i>	Enter interface
<i>__readonly__</i>	(Optional)
<i>interface</i>	(Optional) Interface ID
<i>l_op_ver</i>	(Optional) local dcbx control operation version
<i>l_max_ver</i>	(Optional) local dcbx control maximum version
<i>l_seq_no</i>	(Optional) local dcbx control seq no
<i>l_ack_no</i>	(Optional) local dcbx control ack no
<i>l_feature</i>	(Optional) local feature
<i>l_cfg_len</i>	(Optional) local feature config length
<i>l_cfg</i>	(Optional) local feature config
<i>p_op_ver</i>	(Optional) peer dcbx control operation version
<i>p_max_ver</i>	(Optional) peer dcbx control maximum version
<i>p_seq_no</i>	(Optional) peer dcbx control seq no
<i>p_ack_no</i>	(Optional) peer dcbx control ack no
<i>p_tlv_type</i>	(Optional) peer TLV type field
<i>p_tlv_len</i>	(Optional) peer TLV len field
<i>p_tlv_value</i>	(Optional) peer TLV value field

Command Mode

- /exec

show lldp entry

```
show lldp entry [ <sys-name> ] [ __readonly__ { <neigh_hdr> } { TABLE_entry <chassis_type> <chassis_id>
<port_type> <port_id> <l_port_id> <port_desc> <sys_name> <sys_desc> <ttl> <capability>
<mgmt_addr_type> <mgmt_addr> <mgmt_addr_ipv6_type> <mgmt_addr_ipv6> <vlan_id> } { <neigh_count>
} ]
```

Syntax Description

show	Show running system information
lldp	Show information about lldp
entry	Show lldp entry information
<i>sys-name</i>	(Optional) WORD Peer's System name
<i>__readonly__</i>	(Optional)
<i>neigh_hdr</i>	(Optional)
TABLE_entry	(Optional) Table Entry
<i>chassis_type</i>	(Optional) Chassis ID type
<i>chassis_id</i>	(Optional) Chassis ID
<i>port_type</i>	(Optional) Port ID type
<i>port_id</i>	(Optional) Port ID
<i>l_port_id</i>	(Optional) Port ID
<i>port_desc</i>	(Optional) Port description
<i>sys_name</i>	(Optional) System name
<i>sys_desc</i>	(Optional) System description
<i>ttl</i>	(Optional) Time to live
<i>capability</i>	(Optional) Capability
<i>mgmt_addr_type</i>	(Optional) Management Address type
<i>mgmt_addr</i>	(Optional) Management Address
<i>mgmt_addr_ipv6_type</i>	(Optional) IPV6 Management Address type
<i>mgmt_addr_ipv6</i>	(Optional) IPV6 Management Address
<i>vlan_id</i>	(Optional) Vlan ID
<i>neigh_count</i>	(Optional)

Command Mode

- /exec

show lldp interface

```
show lldp interface <if0> [ __readonly__ <interface> <tx_en> <rx_en> <dcbx_en> <port_mac> [ <tlv_type>
<tlv_len> <tlv_value> ] + [ <l_op_ver> <l_max_ver> <l_seq_no> <l_ack_no> [ <l_feature> <l_cfg_len>
<l_cfg> ] + ] [ <p_op_ver> <p_max_ver> <p_seq_no> <p_ack_no> [ <p_tlv_type> <p_tlv_len> <p_tlv_value>
] + ] ]
```

Syntax Description

show	Show running system information
lldp	Show information about lldp
interface	Show lldp interface information
<i>if0</i>	Enter interface
<i>__readonly__</i>	(Optional)
<i>interface</i>	(Optional) Interface ID
<i>tx_en</i>	(Optional) tx enable
<i>rx_en</i>	(Optional) rx enable
<i>dcbx_en</i>	(Optional) dcbox enable
<i>port_mac</i>	(Optional) Port mac address
<i>tlv_type</i>	(Optional) TLV type field
<i>tlv_len</i>	(Optional) TLV len field
<i>tlv_value</i>	(Optional) TLV value field
<i>l_op_ver</i>	(Optional) local dcbox control operation version
<i>l_max_ver</i>	(Optional) local dcbox control maximum version
<i>l_seq_no</i>	(Optional) local dcbox control seq no
<i>l_ack_no</i>	(Optional) local dcbox control ack no
<i>l_feature</i>	(Optional) local feature
<i>l_cfg_len</i>	(Optional) local feature config length
<i>l_cfg</i>	(Optional) local feature config
<i>p_op_ver</i>	(Optional) peer dcbox control operation version
<i>p_max_ver</i>	(Optional) peer dcbox control maximum version
<i>p_seq_no</i>	(Optional) peer dcbox control seq no

<i>p_ack_no</i>	(Optional) peer dcbx control ack no
<i>p_tlv_type</i>	(Optional) peer TLV type field
<i>p_tlv_len</i>	(Optional) peer TLV len field
<i>p_tlv_value</i>	(Optional) peer TLV value field

Command Mode

- /exec

show lldp neighbors

```
show lldp neighbors [ interface <if> ] [ __readonly__ { <neigh_hdr> } { TABLE_nbor <chassis_type>
<chassis_id> <l_port_id> <tll> <capability> <system_capability> <enabled_capability> <port_type> <port_id>
<mgmt_addr_type> <mgmt_addr> <mgmt_addr_ipv6_type> <mgmt_addr_ipv6> } { <neigh_count> } ]
```

Syntax Description

show	Show running system information
lldp	Show information about lldp
neighbors	Show lldp neighbor information
interface	(Optional) Show lldp neighbor information on an interface
<i>if</i>	(Optional) Enter interface
<i>__readonly__</i>	(Optional)
<i>neigh_hdr</i>	(Optional)
TABLE_nbor	(Optional) Neighbor Table
<i>chassis_type</i>	(Optional) Chassis ID type
<i>chassis_id</i>	(Optional) Chassis ID
<i>l_port_id</i>	(Optional) Local port ID
<i>tll</i>	(Optional) Time to live
<i>capability</i>	(Optional) Capability
<i>system_capability</i>	(Optional) System Capability
<i>enabled_capability</i>	(Optional) Enabled Capability
<i>port_type</i>	(Optional) Port ID type
<i>port_id</i>	(Optional) Port ID
<i>mgmt_addr_type</i>	(Optional) Management Address type
<i>mgmt_addr</i>	(Optional) Management Address
<i>mgmt_addr_ipv6_type</i>	(Optional) IPV6 Management Address type
<i>mgmt_addr_ipv6</i>	(Optional) IPV6 Management Address
<i>neigh_count</i>	(Optional)

Command Mode

- /exec

show lldp neighbors detail

```
show lldp neighbors [ interface <if> ] detail [ __readonly__ { <neigh_hdr> } { TABLE_nbor_detail
<chassis_type> <chassis_id> <port_type> <port_id> <l_port_id> <port_desc> <sys_name> <sys_desc> <ttl>
<capability> <system_capability> <enabled_capability> <mgmt_addr_type> <mgmt_addr>
<mgmt_addr_ipv6_type> <mgmt_addr_ipv6> <vlan_id> <invalid_vlan_id> } { <neigh_count> } ]
```

Syntax Description

show	Show running system information
lldp	Show information about lldp
neighbors	Show lldp neighbor information
interface	(Optional) Show lldp neighbor information on an interface
<i>if</i>	(Optional) Enter interface
detail	Show lldp neighbor detail information
<i>__readonly__</i>	(Optional)
<i>neigh_hdr</i>	(Optional)
TABLE_nbor_detail	(Optional) Neighbor detail Table
<i>chassis_type</i>	(Optional) Chassis ID type
<i>chassis_id</i>	(Optional) Chassis ID
<i>port_type</i>	(Optional) Port ID type
<i>port_id</i>	(Optional) Port ID
<i>l_port_id</i>	(Optional) Port ID
<i>port_desc</i>	(Optional) Port description
<i>sys_name</i>	(Optional) System name
<i>sys_desc</i>	(Optional) System description
<i>ttl</i>	(Optional) Time to live
<i>capability</i>	(Optional) Capability
<i>system_capability</i>	(Optional) System Capability
<i>enabled_capability</i>	(Optional) Enabled Capability
<i>mgmt_addr_type</i>	(Optional) Management Address type
<i>mgmt_addr</i>	(Optional) Management Address

<i>mgmt_addr_ipv6_type</i>	(Optional) IPV6 Management Address type
<i>mgmt_addr_ipv6</i>	(Optional) IPV6 Management Address
<i>vlan_id</i>	(Optional) Vlan ID
<i>invalid_vlan_id</i>	(Optional) Invalid Vlan ID
<i>neigh_count</i>	(Optional)

Command Mode

- /exec

show lldp neighbors system-detail

```
show lldp neighbors [ interface <if> ] system-detail [ __readonly__ { <neigh_hdr> } { TABLE_nbor_sys_detail
<sys_type> <sys_name> <l_port_id> <chassis_type> <chassis_id> <port_type> <port_id> <ttl> <capability>
<mgmt_addr_type> <mgmt_addr> } { <neigh_count> } ]
```

Syntax Description

show	Show running system information
lldp	Show information about lldp
neighbors	Show lldp neighbor information
interface	(Optional) Show lldp neighbor information on an interface
<i>if</i>	(Optional) Enter interface
system-detail	Show lldp neighbor system detail information
<i>__readonly__</i>	(Optional)
<i>neigh_hdr</i>	(Optional)
TABLE_nbor_sys_detail	(Optional) Neighbor sys-detail Table
<i>sys_type</i>	(Optional) System Type
<i>sys_name</i>	(Optional) System Name
<i>l_port_id</i>	(Optional) Local port ID
<i>chassis_type</i>	(Optional) Chassis ID type
<i>chassis_id</i>	(Optional) Chassis ID
<i>port_type</i>	(Optional) Port ID type
<i>port_id</i>	(Optional) Port ID
<i>ttl</i>	(Optional) Time to live
<i>capability</i>	(Optional) Capability
<i>mgmt_addr_type</i>	(Optional) Management Address type
<i>mgmt_addr</i>	(Optional) Management Address
<i>neigh_count</i>	(Optional)

Command Mode

- /exec

show lldp portid-subtype

```
show lldp portid-subtype [ __readonly__ <portid_subtype> ]
```

Syntax Description

show	Show running system information
lldp	Show information about lldp
portid-subtype	Show lldp portid-subtype
__readonly__	(Optional)
<i>portid_subtype</i>	(Optional) portid-subtype for LLDP TLV and MIBs

Command Mode

- /exec

show lldp timers

```
show lldp timers [ __readonly__ <ttl> <reinit> <tx_interval> <tx_delay> <hold_mplier> <notification_interval> ]
```

Syntax Description

show	Show running system information
lldp	Show information about lldp
timers	Show lldp timers
<i>__readonly__</i>	(Optional)
<i>ttl</i>	(Optional) Time to Live for lldp info
<i>reinit</i>	(Optional) Interface reinit timer
<i>tx_interval</i>	(Optional) Wait interval between successive transmit
<i>tx_delay</i>	(Optional) Delay between successive frame transmissions
<i>hold_mplier</i>	(Optional) Hold multiplier for ttl
<i>notification_interval</i>	(Optional) Notification interval for SNMP trap

Command Mode

- /exec

show lldp tlv-select

```
show lldp tlv-select [ __readonly__ <management-address-v4> <management-address-v6> <port-description>
<port-vlan> <system-capabilities> <system-description> <system-name> <dcbpx> ]
```

Syntax Description

show	Show running system information
lldp	Show information about lldp
tlv-select	Show lldp tlv-select
<i>__readonly__</i>	(Optional)
<i>management-address-v4</i>	(Optional) Management address v4
<i>management-address-v6</i>	(Optional) Management address v6
<i>port-description</i>	(Optional) Port description
<i>port-vlan</i>	(Optional) Port vlan
<i>system-capabilities</i>	(Optional) System capabilities
<i>system-description</i>	(Optional) System description
<i>system-name</i>	(Optional) System name
<i>dcbpx</i>	(Optional) DCBXP

Command Mode

- /exec

show lldp traffic

show lldp traffic [*__readonly__* <*tx_cnt*> <*aged_cnt*> <*rx_cnt*> <*rx_err*> <*disc_cnt*> <*unrecognized_tlv*>]

Syntax Description

show	Show running system information
lldp	Show information about lldp
traffic	Show lldp counters
<i>__readonly__</i>	(Optional)
<i>tx_cnt</i>	(Optional) Transmit count
<i>aged_cnt</i>	(Optional) Aged out count
<i>rx_cnt</i>	(Optional) Received count
<i>rx_err</i>	(Optional) Received error count
<i>disc_cnt</i>	(Optional) Disconnect count
<i>unrecognized_tlv</i>	(Optional) Unrecognized TLV count

Command Mode

- /exec

show lldp traffic interface

```
show lldp traffic interface <if> [ __readonly__ <interface> <tx_cnt> <aged_cnt> <rx_cnt> <rx_err> <disc_cnt>
<unrecognized_tlv> ]
```

Syntax Description

show	Show running system information
lldp	Show information about lldp
traffic	Show lldp counters
interface	Show lldp traffic counters on an interface
<i>if</i>	Enter interface
<i>__readonly__</i>	(Optional)
<i>interface</i>	(Optional) Interface ID
<i>tx_cnt</i>	(Optional) Transmit count
<i>aged_cnt</i>	(Optional) Aged out count
<i>rx_cnt</i>	(Optional) Received count
<i>rx_err</i>	(Optional) Received error count
<i>disc_cnt</i>	(Optional) Disconnect count
<i>unrecognized_tlv</i>	(Optional) Unrecognized TLV count

Command Mode

- /exec

show locator-led status

show locator-led status [__readonly__ { TABLE_loc_led_stat <component> <status> }]

Syntax Description

show	Show running system information
locator-led	blink locator led on device
status	status
__readonly__	(Optional)
TABLE_loc_led_stat	(Optional)
<i>component</i>	(Optional)
<i>status</i>	(Optional)

Command Mode

- /exec

show locator-led status

show locator-led status

Syntax Description

show	Show running system information
locator-led	Blink locator LED on device
status	View which modules have locator LED set

Command Mode

- /exec

show logging

show logging

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile

Command Mode

- /exec

show logging console

show logging console

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
console	Show console logging configuration

Command Mode

- /exec

show logging info

```
show logging info [ __readonly__ { <console_status> [ <console_severity> ] } { <monitor_status> [
<monitor_severity> ] } { <linecard_status> [ <linecard_severity> ] } { <log_timestamp> } [ {
<source_interface_status> } [ <source_interface_intf> | <source_interface_intf_index> <source_interface_error>
] ] { <server_status> [ { TABLE_logserver <server> <forwarding> <severity> <facility> <vrf> <port> } ] } { {
<origin_id_status> } [ <origin_id> ] } [ [ <logflash_status> ] [ <logflash_severity> ] ] { <logfile_status> [
<logfile_name> <logfile_severity> <logfile_size> ] } { { TABLE_facility <fac_name> <def_level> <cur_level>
} { <fac_info> } } ]
```

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
info	Show logging configuration
<i>__readonly__</i>	(Optional)
<i>console_status</i>	(Optional) console logging status
<i>console_severity</i>	(Optional) console logging level
<i>monitor_status</i>	(Optional) monitor logging status
<i>monitor_severity</i>	(Optional) monitor logging level
<i>linecard_status</i>	(Optional) linecard logging status
<i>linecard_severity</i>	(Optional) linecard logging level
<i>log_timestamp</i>	(Optional) timestamp unit
<i>source_interface_status</i>	(Optional) source-interface logging status
<i>source_interface_intf</i>	(Optional) source-interface interface
<i>server_status</i>	(Optional) logging server status
TABLE_logserver	(Optional) output of show logging server
<i>origin_id_status</i>	(Optional) origin-id status
<i>origin_id</i>	(Optional) origin-id
<i>logflash_status</i>	(Optional) logflash status
<i>logflash_severity</i>	(Optional) logflash level
<i>logfile_status</i>	(Optional) logfile status
TABLE_facility	(Optional) output of show logging level(facility)
<i>fac_info</i>	(Optional) level info

Command Mode

- /exec

show logging ip access-list cache

```
show logging ip access-list cache [ detail ] [ __readonly__ <disp_flags> <sgt> <src_ip> <dst_ip> <src_port>
<dst_port> <if_index> <proto> <hit_cnt> <acl_name> <acl_num> <acl_permit> <acl_ingress> <acl_type>
<acl_appl_if_index> <acl_fltr_hit_cnt> ]
```

Syntax Description

show	Show running system information
logging	logging information
ip	IP configuration
access-list	Access-list
cache	logging
detail	(Optional) Show additional details about entries in cache
<i>__readonly__</i>	(Optional)
<i>disp_flags</i>	(Optional) Display flags
<i>sgt</i>	(Optional) SGT
<i>src_ip</i>	(Optional) Source IP
<i>dst_ip</i>	(Optional) Dest IP
<i>src_port</i>	(Optional) Source port
<i>dst_port</i>	(Optional) Dest port
<i>if_index</i>	(Optional) Interface
<i>proto</i>	(Optional) Protocol
<i>hit_cnt</i>	(Optional) Hits
<i>acl_name</i>	(Optional) ACL Name
<i>acl_num</i>	(Optional) ACL Number
<i>acl_permit</i>	(Optional) ACL Permit
<i>acl_ingress</i>	(Optional) ACL Ingress
<i>acl_type</i>	(Optional) ACL Filter Type
<i>acl_appl_if_index</i>	(Optional) ACL Applied Interface
<i>acl_fltr_hit_cnt</i>	(Optional) ACL Filter Count

Command Mode

- /exec

show logging ip access-list status

show logging ip access-list status [*__readonly__* <num_entries> <seconds> <num_packets>]

Syntax Description

show	Show running system information
logging	logging information
ip	IP configuration
access-list	Access-list
status	ACLLOG status
<i>__readonly__</i>	(Optional)
<i>num_entries</i>	(Optional) Max flows
<i>seconds</i>	(Optional) Log-update interval in seconds
<i>num_packets</i>	(Optional) threshold

Command Mode

- /exec

show logging last

show logging last <i0>

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
last	Show last few lines of logfile
<i>i0</i>	Enter number of lines to display

Command Mode

- /exec

show logging level

show logging level [{ auth | authpriv | cron | daemon | ftp | kernel | local0 | local1 | local2 | local3 | local4 | local5 | local6 | local7 | lpr | mail | news | syslog | user | uucp }]

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
auth	(Optional) Show Authorization System logging configuration
authpriv	(Optional) Show Authorization (Private) logging configuration
cron	(Optional) Show Cron/at facility logging configuration
daemon	(Optional) Show System daemons logging configuration
ftp	(Optional) Show File Transfer System logging configuration
kernel	(Optional) Show kernel logging configuration
local0	(Optional) Show Local use daemons logging configuration
local1	(Optional) Show Local use daemons logging configuration
local2	(Optional) Show Local use daemons logging configuration
local3	(Optional) Show Local use daemons logging configuration
local4	(Optional) Show Local use daemons logging configuration
local5	(Optional) Show Local use daemons logging configuration
local6	(Optional) Show Local use daemons logging configuration
local7	(Optional) Show Local use daemons logging configuration
lpr	(Optional) Show Line Printer System logging configuration
mail	(Optional) Show Mail System logging configuration
news	(Optional) Show USENET news logging configuration
syslog	(Optional) Show Internal Syslog Messages logging configuration
user	(Optional) Show user process logging configuration
uucp	(Optional) Show Unix-to-Unix copy system logging configuration

Command Mode

- /exec

show logging level aaa

show logging level aaa

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
aaa	Show aaa logging configuration

Command Mode

- /exec

show logging level aclog

show logging level aclog

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
aclog	Show aclog logging configuration

Command Mode

- /exec

show logging level aclmgr

show logging level aclmgr

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
aclmgr	Show aclmgr logging configuration

Command Mode

- /exec

show logging level adbm

show logging level adbm

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
adbm	Show adbm logging configuration

Command Mode

- /exec

show logging level adjmgr

show logging level adjmgr

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
adjmgr	Show adjmgr logging configuration

Command Mode

- /exec

show logging level amt

show logging level amt

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
amt	Show amt logging configuration

Command Mode

- /exec

show logging level arp

show logging level arp

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
arp	Show arp logging configuration

Command Mode

- /exec

show logging level ascii-cfg

show logging level ascii-cfg

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
ascii-cfg	Show ascii-cfg logging configuration

Command Mode

- /exec

show logging level bfd

show logging level bfd

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
bfd	Show bfd logging configuration

Command Mode

- /exec

show logging level bgp

show logging level bgp

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
bgp	Show BGP logging configuration

Command Mode

- /exec

show logging level bloggerd

show logging level bloggerd

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
bloggerd	Show BloggerD logging configuration

Command Mode

- /exec

show logging level bootvar

show logging level bootvar

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
bootvar	Show bootvar logging configuration

Command Mode

- /exec

show logging level callhome

show logging level callhome

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
callhome	Show callhome logging configuration

Command Mode

- /exec

show logging level capability

show logging level capability

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
capability	Show capability logging configuration

Command Mode

- /exec

show logging level cdp

show logging level cdp

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
cdp	Show CDP logging configuration

Command Mode

- /exec

show logging level cert-enroll

show logging level cert-enroll

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
cert-enroll	Show Cert-enroll logging configuration

Command Mode

- /exec

show logging level cert_enroll

show logging level cert_enroll

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
cert_enroll	Show Cert-enroll logging configuration

Command Mode

- /exec

show logging level cfs

show logging level cfs

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration

Command Mode

- /exec

show logging level clis

show logging level clis

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
clis	Show CLIS logging configuration

Command Mode

- /exec

show logging level clk_mgr

show logging level clk_mgr

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
clk_mgr	Show clock manager logging configuration

Command Mode

- /exec

show logging level confcheck

show logging level confcheck

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
confcheck	Show confcheck logging configuration

Command Mode

- /exec

show logging level copp

show logging level copp

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
copp	Show copp logging configuration

Command Mode

- /exec

show logging level core

show logging level core

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
core	Show core daemon logging configuration

Command Mode

- /exec

show logging level cts

show logging level cts

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
cts	Show cts logging configuration

Command Mode

- /exec

show logging level dhcp_snoop

show logging level dhcp_snoop

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
dhcp_snoop	Show DHCP snoop logging configuration

Command Mode

- /exec

show logging level diagnostic device_test

show logging level diagnostic device_test

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
diagnostic	Diagnostic commands
device_test	Show device_test logging configuration

Command Mode

- /exec

show logging level diagnostic diagclient

show logging level diagnostic diagclient

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
diagnostic	Diagnostic commands
diagclient	Show diagclient logging configuration

Command Mode

- /exec

show logging level diagnostic diagmgr

show logging level diagnostic diagmgr

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
diagnostic	Diagnostic commands
diagmgr	Show diagmgr logging configuration

Command Mode

- /exec

show logging level dot1x

show logging level dot1x

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
dot1x	Show dot1x logging configuration

Command Mode

- /exec

show logging level eigrp

show logging level eigrp [<eigrp-ptag>]

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
eigrp	Show EIGRP logging configuration
<i>eigrp-ptag</i>	(Optional) Process tag

Command Mode

- /exec

show logging level eltm

show logging level eltm

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
eltn	Show eltn logging configuration

Command Mode

- /exec

show logging level ethdstats

show logging level ethdstats

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
ethdstats	Show delta statistics logging configuration

Command Mode

- /exec

show logging level ethpm

show logging level ethpm

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
ethpm	Show ethpm logging configuration

Command Mode

- /exec

show logging level evb

show logging level evb

Syntax Description

show	Show running system information
logging	Modify message logging facilities
level	Facility parameter for syslog messages
evb	Set syslog filter level for EVB

Command Mode

- /exec

show logging level evmc

show logging level evmc

Syntax Description

show	Show running system information
logging	Show message logging facilities
level	Show facility logging configuration
evmc	Show level for evmc syslog messages

Command Mode

- /exec

show logging level evmed

show logging level evmed

Syntax Description

show	Show running system information
logging	Show message logging facilities
level	Show facility logging configuration
evmed	Show level for evmed syslog messages

Command Mode

- /exec

show logging level evms

show logging level evms

Syntax Description

show	Show running system information
logging	Show message logging facilities
level	Show facility logging configuration
evms	Show level for evms syslog messages

Command Mode

- /exec

show logging level fabric forwarding

show logging level fabric forwarding

Syntax Description

show	Show running system information
logging	Modify message logging facilities
level	Facility parameter for syslog messages
fabric	Fabric
forwarding	Fabric Forwarding Protocol: Host Mobility Manager (HMM)

Command Mode

- /exec

show logging level fabricpath isis

show logging level fabricpath isis

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
fabricpath	Show fabricpath logging configuration
isis	Show ISIS logging configuration

Command Mode

- /exec

show logging level fabricpath switch-id

show logging level fabricpath switch-id

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
fabricpath	fabricpath information
switch-id	show fabricpath switch-id logging configuration

Command Mode

- /exec

show logging level feature-mgr

show logging level feature-mgr

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
feature-mgr	Show feature manager logging configuration

Command Mode

- /exec

show logging level fex

show logging level fex

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration

Command Mode

- /exec

show logging level fs-daemon

show logging level fs-daemon

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
fs-daemon	Show fs-daemon logging configuration

Command Mode

- /exec

show logging level glbp

show logging level glbp

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
glbp	Show glbp logging settings

Command Mode

- /exec

show logging level gpixm

show logging level gpixm

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
gpixm	Show global-pixm logging configuration

Command Mode

- /exec

show logging level hsrp

show logging level hsrp

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
hsrp	Show HSRP logging configuration

Command Mode

- /exec

show logging level im

show logging level im

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
im	Show im logging configuration

Command Mode

- /exec

show logging level imp

show logging level imp

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
imp	Show imp logging configuration

Command Mode

- /exec

show logging level interface-vlan

show logging level interface-vlan

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
interface-vlan	Show interface-vlan logging configuration

Command Mode

- /exec

show logging level ip igmp

show logging level ip igmp

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
ip	Display IP information
igmp	Show igmp logging configuration

Command Mode

- /exec

show logging level ip msdp

show logging level ip msdp

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
ip	Display IP information
msdp	Show msdp logging configuration

Command Mode

- /exec

show logging level ip sla responder

show logging level ip sla responder

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
ip	
sla	Service Level Agreement (SLA)
responder	Show sla-responder logging configuration

Command Mode

- /exec

show logging level ip sla sender

show logging level ip sla sender

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
ip	
sla	Service Level Agreement (SLA)
sender	Show sla-sender logging configuration

Command Mode

- /exec

show logging level ipconf

show logging level ipconf [ipv6]

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
ipconf	Show ipconf logging configuration
ipv6	(Optional) Show ipv6 Conf logging configuration

Command Mode

- /exec

show logging level ipfib

show logging level ipfib

Syntax Description

show	show
logging	logging
level	level
ipfib	ipfib

Command Mode

- /exec

show logging level ipqos

show logging level ipqos

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration

Command Mode

- /exec

show logging level ipv6 icmp

show logging level ipv6 icmp

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
ipv6	Configure IPv6 features
icmp	Show icmpv6 logging configuration

Command Mode

- /exec

show logging level iscm

show logging level iscm

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
iscm	Show iscm logging configuration

Command Mode

- /exec

show logging level iscm

show logging level iscm

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
iscm	Show iscm logging configuration

Command Mode

- /exec

show logging level isis

show logging level isis

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
isis	Show ISIS logging configuration

Command Mode

- /exec

show logging level keystore

show logging level { keystore | sksd }

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
keystore	Show Keystore logging configuration
sksd	show Keystore/sksd logging configuration

Command Mode

- /exec

show logging level l2fm

show logging level l2fm

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
l2fm	Show l2fm logging configuration

Command Mode

- /exec

show logging level l3vm

show logging level l3vm

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
l3vm	Show L3VM logging configuration

Command Mode

- /exec

show logging level lacp

show logging level lacp

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
lacp	Show lacp logging configuration

Command Mode

- /exec

show logging level ldap

show logging level ldap

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
ldap	Show ldap logging configuration

Command Mode

- /exec

show logging level license

show logging level { license | licmgr }

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
license	Show Licensing logging configuration
licmgr	Show Licensing logging configuration

Command Mode

- /exec

show logging level lim

show logging level lim

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
lim	Show lim logging configuration

Command Mode

- /exec

show logging level lisp

show logging level lisp

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
lisp	Show lisp logging configuration

Command Mode

- /exec

show logging level lldp

show logging level lldp

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
lldp	Show LLDP logging configuration

Command Mode

- /exec

show logging level m2rib

show logging level m2rib

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
m2rib	Show M2RIB logging configuration

Command Mode

- /exec

show logging level mfdm

show logging level mfdm

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
mfdm	Show mfdm logging configuration

Command Mode

- /exec

show logging level mfwd

show logging level mfwd

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
mfwd	Show MCASTFWD logging configuration

Command Mode

- /exec

show logging level mmode

show logging level mmode

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
mmode	Show maintenance mode logging configuration

Command Mode

- /exec

show logging level module

show logging level module

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
module	Show module(linecard) manager logging configuration

Command Mode

- /exec

show logging level monitor

show logging level monitor

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
monitor	Show monitor logging configuration

Command Mode

- /exec

show logging level mpls ldp

show logging level mpls ldp

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
mpls	Display MPLS status and configuration
ldp	Show LDP logging configuration

Command Mode

- /exec

show logging level mpls manager

show logging level mpls manager

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
mpls	Show MPLS logging configuration
manager	Show MPLS manager logging configuration

Command Mode

- /exec

show logging level mpls switching

show logging level mpls switching

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
mpls	Show MPLS logging configuration
switching	Show mpls switching logging configuration

Command Mode

- /exec

show logging level mpls traffic-eng

show logging level mpls traffic-eng

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
mpls	Display MPLS status and configuration
traffic-eng	Show Traffic Engineering logging configuration

Command Mode

- /exec

show logging level mvsh

show logging level mvsh

Syntax Description

show	Show commands
logging	Show message logging facilities
level	Show message logging facilities
mvsh	Show level for mvsh syslog messages

Command Mode

- /exec

show logging level nat

show logging level nat

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
nat	Show NAT logging configurarion

Command Mode

- /exec

show logging level nbm

show logging level nbm

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
nbm	Show Non Blocking Multicast logging configuration

Command Mode

- /exec

show logging level netstack

show logging level netstack

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
netstack	Show netstack logging configuration

Command Mode

- /exec

show logging level nfm

show logging level nfm

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
nfm	Show NFM logging configuration

Command Mode

- /exec

show logging level ngoam

show logging level ngoam

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
ngoam	Show ngoam logging level

Command Mode

- /exec

show logging level ntp

show logging level ntp

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
ntp	Show NTP logging settings.

Command Mode

- /exec

show logging level nve

show logging level nve

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
nve	Show NVE logging configuration

Command Mode

- /exec

show logging level nxsdk

show logging level nxsdk

Syntax Description

show	Show running system information
logging	Modify message logging facilities
level	Facility parameter for syslog messages
nxsdk	NXOS SDK

Command Mode

- /exec

show logging level onep

show logging level onep

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
onep	One Platform

Command Mode

- /exec

show logging level ospf

show logging level ospf

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
ospf	Show OSPF logging configuration

Command Mode

- /exec

show logging level ospfv3

show logging level ospfv3

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
ospfv3	Display OSPFv3 status and configuration

Command Mode

- /exec

show logging level otv

show logging level otv

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
otv	Show OTV logging configuration

Command Mode

- /exec

show logging level pfstat

show logging level pfstat

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
pfstat	Show pfstat logging configuration

Command Mode

- /exec

show logging level pim

show logging level [ipv6] pim

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
ipv6	(Optional) Display IPv6 information
pim	Show pim6 logging configuration

Command Mode

- /exec

show logging level pim

show logging level [ip] pim

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
ip	(Optional) Display IP information
pim	Show pim logging configuration

Command Mode

- /exec

show logging level pixm

show logging level pixm

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
pixm	Show vdc-local-pixm logging configuration

Command Mode

- /exec

show logging level pktmgr

show logging level pktmgr

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
pktmgr	Show pktmgr logging configuration

Command Mode

- /exec

show logging level platform

show logging level platform

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
platform	Show platform logging configuration

Command Mode

- /exec

show logging level plcmgr

show logging level plcmgr

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration

Command Mode

- /exec

show logging level pltfm_config

show logging level pltfm_config

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
pltfm_config	Show pltfm_config logging configuration

Command Mode

- /exec

show logging level plugin

show logging level plugin

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
plugin	Show plugin logging configuration

Command Mode

- /exec

show logging level poap

show logging level poap

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
poap	Show poap logging configuration

Command Mode

- /exec

show logging level port-channel

show logging level port-channel

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
port-channel	Show port-channel logging configuration

Command Mode

- /exec

show logging level port-profile

show logging level port-profile

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
port-profile	Show syslog level for port-profile

Command Mode

- /exec

show logging level port-security

show logging level port-security

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
port-security	Show port-security logging configuration

Command Mode

- /exec

show logging level private-vlan

show logging level private-vlan

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
private-vlan	Show interface-vlan logging configuration

Command Mode

- /exec

show logging level ptp

show logging level ptp

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
ptp	Show ptp logging configuration

Command Mode

- /exec

show logging level radius

show logging level radius

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
radius	Show radius logging configuration

Command Mode

- /exec

show logging level res_mgr

show logging level res_mgr

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
res_mgr	Show res_mgr logging configuration

Command Mode

- /exec

show logging level rip

show logging level rip

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
rip	Show RIP logging configuration

Command Mode

- /exec

show logging level routing ipv6 multicast

show logging level routing ipv6 multicast

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
routing	Display routing information
ipv6	Display IPv6 information
multicast	Display multicast information

Command Mode

- /exec

show logging level routing multicast

show logging level routing [ip | ipv4] multicast

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
routing	Display routing information
ip	(Optional) Display IP information
ipv4	(Optional) Display IP information
multicast	Display multicast information

Command Mode

- /exec

show logging level rpm

show logging level rpm

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
rpm	Show RPM logging configuration

Command Mode

- /exec

show logging level rsvp

show logging level rsvp

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
rsvp	Show RSVP logging configuration

Command Mode

- /exec

show logging level sal

show logging level sal

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
sal	Show SAL logging configuration

Command Mode

- /exec

show logging level scheduler

show logging level scheduler

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
scheduler	Show scheduler logging configuration

Command Mode

- /exec

show logging level security

show logging level security

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
security	Show security logging configuration

Command Mode

- /exec

show logging level session-mgr

show logging level session-mgr

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
session-mgr	Show session-mgr logging configurarion

Command Mode

- /exec

show logging level sflow

show logging level sflow

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
sflow	Show sFlow logging configuration

Command Mode

- /exec

show logging level smm

show logging level smm

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
smm	Show Shared Memory Manager logging configuration

Command Mode

- /exec

show logging level snmpd

show logging level snmpd

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
snmpd	Show SNMP logging configuration

Command Mode

- /exec

show logging level snmpmib_proc

show logging level snmpmib_proc

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
snmpmib_proc	Show snmpmib_proc logging configuration

Command Mode

- /exec

show logging level spanning-tree

show logging level spanning-tree

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
spanning-tree	Show spanning-tree logging configuration

Command Mode

- /exec

show logging level spm

show logging level spm

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
spm	Show spm logging configuration

Command Mode

- /exec

show logging level stripcl

show logging level stripcl

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
stripcl	Show stripcl logging configuration

Command Mode

- /exec

show logging level sysmgr

show logging level sysmgr

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
sysmgr	Show sysmgr logging configuration

Command Mode

- /exec

show logging level tacacs

show logging level tacacs

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
tacacs	Show tacacs+ logging configuration

Command Mode

- /exec

show logging level telemetry

show logging level telemetry

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
telemetry	Show telemetry logging level

Command Mode

- /exec

show logging level track

show logging level track

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
track	Show track logging configuration

Command Mode

- /exec

show logging level tunnel

show logging level tunnel

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
tunnel	Show tunnel logging settings

Command Mode

- /exec

show logging level u2rib

show logging level u2rib

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
u2rib	Show U2RIB logging configuration

Command Mode

- /exec

show logging level u6rib

show logging level u6rib

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
u6rib	Show U6RIB logging configuration

Command Mode

- /exec

show logging level udd

show logging level udd

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
udd	Show udd logging configuration

Command Mode

- /exec

show logging level ufdm

show logging level ufdm

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
ufdm	Show ufdm logging configuration

Command Mode

- /exec

show logging level urib

show logging level urib

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
urib	Show URIB logging configuration

Command Mode

- /exec

show logging level vdc_mgr

show logging level vdc_mgr

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
vdc_mgr	Show vdc manager logging configuration

Command Mode

- /exec

show logging level virtual-service

show logging level virtual-service

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
virtual-service	Show virtualization manager logging configuration

Command Mode

- /exec

show logging level vlan_mgr

show logging level vlan_mgr

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
vlan_mgr	Show vlan manager logging configuration

Command Mode

- /exec

show logging level vmm

show logging level vmm

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
vmm	Show vmm logging configuration

Command Mode

- /exec

show logging level vmtracker

show logging level vmtracker

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
vmtracker	Show vmtracker logging configuration

Command Mode

- /exec

show logging level vntag

show logging level vntag

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
vntag	Show vntag logging configuration

Command Mode

- /exec

show logging level vpc

show logging level vpc

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
vpc	Show vPC logging configuration

Command Mode

- /exec

show logging level vrrp-cfg

show logging level vrrp-cfg

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
vrrp-cfg	Show vrrp-cfg logging configuration

Command Mode

- /exec

show logging level vrrp-eng

show logging level vrrp-eng

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
vrrp-eng	Show vrrp-eng logging configuration

Command Mode

- /exec

show logging level vrrpv3

show logging level vrrpv3

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
vrrpv3	level for vrrpv3 configuration

Command Mode

- /exec

show logging level vshd

show logging level vshd

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration

Command Mode

- /exec

show logging level vtp

show logging level vtp

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration
vtp	Show vtp logging configuration

Command Mode

- /exec

show logging level xbar

show logging level xbar

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
level	Show facility logging configuration

Command Mode

- /exec

show logging logfile

show logging logfile

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
logfile	Show contents of logfile

Command Mode

- /exec

show logging logfile duration

show logging logfile duration <s1>

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
logfile	Show contents of logfile
duration	show messages from logfile of last given duration
<i>s1</i>	Enter hour, minutes, seconds of duration as HH:MM:SS

Command Mode

- /exec

show logging logfile last-index

show logging logfile last-index

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
logfile	Show contents of logfile
last-index	Show the sequence-number of the last message in logfile

Command Mode

- /exec

show logging logfile start-seqn

show logging logfile start-seqn <i0> [end-seqn <i1>]

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
logfile	Show contents of logfile
start-seqn	Show messages from logfile from a given start-sequence-number
<i>i0</i>	Enter starting sequence number
end-seqn	(Optional) Show messages from logfile from a given end-sequence-number
<i>i1</i>	(Optional) Enter ending sequence number

Command Mode

- /exec

show logging logfile start-time

show logging logfile start-time <i0> <s0> <i1> <s1> [end-time <i2> <s2> <i3> <s3>]

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
logfile	Show contents of logfile
start-time	Show messages from logfile from a given start-time
<i>i0</i>	Enter year in YYYY format
<i>s0</i>	Enter Month as Jan, Feb, Mar, ..., Oct, Nov, or Dec
<i>i1</i>	Enter day of month in dd format
<i>s1</i>	Enter hour, minutes, seconds as HH:MM:SS
end-time	(Optional) Show messages from logfile up to a given end-time
<i>i2</i>	(Optional) Enter year in YYYY format
<i>s2</i>	(Optional) Enter Month as Jan, Feb, Mar, ..., Oct, Nov, or Dec
<i>i3</i>	(Optional) Enter day of month in dd format
<i>s3</i>	(Optional) Enter hour, minutes, seconds as HH:MM:SS

Command Mode

- /exec

show logging loopback

show logging loopback

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
loopback	Show logging loopback configuration

Command Mode

- /exec

show logging module

show logging module

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
module	Show module(linecard) logging configuration

Command Mode

- /exec

show logging monitor

show logging monitor

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
monitor	Show monitor logging configuration

Command Mode

- /exec

show logging nvram

```
show logging nvram [ [ { last <i0> } ] [ __readonly__ [ <error> ] [ { TABLE_nvram <log> } ] ] ]
```

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
nvram	Show NVRAM log
last	(Optional) Show last few lines of nvram log
<i>i0</i>	(Optional) Enter number of lines to display
__readonly__	(Optional)
<i>error</i>	(Optional) error message
TABLE_nvram	(Optional) nvram log prints
<i>log</i>	(Optional) single log line

Command Mode

- /exec

port4	(Optional) Show OBFL error statistics for a port
<i>i4</i>	(Optional)
starttime	(Optional) Show OBFL logs from start time mm/dd/yy-HH:MM:SS
<i>s2</i>	(Optional) Start time format - mm/dd/yy-HH:MM:SS
endtime2	(Optional) Show OBFL logs till end time mm/dd/yy-HH:MM:SS
<i>s3</i>	(Optional) End time format - mm/dd/yy-HH:MM:SS
port6	(Optional) Show OBFL error statistics for a port
<i>i6</i>	(Optional)
port7	(Optional) Show OBFL error statistics for a port
<i>i7</i>	(Optional)
starttime1	(Optional) Show OBFL logs from start time mm/dd/yy-HH:MM:SS
<i>s4</i>	(Optional) Start time format - mm/dd/yy-HH:MM:SS
endtime3	(Optional) Show OBFL logs till end time mm/dd/yy-HH:MM:SS
<i>s5</i>	(Optional) End time format - mm/dd/yy-HH:MM:SS
port8	(Optional) Show OBFL error statistics for a port
<i>i8</i>	(Optional)
port9	(Optional) Show OBFL error statistics for a port
<i>i9</i>	(Optional)
obfl-logs	(Optional) Show OBFL Tech Support Log.
timeout-drops	(Optional) Show OBFL Timeout Drops logs
port10	(Optional) Show OBFL statistics per port basis
<i>i10</i>	(Optional)
credit-loss	(Optional) Show OBFL Credit Loss logs
last	(Optional) Show last min/hour/day logs
<i>last_no</i>	(Optional) Duration in min/hrs/day
minutes	(Optional) entry in minutes
hours	(Optional) entry in hours
days	(Optional) entry in days
request-timeout	(Optional) Show OBFL request timeout log

flow-control	(Optional) Show OBFL Flow Control log
pause-count	(Optional) Show Flow Control Pause Count Logs
pause-events	(Optional) Show Flow Control Pause Event Logs

Command Mode

- /exec

show logging onboard

```
show logging onboard { counter-stats | endtime <s0> [ { counter-stats | internal { <dc3_options> } } ] | internal { <dc3_options> } | module <module> { counter-stats | endtime1 <s1> [ { counter-stats | internal { <dc3_options> } } ] | internal { <dc3_options> } | starttime <s2> [ { counter-stats | endtime2 <s3> [ { counter-stats | internal { <dc3_options> } } ] | internal { <dc3_options> } } ] | starttime1 <s4> [ { counter-stats | endtime3 <s5> [ { counter-stats | internal { <dc3_options> } } ] | internal { <dc3_options> } } ] }
```

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
onboard	Show OBFL information
counter-stats	Show OBFL counter statistics
endtime	Show OBFL logs till end time mm/dd/yy-HH:MM:SS
<i>s0</i>	End time format - mm/dd/yy-HH:MM:SS
internal	(Optional) Show Logging Onboard Internal
module	Show OBFL information for Module
<i>module</i>	Enter module number
endtime1	Show OBFL logs till end time mm/dd/yy-HH:MM:SS
<i>s1</i>	End time format - mm/dd/yy-HH:MM:SS
starttime	Show OBFL logs from start time mm/dd/yy-HH:MM:SS
<i>s2</i>	Start time format - mm/dd/yy-HH:MM:SS
endtime2	(Optional) Show OBFL logs till end time mm/dd/yy-HH:MM:SS
<i>s3</i>	(Optional) End time format - mm/dd/yy-HH:MM:SS
starttime1	Show OBFL logs from start time mm/dd/yy-HH:MM:SS
<i>s4</i>	Start time format - mm/dd/yy-HH:MM:SS
endtime3	(Optional) Show OBFL logs till end time mm/dd/yy-HH:MM:SS
<i>s5</i>	(Optional) End time format - mm/dd/yy-HH:MM:SS
<i>dc3_options</i>	(Optional) dc3 options

Command Mode

- /exec

show logging onboard fex

```
show logging onboard fex <ifex> { boot-uptime | device-version | endtime <s_endtime0> [ { boot-uptime |
device-version | environmental-history | exception-log | internal { kernel | kernel-big | reset-reason } | obfl-history
| stack-trace } ] | environmental-history | exception-log | internal { kernel | kernel-big | reset-reason } |
obfl-history | stack-trace | starttime <s_starttime0> [ { boot-uptime | device-version | endtime <s_endtime1>
[ { boot-uptime | device-version | environmental-history | exception-log | internal { kernel | kernel-big |
reset-reason } | obfl-history | stack-trace } ] | environmental-history | exception-log | internal { kernel | kernel-big
| reset-reason } | obfl-history | stack-trace } ] }
```

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
onboard	Show OBFL information
fex	Show OBFL information for FEX
<i>ifex</i>	Enter FEX ID
boot-uptime	Show OBFL boot and uptime information.
device-version	Show OBFL device version information.
endtime	Show OBFL logs till end time mm/dd/yy-HH:MM:SS
<i>s_endtime0</i>	End time format - mm/dd/yy-HH:MM:SS
<i>s_endtime1</i>	(Optional) End time format - mm/dd/yy-HH:MM:SS
environmental-history	(Optional) Show OBFL environmental history
exception-log	(Optional) Show OBFL exception log
internal	(Optional) Show Logging Onboard Internal
kernel	(Optional) Show kernel log
kernel-big	(Optional) Show kernel log (large records)
reset-reason	(Optional) Show reset reason
obfl-history	(Optional) Show OBFL history information.
stack-trace	(Optional) Show OBFL kernel stack trace
starttime	Show OBFL logs from start time mm/dd/yy-HH:MM:SS
<i>s_starttime0</i>	Start time format - mm/dd/yy-HH:MM:SS

Command Mode

- /exec

show logging onboard kernel-trace

show logging onboard kernel-trace

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
onboard	Show OBFL information
kernel-trace	Show OBFL Kernel Trace

Command Mode

- /exec

show logging origin-id

show logging origin-id

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
origin-id	Show logging origin id configuration

Command Mode

- /exec

show logging pending-diff

show logging pending-diff

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
pending-diff	server address pending configuration diff

Command Mode

- /exec

show logging pending

show logging pending

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
pending	server address pending configuration

Command Mode

- /exec

show logging server

```
show logging server [ __readonly__ [ <noentry> ] [ { TABLE_logserv <server> <forwarding> <severity>
<facility> <vrf> <port> } ] ]
```

Syntax Description

<code>show</code>	Show running system information
<code>logging</code>	Show logging configuration and contents of logfile
<code>server</code>	Show server logging configuration
<code>__readonly__</code>	(Optional)
<code>noentry</code>	(Optional) logging server not configured
<code>TABLE_logserv</code>	(Optional) output of show logging server
<code>server</code>	(Optional) remote server address
<code>forwarding</code>	(Optional) remote server forwarding
<code>severity</code>	(Optional) remote server severity
<code>facility</code>	(Optional) remote server facility
<code>vrf</code>	(Optional) remote server vrf
<code>port</code>	(Optional) remote server port

Command Mode

- /exec

show logging session status

show logging session status

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
session	Show logging session status
status	Show logging session status

Command Mode

- /exec

show logging source-interface

show logging source-interface

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
source-interface	Show logging source-interface configuration

Command Mode

- /exec

show logging status

show logging status

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
status	Show logging status

Command Mode

- /exec

show logging timestamp

show logging timestamp

Syntax Description

show	Show running system information
logging	Show logging configuration and contents of logfile
timestamp	Show logging timestamp configuration

Command Mode

- /exec

show login on-failure log

show login on-failure log [__readonly__ [<status>]]

Syntax Description

show	show
login	login
on-failure	authentication failure
log	Log
__readonly__	(Optional)
<i>status</i>	(Optional) login on failure log enabled or disabled

Command Mode

- /exec

show login on-successful log

show login on-successful log [__readonly__ [<status>]]

Syntax Description

show	show
login	login
on-successful	authentication successful
log	Log
__readonly__	(Optional)
<i>status</i>	(Optional) login on successful log enabled or disabled

Command Mode

- /exec

show login on-successful log