

Send comments to nexus5k-docfeedback@cisco.com



G Commands

This chapter describes the basic Cisco NX-OS system commands that begin with G.

[Send comments to nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)

gunzip

To uncompress a compressed file, use the **gunzip** command.

```
gunzip [filesystem:] [//server/] [directory] filename
```

Syntax Description	
<i>filesystem:</i>	(Optional) Name of the file system. Valid values are bootflash , modflash , or volatile .
<i>//server/</i>	(Optional) Name of the server. Valid values are <i>//</i> , //module-1/ , //sup-1/ , //sup-active/ , or //sup-local/ . The double slash (<i>//</i>) is required.
<i>directory</i>	(Optional) Name of a directory. The directory name is case sensitive.
<i>filename</i>	Name of the file to uncompress. The filename is case sensitive.



Note

There can be no spaces in the *filesystem://server/directory/filename* string. Individual elements of this string are separated by colons (:) and slashes (/).

Command Default	None
------------------------	------

Command Modes	EXEC mode
----------------------	-----------

Command History	Release	Modification
	4.0(0)N1(1a)	This command was introduced.

Usage Guidelines	<p>The compressed filename must have the .gz extension.</p> <p>The Cisco NX-OS software uses Lempel-Ziv 1977 (LZ77) coding for compression.</p>
-------------------------	---

Examples	This example shows how to uncompress a compressed file:
-----------------	---

```
switch# gunzip run_cfg.cfg.gz
```

Related Commands	Command	Description
	dir	Displays the directory contents.
	gzip	Compresses a file.

Send comments to nexus5k-docfeedback@cisco.com

gzip

To compress a file, use the **gzip** command.

```
gzip [filesystem:] [//server/] [directory] filename
```

Syntax Description

<i>filesystem:</i>	(Optional) Name of the file system. Valid values are bootflash , modflash , or volatile .
<i>//server/</i>	(Optional) Name of the server. Valid values are <i>///</i> , <i>//module-1/</i> , <i>//sup-1/</i> , <i>//sup-active/</i> , or <i>//sup-local/</i> . The double slash (<i>//</i>) is required.
<i>directory</i>	(Optional) Name of a directory. The directory name is case sensitive.
<i>filename</i>	Name of the file to compress. The filename is case sensitive.



Note

There can be no spaces in the *filesystem://server/directory/filename* string. Individual elements of this string are separated by colons (*:*) and slashes (*/*).

Command Default

None

Command Modes

EXEC mode

Command History

Release	Modification
4.0(0)N1(1a)	This command was introduced.

Usage Guidelines

After you run this command, the named file is replaced with a compressed file that has the .gz extension added to its filename.

The Cisco NX-OS software uses Lempel-Ziv 1977 (LZ77) coding for compression.

Examples

This example shows how to compress a file:

```
switch# gzip run_cfg.cfg
```

Related Commands

Command	Description
dir	Displays the directory contents.
gunzip	Uncompresses a compressed file.

Send comments to nexus5k-docfeedback@cisco.com