

Send comments to nexus5k-docfeedback@cisco.com



L Commands

This chapter describes the basic Cisco NX-OS system commands that begin with L.

Send comments to nexus5k-docfeedback@cisco.com

line console

To specify the console port and enter console port configuration mode, use the **line console** command.

line console

Syntax Description This command has no arguments or keywords.

Command Default None

Command Modes Interface configuration mode

Command History	Release	Modification
	4.0(0)N1(1a)	This command was introduced.

Usage Guidelines You can configure the console line only from a console port session.

Examples This example shows how to enter console port configuration mode:

```
switch# configure terminal
switch(config)# line console
switch(config-console)#
```

Related Commands	Command	Description
	 databits 	Configures the number of data bits in a character for a port.
	 exec-timeout 	Configures the inactive terminal timeout for a port.
	 modem 	Configures the modem settings for a port.
	 parity 	Configures the parity settings for a port.
	 show line 	Displays information about the console port configuration.
	 speed 	Configures the transmit and receive speed for a port.
	 stopbits 	Configures the stop bits for a port.

Send comments to nexus5k-docfeedback@cisco.com

line vty

To specify the virtual terminal and enter line configuration mode, use the **line vty** command.

line vty

Syntax Description This command has no arguments or keywords.

Command Default None

Command Modes Interface configuration mode

Command History	Release	Modification
	4.0(0)N1(1a)	This command was introduced.

Examples This example shows how to enter console port configuration mode:

```
switch# configure terminal
switch(config)# line vty
switch(config-line)#
```

Related Commands	Command	Description
	access-class	Restricts incoming and outgoing connections in VTY configuration mode.
	exec-timeout	Configures the inactive terminal timeout for a port.
	session-limit	Configures the maximum number of the concurrent virtual terminal sessions.
	show line	Displays information about the console port configuration.

Send comments to nexus5k-docfeedback@cisco.com