

*Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)*



## A Commands

---

This chapter describes the system management commands that begin with A.

***Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)***

## abort (session)

To discard the current configuration session, use the **abort** command.

**abort**

---

**Syntax Description** This command has no arguments or keywords.

---

**Command Default** None

---

**Command Modes** Session configuration mode

---

Command History	Release	Modification
	4.0(0)N1(1)	This command was introduced.

---



---

**Examples** This example shows how to abort the current configuration session:

```
switch# configure session MySession1
switch(config-s)# abort
switch#
```

---

Related Commands	Command	Description
	<b>commit</b>	Commits a session.
	<b>configure session</b>	Creates a configuration session.
	<b>show configuration session</b>	Displays the contents of the session.
	<b>verify</b>	Verifies a session.

---

*Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)*

## acllog match-log-level

To specify the minimum severity level to log ACL matches, use the **acllog match-log-level** command. To remove the acllog match log level, use the **no** form of this command.

**acllog match-log-level** *severity-level*

**no acllog match-log-level** *severity-level*

<b>Syntax Description</b>	<i>severity-level</i>	<p>Number of the desired severity level at which messages should be logged. Messages at or numerically lower than the specified level are logged. Severity levels are as follows:</p> <ul style="list-style-type: none"> <li>• <b>0</b>—emergency: System unusable</li> <li>• <b>1</b>—alert: Immediate action needed</li> <li>• <b>2</b>—critical: Critical condition</li> <li>• <b>3</b>—error: Error condition</li> <li>• <b>4</b>—warning: Warning condition</li> <li>• <b>5</b>—notification: Normal but significant condition—default level</li> <li>• <b>6</b>—informational: Informational message only (default)</li> <li>• <b>7</b>—debugging: Appears during debugging only</li> </ul>
---------------------------	-----------------------	---

<b>Command Default</b>	None
------------------------	------

<b>Command Modes</b>	Global configuration mode
----------------------	---------------------------

<b>Command History</b>	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>5.2(1)N1(1)</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	5.2(1)N1(1)	This command was introduced.
Release	Modification				
5.2(1)N1(1)	This command was introduced.				

**Examples** This example shows how to set the acllog match-log-level to 6, informational:

```
switch(config)# acllog match-log-level 6
switch(config)#
```

<b>Related Commands</b>	<table border="1"> <thead> <tr> <th>Command</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td><b>logging level</b></td> <td>Enables logging messages from a specified facility and configures the logging severity level.</td> </tr> <tr> <td><b>logging logfile</b></td> <td>Configures the name of the log file used to store system messages and sets the minimum severity level to log.</td> </tr> </tbody> </table>	Command	Description	<b>logging level</b>	Enables logging messages from a specified facility and configures the logging severity level.	<b>logging logfile</b>	Configures the name of the log file used to store system messages and sets the minimum severity level to log.
Command	Description						
<b>logging level</b>	Enables logging messages from a specified facility and configures the logging severity level.						
<b>logging logfile</b>	Configures the name of the log file used to store system messages and sets the minimum severity level to log.						

***Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)***