

Send comments to nexus5k-docfeedback@cisco.com



A Commands

This chapter describes the Cisco NX-OS TrustSec commands that begin with A.

[Send comments to nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)

aaa authentication cts default group

To configure the default authentication, authorization, and accounting (AAA) RADIUS server groups for Cisco TrustSec authentication, use the **aaa authentication cts default group** command. To remove a server group from the default AAA authentication server group list, use the **no** form of this command.

aaa authentication cts default group *group-list*

no aaa authentication cts default group *group-list*

Syntax Description	<i>group-list</i>	Space-separated list of RADIUS server groups that can include the following: <ul style="list-style-type: none"> • radius for all configured RADIUS servers. • Any configured RADIUS server group name. The maximum number of names in the list is eight.
---------------------------	-------------------	---

Command Default	None
------------------------	------

Command Modes	Global configuration mode
----------------------	---------------------------

Command History	Release	Modification
	5.1(3)N1(1)	This command was introduced.

Usage Guidelines

To use this command, you must first enable the 802.1X feature by using the **feature dot1x** command and then enable the Cisco TrustSec feature using the **feature cts** command.

The *group-list* refers to a set of previously defined RADIUS servers. Use the **radius-server host** command to configure the host servers. Use the **aaa group server** command to create a named group of servers.

Use the **show aaa groups** command to display the RADIUS server groups on the device. See the *Cisco Nexus 5000 Series NX-OS Security Command Reference* for information on these commands.

If you specify more than one server group, the Cisco NX-OS software checks each group in the order that you specify in the list.

This command does not require a license.

Examples

This example shows how to configure the default AAA authentication RADIUS server group for Cisco TrustSec:

```
switch# configure terminal
switch(config)# aaa authentication cts default group RadGroup
switch(config)#
```

Send comments to nexus5k-docfeedback@cisco.com

Related Commands	Command	Description
	aaa group server	Configures AAA server groups.
	feature cts	Enables the Cisco TrustSec feature.
	feature dot1x	Enables the 802.1X feature on the switch.
	radius-server host	Configures RADIUS servers.
	show aaa authentication	Displays the AAA authentication configuration.
	show aaa groups	Displays the AAA server groups.

[Send comments to nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)

aaa authorization cts default group

To configure the default authentication, authorization, and accounting (AAA) RADIUS server groups for Cisco TrustSec authorization, use the **aaa authorization cts default group** command. To remove a server group from the default AAA authorization server group list, use the **no** form of this command.

aaa authorization cts default group *group-list*

no aaa authorization cts default group *group-list*

Syntax Description	<i>group-list</i>	Space-separated list of RADIUS server groups that can include the following: <ul style="list-style-type: none"> • radius for all configured RADIUS servers. • Any configured RADIUS server group name. The maximum number of names in the list is eight.
---------------------------	-------------------	---

Command Default	None
------------------------	------

Command Modes	Global configuration mode
----------------------	---------------------------

Command History	Release	Modification
	5.1(3)N1(1)	This command was introduced.

Usage Guidelines To use the **aaa authorization cts default group** command, you must enable the Cisco TrustSec feature using the **feature cts** command.

The *group-list* refers to a set of previously defined RADIUS servers. Use the **radius-server host** command to configure the host servers. Use the **aaa group server** command to create a named group of servers.

Use the **show aaa groups** command to display the RADIUS server groups on the device. See the *Cisco Nexus 5000 Series NX-OS Security Command Reference* for information on these commands.

If you specify more than one server group, the Cisco NX-OS software checks each group in the order that you specify in the list.

This command does not require a license.

Examples This example shows how to configure the default AAA authorization RADIUS server group for Cisco TrustSec:

```
switch# configure terminal
switch(config)# aaa authorization cts default group RadGroup
switch(config)#
```

Send comments to nexus5k-docfeedback@cisco.com

Related Commands	Command	Description
	feature cts	Enables the Cisco TrustSec feature.
	show aaa authorization	Displays the AAA authorization configuration.
	show aaa groups	Displays the AAA server groups.

Send comments to nexus5k-docfeedback@cisco.com