



# A Commands

---

This chapter describes the system management commands that begin with A.

# abort (session)

To discard the current configuration session, use the **abort** command.

**abort**

---

**Syntax Description** This command has no arguments or keywords.

---

**Command Default** None

---

**Command Modes** Session configuration mode

---

Command History	Release	Modification
	5.2(1)N1(1)	This command was introduced.

---



---

**Examples** This example shows how to abort the current configuration session:

```
switch# configure session MySession1
switch(config-s)# abort
switch#
```

---

Related Commands	Command	Description
	<b>commit</b>	Commits a session.
	<b>configure session</b>	Creates a configuration session.
	<b>show configuration session</b>	Displays the contents of the session.
	<b>verify</b>	Verifies a session.

---

# acllog match-log-level

To specify the minimum severity level to log ACL matches, use the **acllog match-log-level** command. To remove the acllog match log level, use the **no** form of this command.

**acllog match-log-level** *severity-level*

**no acllog match-log-level** *severity-level*

## Syntax Description

*severity-level*

Number of the desired severity level at which messages should be logged. Messages at or numerically lower than the specified level are logged. Severity levels are as follows:

- **0**—emergency: System unusable
- **1**—alert: Immediate action needed
- **2**—critical: Critical condition
- **3**—error: Error condition
- **4**—warning: Warning condition
- **5**—notification: Normal but significant condition—default level
- **6**—informational: Informational message only (default)
- **7**—debugging: Appears during debugging only

## Command Default

None

## Command Modes

Global configuration mode

## Command History

Release	Modification
5.2(1)N1(1)	This command was introduced.

## Examples

This example shows how to set the acllog match-log-level to 6, informational:

```
switch(config)# acllog match-log-level 6
switch(config)#
```

## Related Commands

Command	Description
<b>logging level</b>	Enables logging messages from a specified facility and configures the logging severity level.
<b>logging logfile</b>	Configures the name of the log file used to store system messages and sets the minimum severity level to log.

