



Preface

This preface describes the audience, organization, and conventions of the *Cisco Nexus 5500 Series NX-OS Multicast Routing Configuration Guide, Release 6.x*. It also provides information on how to obtain related documentation.

This chapter includes the following sections:

- [Audience, page i](#)
- [Organization, page i](#)
- [Document Conventions, page ii](#)
- [Related Documentation, page ii](#)
- [Obtaining Documentation and Submitting a Service Request, page iv](#)

Audience

This publication is for experienced users who configure and maintain Cisco NX-OS switches.

Organization

This document is organized as follows:

Chapter and Title	Description
Chapter 1, “Overview”	Describes the Cisco NX-OS multicast features.
Chapter 2, “Configuring IGMP”	Describes how to configure the Cisco NX-OS IGMP features.
Chapter 3, “Configuring PIM”	Describes how to configure the Cisco NX-OS PIM features.
Chapter 4, “Configuring IGMP Snooping”	Describes how to configure the Cisco NX-OS IGMP snooping feature.
Chapter 5, “Configuring MSDP”	Describes how to configure the Cisco NX-OS MSDP feature.
Appendix A, “IETF RFCs for IP Multicast”	Contains the RFCs related to the Cisco NX-OS multicast features.

Document Conventions

Command descriptions use these conventions:

Convention	Description
boldface font	Commands and keywords are in boldface.
italic font	Arguments for which you supply values are in italics.
[]	Elements in square brackets are optional.
[x y z]	Optional alternative keywords are grouped in brackets and separated by vertical bars.
string	A nonquoted set of characters. Do not use quotation marks around the string or the string will include the quotation marks.

Screen examples use these conventions:

<code>screen font</code>	Terminal sessions and information that the switch displays are in screen font.
boldface screen font	Information you must enter is in boldface screen font.
<i>italic screen font</i>	Arguments for which you supply values are in italic screen font.
< >	Nonprinting characters, such as passwords, are in angle brackets.
[]	Default responses to system prompts are in square brackets.
!, #	An exclamation point (!) or a pound sign (#) at the beginning of a line of code indicates a comment line.

This document uses the following conventions:



Note

Means reader *take note*. Notes contain helpful suggestions or references to material not covered in the manual.



Caution

Means *reader be careful*. In this situation, you might do something that could result in equipment damage or loss of data.



Tip

Means *the following information will help you solve a problem*.

Related Documentation

Documentation for Cisco Nexus 5500 switches and Cisco Nexus 2000 Series Fabric Extender is available at the following URL:

http://www.cisco.com/en/US/products/ps9670/tsd_products_support_series_home.html

The following are related Cisco Nexus 5500 Series and Cisco Nexus 2000 Series Fabric Extender documents:

Release Notes

Cisco Nexus 5500 Series Switch Release Notes

Configuration Guides

Cisco Nexus 5500 Series Configuration Limits for Cisco NX-OS Release 6.0(2)N1(1)
Cisco Nexus 5500 Series Configuration Limits for Cisco NX-OS Release 6.0(2)N1(1)
Cisco Nexus 5500 Series Configuration Limits for Cisco NX-OS Release 6.0(2)N1(1)
Cisco Nexus 5500 Series NX-OS Fibre Channel over Ethernet Configuration Guide
Cisco Nexus 5500 Series NX-OS Layer 2 Switching Configuration Guide
Cisco Nexus 5500 Series NX-OS Multicast Routing Configuration Guide
Cisco Nexus 5500 Series NX-OS Quality of Service Configuration Guide
Cisco Nexus 5500 Series NX-OS SAN Switching Configuration Guide
Cisco Nexus 5500 Series NX-OS Security Configuration Guide
Cisco Nexus 5500 Series NX-OS System Management Configuration Guide
Cisco Nexus 5500 Series NX-OS Unicast Routing Configuration Guide
Cisco Nexus 5500 Series Switch NX-OS Software Configuration Guide
Cisco Nexus 5500 Series Fabric Manager Configuration Guide, Release 6.0(2)N1(1)
Cisco Nexus 5500 Series NX-OS Fundamentals Configuration Guide, Release 6.0(2)N1(1)
Cisco Nexus 2000 Series Fabric Extender Software Configuration Guide

Maintain and Operate Guides

Cisco Nexus 5500 Series NX-OS Operations Guide

Installation and Upgrade Guides

Cisco Nexus 5000 Series and Cisco Nexus 5500 Platform Hardware Installation Guide
Cisco Nexus 2000 Series Hardware Installation Guide
Regulatory Compliance and Safety Information for the Cisco Nexus 5500 Series Switches and Cisco Nexus 2000 Series Fabric Extenders

Licensing Guide

Cisco NX-OS Licensing Guide

Command References

Cisco Nexus 5500 Series Command Reference

Technical References

Cisco Nexus 5500 Series and Cisco Nexus 2000 Series Fabric Extender MIBs Reference

Error and System Messages

Cisco NX-OS System Messages Reference

Troubleshooting Guide

Cisco Nexus 5500 Troubleshooting Guide

Obtaining Documentation and Submitting a Service Request

For information on obtaining documentation, using the Cisco Bug Search Tool (BST), submitting a service request, and gathering additional information, see [What's New in Cisco Product Documentation](#).

To receive new and revised Cisco technical content directly to your desktop, you can subscribe to the [What's New in Cisco Product Documentation RSS feed](#). The RSS feeds are a free service.