



Configuring ERSPAN

This chapter contains the following sections:

- [Information About ERSPAN](#), on page 1
- [Licensing Requirements for ERSPAN](#), on page 3
- [Prerequisites for ERSPAN](#), on page 4
- [Guidelines and Limitations for ERSPAN](#), on page 4
- [Guidelines and Limitations for ERSPAN Type III](#), on page 7
- [Default Settings for ERSPAN](#), on page 7
- [Configuring ERSPAN](#), on page 8
- [Configuration Examples for ERSPAN](#), on page 16
- [Additional References](#), on page 17

Information About ERSPAN

The Cisco NX-OS system supports the Encapsulated Remote Switching Port Analyzer (ERSPAN) feature on both source and destination ports. ERSPAN transports mirrored traffic over an IP network. The traffic is encapsulated at the source router and is transferred across the network. The packet is decapsulated at the destination router and then sent to the destination interface.

ERSPAN consists of an ERSPAN source session, routable ERSPAN generic routing encapsulation (GRE)-encapsulated traffic, and an ERSPAN destination session. You can separately configure ERSPAN source sessions and destination sessions on different switches.

ERSPAN Source Sessions


An ERSPAN source session is defined by the following:

- A session ID.
- A list of source ports, source VLANs, or source VSANs to be monitored by the session.
- An ERSPAN flow ID.
- Optional attributes related to the GRE envelope such as IP TOS and TTL.
- Destination IP address.
- Virtual Routing and Forwarding tables.

ERSPAN source sessions do not copy ERSPAN GRE-encapsulated traffic from source ports. Each ERSPAN source session can have ports, VLANs, or VSANs as sources. However, there are some limitations. For more information, see Guidelines and Limitations for ERSPAN.

The following figure shows an example ERSPAN configuration.

Figure 1: ERSPAN Configuration

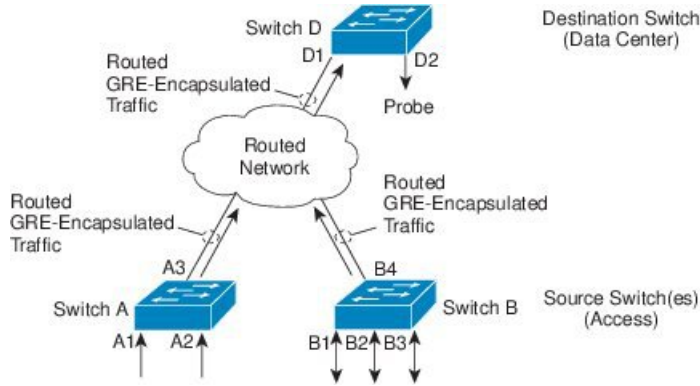

Monitored Traffic

By default, ERSPAN monitors all traffic, including multicast and bridge protocol data unit (BPDU) frames.

The direction of the traffic that ERSPAN monitors depends on the source, as follows:

- For a source port, the ERSPAN can monitor ingress, egress, or both ingress and egress traffic.
- For a source VLAN or source VSAN, the ERSPAN can monitor only ingress traffic.

ERSPAN Types

Cisco NX-OS Release 6.1 and later releases support ERSPAN Type II (default) and Type III. All previous Cisco NX-OS releases support only ERSPAN Type II.

ERSPAN Type III supports all of the ERSPAN Type II features and functionality and adds these enhancements:

- Provides timestamp information in the ERSPAN Type III header that can be used to calculate packet latency among edge, aggregate, and core switches.
- Identifies possible traffic sources using the ERSPAN Type III header fields.
- Provides the ability to configure timestamp granularity to determine how the clock manager synchronizes the ERSPAN timers.
- Beginning with Cisco NX-OS Release 7.1(1)N1(1), ERSPAN Type III provides configurable switch IDs that can be used to identify traffic flows across multiple switches.

Table 1: Differences between ERSPAN Type II and ERSPAN Type III

Attribute	Type II	Type III
Timestamp	NA	Timestamp provided.

Attribute	Type II	Type III
Platform-specific info	NA	Platform-specific info is required for Nexus 5500, Nexus 5600 and Nexus 6000 platforms.
Source Port Identification at Termination Switch	Limited identification.	Detailed identification. Provision of switch IDs.

ERSPAN Sources

The interfaces from which traffic can be monitored are called ERSPAN sources. Sources designate the traffic to monitor and whether to copy ingress, egress, or both directions of traffic. ERSPAN sources include the following:

- Ethernet ports and port channels.
- VLANs—When a VLAN is specified as an ERSPAN source, all supported interfaces in the VLAN are ERSPAN sources.

ERSPAN source ports have the following characteristics:

- A port configured as a source port cannot also be configured as a destination port.
- ERSPAN does not monitor any packets that are generated by the supervisor, regardless of their source.

Truncated ERSPAN

Truncated ERSPAN can be used to reduce the amount of fabric or network bandwidth used in sending ERSPAN packets.

The default is no truncation so switches or routers receiving large ERSPAN packets might drop these oversized packets.



Note Do not enable the truncated ERSPAN feature if the destination ERSPAN router is a Cisco Nexus 6001 or Cisco Nexus 6004 switch because the Cisco Nexus 6000 Series switch drops these truncated packets.

High Availability

The ERSPAN feature supports stateless and stateful restarts. After a reboot or supervisor switchover, the running configuration is applied.

Licensing Requirements for ERSPAN

The following table shows the licensing requirements for this feature:

- ERSPAN supports Fast Ethernet, Gigabit Ethernet, TenGigabit Ethernet, and port channel interfaces as source ports for a source session.
- When a session is configured through the ERSPAN configuration commands, the session ID and the session type cannot be changed. In order to change them, you must first use the no version of the configuration command to remove the session and then reconfigure the session.
- ERSPAN traffic might compete with regular data traffic.
- ERSPAN traffic is assigned to the QoS class-default system class (qos-group 0).
- To ensure that data traffic is prioritized over ERSPAN traffic, you can create a QoS system class with prioritization above the class-default system class on the ERSPAN destination port.
On Layer 3 networks, ERSPAN traffic can be marked with a the desired Differentiated Services Code Point (DSCP) value using the ip dscp command. By default, ERSPAN traffic is marked with a DSCP value of 0.
- The **rate limit** command is not supported.
- ERSPAN is not supported on a management interface.
- You cannot use the same source interface in multiple SPAN or ERSPAN sessions.

The following limitations apply to ERSPAN source sessions Access Control Lists (ACL) configurations:

- The SPAN session ignores any permit or deny actions specified in the access-list, and spans only the packets that match the access-list filter criteria.
- ACLs are supported on ERSPAN source sessions only. ACLs are not supported on ERSPAN destination sessions.
- Due to system limitations, the extent to which an ACL associated to ERSPAN session can scale depends on the how the SPAN source is configured. The following table shows different scenarios and the corresponding maximum ACL size supported.



Note These calculations assume that each ACE in the ACL results in one final TCAM entry.

Scenario	Maximum ACL Size
ERSPAN has single Switch Port as source with both Tx and Rx.	Current Available TCAM Entries/2
ERSPAN has multiple Switch Ports as source with both Tx and Rx.	Current Available TCAM Entries/3
ERSPAN has Port Channel (with one or more member switch ports) as source with both Tx and Rx.	Current Available TCAM Entries/3
ERSPAN has single HIF Ports as source with both Tx and Rx.	Current Available TCAM Entries/3

Scenario	Maximum ACL Size
ERSPAN has multiple HIF Ports as source with both Tx and Rx.	Current Available TCAM Entries/4
ERSPAN has HIF Port Channel (with one or more member HIF ports) as source with both Tx and Rx.	Current Available TCAM Entries/4

- Due to system limitations, the extent to which an ACL associated to ERSPAN session can scale depends on the how the SPAN source is configured. The following table shows different scenarios and the corresponding maximum ACL size supported.



Note These calculations assume that each ACE in the ACL results in one final TCAM entry.

Scenario	Maximum ACL Size
ERSPAN has single Switch Port as source with both Tx and Rx.	Current Available TCAM Entries/2
ERSPAN has multiple Switch Ports as source with both Tx and Rx.	Current Available TCAM Entries/3
ERSPAN has Port Channel (with one or more member switch ports) as source with both Tx and Rx.	Current Available TCAM Entries/3
ERSPAN has single HIF Ports as source with both Tx and Rx.	Current Available TCAM Entries/3
ERSPAN has multiple HIF Ports as source with both Tx and Rx.	Current Available TCAM Entries/4
ERSPAN has HIF Port Channel (with one or more member HIF ports) as source with both Tx and Rx.	Current Available TCAM Entries/4

- The following scenarios are unaffected by any system limitations for ACL and SPAN session scaling:
 - ERSPAN has single Switch Port as source with Tx only.
 - ERSPAN has multiple Switch Ports as source with Tx only.
 - ERSPAN has a Port Channel (with one or more member switch ports) as source with Tx only.
 - ERSPAN has a single Host Interface (HIF) Port as source with Tx only.
 - ERSPAN has multiple HIF Ports as source with Tx only.
 - ERSPAN has a single Port HIF Channel (with one or more member HIF ports) as source with Tx only.
 - ERSPAN has a single Switch Port as source with Rx only.
 - ERSPAN has multiple Switch Ports as source with Rx only.

- ERSPAN has a Port Channel (with one or more member switch ports) as source with Rx only.
 - ERSPAN has a single HIF Port as source with Rx only.
 - ERSPAN has multiple HIF Ports as source with Rx only.
 - ERSPAN has a HIF Port Channel (with one or more member HIF ports) as source with Rx only
- The following guidelines apply when configuring ERSPAN source sessions with ACLs:
 - When you associate an ACL with an ERSPAN session, you must ensure that its size is not greater than the calculations given in the table above. Otherwise the ERSPAN session fails and generate a "TCAM resource unavailable" error. If the ACL has Layer 4 Operations and TCAM resource expansion is enabled, you need to know the expected expanded size and you need to use the expanded size to calculate the maximum ACL size.
 - If you change the ACL that is attached to a ERSPAN session, the ACL size can exceed the maximum ACL size allowed. In this scenario, the SPAN session continues to work with the modified ACL. However, you should undo the ACEs added to the ACL to limit the size to maximum allowed ACL size.
 - If you add a ERSPAN session when one already exists, then to modify the first span session there should be free TCAM entries of size equal to number of ACEs in the associated ACL (Assuming that each ACE requires one TCAM entry. If it gets expanded, the expanded size should be considered). Therefore, TCAM entries consumed by the second ERSPAN session should be released.
 - To replace a large ACL with another large ACL (which could cause the ERSPAN session to enter a generic error state), you must first remove the existing filter access group (using the **no filter access-group** *current acl name* command), and then configure the new filter access group (using the **filter access-group** *new acl name* command).

Guidelines and Limitations for ERSPAN Type III

ERSPAN Type III has the following guidelines and limitations:

- Only IPv4 networks are supported by ERSPAN Type III. IPv6 networks are not supported by ERSPAN Type III but IPv6 packets can be captured by ERSPAN.
- To calculate packet latency across ports, ERSPAN timestamp should be taken from the Precision Time Protocol (PTP) clock and the PTP feature must be enabled on the switch.

Default Settings for ERSPAN

The following table lists the default settings for ERSPAN parameters.

Table 2: Default ERSPAN Parameters

Parameters	Default
ERSPAN sessions	Created in the shut state.

Configuring ERSPAN

Configuring an ERSPAN Source Session

The ERSPAN source session defines the session configuration parameters and the ports or VLANs to be monitored. This section describes how to configure an ERSPAN source session.

Procedure

	Command or Action	Purpose
Step 1	configuration terminal Example: <pre>switch# config t switch(config)#</pre>	Enters global configuration mode.
Step 2	monitor session <i>span-session-number</i> type {erspan-source local} Example: <pre>switch(config)# monitor session 1 type erspan-source switch(config-erspan-src)#</pre>	<p>Defines an ERSPAN source session using the session ID and the session type, and places the command in ERSPAN monitor source session configuration mode.</p> <p>The <i>span-session-number</i> argument range is from 1 to 1024. The same session number cannot be used more than once.</p> <p>The session IDs for source sessions are in the same global ID space, so each session ID is globally unique.</p> <p>The session ID (configured by the <i>span-session-number</i> argument) and the session type (configured by the erspan-source keyword) cannot be changed once entered. To change session ID or session type, use the no version of the command to remove the session and then recreate the session through the command with a new session ID or a new session type.</p>
Step 3	(Optional) description <i>erspan_session_description</i> Example: <pre>switch(config-erspan-src)# description sourcel</pre>	<p>Describes the ERSPAN source session.</p> <p>The <i>erspan_session_description</i> argument can be up to 32 characters and cannot contain special characters or spaces.</p>
Step 4	source interface { ethernet <i>slot/chassis number</i> portchannel <i>number</i> } Example: <pre>switch(config-erspan-src)# source interface eth 1/1</pre>	Associates the ERSPAN source session number with the source ports (1-255).

	Command or Action	Purpose
Step 5	source vlan <i>number</i> Example: switch(config-erspan-src)# source vlan 1	Associates the ERSPAN source session number with the VLANs (1-4096).
Step 6	source vsan <i>number</i> Example: switch(config-erspan-src)# source vsan 1	Specifies the VSAN ID number. The range is 1 to 4093.
Step 7	destination ip <i>ip-address</i> Example: switch(config-erspan-src)# destination ip 192.0.2.2	Configures the destination IP address in the ERSPAN session. Only one destination IP address is supported per ERSPAN source session.
Step 8	erspan-id <i>flow-id</i> Example: switch(config-erspan-src)# erspan-id 5	Configures the flow ID to identify the ERSPAN flow. The range is from 1 to 1023.
Step 9	vrf { <i>vrf-name</i> default } Example: switch(config-erspan-src)# vrf default	Configures the VRF to use instead of the global routing table. You can use a VRF that you have specifically configured or the default VRF.
Step 10	[no] filter access-group <i>acl_filter</i> Example: switch(config-erspan-src)# filter access-group erspan_acl_filter	Configures the ACL filter for packets in this ERSPAN session. The ACL filter can be a MAC or an IP access-list.
Step 11	(Optional) ip ttl <i>ttl-number</i> Example: switch(config-erspan-src)# ip ttl 5	Configures the IP time-to-live (TTL) value of the packets in the ERSPAN traffic. Valid values are from 1 to 255. The default value is 255.
Step 12	(Optional) ip dscp <i>dscp_value</i> Example: switch(config-erspan-src)# ip dscp 42	Configures the IP Differentiated Services Code Point (DSCP) value of the packets in the ERSPAN traffic. Valid values are from 0 to 63. The default value is 0.
Step 13	no shut Example: switch(config-erspan-src)# no shut	Enables the ERSPAN source session. By default, the session is created in the shut state.
Step 14	exit Example: switch(config-erspan-src)# exit switch(config)# exit	Updates the configuration and exits ERSPAN source session configuration mode.

	Command or Action	Purpose
Step 15	<p>(Optional) copy running-config startup-config</p> <p>Example:</p> <pre>switch(config-erspan-src)# copy running-config startup-config</pre>	Copies the running configuration to the startup configuration.

Configuring an ERSPAN Type III Source Session

Procedure

	Command or Action	Purpose
Step 1	<p>configuration terminal</p> <p>Example:</p> <pre>switch# config t switch(config)#</pre>	Enters global configuration mode.
Step 2	<p>monitor erspan switch-id <i>switch-id</i></p> <p>Example:</p> <pre>switch(config)# monitor erspan switch-id 1009</pre>	Configures the ERSPAN global switch ID. The switch ID is applicable for all ERSPAN Type III sessions. Default value is 0.
Step 3	<p>monitor erspan granularity 1588</p> <p>Example:</p> <pre>switch(config)# monitor erspan granularity 1588</pre>	Specifies granularity for all ERSPAN Type III sessions. 1588 (in seconds or nanoseconds) is the only option available and it is the default value.
Step 4	<p>monitor session <i>span-session-number</i> type {erspan-source local}</p> <p>Example:</p> <pre>switch(config)# monitor session 1 type erspan-source switch(config-erspan-src)#</pre>	<p>Defines an ERSPAN source session using the session ID and the session type, and places the command in ERSPAN monitor source session configuration mode.</p> <p>The <i>span-session-number</i> argument range is from 1 to 1024. The same session number cannot be used more than once.</p> <p>The session IDs for source sessions are in the same global ID space, so each session ID is globally unique for both session types.</p> <p>The session ID (configured by the <i>span-session-number</i> argument) and the session type (configured by the erspan-source keyword) cannot be changed once entered. To change session ID or session type, use the no version of the command to remove the session and then recreate the session through the</p>

	Command or Action	Purpose
		command with a new session ID or a new session type.
Step 5	Required: header-type <i>version</i> Example: <pre>switch(config-erspan-src) # header-type 3</pre>	Changes the ERSPAN source session from Type II to Type III. Note You can use the no form of this command to change an ERSPAN source session from Type III to Type II.
Step 6	(Optional) description <i>erspan_session_description</i> Example: <pre>switch(config-erspan-src) # description source1</pre>	Describes the ERSPAN source session. The <i>erspan_session_description</i> argument can be up to 240 characters and cannot contain special characters or spaces.
Step 7	source interface { ethernet <i>slot/chassis number</i> portchannel <i>number</i> } Example: <pre>switch(config-erspan-src) # source interface eth 1/1</pre>	Associates the ERSPAN source session number with the source ports (1-255).
Step 8	source vlan <i>number</i> Example: <pre>switch(config-erspan-src) # source vlan 1</pre>	Associates the ERSPAN source session number with the VLANs (1-4096).
Step 9	source vsan <i>number</i> Example: <pre>switch(config-erspan-src) # source vsan 1</pre>	On Cisco Nexus 5000 Series switches, specifies the VSAN ID number. The range is 1 to 4093. On Cisco Nexus 5500 Series switches, you cannot configure source VSANs.
Step 10	destination ip <i>ip-address</i> Example: <pre>switch(config-erspan-src) # destination ip 192.0.2.2</pre>	Configures the destination IP address in the ERSPAN session. Only one destination IP address is supported per ERSPAN source session.
Step 11	erspan-id <i>flow-id</i> Example: <pre>switch(config-erspan-src) # erspan-id 5</pre>	Configures the flow ID to identify the ERSPAN flow. The range is from 1 to 1023.
Step 12	vrf { <i>vrf-name</i> default } Example: <pre>switch(config-erspan-src) # vrf default</pre>	Configures the VRF to use instead of the global routing table. You can use a VRF that you have specifically configured or the default VRF.

	Command or Action	Purpose
Step 13	[no] filter access-group <i>acl_filter</i> Example: switch(config-erspan-src)# filter access-group erspan_acl_filter	Configures the ACL filter for packets in this ERSPAN session. The ACL filter can be a MAC or an IP access-list.
Step 14	(Optional) ip ttl <i>ttl-number</i> Example: switch(config-erspan-src)# ip ttl 5	Configures the IP time-to-live (TTL) value of the packets in the ERSPAN traffic. Valid values are from 1 to 255. The default value is 255.
Step 15	(Optional) ip dscp <i>dscp_value</i> Example: switch(config-erspan-src)# ip dscp 42	Configures the IP Differentiated Services Code Point (DSCP) value of the packets in the ERSPAN traffic. Valid values are from 0 to 63. The default value is 0.
Step 16	no shut Example: switch(config-erspan-src)# no shut	Enables the ERSPAN source session. By default, the session is created in the shut state. Note On Cisco Nexus 5000 Series switches, only two ERSPAN source sessions can be running simultaneously. On Cisco Nexus 5500 Series switches, up to four source sessions can be running simultaneously.
Step 17	exit Example: switch(config-erspan-src)# exit switch(config)# exit	Updates the configuration and exits ERSPAN source session configuration mode.
Step 18	(Optional) copy running-config startup-config Example: switch(config-erspan-src)# copy running-config startup-config	Copies the running configuration to the startup configuration.

Configuring Truncated ERSPAN

You can configure an MTU size for the ERSPAN traffic to reduce the amount of fabric or network bandwidth used in sending ERSPAN packets.

Procedure

	Command or Action	Purpose
Step 1	enable Example:	Enables privileged EXEC mode. Enter your password if prompted.

	Command or Action	Purpose
	<code>switch> enable</code>	
Step 2	configure terminal Example: <pre>switch# configure terminal switch(config)#</pre>	Enters global configuration mode.
Step 3	monitor session <i>erspan_session_number</i> type {erspan-source local} Example: <pre>switch(config)# monitor session 1 type erspan-source switch(config-erspan-src)#</pre>	<p>Defines an ERSPAN source session using the session ID and the session type, and places the command in ERSPAN monitor source session configuration mode.</p> <p>The span-session-number argument range is from 1 to 1024. The same session number cannot be used more than once.</p> <p>The session IDs for source sessions are in the same global ID space, so each session ID is globally unique for both session types.</p> <p>The session ID (configured by the span-session number argument) and the session type (configured by the erspan-source keyword) cannot be changed once entered. To change session ID or session type, use the no version of the command to remove the session and then re-create the session through the command with a new session ID or a new session type.</p>
Step 4	mtu <i>mtu-value</i> Example: <pre>switch(config-erspan-src)# mtu 64</pre>	<p>Defines the maximum transmission unit (MTU) truncation size for ERSPAN packets. Valid values are from 64 to 1518.</p> <p>The default is no truncation enabled.</p>
Step 5	exit Example: <pre>switch(config-mon-erspan-src)# exit</pre>	Updates the configuration and exits ERSPAN source session configuration mode.
Step 6	(Optional) copy running-config startup-config Example: <pre>switch(config)# copy running-config startup-config</pre>	Saves the change persistently through reboots and restarts by copying the running configuration to the startup configuration.

Shutting Down or Activating an ERSPAN Session

You can shut down ERSPAN sessions to discontinue the copying of packets from sources to destinations. Because only a specific number of ERSPAN sessions can be running simultaneously, you can shut down a session to free hardware resources to enable another session. By default, ERSPAN sessions are created in the shut state.

You can enable ERSPAN sessions to activate the copying of packets from sources to destinations. To enable an ERSPAN session that is already enabled but operationally down, you must first shut it down and then enable it. You can shut down and enable the ERSPAN session states with either a global or monitor configuration mode command.

Procedure

	Command or Action	Purpose
Step 1	configuration terminal Example: <pre>switch# configuration terminal switch(config)#</pre>	Enters global configuration mode.
Step 2	monitor session {<i>session-range</i> all} shut Example: <pre>switch(config)# monitor session 3 shut</pre>	Shuts down the specified ERSPAN sessions. The session range is from . By default, sessions are created in the shut state. Note <ul style="list-style-type: none"> • In Cisco Nexus 5000 and 5500 platforms, two sessions can run simultaneously. • In Cisco Nexus 5600 and 6000 platforms, 16 sessions can run simultaneously.
Step 3	no monitor session {<i>session-range</i> all} shut Example: <pre>switch(config)# no monitor session 3 shut</pre>	Resumes (enables) the specified ERSPAN sessions. The session range is from . By default, sessions are created in the shut state. Note If a monitor session is enabled but its operational status is down, then to enable the session, you must first specify the monitor session shut command followed by the no monitor session shut command.
Step 4	monitor session <i>session-number</i> type erspan-source Example: <pre>switch(config)# monitor session 3 type erspan-source switch(config-erspan-src)#</pre>	Enters the monitor configuration mode for the ERSPAN source type. The new session configuration is added to the existing session configuration.
Step 5	monitor session <i>session-number</i> type erspan-destination Example:	Enters the monitor configuration mode for the ERSPAN destination type.

	Command or Action	Purpose
	<code>switch(config-erspan-src)# monitor session 3 type erspan-destination</code>	
Step 6	shut Example: <code>switch(config-erspan-src)# shut</code>	Shuts down the ERSPAN session. By default, the session is created in the shut state.
Step 7	no shut Example: <code>switch(config-erspan-src)# no shut</code>	Enables the ERSPAN session. By default, the session is created in the shut state.
Step 8	(Optional) show monitor session all Example: <code>switch(config-erspan-src)# show monitor session all</code>	Displays the status of ERSPAN sessions.
Step 9	(Optional) show running-config monitor Example: <code>switch(config-erspan-src)# show running-config monitor</code>	Displays the running ERSPAN configuration.
Step 10	(Optional) show startup-config monitor Example: <code>switch(config-erspan-src)# show startup-config monitor</code>	Displays the ERSPAN startup configuration.
Step 11	(Optional) copy running-config startup-config Example: <code>switch(config-erspan-src)# copy running-config startup-config</code>	Copies the running configuration to the startup configuration.

Verifying the ERSPAN Configuration

Use the following command to verify the ERSPAN configuration information:

Command	Purpose
<code>show monitor session {all session-number range session-range}</code>	Displays the ERSPAN session configuration.
<code>show running-config monitor</code>	Displays the running ERSPAN configuration.
<code>show startup-config monitor</code>	Displays the ERSPAN startup configuration.

Configuration Examples for ERSPAN

Configuration Example for an ERSPAN Source Session

The following example shows how to configure an ERSPAN source session:

```
switch# config t
switch(config)# interface e14/30
switch(config-if)# no shut
switch(config-if)# exit
switch(config)# monitor erspan origin ip-address 3.3.3.3 global
switch(config)# monitor erspan granularity 100_ns
switch(config-erspan-src)# header-type 3
switch(config)# monitor session 1 type erspan-source
switch(config-erspan-src)# source interface e14/30
switch(config-erspan-src)# erspan-id 1
switch(config-erspan-src)# ip ttl 16
switch(config-erspan-src)# ip dscp 5
switch(config-erspan-src)# vrf default
switch(config-erspan-src)# destination ip 9.1.1.2
switch(config-erspan-src)# no shut
switch(config-erspan-src)# exit
switch(config)# show monitor session 1
```

```
switch# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
switch(config)# monitor session 1 type erspan-source
switch(config-erspan-src)# description source1
switch(config-erspan-src)# source interface ethernet 1/1
switch(config-erspan-src)# source vlan 1
switch(config-erspan-src)# source vsan 1
switch(config-erspan-src)# destination ip 192.0.2.2
switch(config-erspan-src)# erspan-id 1
switch(config-erspan-src)# vrf default
switch(config-erspan-src)# ip ttl 5
switch(config-erspan-src)# ip dscp 5
switch(config-erspan-src)# no shut
switch(config-erspan-src)# exit
switch(config)# copy running-config startup config
```

Configuration Example for an ERSPAN Type III Source Session

The following example shows how to configure an ERSPAN Type III source session:

```
switch# config t
switch(config)# monitor erspan origin ip-address 10.0.0.1 global
switch(config)# monitor session 1 type erspan-source
switch(config-erspan-src)# header-type 3
switch(config-erspan-src)# erspan-id 1
switch(config-erspan-src)# vrf default
switch(config-erspan-src)# destination ip 10.0.0.1
switch(config-erspan-src)# source interface ethernet 1/22 both
switch(config-erspan-src)# mtu 100
switch(config-erspan-src)# no shut
switch(config-erspan-src)# exit
```



```
switch(config)# exit
switch# show monitor session all
```

Configuration Example for an IP Address as the Source for an ERSPAN Session

This example shows how to configure an IP address as the source for an ERSPAN session:

```
switch# configure terminal
switch(config)# monitor erspan origin ip-address 192.0.2.1
switch(config)# exit
switch(config)# copy running-config startup config
```

Configuration Example for Truncated ERSPAN

This example shows how to configure truncated ERSPAN:

```
switch# configure terminal
switch(config)# monitor session 1 type erspan-source
switch(config-erspan-src)# mtu 64
switch(config-mon-erspan-src)# exit
switch(config)# copy running-config startup config
```

Additional References

Related Documents

Related Topic	Document Title
ERSPAN commands: complete command syntax, command modes, command history, defaults, usage guidelines, and examples	<i>Cisco Nexus NX-OS System Management Command Reference</i> for your platform.

