



# System Message Logging Facilities

---

- [System Message Logging Facilities](#), on page 2

# System Message Logging Facilities

This appendix contains the system message logging information. Table 1-1 lists the facilities that you can use in system message logging configuration.

**Table 1: System Message Logging Facilities**

| Facility     | Description  |
|--------------|--|
| aaa          | Sets level for aaa syslog messages.                      |
| aclmgr       | Sets level for aclmgr syslog messages.                   |
| adjmgr       | Sets syslog filter level for Adjacency Manager.          |
| afm          | Sets level for afm syslog messages.                      |
| all          | Sets level for all facilities.                           |
| altos        | Altos syslog level.                                      |
| arp          | Sets syslog filter level for ARP.                        |
| ascii-cfg    | Sets the logging level for ascii-cfg.                    |
| auth         | Sets level for Authorization System.                     |
| authpriv     | Sets level for Authorization (Private) system.           |
| backup       | Sets level for switchport backup syslog messages.        |
| bootvar      | Sets level for bootvar.                                  |
| callhome     | Callhome syslog level.                                   |
| capability   | Sets syslog level for mig utils daemon.                  |
| cdp          | Sets logging level for CDP.                              |
| cert-enroll  | Cert-enroll syslog level.                                |
| cfs          | Sets logging level for CFS.                              |
| clis         | Sets syslog filter level for CLIS.                       |
| core         | Core daemon syslog level.                                |
| cron         | Sets level for Cron/at facility.                         |
| daemon       | Sets level for System daemons.                           |
| dcbx         | Sets level for dcx syslog messages.                      |
| device-alias | Sets syslog level for Device Alias Distribution Service. |

| Facility             | Description  |
|----------------------|--|
| dhcp_snoop           | Sets the level for DHCP snooping syslog messages.                              |
| dstats               | Delta statistics syslog level.   |
| epp                  | Sets level for EPP syslog messages.  |
| ethpc                | Sets level for ethpc syslog messages.  |
| ethpm                | Sets level for Ethernet Port Manager (ethpm) syslog messages.                  |
| evmc                 | Sets level for evmc syslog messages.   |
| fabric_start_cfg_mgr | Sets the syslog filter level for FabricPath configuration manager.             |
| fc2d                 | Sets level for fc2d syslog messages.   |
| fcdomain             | Sets level for fcdomain syslog messages.                                       |
| fcns                 | Sets syslog filter level for name server.                                      |
| fcoe_mgr             | Sets the level for Fibre Channel over Ethernet (FCoE) manager syslog messages. |
| fcpc                 | Sets level for fcpc syslog messages.   |
| fcs                  | Sets syslog filter level for FCS.  |
| fdmi                 | Sets logging level for fdmi.   |
| feature-mgr          | Feature manager syslog level.  |
| fex                  | Sets the level for Cisco Nexus 2000 Series Fabric Extender syslog messages.    |
| flexlink             | Sets level for switchport backup syslog messages.                              |
| flogi                | Configure level for flogi syslog messages.                                     |
| fs-daemon            | FS daemon syslog level.  |
| fspf                 | FSPF syslog level.   |
| ftp                  | Sets level for File Transfer System.   |
| fwm                  | Sets level for fwm syslog messages.  |
| gatos                | Gatos syslog level.  |
| im                   | Sets level for im syslog messages.   |
| interface-vlan       | Sets level for interface VLAN syslog messages.                                 |
| ip                   | Sets level for IP syslog messages.   |
| ipconf               | Sets level for ipconf syslog messages.   |
| ipqos                | Sets level for ipqosmgr syslog messages.                                       |

| Facility | Description  |
|----------|--|
| kernel   | Sets level for kernel.   |
| l3vm     | Sets syslog filter level for L3VM.   |
| lacp     | Sets level for LACP syslog messages.   |
| license  | Licensing syslog level.<br><b>Note</b> This facility was deprecated and replaced with the licmgr facility in Cisco NX-OS 5.0(2)N1(1). For backwards compatibility, it will be maintained for a number of releases. |
| licmgr   | Licensing syslog level.  |
| lldp     | Sets level for LLDP syslog messages.   |
| local0   | Sets level for Local use daemons.  |
| local1   | Sets level for Local use daemons.  |
| local2   | Sets level for Local use daemons.  |
| local3   | Sets level for Local use daemons.  |
| local4   | Sets level for Local use daemons.  |
| local5   | Sets level for Local use daemons.  |
| local6   | Sets level for Local use daemons.  |
| local7   | Sets level for Local use daemons.  |
| lpr      | Sets level for Line Printer System.  |
| m2rib    | Sets level for Multicast Routing Information Base (MRIB) logging messages.   |
| mail     | Sets level for Mail system.  |
| mfdm     | Sets level for multicast Forwarding Information Base (FIB) distribution (MFDM) syslog messages.  |
| m fwd    | Sets level for multicast forwarding system messages.   |
| monitor  | Sets level for ethernet Switched Port Analyzer (SPAN) syslog messages.   |
| news     | Sets level for USENET news.  |
| nohms    | Sets level for nohms syslog messages.  |
| nqosm    | Sets level for nqosm syslog messages.  |
| ntp      | Sets syslog filter level for NTP.  |
| pfm      | Sets level for pfm syslog messages.  |

| Facility         | Description  |
|------------------|--|
| pktmgr           | Sets syslog filter level for Packet Manager.   |
| plugin           | Sets level for plugin syslog messages.   |
| port             | Sets level for port syslog messages.   |
| port-channel     | Sets level for EtherChannel syslog messages.   |
| port-profile     | Sets level for port profile syslog messages.   |
| port-resources   | Sets level for prm syslog messages.  |
| provision        | Sets level for provision syslog messages.  |
| qd               | Sets level for qd syslog messages.   |
| radius           | RADIUS syslog level.   |
| rdl              | Sets logging level for RDL.  |
| res_mgr          | Set slevel for res_mgr syslog messages.  |
| rib              | Sets level for rib.  |
| rlir             | Sets level for RLIR.   |
| routing          | Sets level for routing information.  |
| rscn             | Sets level for RSCN.   |
| san-port-channel | Sets level for san-port-channel syslog messages.   |
| scsi-target      | SCSI target daemon syslog level.   |
| security         | Security syslog level.   |
| session          | Sets level for session-manager syslog messages.<br><br><b>Note</b> This facility was deprecated and replaced with the session-mgr facility in Cisco NX-OS 5.0(2)N1(1). For backward compatibility, it will be maintained for a number of releases. |
| session-mgr      | Sets level for session-manager syslog messages.  |
| smm              | Sets logging level for Shared Memory Manager.  |
| snmpd            | Sets level for SNMP syslog messages.   |
| sifmgr           | Sets level for sifmgr syslog messages.   |
| spanning-tree    | Sets level for stp syslog messages.  |
| stp              | Sets level for stp syslog messages.  |
| syslog           | Sets level for Internal Syslog Messages.   |

| Facility | Description   |
|----------|---|
| sysmgr   | System Manager syslog level.  |
| tacacs   | TACACS+ syslog level.   |
| track    | Sets level for object tracking messages.  |
| tcpudp   | Sets syslog filter level for TCPUDP.  |
| track    | Sets level for track syslog messages.   |
| udld     | Sets level for UDLD syslog messages.  |
| ufdm     | Sets level for unicast Forwarding Information Base (FIB) distribution (UFDM) syslog messages. |
| urib     | Sets syslog filter level for Unicast Routing Information Base (URIB).                         |
| user     | Sets level for User Process.  |
| uucp     | Sets level for Unix-to-Unix copy system.  |
| vlan_mgr | Sets level for VLAN syslog messages.  |
| vmm      | Sets level for vmm syslog messages.   |
| vpc      | Sets level for vPC syslog messages.   |
| vsan     | VSAN syslog level.  |
| vshd     | Sets logging level for vshd.  |
| vtp      | Sets level for interface vlan syslog messages.  |
| wwnm     | Sets WWN Manager syslog level.  |
| xml      | XML agent syslog level.   |
| zone     | Sets syslog filter level for zone server.   |
| zschk    | Sets level for zschk syslog messages.   |