



Preface

This document lists and describes the system messages for Cisco Nexus 5600 series switches. The system software sends these messages to the console (and, optionally, to a logging server on another system) during operation. Not all messages indicate a problem with your system. Some messages are purely informational, while others might help diagnose problems with links, internal hardware, or the system software.

This document includes system messages for all Cisco Nexus 5600 series software releases.

This preface includes the following topics:

- [Audience, page 1](#)
- [Organization, page 1](#)
- [Document Conventions, page 2](#)
- [Obtaining Documentation and Submitting a Service Request, page 2](#)

Audience

This guide is for system administrators who are responsible for managing Cisco Nexus 5600 series systems.

Organization

This guide is organized as follows:

Chapter	Title	Description
Chapter 1	Introduction to System Messages for Cisco NX-OS	Describes the structure of system messages and the format of system log files.
Chapter 2		Lists the messages that may appear in log files, and indicates suggested remedies where applicable for the Cisco Nexus 5600 Series.

Document Conventions

Command descriptions use these conventions:

Convention	Description
boldface font	Commands and keywords are in boldface.
<i>italic font</i>	Arguments for which you supply values are in italics.
[]	Elements in square brackets are optional.
[x y z]	Optional alternative keywords are grouped in brackets and separated by vertical bars.
string	A non-quoted set of characters. Do not use quotation marks around the string or the string will include the quotation marks.

Screen examples use these conventions:

<code>screen font</code>	Terminal sessions and information that the switch displays are in screen font.
<code>boldface screen font</code>	Information that you must enter is in boldface screen font.
<i><code>italic screen font</code></i>	Arguments for which you supply values are in italic screen font.
< >	Non-printing characters, such as passwords, are in angle brackets.
[]	Default responses to system prompts are in square brackets.
!, #	An exclamation point (!) or a pound sign (#) at the beginning of a line of code indicates a comment line.

This document uses the following conventions:



Note

Means reader *take note*. Notes contain helpful suggestions or references to material not covered in the manual.



Caution

Means *reader be careful*. In this situation, you might do something that could result in equipment damage or loss of data.

Obtaining Documentation and Submitting a Service Request

For information on obtaining documentation, using the Cisco Bug Search Tool (BST), submitting a service request, and gathering additional information, see *What's New in Cisco Product Documentation* at: <http://www.cisco.com/c/en/us/td/docs/general/whatsnew/whatsnew.html>.

Subscribe to *What's New in Cisco Product Documentation*, which lists all new and revised Cisco technical documentation as an RSS feed and delivers content directly to your desktop using a reader application. The RSS feeds are a free service.

