



A Commands

This chapter describes the Cisco NX-OS commands that begin with A that are used to manage a Cisco Nexus 2000 Series Fabric Extender from a Cisco Nexus 6000 switch.

attach fex

To access the command-line interface (CLI) of a connected Fabric Extender to run diagnostic commands, use the **attach fex** command.

attach fex *chassis_ID*

Syntax Description	<i>chassis_ID</i>	Fabric Extender chassis ID. The chassis ID range is from 100 to 199.
---------------------------	-------------------	--

Command Default	None
------------------------	------

Command Modes	EXEC mode
----------------------	-----------

Command History	Release	Modification
	6.0(2)N1(1)	This command was introduced.

Usage Guidelines	Use the attach fex command to access the CLI on a connected Fabric Extender and performing diagnostic commands. We recommend that you use this command only following direction from Cisco technical support personnel.
-------------------------	--

Examples	This example shows how to access the CLI of a connected Fabric Extender to run diagnostic commands: switch# attach fex 101
-----------------	--

Related Commands	Command	Description
	show fex	Displays all configured Fabric Extender chassis connected to the switch.