



U Commands

This chapter describes the basic Cisco NX-OS system commands that begin with U.

update license

To update an existing license, use the **update license** command.

```
update license [filesystem: [//server/]] [directory] src-filename [target-filename]
```

Syntax Description		
<i>filesystem:</i>	(Optional) Name of the file system. Valid values are bootflash or volatile .	
<i>//server/</i>	(Optional) Name of the server. Valid values are <i>//</i> , //module-1/ , //sup-1/ , //sup-active/ , or //sup-local/ . The double slash (<i>//</i>) is required.	
<i>directory</i>	(Optional) Name of a directory. The directory name is case sensitive.	
<i>src-filename</i>	Name of the source license file.	
<i>target-filename</i>	(Optional) Name of the target license file.	



Note

There can be no spaces in the *filesystem://server/directory/filename* string. Individual elements of this string are separated by colons (:) and slashes (/).

Command Default	
None	

Command Modes	
EXEC mode	

Command History	Release	Modification
	6.0(2)N1(1)	This command was introduced.

Examples This example shows how to update a license:

```
switch# update license bootflash:fm.lic fm-update.lic
```

Related Commands	Command	Description
	show license	Displays license information.