



## F Commands

---

This chapter describes the Cisco NX-OS MSDP commands that begin with F.

*Review Draft -- Cisco Confidential*

# feature msdp

To enable Multicast Source Discovery Protocol (MSDP), use the **feature msdp** command. To disable PIM, use the **no** form of this command.

**feature msdp**

**no feature msdp**

**Syntax Description** This command has no arguments or keywords.

**Command Default** Disabled

**Command Modes** Global configuration mode

Command History	Release	Modified
	6.0(2)N1(1)	This command was introduced.

**Usage Guidelines** You must enable the MSDP feature before you can configure MSDP.  
This command requires the LAN Base Services license.

**Examples** This example shows how to enable a MSDP configuration:

```
switch(config)# feature msdp
switch(config)#
```

Related Commands	Command	Description
	<b>show running-configuration msdp</b>	Displays the MSDP running configuration information.
	<b>show feature</b>	Displays the status of features on a switch.
	<b>ip msdp peer</b>	Configures a MSDP peer.