



H Commands

This chapter describes the Cisco NX-OS security commands that begin with H.

hardware access-list lou resource threshold

To configure the threshold value for logical operation units (LOUs), use the **hardware access-list lou resource threshold** command. To remove the threshold value and revert to the default value, use the no form of this command.

hardware access-list lou resource threshold *value*

no hardware access-list lou resource threshold *value*

Syntax Description	<i>value</i>	Threshold value. Valid values are from 1 to 32. The default is 5.
---------------------------	--------------	---

Command Default	Threshold value of 5.
------------------------	-----------------------

Command Modes	Global configuration mode
----------------------	---------------------------

Command History	Release	Modification
	6.0(2)N1(1)	This command was introduced.

Usage Guidelines	None.
-------------------------	-------

Examples	The following example shows how to configure the maximum threshold value of 15 for LOUs.
-----------------	--

```
switch# configuration terminal
switch(config)# hardware access-list lou resource threshold 15
```