



T Commands

This chapter describes the system management commands available that begin with T.

template data timeout

To configure the template data timeout parameter for the NetFlow exporter, use the **template data timeout** command. To remove the template data timeout parameter, use the **no** form of this command.

template data timeout *time*

no template data timeout [*time*]

Syntax Description	<i>time</i> (Optional) Time in seconds. The range is from 1 to 86400.				
Defaults	None				
Command Modes	NetFlow exporter version 9 configuration (config-flow-exporter-version-9)				
Command History	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>7.0(0)N1(1)</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	7.0(0)N1(1)	This command was introduced.
Release	Modification				
7.0(0)N1(1)	This command was introduced.				
Usage Guidelines	This command does not require a license.				
Examples	<p>This example shows how to configure the template data timeout parameter:</p> <pre>switch(config)# flow exporter Netflow-Exporter-1 switch(config-flow-exporter)# version 9 switch(config-flow-exporter-version-9)# template data timeout 120</pre> <p>This example shows how to remove the template data timeout parameter configuration:</p> <pre>switch(config-flow-exporter)# version 9 switch(config-flow-exporter-version-9)# no template data timeout 120</pre>				
Related Commands	<table border="1"> <thead> <tr> <th>Command</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>show flow exporter</td> <td>Displays information about NetFlow exporters.</td> </tr> </tbody> </table>	Command	Description	show flow exporter	Displays information about NetFlow exporters.
Command	Description				
show flow exporter	Displays information about NetFlow exporters.				