



D Commands

- [disable-fka, on page 2](#)

disable-fka

disable-fka

To disable the verification of Fibre Channel over Ethernet (FCoE) Initialization Protocol (FIP) keepalive (FKA) messages, use the **disable-fka** command. To enable FKA messages, use the **no** form of this command.

disable-fka
no disable-fka

Syntax Description	This command has no arguments or keywords.				
Command Default	Enabled				
Command Modes	Virtual Fibre Channel interface configuration mode				
Command History	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>NX-OS 6.2(8)</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	NX-OS 6.2(8)	This command was introduced.
Release	Modification				
NX-OS 6.2(8)	This command was introduced.				

Usage Guidelines Before you use this command, you must enable Fibre Channel over Ethernet (FCoE).

Examples This example shows how to disable the verification of FKA messages:

```
switch# configure terminal
switch(config)# interface vfc 3
switch(config-if)# disable-fka
switch(config-if)#
```

This example shows how to enable the verification of FKA messages:

```
switch# configure terminal
switch(config)# interface vfc 3
switch(config-if)# no disable-fka
switch(config-if)#
```

Related Commands	Command	Description
	fcoe fka-adv-period	Configures the time interval in which FIP keepalive (FKA) messages are transmitted to the MAC address of the ENode.
	show fcoe-npv issu-impact	Displays FCoE NPV configuration information.
	switchport (virtual Fibre Channel interface)	Configures a switch port parameter on a virtual Fibre Channel interface.