



# I Commands

---

- [interface overlay, page 2](#)

# interface overlay

To create an overlay interface and to enter the interface-overlay configuration mode, use the **interface overlay** command. To remove the overlay interface, use the **no** form of this command.

**interface overlay** *interface-number*

**no interface overlay** *interface-number*

## Syntax Description

<i>interface-number</i>	Number that you assign to the overlay interface. The range is from 0 to 65535.
-------------------------	--

## Command Default

None

## Command Modes

Global configuration mode

## Command History

Release	Modification
5.0(3)	This command was introduced.

## Usage Guidelines

Use the **feature otv** command to enable the Overlay Transport Virtualization (OTV) feature before you can create an overlay interface or access the interface-overlay configuration mode.

You do not have to remove the configuration before you remove the overlay interface.

This command requires a Transport Services license.

## Examples

This example shows how to create an OTV overlay interface:

```
switch(config)# interface overlay 5
switch(config-if-overlay)#
```

## Related Commands

Command	Description
<b>show feature</b>	Displays information about the features enabled on the device.
<b>show otv</b>	Displays information about OTV.