



T Commands

- [track-adjacency-nexthop, page 2](#)

track-adjacency-nexthop

To enable overlay route tracking, use the **track-adjacency-nexthop** command. To disable the setting, use the **no** form of this command.

track-adjacency-nexthop

no track-adjacency-nexthop

Syntax Description This command has no arguments or keywords.

Command Default Disabled

Command Modes OTV router configuration mode.

Command History	Release	Modification
	6.2(2)	This command was introduced.

Usage Guidelines This command tracks only the site-adjacent edge device. The site-adjacent device must be reachable only by Interior Gateway Protocol (IGP) and not by any static routes or default routes.

This command requires a Transport Services license.

Examples This example shows how to enable overlay route tracking:

```
switch(config)# otv-isis default
switch(config-router)# track-adjacency-nexthop
```

Related Commands

Command	Description
feature otv	Enables OTV on this device.