



LEDs

- [Switch Chassis LEDs, on page 1](#)
- [Lane Link LEDs, on page 2](#)
- [Fan Module LEDs, on page 2](#)
- [Power Supply LEDs, on page 3](#)

Switch Chassis LEDs

The BCN, STS, and ENV, LEDs are located on the left side of the front of the switch. The port LEDs appear as triangles pointing up or down to the nearest port.

LED	Color	Status
BCN	Flashing blue	The operator has activated this LED to identify this switch in the chassis.
	Off	This switch is not being identified.
STS	Green	The switch is operational.
	Flashing amber	The switch is booting up.
	Amber	Temperature exceeds the minor alarm threshold.
	Red	Temperature exceeds the minor alarm threshold.
	Off	The switch is not receiving power.
ENV	Green	Fans and power supply modules are operational.
	Amber	At least one fan or power supply module is not operating.

LED	Color	Status
(port)	Green	Port admin state is 'Enabled', SFP is present and the interface is connected (that is, cabled, and the link is up).
	Amber	Port admin state is 'Disabled', or the SFP is absent, or both.
	Off	Port admin state is 'Enabled' and SFP is present, but interface is not connected.

Lane Link LEDs

The Lane Link LEDs indicate which of the break out lanes are being checked. If none of the Lane Link LEDs is lit, all four lanes are being checked.

LED Lit	Description
1	Checking lane 1.
2	Checking lane 2.
3	Checking lane 3.
4	Checking lane 4.
5	Checking lane 5.
6	Checking lane 6.
7	Checking lane 7.
8	Checking lane 8.
None	Checking all four lanes

Fan Module LEDs

The fan module LED is located below the air holes on the front of the module.

LED	Color	Status
STS	Green	The fan module is operational.
	Red	The fan module is not operational (fan is probably not functional).
	Off	Fan module is not receiving power.

Power Supply LEDs

The power supply LEDs are located on the left front portion of the power supply. Combinations of states indicated by the Okay (🟢) and Fault (🔴) LEDs indicate the status for the module as shown in the following table.

🟢 LED	🔴 LED	Status
Green	Off	Power supply is on and outputting power to the switch.
Flashing green	Off	Power supply is connected to a power source but not outputting power to the switch—power supply might not be installed in the chassis.
Off	Off	Power supply is not receiving power or is in shut mode.
Green	Flashing amber	Power supply warning—possibly one of the following conditions: <ul style="list-style-type: none"> • High voltage • High power • Low voltage • Power supply warning condition • Slow power supply fan
Green	Amber	Power supply failure

