



X Show Commands

- [show xml server logging configuration, page 2](#)
- [show xml server status, page 3](#)

show xml server logging configuration

show xml server logging configuration

Syntax Description

show	Show running system information
xml	Show xmlagent logging configuration
server	xml agent server
logging	Show logging configuration and contents of logfile
configuration	Show facility logging configuration

Command Modes

- /exec

show xml server status

show xml server status [**__readonly__** **operational_status** **o_status** **maximum_sessions_configured** **max_session** [**TABLE_sessions** **session_id** **user_name** **start_time** **sap_id** **timeout** **time_remaining_to_timeout** **ip_addr**]]

Syntax Description

show	to display xml agent information
xml	xml agent
server	xml agent server
status	display xml agent information
__readonly__	
operational_status	run-time info about xml
o_status	operational status of the xml disabled value: 0 enabled value: 1
maximum_sessions_configured	the max session configured
max_session	Type: integer min: 1 max: 8 max sessions number
TABLE_sessions	all xml sessions
session_id	Type: integer one xml session id
user_name	Type: string the xml session user name
start_time	Type: string the xml session start time
sap_id	Type: integer the mts sap id

<i>timeout</i>	Type: string inactivity timeout value
<i>time_remaining_to_timeout</i>	Type: string time remaining to timeout
<i>ip_addr</i>	Type: string ip address of the session

Command Modes

- /exec