



V Commands

- [validate-xml](#), on page 4
- [validate-xml](#), on page 5
- [variance](#), on page 6
- [vdc](#), on page 7
- [vdc](#), on page 8
- [vdc combined-hostname](#), on page 9
- [vdc_id](#), on page 10
- [vdc resource template](#), on page 11
- [vdc suspend](#), on page 12
- [vdc suspend](#), on page 13
- [vdp dot1q default static](#), on page 14
- [vdp dot1q static](#), on page 15
- [vdp vni default static](#), on page 16
- [vdp vni static](#), on page 17
- [vendor controller interop](#), on page 18
- [verify-data](#), on page 19
- [verify-host](#), on page 20
- [verify](#), on page 21
- [verify profile](#), on page 22
- [verify verbose](#), on page 23
- [version](#), on page 24
- [version 9](#), on page 25
- [virtual-service](#), on page 26
- [virtual-service](#), on page 27
- [virtual-service](#), on page 28
- [virtual-service connect name console](#), on page 29
- [virtual-service move name log to](#), on page 30
- [virtual-service reset force](#), on page 31
- [virtual IPv6](#), on page 32
- [virtual IPv6](#), on page 33
- [virtual ip](#), on page 34
- [virtual ip](#), on page 35
- [vlan-consistency-check](#), on page 36

- [vlan](#), on page 37
- [vlan](#), on page 38
- [vlan](#), on page 39
- [vlan access-map](#), on page 40
- [vlan designated priority](#), on page 41
- [vlan filter vlan](#), on page 42
- [vlan root priority](#), on page 43
- [vmtracker connection](#), on page 44
- [vmtracker connection refresh](#), on page 45
- [vmtracker enable](#), on page 46
- [vmtracker fabric auto-config](#), on page 47
- [vmtracker set device-id](#), on page 48
- [vn-segment](#), on page 49
- [vni](#), on page 50
- [vni](#), on page 51
- [vni](#), on page 52
- [vni default dynamic](#), on page 53
- [vni l2](#), on page 54
- [vpc](#), on page 55
- [vpc domain](#), on page 56
- [vpc orphan-port suspend](#), on page 57
- [vpc peer-link](#), on page 58
- [vpc role preempt](#), on page 59
- [vpc suspend](#), on page 60
- [vpc upgrade-done](#), on page 61
- [vpn](#), on page 62
- [vpn id](#), on page 63
- [vrf](#), on page 64
- [vrf](#), on page 65
- [vrf](#), on page 66
- [vrf](#), on page 67
- [vrf](#), on page 68
- [vrf](#), on page 69
- [vrf](#), on page 70
- [vrf](#), on page 71
- [vrf](#), on page 72
- [vrf](#), on page 73
- [vrf](#), on page 74
- [vrf context](#), on page 75
- [vrf default static](#), on page 76
- [vrf member](#), on page 77
- [vrf member](#), on page 78
- [vrf static](#), on page 79
- [vrrp](#), on page 80
- [vrrp bfd](#), on page 81
- [vrrpv2](#), on page 82

- vrrpv3, on page 83
- vrrpv3 address-family, on page 84
- vrrpv3 address-family, on page 85
- vrrs leader, on page 86
- vrrs pathway, on page 87
- vsh, on page 88

validate-xml

| validate-xml

Syntax Description

| | |
|--------------|--|
| | Pipe command output to filter |
| validate-xml | validate an xml output according to .xsd definitions |

Command Mode

- /output

validate-xml

| validate-xml

Syntax Description

| | |
|--------------|--|
| | Pipe command output to filter |
| validate-xml | validate an xml output according to .xsd definitions |

Command Mode

- /output

variance

{ { variance <variance> } | { no variance [<variance>] } }

Syntax Description

| | |
|-----------------|--------------------------------------|
| no | Negate a command or set its defaults |
| variance | Control load balancing variance |
| <i>variance</i> | Metric variance multiplier |

Command Mode

- /exec/configure/router-eigrp/router-eigrp-vrf-common /exec/configure/router-eigrp/router-eigrp-af-common

vdc

vdc <e-vdc> [id <new_id>] [type <vtype>]

Syntax Description

| | |
|---------------|--|
| vdc | Manage Virtual Device Context |
| <i>e-vdc</i> | Enter Virtual Device Context <vdc-id> |
| id | (Optional) force this vdc into a specific id |
| <i>new_id</i> | (Optional) force this vdc into a specific id |
| type | (Optional) Create vdc with a special set of services |
| <i>vtype</i> | (Optional) type of vdc |

Command Mode

- /exec/configure

vdc

[no] vdc <e-vdc> [force]

Syntax Description

| | |
|--------------|---------------------------------------|
| no | Negate a command or set its defaults |
| vdc | Manage Virtual Device Context |
| <i>e-vdc</i> | Enter Virtual Device Context <vdc-id> |
| force | (Optional) Force ungraceful cleanup |

Command Mode

- /exec/configure

vdc combined-hostname

[no] vdc combined-hostname

Syntax Description

| | |
|-------------------|--|
| no | (Optional) Negate a command or set its defaults |
| vdc | Manage Virtual Device Context |
| combined-hostname | The hostname of non-default vdc's will be <default vdc name>-<nondefault vdc name> |

Command Mode

- /exec/configure

vdc_id

[no] vdc_id <id>

Syntax Description

| | |
|-----------|---------------------------------------|
| no | Negate a command or set its defaults |
| vdc_id | Manage Virtual Device Context |
| <i>id</i> | Enter Virtual Device Context <vdc-id> |

Command Mode

- /exec/configure

vdc resource template

[no] vdc resource template { <name> | <res-mgr-template-known-name> }

Syntax Description

| | |
|------------------------------------|---|
| no | (Optional) Negate a command or set its defaults |
| vdc | Manage Virtual Device Context |
| resource | Configure resource template |
| template | Configure resource template |
| <i>name</i> | Resource template name |
| <i>res-mgr-template-known-name</i> | Resource template name |

Command Mode

- /exec/configure

vdc suspend

vdc <en-vdc> suspend

Syntax Description

| | |
|---------------|--|
| vdc | Manage Virtual Device Context |
| <i>en-vdc</i> | Enter Virtual Device Context <vdc-id> |
| suspend | Put the vdc in a paused state. When resumed vdc will come up with its startup config |

Command Mode

- /exec/configure

vdc suspend

[no] vdc <en-vdc> suspend

Syntax Description

| | |
|---------------|--|
| vdc | Manage Virtual Device Context |
| <i>en-vdc</i> | Enter Virtual Device Context <vdc-id> |
| suspend | Put the vdc in a paused stated. When resumed vdc will use its startup config |

Command Mode

- /exec/configure

vdp dot1q default static

```
{ vdp dot1q default { static <profile-name> | dynamic } } | { no vdp dot1q default }
```

Syntax Description

| | |
|---------------------|--|
| no | Negate a command or set its defaults |
| vdp | VDP protocol triggers |
| static | Static Profile Map: Configure profile name via CLI |
| <i>profile-name</i> | Static Profile Map: Configure profile name via CLI |
| dynamic | Dynamic Profile Map: Retrieve profile name from the external server |
| dot1q | Dot1Q Encapsulation |
| default | Default (wildcard). Match any dot1q when there is no specific dot1q mapping configured |

Command Mode

- /exec/configure/profile-map /exec/configure/profile-map-global

vdp dot1q static

```
{ vdp dot1q <vlan-id> { static <profile-name> | dynamic } } | { no vdp dot1q <vlan-id> }
```

Syntax Description

| | |
|---------------------|---|
| no | Negate a command or set its defaults |
| vdp | VDP protocol triggers |
| static | Static Profile Map: Configure profile name via CLI |
| <i>profile-name</i> | Static Profile Map: Configure profile name via CLI |
| dynamic | Dynamic Profile Map: Retrieve profile name from the external server |
| dot1q | Dot1Q Encapsulation |
| <i>vlan-id</i> | |

Command Mode

- /exec/configure/profile-map /exec/configure/profile-map-global

vdp vni default static

```
{ vdp vni default { static <profile-name> | dynamic } } | { no vdp vni default }
```

Syntax Description

| | |
|---------------------|--|
| no | Negate a command or set its defaults |
| vdp | VDP protocol triggers |
| vni | Virtual Network Identifier |
| static | Static Profile Map: Configure profile name via CLI |
| dynamic | Dynamic Profile Map: Retrieve profile name from the external server |
| <i>profile-name</i> | Static Profile Map: Configure profile name via CLI |
| default | Default (wildcard). Match any vni when there is no specific vni mapping configured |

Command Mode

- /exec/configure/profile-map /exec/configure/profile-map-global

vdp vni static

```
{ vdp vni <vni-id> { static <profile-name> | dynamic } } | { no vdp vni <vni-id> }
```

Syntax Description

| | |
|---------------------|---|
| no | Negate a command or set its defaults |
| vdp | VDP protocol triggers |
| vni | Virtual Network Identifier |
| <i>vni-id</i> | |
| static | Static Profile Map: Configure profile name via CLI |
| dynamic | Dynamic Profile Map: Retrieve profile name from the external server |
| <i>profile-name</i> | Static Profile Map: Configure profile name via CLI |

Command Mode

- /exec/configure/profile-map /exec/configure/profile-map-global

vendor controller interop

[no] vendor controller interop

Syntax Description

| | |
|------------|---|
| no | (Optional) Negate a command or set its defaults |
| vendor | vendor |
| controller | controller |
| interop | interop |

Command Mode

- /exec/configure

verify-data

{ { no | default } verify-data | verify-data }

Syntax Description

| | |
|-------------|-------------------------------|
| no | |
| default | Set a command to its defaults |
| verify-data | Verify data |

Command Mode

- /exec/configure/ip-sla/udp /exec/configure/ip-sla/jitter /exec/configure/ip-sla/icmpEcho

verify-host

{ verify-host | no verify-host }

Syntax Description

| | |
|-------------|---|
| no | Negate a command or set its defaults |
| verify-host | Verify host reachability - payload info mandatory |

Command Mode

- /exec/configure/configngoamconnectcheck

verify

verify

Syntax Description

| | |
|--------|--|
| verify | Verify the current configuration session |
|--------|--|

Command Mode

- /exec/configure

verify profile

verify profile <all_conf_profile_name> [__readonly__ TABLE_profile_name <missing_param>]

Syntax Description

| | |
|------------------------------|--|
| verify | Verify the instance with a configuration profile |
| profile | Name of the configuration profile |
| <i>all_conf_profile_name</i> | Enter the name of configuration profile |
| <i>__readonly__</i> | (Optional) |
| <i>TABLE_profile_name</i> | (Optional) |
| <i>missing_param</i> | (Optional) |

Command Mode

- /exec/configure/param-inst

verify verbose

verify verbose

Syntax Description

| | |
|---------|--|
| verify | Verify the current configuration session |
| verbose | Verify the current configuration session with more details |

Command Mode

- /exec/configure

version

[no] version <s0>

Syntax Description

| | |
|---------|---|
| no | (Optional) Negate a command or set its defaults |
| version | Version info |
| s0 | Version |

Command Mode

- /exec/configure

version 9

version 9

Syntax Description

| | |
|---------|----------------------------|
| version | Specify the export version |
| 9 | Version 9 Export |

Command Mode

- /exec/configure/nfm-exporter

virtual-service

[no] virtual-service

Syntax Description

| | |
|-----------------|---|
| no | (Optional) Negate a command or set its defaults |
| virtual-service | Virtual service global settings |

Command Mode

- /exec/configure

virtual-service

[no] virtual-service <virt_serv_name>

Syntax Description

| | |
|-----------------------|---|
| no | (Optional) Negate a command or set its defaults |
| virtual-service | Configure a virtual service |
| <i>virt_serv_name</i> | Virtual service name |

Command Mode

- /exec/configure

virtual-service

```
virtual-service { { install name <virt_serv_name> package <file_uri> [ media <target_media> ] } | { upgrade
name <virt_serv_name> package <file_uri> } | { uninstall name <virt_serv_name> } }
```

Syntax Description

| | |
|-----------------------|---|
| virtual-service | Virtualization manager actions |
| install | Add a virtual service to install database |
| upgrade | Upgrade a virtual service package to a different version |
| name | Name of the virtual service |
| <i>virt_serv_name</i> | Virtual service name |
| package | Package location |
| <i>file_uri</i> | File name (with .ova extension) for the virtual service |
| media | (Optional) Target media to use to explode the virtual service package |
| <i>target_media</i> | (Optional) Target media |
| uninstall | Remove a virtual service from the install database |

Command Mode

- /exec

virtual-service connect name console

```
virtual-service connect name <virt_serv_name> { console | aux }
```

Syntax Description

| | |
|-----------------------|---|
| virtual-service | Virtualization service actions |
| connect | Request a virtual service shell |
| name | Name of the virtual service |
| <i>virt_serv_name</i> | Name of existing virtual service |
| console | Request a virtual service console shell |
| aux | Request a virtual service auxiliary console shell |

Command Mode

- /exec

virtual-service move name log to

virtual-service move name <virt_serv_name> { log | core } to <dir_uri>

Syntax Description

| | |
|-----------------------|--|
| virtual-service | Virtualization service actions |
| move | Move a virtual service log or core files |
| name | Name of the virtual service |
| <i>virt_serv_name</i> | Name of existing virtual service |
| log | Move log files |
| core | Move core files |
| to | Destination directory to move log or core files to |
| <i>dir_uri</i> | Destination directory name |

Command Mode

- /exec

virtual-service reset force

virtual-service reset force

Syntax Description

| | |
|-----------------|---|
| virtual-service | Virtualization service actions |
| reset | Virtualization reset commands |
| force | Force a non-recoverable reset of all virtualization files |

Command Mode

- /exec

virtual IPv6

```
[no] virtual IPv6 { <ip-addr> { <prefix> | <netmask> } } [ ip | { { udp | tcp } { <port_num> | any } } ] [ {
advertise } { enable | disable } [ active ] [ device-group <dgrp_name> ]
```

Syntax Description

| | |
|------------------|--|
| no | (Optional) Negate a command or set its defaults |
| virtual | ITD virtual ip configuration |
| IPv6 | ITD virtual IPv6 |
| <i>prefix</i> | IPv6 prefix length |
| ip | (Optional) IP Protocol |
| udp | (Optional) UDP Protocol |
| tcp | (Optional) TCP Protocol |
| <i>port_num</i> | (Optional) Port Number |
| any | (Optional) Any Port Number |
| advertise | (Optional) advertise |
| enable | (Optional) Enable |
| disable | (Optional) Disable |
| active | (Optional) Advertise route on at least one node active |
| device-group | (Optional) device-group |
| <i>dgrp_name</i> | (Optional) VIP device-group name |

Command Mode

- /exec/configure/itd

virtual IPv6

```
[no] virtual IPv6 { <ip-addr> { <prefix> | <netmask> } } [ ip | { { udp | tcp } { <port_num> | any } } ] [ { arp | advertise } { enable | disable } ] [ device-group <group-name> ]
```

Syntax Description

| | |
|-------------------|--|
| no | (Optional) Negate a command or set its defaults |
| virtual | Configure Virtual IP of server nodes for redirection |
| IPv6 | IPv6 address |
| <i>prefix</i> | IPv6 prefix length |
| ip | (Optional) IP address |
| udp | (Optional) UDP port |
| tcp | (Optional) TCP port |
| <i>port_num</i> | (Optional) Port Number |
| any | (Optional) Any Port Number |
| arp | (Optional) ARP |
| advertise | (Optional) advertise |
| enable | (Optional) Enable |
| disable | (Optional) Disable |
| device-group | (Optional) Specify device group mapped to VIP |
| <i>group-name</i> | (Optional) Device-group name mapped to VIP |

Command Mode

- /exec/configure/plb

virtual ip

```
[no] virtual ip { <ip-addr> <ip-mask> } [ ip | { { udp | tcp } { <port_num> | any } } ] [ { advertise } { enable | disable } [ active ] ] [ device-group <dgrp_name> ]
```

Syntax Description

| | |
|------------------|--|
| no | (Optional) Negate a command or set its defaults |
| virtual | ITD virtual ip configuration |
| ip | ITD virtual ip |
| <i>ip-addr</i> | IP address in format i.i.i.i |
| <i>ip-mask</i> | IP network mask in format m.m.m.m |
| ip | (Optional) IP Protocol |
| udp | (Optional) UDP Protocol |
| tcp | (Optional) TCP Protocol |
| <i>port_num</i> | (Optional) Port Number |
| any | (Optional) Any Port Number |
| advertise | (Optional) advertise |
| enable | (Optional) Enable |
| disable | (Optional) Disable |
| active | (Optional) Advertise route on at least one node active |
| device-group | (Optional) device-group |
| <i>dgrp_name</i> | (Optional) VIP device-group name |

Command Mode

- /exec/configure/itd

virtual ip

```
[no] virtual ip { <ip-addr> <ip-mask> } [ ip | { { udp | tcp } { <port_num> | any } } ] [ { arp | advertise } { enable | disable } ] [ device-group <group-name> ]
```

Syntax Description

| | |
|-------------------|--|
| no | (Optional) Negate a command or set its defaults |
| virtual | Configure Virtual IP of server nodes for redirection |
| ip | IPv4 address |
| <i>ip-addr</i> | IPv4 prefix in format i.i.i.i |
| <i>ip-mask</i> | IPv4 prefix mask in format m.m.m.m |
| ip | (Optional) IPv4 address |
| udp | (Optional) UDP port |
| tcp | (Optional) TCP port |
| <i>port_num</i> | (Optional) Port Number |
| any | (Optional) Any Port Number |
| arp | (Optional) ARP |
| advertise | (Optional) advertise |
| enable | (Optional) Enable |
| disable | (Optional) Disable |
| device-group | (Optional) Specify device group mapped to VIP |
| <i>group-name</i> | (Optional) Device-group name mapped to VIP |

Command Mode

- /exec/configure/plb

vlan-consistency-check

[no] vlan-consistency-check

Syntax Description

| | |
|------------------------|---|
| no | (Optional) Negate a command or set its defaults |
| vlan-consistency-check | enable vlan consistency check |

Command Mode

- /exec/configure/evpn-esi-mh

vlan

[no] vlan <vlan-range>

Syntax Description

| | |
|-------------------|---|
| no | (Optional) Negate a command or set its defaults |
| vlan | add vlan to vlan group |
| <i>vlan-range</i> | range of vlans |

Command Mode

- /exec/configure/itd-vlan-grp

vlan

vlan <vlans> | no vlan

Syntax Description

| | |
|--------------|--|
| no | Negate a command or set its defaults |
| vlan | Set allowed fabricpath VLANs for a given anycast bundle |
| <i>vlans</i> | VLAN IDs of the allowed fabricpath VLANs in the anycast bundle |

Command Mode

- /exec/configure/anycast

vlan

[no] vlan <vlan-range>

Syntax Description

| | |
|-------------------|---|
| no | (Optional) Negate a command or set its defaults |
| vlan | vlan |
| <i>vlan-range</i> | range of vlans |

Command Mode

- /exec/configure/smartc /exec/configure/smartc

vlan access-map

[no] vlan access-map <name> [<seqno>]

Syntax Description

| | |
|--------------|---|
| no | (Optional) Negate a command or set its defaults |
| vlan | Vlan commands |
| <i>name</i> | List name |
| access-map | Configure a VLAN access map |
| <i>seqno</i> | (Optional) Sequence number |

Command Mode

- /exec/configure

vlan designated priority

{ vlan <vlan-id> | bridge-domain <bd-id> } designated priority <prio> | no { vlan <vlan-id> | bridge-domain <bd-id> } designated priority [<prio>]

Syntax Description

| | |
|----------------|--|
| no | Negate a command or set its defaults |
| vlan | VLAN Switch Spanning Trees |
| bridge-domain | Bridge-Domain Switch Spanning Trees |
| <i>vlan-id</i> | vlan range, Example: 1,3-5,7,9-11 |
| <i>bd-id</i> | Bridge-Domain range, Example: 2,4-5,7,9-11 |
| designated | Set the designated bridge priority for the spanning tree |
| priority | Set the bridge priority for the spanning tree |
| <i>prio</i> | bridge priority in increments of 4096 |

Command Mode

- /exec/configure/spanning-tree/pseudo

vlan filter vlan

[no] vlan filter <name> { vlan-list <vlans> | vlan-list-include-reserved <vlans-include-reserved> }

Syntax Description

| | |
|-------------------------------|---|
| no | (Optional) Negate a command or set its defaults |
| vlan | Vlan commands |
| filter | Specify access control for packets |
| <i>name</i> | List name |
| vlan-list | Specify list of VLANs to apply access control |
| <i>vlans</i> | List of VLANs |
| vlan-list-include-reserved | Specify list of VLANs to apply access control |
| <i>vlans-include-reserved</i> | List of VLANs |

Command Mode

- /exec/configure

vlan root priority

```
{ vlan <vlan-id> | bridge-domain <bd-id> } root priority <prio> | no { vlan <vlan-id> | bridge-domain <bd-id> } root priority [ <prio> ]
```

Syntax Description

| | |
|----------------|--|
| no | Negate a command or set its defaults |
| vlan | VLAN Switch Spanning Trees |
| bridge-domain | Bridge-Domain Switch Spanning Trees |
| <i>vlan-id</i> | vlan range, Example: 1,3-5,7,9-11 |
| <i>bd-id</i> | Bridge-Domain range, Example: 2,4-5,7,9-11 |
| root | Set the root bridge priority for the spanning tree |
| priority | Set the bridge priority for the spanning tree |
| <i>prio</i> | bridge priority in increments of 4096 |

Command Mode

- /exec/configure/spanning-tree/pseudo

vmtracker connection

[no] vmtracker connection <connection-name>

Syntax Description

| | |
|------------------------|---|
| no | (Optional) Negate a command or set its defaults |
| vmtracker | Configure vmtracker parameters |
| connection | Specify a host to connect |
| <i>connection-name</i> | VM host name |

Command Mode

- /exec/configure

vmtracker connection refresh

[no] vmtracker connection <connection-name> refresh

Syntax Description

| | |
|------------------------|---|
| no | (Optional) Negate a command or set its defaults |
| vmtracker | Configure vmtracker parameters |
| connection | Specify a host to connect |
| <i>connection-name</i> | VM host name |
| refresh | Refresh all host related information |

Command Mode

- /exec/configure

vmtracker enable

[no] vmtracker enable

Syntax Description

| | |
|-----------|---|
| no | (Optional) Negate a command or set its defaults |
| vmtracker | Configure vmtracker feature |
| enable | Enable vmtracker feature on interface |

Command Mode

- /exec/configure/if-switching

vmtracker fabric auto-config

[no] vmtracker fabric auto-config

Syntax Description

| | |
|-------------|---|
| no | (Optional) Negate a command or set its defaults |
| vmtracker | Configure vmtracker parameters |
| fabric | Enable VM Tracker Fabric paramters |
| auto-config | Enable VM Tracker Fabric AutoConfiguration |

Command Mode

- /exec/configure

vmtracker set device-id

[no] vmtracker set device-id <dev-id>

Syntax Description

| | |
|---------------|---|
| no | (Optional) Negate a command or set its defaults |
| vmtracker | Configure vmtracker parameters |
| set | Set vmtracker options |
| device-id | Set the device-id |
| <i>dev-id</i> | Device id |

Command Mode

- /exec/configure

vn-segment

vn-segment { <segment-id> | <zero-segment-id> } | no vn-segment

Syntax Description

| | |
|------------------------|--------------------------------------|
| no | Negate a command or set its defaults |
| vn-segment | VN Segment id of the VLAN |
| <i>segment-id</i> | segment-id |
| <i>zero-segment-id</i> | segment-id |

Command Mode

- /exec/configure/vlan

vni

{ vni <vni-id> | no vni }

Syntax Description

| | |
|---------------|--------------------------------------|
| no | Negate a command or set its defaults |
| vni | Vni |
| <i>vni-id</i> | Configure vni id |

Command Mode

- /exec/configure/configngoamconnectcheck

vni

[no] vni <vni-id-sh>

Syntax Description

| | |
|------------------|---|
| no | (Optional) Negate a command or set its defaults |
| vni | Configure a vni-based static host |
| <i>vni-id-sh</i> | |

Command Mode

- /exec/configure/static-host

vni

{ vni <id> } | { no vni [<id>] }

Syntax Description

| | |
|-----------|--------------------------------------|
| no | Negate a command or set its defaults |
| vni | Virtual Network Identifier |
| <i>id</i> | vni, Example: 4096,6099 |

Command Mode

- /exec/configure/vrf

vni default dynamic

{ vni default dynamic } | { no vni default }

Syntax Description

| | |
|---------|--|
| no | Negate a command or set its defaults |
| dynamic | Dynamic Profile Map: Retrieve profile name from the external server |
| vni | Virtual Network Identifier |
| default | Default (wildcard). Match any vni when there is no specific vni mapping configured |

Command Mode

- /exec/configure/profile-map /exec/configure/profile-map-global

vni l2

[no] vni <vni_id> l2

Syntax Description

| | |
|---------------|---|
| no | (Optional) Negate a command or set its defaults |
| vni | Configure Ethernet VPN ID |
| <i>vni_id</i> | Specify VNI ID |
| l2 | Layer-2 VNI |

Command Mode

- /exec/configure/evpn

vpc

vpc [<vpc_num>] | no vpc [<vpc_num>]

Syntax Description

| | |
|----------------|--|
| no | Negate a command or set its defaults |
| vpc | Virtual Port Channel configuration |
| <i>vpc_num</i> | (Optional) specify a Virtual Port Channel number |

Command Mode

- /exec/configure/if-eth-port-channel-switch

vpc domain

vpc domain <domain_id> | no vpc domain <domain_id>

Syntax Description

| | |
|------------------|--------------------------------------|
| no | Negate a command or set its defaults |
| vpc | Virtual Port Channel configuration |
| domain | Specify domain |
| <i>domain_id</i> | domain id |

Command Mode

- /exec/configure

vpc orphan-port suspend

[no] vpc orphan-port suspend

Syntax Description

| | |
|-------------|---|
| no | (Optional) Negate a command or set its defaults |
| vpc | Virtual Port Channel configuration |
| orphan-port | orphan-port (non-vpc port) |
| suspend | suspend - when vPC secondary peerlink goes down |

Command Mode

- /exec/configure/if-eth-phy /exec/configure/if-eth-port-channel-switch /exec/configure/if-eth-port-channel

vpc peer-link

vpc peer-link | no vpc peer-link

Syntax Description

| | |
|-----------|---|
| no | Negate a command or set its defaults |
| vpc | Virtual Port Channel configuration |
| peer-link | specify if this link is used for peer communication |

Command Mode

- /exec/configure/if-eth-port-channel-switch

vpc role preempt

vpc role preempt

Syntax Description

| | |
|---------|--|
| vpc | Virtual Port Channel configuration |
| role | vPC role related command |
| preempt | Enable/Trigger preemption of lower priority master |

Command Mode

- /exec

vpc suspend

vpc suspend [<n-secs>]

Syntax Description

| | |
|---------------|---|
| vpc | Virtual Port Channel configuration |
| suspend | Suspend the vPC on primary |
| <i>n-secs</i> | (Optional) Suspension duration in seconds |

Command Mode

- /exec/configure/vpc-domain

vpc upgrade-done

vpc upgrade-done

Syntax Description

| | |
|--------------|--------------------------------------|
| vpc | Virtual Port Channel configuration |
| upgrade-done | Unlock the cli and remove ISSU state |

Command Mode

- /exec

vpn

[no] vpn <otv-isis-vpn-name>

Syntax Description

| | |
|--------------------------|---|
| no | (Optional) Negate a command or set its defaults |
| vpn | Configure IS-IS VPN name eg: Overlay<x> |
| <i>otv-isis-vpn-name</i> | Overlay name |

Command Mode

- /exec/configure/otv-isis

vpn id

vpn id <vpn-id> | no vpn id [<vpn-id>]

Syntax Description

| | |
|---------------|---|
| no | Negate a command or set its defaults |
| vpn | Configure VPN ID in rfc2685 format |
| id | Configure VPN ID in rfc2685 format |
| <i>vpn-id</i> | OUI:VPN-Index, format (hex) <3 bytes OUI:4 bytes VPN-Index> |

Command Mode

- /exec/configure/vrf

vrf

[no] vrf <vrf-cfg-name>

Syntax Description

| | |
|---------------------|---|
| <i>vrf-cfg-name</i> | VRF name |
| vrf | Virtual Router Context |
| no | (Optional) Negate a command or set its defaults |

Command Mode

- /exec/configure/router-bgp/router-bgp-bmp-server

vrf

[no] vrf <vrf-name>

Syntax Description

| | |
|-----------------|---|
| no | (Optional) Negate a command or set its defaults |
| vrf | Virtual Router Context |
| <i>vrf-name</i> | VRF name |

Command Mode

- /exec/configure/router-bgp

vrf

[no] vrf <vrf-name>

Syntax Description

| | |
|-----------------|---|
| no | (Optional) Negate a command or set its defaults |
| vrf | Display per-VRF information |
| <i>vrf-name</i> | VRF name |

Command Mode

- /exec/configure/router-ospf

vrf

{ { no | default } vrf |

Syntax Description

| | |
|---------|---|
| no | |
| default | Set a command to its defaults |
| vrf | Configure IP SLAs for a VPN Routing/Forwarding instance |

Command Mode

- /exec/configure/ip-sla/udp /exec/configure/ip-sla/jitter /exec/configure/ip-sla/tcp
/exec/configure/ip-sla/icmpEcho /exec/configure/ip-sla/dns /exec/configure/ip-sla/http

vrf

```
{ { vrf { <vrf-name> | <vrf-known-name> } } | no vrf }
```

Syntax Description

| | |
|-----------------------|--------------------------------------|
| no | Negate a command or set its defaults |
| vrf | Display per-VRF information |
| <i>vrf-name</i> | VRF name |
| <i>vrf-known-name</i> | Known VRF name |

Command Mode

- /exec/configure/configngoamconnectcheck

vrf

[no] vrf <vrf-name>

Syntax Description

| | |
|-----------------|---|
| no | (Optional) Negate a command or set its defaults |
| vrf | Configure VRF information |
| <i>vrf-name</i> | VRF name |

Command Mode

- /exec/configure/router-eigrp

vrf

{ vrf <name> } | { no vrf <name> }

Syntax Description

| | |
|-------------|--------------------------------------|
| no | Negate a command or set its defaults |
| vrf | ITD service vrf |
| <i>name</i> | ITD Service VRF name |

Command Mode

- /exec/configure/itd

vrf

[no] vrf <vrf-name>

Syntax Description

| | |
|-----------------|---|
| no | (Optional) Negate a command or set its defaults |
| vrf | Configure ISIS VRF information |
| <i>vrf-name</i> | VRF name |

Command Mode

- /exec/configure/router-isis

vrf

[no] vrf <vrf-name>

Syntax Description

| | |
|-----------------|---|
| no | (Optional) Negate a command or set its defaults |
| vrf | Configure RIP VRF information |
| <i>vrf-name</i> | VRF name |

Command Mode

- /exec/configure/router-rip

vrf

[no] vrf <vrf-name>

Syntax Description

| | |
|-----------------|---|
| no | (Optional) Negate a command or set its defaults |
| vrf | Display per-VRF information |
| <i>vrf-name</i> | VRF name |

Command Mode

- /exec/configure/router-ospf3

vrf

{ vrf <name> } | { no vrf <name> }

Syntax Description

| | |
|-------------|--------------------------------------|
| no | Negate a command or set its defaults |
| vrf | Configure vrf for PLB service |
| <i>name</i> | VRF name |

Command Mode

- /exec/configure/plb

vrf context

vrf context <vrf-name> | no vrf context { <vrf-name> | <vrf-name> }

Syntax Description

| | |
|-----------------|--------------------------------------|
| no | Negate a command or set its defaults |
| vrf | Configure VRF parameters |
| context | Create VRF and enter VRF mode |
| <i>vrf-name</i> | VRF name |
| <i>vrf-name</i> | VRF name |
| <i>vrf-name</i> | VRF name |

Command Mode

- /exec/configure

vrf default static

```
{ vrf default { static <profile-name> | dynamic } } | { no vrf default }
```

Syntax Description

| | |
|---------------------|--|
| no | Negate a command or set its defaults |
| vrf | VRF name |
| default | Default (wildcard). Match any vrf when there is no specific vrf mapping configured |
| static | Static Profile Map: Configure profile name via CLI |
| <i>profile-name</i> | Static Profile Map: Configure profile name via CLI |
| dynamic | Dynamic Profile Map: Retrieve profile name from the external server |

Command Mode

- /exec/configure/profile-map-global

vrf member

vrf member { <vrf_name> | <vrf-known-name> } | no vrf member [<vrf_name> | <vrf-known-name>]

Syntax Description

| | |
|-----------------------|--|
| no | Negate a command or set its defaults |
| vrf | Configure VPN Routing/Forwarding table |
| member | Set route's VRF membership |
| <i>vrf_name</i> | VRF name |
| <i>vrf-known-name</i> | Known VRF name |

Command Mode

- /exec/configure/track

vrf member

vrf member <vrf-name> | no vrf member [<vrf-name>]

Syntax Description

| | |
|-----------------|--------------------------------------|
| no | Negate a command or set its defaults |
| vrf | Configure VRF parameters |
| member | Set interface's VRF membership |
| <i>vrf-name</i> | VRF name |

Command Mode

- /exec/configure/if-igp /exec/configure/if-mgmt-ether

vrf static

{ vrf <vrf-name> { static <profile-name> | dynamic } } | { no vrf <vrf-name> }

Syntax Description

| | |
|---------------------|---|
| no | Negate a command or set its defaults |
| vrf | VRF name |
| <i>vrf-name</i> | VRF name |
| static | Static Profile Map: Configure profile name via CLI |
| <i>profile-name</i> | Static Profile Map: Configure profile name via CLI |
| dynamic | Dynamic Profile Map: Retrieve profile name from the external server |

Command Mode

- /exec/configure/profile-map-global

vrrp

[no] vrrp <vr_id>

Syntax Description

| | |
|--------------|---|
| no | (Optional) Negate a command or set its defaults |
| vrrp | VRRP configuration commands |
| <i>vr_id</i> | IPv4 VR group number |

Command Mode

- /exec/configure/if-legacy-eth /exec/configure/if-ethernet /exec/configure/if-port-channel /exec/configure/if-vlan-common /exec/configure/if-eth-any

vrrp bfd

```
{ vrrp bfd <peer_intf_ip> | no vrrp bfd [ <peer_intf_ip> ] }
```

Syntax Description

| | |
|---------------------|--------------------------------------|
| vrrp | VRRP configuration commands |
| bfd | BFD protocol |
| <i>peer_intf_ip</i> | Neighbor IP address |
| no | Negate a command or set its defaults |

Command Mode

- /exec/configure/if-eth-any/vrrp

vrrpv2

[no] vrrpv2

Syntax Description

| | |
|--------|---|
| no | (Optional) Negate a command or set its defaults |
| vrrpv2 | Enable VRRPv2 compatibility mode |

Command Mode

- /exec/configure/if-eth-any/vrrpv3

vrrpv3

[no] vrrpv3

Syntax Description

| | |
|--------|---|
| no | (Optional) Negate a command or set its defaults |
| vrrpv3 | VRRPv3 configuration commands |

Command Mode

- /exec/configure

vrrpv3 address-family

[no] vrrpv3 <group_id> address-family <opt_v4>

Syntax Description

| | |
|-----------------|---|
| no | (Optional) Negate a command or set its defaults |
| vrrpv3 | Configure VRRPv3 group parameters |
| address-family | IPV4 address family |
| <i>opt_v4</i> | Enter ipv4 |
| <i>group_id</i> | VRRP Group ID |

Command Mode

- /exec/configure/if-eth-any /exec/configure/if-vlan

vrrpv3 address-family

[no] vrrpv3 <group_id> address-family <opt_v6>

Syntax Description

| | |
|-----------------|---|
| no | (Optional) Negate a command or set its defaults |
| vrrpv3 | Configure VRRPv3 group parameters |
| address-family | IPV6 address family |
| <i>opt_v6</i> | Enter ipv6 |
| <i>group_id</i> | VRRP Group ID |

Command Mode

- /exec/configure/if-eth-any /exec/configure/if-vlan

vrrs leader

[no] vrrs leader <tag>

Syntax Description

| | |
|------------|---|
| no | (Optional) Negate a command or set its defaults |
| vrrs | VRRS-related commands |
| leader | Name of VRRS tag for which this group is the leader |
| <i>tag</i> | VRRS tag to lead |

Command Mode

- /exec/configure/if-eth-any/vrrpv3

vrrs pathway

[no] vrrs pathway <name>

Syntax Description

| | |
|-------------|---|
| no | (Optional) Negate a command or set its defaults |
| vrrs | VRRS Interface configuration commands |
| pathway | Configure a VRRS pathway |
| <i>name</i> | Name of the VRRS tag to associate with pathway |

Command Mode

- /exec/configure/if-eth-any /exec/configure/if-vlan

vsh

| vsh

Syntax Description

| | |
|-----|--|
| | Pipe command output to filter |
| vsh | the shell that understands cli command |

Command Mode

- /output