



H Commands

- [show hardware, on page 3](#)
- [show hardware access-list lou resource threshold, on page 5](#)
- [show hardware access-list resource pooling, on page 6](#)
- [show hardware access-list tcam, on page 7](#)
- [show hardware capacity, on page 8](#)
- [show hardware capacity eobc, on page 9](#)
- [show hardware capacity fabric-utilization, on page 10](#)
- [show hardware capacity forwarding, on page 11](#)
- [show hardware capacity interface, on page 12](#)
- [show hardware capacity module, on page 13](#)
- [show hardware capacity power, on page 15](#)
- [show hardware fabricpath mac-learning module, on page 16](#)
- [show hardware feature-capability, on page 17](#)
- [show hardware flow aging, on page 18](#)
- [show hardware flow entry address type, on page 19](#)
- [show hardware flow ip, on page 20](#)
- [show hardware flow ipmac, on page 21](#)
- [show hardware flow ipv6, on page 22](#)
- [show hardware flow l2, on page 23](#)
- [show hardware flow mpls, on page 24](#)
- [show hardware flow sampler, on page 25](#)
- [show hardware flow utilization, on page 26](#)
- [show hardware forwarding interface statistics mode, on page 27](#)
- [show hardware forwarding memory health detail, on page 28](#)
- [show hardware forwarding memory health summary, on page 29](#)
- [show hardware ip verify, on page 30](#)
- [show hardware profile status, on page 31](#)
- [show hardware profile tcam region, on page 33](#)
- [show hardware qos burst-detect max-records, on page 34](#)
- [show hardware qos eq stats-class, on page 35](#)
- [show hardware qos include ipg, on page 36](#)
- [show hardware qos ing-pg-hdrm-reserve, on page 37](#)
- [show hardware qos ing-pg-no-min, on page 38](#)

- [show hardware qos ing-pg-share](#), on page 39
- [show hardware qos min-buffer](#), on page 40
- [show hardware qos ns-buffer-profile](#), on page 41
- [show hardware qos ns-mcq3-alias](#), on page 42
- [show hardware rate-limiter](#), on page 43
- [show hardware rl snmp class-id](#), on page 45
- [show hardware rl snmp global class-id](#), on page 46
- [show hardware rl snmp local snmp-index class-id](#), on page 47
- [show hostname](#), on page 48
- [show hosts](#), on page 49
- [show hsrp](#), on page 51
- [show hsrp anycast](#), on page 55
- [show hsrp anycast interface vlan](#), on page 56
- [show hsrp anycast remote-db](#), on page 57
- [show hsrp anycast summary](#), on page 58
- [show hsrp bfd-sessions](#), on page 59
- [show hsrp bfd-sessions](#), on page 61
- [show hsrp delay](#), on page 62
- [show hsrp ext-mib sec-addr](#), on page 63
- [show hsrp ext-mib use-bia](#), on page 64
- [show hsrp mgo](#), on page 65
- [show hsrp summary](#), on page 66

show hardware

```
show hardware [ __readonly__ <header_str> <bios_ver_str> [ <loader_ver_str> ] <kickstart_ver_str> [
<sys_ver_str> ] <bios_cmpl_time> <kick_file_name> <kick_cmpl_time> <kick_tmstamp> [ <isan_file_name>
][ <isan_cmpl_time> ] [ <isan_tmstamp> ] <chassis_id> <module_id> <cpu_name> <memory> <mem_type>
<proc_board_id> [ <host_name> ] <bootflash_size> [ <slot0_size> ] <kern_uptm_days> <kern_uptm_hrs>
<kern_uptm_mins> <kern_uptm_secs> <rr_usec> <rr_ctime> <rr_reason> [ <rr_sys_ver> ] [ <rr_service>
][ <manufacturer> ] { TABLE_slot [ TABLE_slot_info [ [ <num_slot_str> ] [ <status_ok_empty> ] [ [ <type>
[ <num_submods> ] ] <model_num> <hw_ver> <part_num> <part_revision> <manuf_date> <serial_num>
<CLEI_code> ] ] } }
```

Syntax Description

show	Show running system information
hardware	Show hardware information
<i>__readonly__</i>	(Optional)
<i>header_str</i>	(Optional)
<i>bios_ver_str</i>	(Optional)
<i>loader_ver_str</i>	(Optional)
<i>kickstart_ver_str</i>	(Optional)
<i>sys_ver_str</i>	(Optional)
<i>bios_cmpl_time</i>	(Optional)
<i>kick_file_name</i>	(Optional)
<i>kick_cmpl_time</i>	(Optional)
<i>kick_tmstamp</i>	(Optional)
<i>isan_file_name</i>	(Optional)
<i>isan_cmpl_time</i>	(Optional)
<i>isan_tmstamp</i>	(Optional)
<i>chassis_id</i>	(Optional)
<i>module_id</i>	(Optional)
<i>cpu_name</i>	(Optional)
<i>memory</i>	(Optional)
<i>mem_type</i>	(Optional)
<i>proc_board_id</i>	(Optional)

<i>bootflash_size</i>	(Optional)
<i>slot0_size</i>	(Optional)
<i>host_name</i>	(Optional)
<i>kern_uptm_days</i>	(Optional)
<i>kern_uptm_hrs</i>	(Optional)
<i>kern_uptm_mins</i>	(Optional)
<i>kern_uptm_secs</i>	(Optional)
<i>rr_usec</i>	(Optional)
<i>rr_ctime</i>	(Optional)
<i>rr_reason</i>	(Optional)
<i>rr_sys_ver</i>	(Optional)
<i>rr_service</i>	(Optional)
<i>manufacturer</i>	(Optional)
TABLE_slot	(Optional) Slot
<i>num_slot_str</i>	(Optional) Number of elements
TABLE_slot_info	(Optional) Slot Info
<i>status_ok_empty</i>	(Optional) Status (Present or Absent)
<i>type</i>	(Optional) Description of the element
<i>num_submods</i>	(Optional) Number of Submodules
<i>model_num</i>	(Optional) Model Number
<i>hw_ver</i>	(Optional) Hardware version
<i>part_num</i>	(Optional) Part Number
<i>part_revision</i>	(Optional) Part revision
<i>manuf_date</i>	(Optional) Manufacturing date
<i>serial_num</i>	(Optional) Serial Number
<i>CLEI_code</i>	(Optional) CLEI code

Command Mode

- /exec

show hardware access-list lou resource threshold

```
show hardware access-list lou resource threshold [ __readonly__ { current [ { lou [ { resource [ { threshold [
{ <threshold_value> } ] } ] } ] } ] } ] }
```

Syntax Description

show	Show running system information
hardware	Show hardware information
access-list	Access Control List
lou	LOU
resource	hardware resource
threshold	port expansion threshold
<i>__readonly__</i>	(Optional)
current	(Optional)
lou	(Optional)
resource	(Optional)
threshold	(Optional)
<i>threshold_value</i>	(Optional)

Command Mode

- /exec

show hardware access-list resource pooling

show hardware access-list resource pooling [*__readonly__* <mod-num> <status>]

Syntax Description

show	Show running system information
hardware	Show hardware information
access-list	Access Control List
resource	Hardware resource
pooling	ACL programming across TCAM banks
<i>__readonly__</i>	(Optional)
<i>mod-num</i>	(Optional) module number
<i>status</i>	(Optional) Banchaining status

Command Mode

- /exec

show hardware access-list tcam

```
show hardware access-list tcam { { template { nfe | nfe2 | l2-l3 | l3 | <name> | all } } | { region } } [
__readonly__ { TCAM_Region [ { TABLE_Sizes <type> <tcam_size> <tcam_width> } ] } ]
```

Syntax Description

show	Show running system information
hardware	Show hardware information
access-list	Access Control List
tcam	Show tcam parameters
region	Show tcam region sizes
__readonly__	(Optional)
TCAM_Region	(Optional)
TABLE_Sizes	(Optional)
<i>type</i>	(Optional)
<i>tcam_size</i>	(Optional)
<i>tcam_width</i>	(Optional)
template	Specify template name
nfe	NFE (Trident2) TCAM template
nfe2	NFE2 (Tomahawk) tcam template
l2-l3	L2-L3 default tcam template
l3	L3 default tcam template
<i>name</i>	Name of custom template to be displayed
all	Display all custom templates

Command Mode

- /exec

show hardware capacity

show hardware capacity

Syntax Description

show	Show running system information
hardware	Hardware related
capacity	Hardware usage levels for Power, Switching Fabric, Flash, etc

Command Mode

- /exec

show hardware capacity eobc

```
show hardware capacity eobc [ __readonly__ { eobc_usage <eobc_rx_packets> <eobc_rx_dropped>
<eobc_rx_pps> <eobc_tx_packets> <eobc_tx_dropped> <eobc_tx_pps> } ]
```

Syntax Description

show	Show running system information
hardware	Hardware related
capacity	resource inventory and/or usage level
eobc	EOBC resources
__readonly__	(Optional)
eobc_usage	(Optional)
<i>eobc_rx_packets</i>	(Optional)
<i>eobc_rx_dropped</i>	(Optional)
<i>eobc_rx_pps</i>	(Optional)
<i>eobc_tx_packets</i>	(Optional)
<i>eobc_tx_dropped</i>	(Optional)
<i>eobc_tx_pps</i>	(Optional)

Command Mode

- /exec

show hardware capacity fabric-utilization

show hardware capacity fabric-utilization

Syntax Description

show	Show running system information
hardware	Show hardware information
capacity	resource inventory and/or usage level
fabric-utilization	Show per module Fabric utilization

Command Mode

- /exec

show hardware capacity forwarding

show hardware capacity forwarding

Syntax Description

show	Show running system information
hardware	Hardware related
capacity	Hardware usage levels for Power, Switching Fabric, Flash, etc
forwarding	L2/L3 Forwarding resources

Command Mode

- /exec

show hardware capacity interface

```
show hardware capacity interface [ __readonly__ { TABLE_module_drops <module_drops> <tx_drops>
<rx_drops> <max_tx_port> <max_rx_port> } { TABLE_module_buffers <module_buffers> <tx_buffers>
<rx_buffers> } ]
```

Syntax Description

show	Show running system information
hardware	Hardware related
capacity	Usage levels
interface	Interface Resources - Tx/Rx drops and Tx/Rx buffers
<i>__readonly__</i>	(Optional) Read Only
<i>module_drops</i>	(Optional) Module number for Tx/Rx drops
<i>TABLE_module_drops</i>	(Optional) show module
<i>tx_drops</i>	(Optional) Tx drops
<i>rx_drops</i>	(Optional) Rx drops
<i>max_tx_port</i>	(Optional) Port with max Tx drops
<i>max_rx_port</i>	(Optional) Port with max Rx drops
<i>module_buffers</i>	(Optional) Module number for Tx/Rx buffers
<i>TABLE_module_buffers</i>	(Optional) show module
<i>tx_buffers</i>	(Optional) Tx buffers
<i>rx_buffers</i>	(Optional) Rx buffers

Command Mode

- /exec

show hardware capacity module

```
show hardware capacity module [ __readonly__ { sup_ha_status <sup_ha_admin_status> <sup_ha_oper_status>
<dual_sup_hw_state> <redundancy_state> } { switch_resouces { TABLE_lcinfo <mod_num> <model_num>
<part_num> <serial_num> } { TABLE_xbarinfo <mod_num1> <model_num1> <part_num1> <serial_num1>
} } { TABLE_flash_nvram_info <mod_num2> <dev_name> <total_bytes> <free_bytes> <percent_used> }
]
```

Syntax Description

show	Show running system information
hardware	Hardware related
capacity	resource inventory and/or usage level
module	SUP, LC, XBAR
<i>__readonly__</i>	(Optional)
<i>sup_ha_status</i>	(Optional)
<i>sup_ha_admin_status</i>	(Optional)
<i>sup_ha_oper_status</i>	(Optional)
<i>dual_sup_hw_state</i>	(Optional)
<i>redundancy_state</i>	(Optional)
<i>switch_resouces</i>	(Optional)
<i>TABLE_lcinfo</i>	(Optional)
<i>mod_num</i>	(Optional)
<i>model_num</i>	(Optional)
<i>part_num</i>	(Optional)
<i>serial_num</i>	(Optional)
<i>TABLE_xbarinfo</i>	(Optional)
<i>mod_num1</i>	(Optional)
<i>model_num1</i>	(Optional)
<i>part_num1</i>	(Optional)
<i>serial_num1</i>	(Optional)
<i>TABLE_flash_nvram_info</i>	(Optional)
<i>mod_num2</i>	(Optional)

<i>dev_name</i>	(Optional)
<i>total_bytes</i>	(Optional)
<i>free_bytes</i>	(Optional)
<i>percent_used</i>	(Optional)

Command Mode

- /exec

show hardware capacity power

```
show hardware capacity power [ __readonly__ { power_summary <ps_redun_mode_admin>
<ps_redun_mode_oper> <power_total> <power_rsvd> <power_rsvd_percent> <power_given_mod>
<power_given_mod_percent> <power_avail> <power_avail_percent> <power_out_actual_draw>
<power_input_actual_draw> } ]
```

Syntax Description

show	Show running system information
hardware	Hardware related
capacity	resource inventory and/or usage level
power	power summary
__readonly__	(Optional)
power_summary	(Optional)
<i>ps_redun_mode_admin</i>	(Optional) Mode: Redundant or Non-redundant
<i>ps_redun_mode_oper</i>	(Optional) Mode: Redundant or Non-redundant
<i>power_total</i>	(Optional)
<i>power_rsvd</i>	(Optional)
<i>power_rsvd_percent</i>	(Optional)
<i>power_given_mod</i>	(Optional)
<i>power_given_mod_percent</i>	(Optional)
<i>power_avail</i>	(Optional)
<i>power_avail_percent</i>	(Optional)
<i>power_out_actual_draw</i>	(Optional) Total Power Output, Actuals
<i>power_input_actual_draw</i>	(Optional) Total Power Input, Actuals

Command Mode

- /exec

show hardware fabricpath mac-learning module

```
show hardware fabricpath mac-learning module <module> [ __readonly__ { [ { TABLE_module
<module_num> <port_group> <mac_learning> } ] } ]
```

Syntax Description

show	Show running system information
hardware	Show hardware information
fabricpath	Fabric Path
mac-learning	MAC Learning
module	Specify a module number
<i>module</i>	Specify a module number
<i>__readonly__</i>	(Optional)
TABLE_module	(Optional)
<i>module_num</i>	(Optional) Specify a module number
<i>port_group</i>	(Optional)
<i>mac_learning</i>	(Optional)

Command Mode

- /exec

show hardware feature-capability

```
show hardware feature-capability [ detailed ] [ __readonly__ [ TABLE_feature_support <feature_name> [
TABLE_module_support <mod_inst> <support> ] ] ]
```

Syntax Description

show	Show running system information
hardware	Show hardware information
feature-capability	show registered features supported
detailed	(Optional) detailed
__readonly__	(Optional)
TABLE_feature_support	(Optional) show features supported
<i>feature_name</i>	(Optional) feature name
TABLE_module_support	(Optional) show registered features supported
<i>mod_inst</i>	(Optional) module instance
<i>support</i>	(Optional) support details

Command Mode

- /exec

show hardware flow aging

show hardware flow aging [instance <inst>] [module <num>]

Syntax Description

show	Show running system information
hardware	Show hardware information
flow	Netflow Module
aging	Aging Info
instance	(Optional) Instance
<i>inst</i>	(Optional) Earl Instance
module	(Optional) Line card module
<i>num</i>	(Optional) slot number

Command Mode

- /exec

show hardware flow entry address type

show hardware flow entry address <addr> type { ip | ipv6 | l2 | mpls } [instance <inst>] [module <num>]

Syntax Description

show	Show running system information
hardware	Show hardware information
flow	Netflow Module
entry	Netflow Table Entry
address	Netflow Table Address
<i>addr</i>	Netflow Table Address
type	Flow Type
ip	Internet Protocol Version 4
ipv6	Internet Protocol Version 6
l2	Layer 2 Protocol
mpls	MPLS Protocol
instance	(Optional) Instance
<i>inst</i>	(Optional) Earl Instance
module	(Optional) Line card module
<i>num</i>	(Optional) slot number

Command Mode

- /exec

show hardware flow ip

```
show hardware flow ip [ { { monitor <mname> } | { profile <prof_id> } | { vlan <vlan_id> } | { interface
<interface> } } ] [ instance <inst> ] [ detail ] [ module <num> ]
```

Syntax Description

show	Show running system information
hardware	Show hardware information
flow	Netflow Module
ip	Internet Protocol Version 4
monitor	(Optional) Netflow Flow Monitor
<i>mname</i>	(Optional) Netflow Flow Monitor Name
profile	(Optional) Flow Profile
<i>prof_id</i>	(Optional) Netflow Profile ID
vlan	(Optional) Vlan commands
<i>vlan_id</i>	(Optional) VLAN ID 1-4094
interface	(Optional) Interface
<i>interface</i>	(Optional) Interface Name
instance	(Optional) Instance
<i>inst</i>	(Optional) Earl Instance
detail	(Optional) Detailed Output Display
module	(Optional) Line card module
<i>num</i>	(Optional) slot number

Command Mode

- /exec

show hardware flow ipmac

```
show hardware flow ipmac [ { { profile <prof_id> } | { vlan <vlan_id> } | { interface <interface> } } ] [
instance <inst> ] [ detail ] [ module <num> ]
```

Syntax Description

show	Show running system information
hardware	Show hardware information
flow	Netflow Module
ipmac	IPv4+MAC
profile	(Optional) Flow Profile
<i>prof_id</i>	(Optional) Netflow Profile ID
vlan	(Optional) Vlan commands
<i>vlan_id</i>	(Optional) VLAN ID 1-4094
interface	(Optional) Interface
<i>interface</i>	(Optional) Interface Name
instance	(Optional) Instance
<i>inst</i>	(Optional) Earl Instance
detail	(Optional) Detailed Output Display
module	(Optional) Line card module
<i>num</i>	(Optional) slot number

Command Mode

- /exec

show hardware flow ipv6

```
show hardware flow ipv6 [ { { monitor <mname> } | { profile <prof_id> } | { vlan <vlan_id> } | { interface
<interface> } } ] [ instance <inst> ] [ detail ] [ module <num> ]
```

Syntax Description

show	Show running system information
hardware	Show hardware information
flow	Netflow Module
ipv6	Internet Protocol Version 6
monitor	(Optional) Netflow Flow Monitor
<i>mname</i>	(Optional) Netflow Flow Monitor Name
profile	(Optional) Flow Profile
<i>prof_id</i>	(Optional) Netflow Profile ID
vlan	(Optional) Vlan commands
<i>vlan_id</i>	(Optional) VLAN ID 1-4094
interface	(Optional) Interface
<i>interface</i>	(Optional) Interface Name
instance	(Optional) Instance
<i>inst</i>	(Optional) Earl Instance
detail	(Optional) Detailed Output Display
module	(Optional) Line card module
<i>num</i>	(Optional) slot number

Command Mode

- /exec

show hardware flow l2

```
show hardware flow l2 [ { { monitor <mname> } | { profile <prof_id> } | { vlan <vlan_id> } } ] [ instance
<inst> ] [ detail ] [ module <num> ]
```

Syntax Description

show	Show running system information
hardware	Show hardware information
flow	Netflow Module
l2	Layer 2 Protocol
monitor	(Optional) Netflow Flow Monitor
<i>mname</i>	(Optional) Netflow Flow Monitor Name
profile	(Optional) Flow Profile
<i>prof_id</i>	(Optional) Netflow Profile ID
vlan	(Optional) Vlan commands
<i>vlan_id</i>	(Optional) VLAN ID 1-4094
instance	(Optional) Instance
<i>inst</i>	(Optional) Earl Instance
detail	(Optional) Detailed Output Display
module	(Optional) Line card module
<i>num</i>	(Optional) slot number

Command Mode

- /exec

show hardware flow mpls

```
show hardware flow mpls [ { { monitor <mname> } | { profile <prof_id> } | { vlan <vlan_id> } | { interface
<interface> } } ] [ instance <inst> ] [ detail ] [ module <num> ]
```

Syntax Description

show	Show running system information
hardware	Show hardware information
flow	Netflow Module
mpls	MPLS Protocol
monitor	(Optional) Netflow Flow Monitor
<i>mname</i>	(Optional) Netflow Flow Monitor Name
profile	(Optional) Flow Profile
<i>prof_id</i>	(Optional) Netflow Profile ID
vlan	(Optional) Vlan commands
<i>vlan_id</i>	(Optional) VLAN ID 1-4094
interface	(Optional) Interface
<i>interface</i>	(Optional) Interface Name
instance	(Optional) Instance
<i>inst</i>	(Optional) Earl Instance
detail	(Optional) Detailed Output Display
module	(Optional) Line card module
<i>num</i>	(Optional) slot number

Command Mode

- /exec

show hardware flow sampler

```
show hardware flow sampler { all | count | index <index> | name <sname> } [ detail ] [ instance <inst> ] [ module <num> ]
```

Syntax Description

show	Show running system information
hardware	Show hardware information
flow	Netflow Module
sampler	Flow Sampler
all	Netflow Sampler Usage
count	Netflow Sampler Utilization
index	Netflow Sampler Index
<i>index</i>	Netflow Sampler Index
name	Netflow Sampler Name
<i>sname</i>	Netflow Sampler Name
detail	(Optional) Detailed Output Display
instance	(Optional) Instance
<i>inst</i>	(Optional) Clipper Instance
module	(Optional) Line card module
<i>num</i>	(Optional) slot number

Command Mode

- /exec

show hardware flow utilization

show hardware flow utilization [instance <inst>] [module <num>]

Syntax Description

show	Show running system information
hardware	Show hardware information
flow	Netflow Module
utilization	NT Table Utilization
instance	(Optional) Instance
<i>inst</i>	(Optional) Earl Instance
module	(Optional) Line card module
<i>num</i>	(Optional) slot number

Command Mode

- /exec

show hardware forwarding interface statistics mode

```
show hardware forwarding interface statistics mode [ __readonly__ { system [ { <sysmode> } ] [ {
TABLE_module <module> <modmode> } ] } ]
```

Syntax Description

show	Show running system information
hardware	Show hardware information
forwarding	Show hardware information for forwarding path
interface	Interface
statistics	Statistics
mode	Statistics mode
__readonly__	(Optional)
system	(Optional)
<i>sysmode</i>	(Optional)
TABLE_module	(Optional)
<i>module</i>	(Optional) Specify a module number
<i>modmode</i>	(Optional)

Command Mode

- /exec

show hardware forwarding memory health detail

show hardware forwarding memory health detail

Syntax Description

show	Show running system information
hardware	Show hardware information
forwarding	forwarding information
memory	memory information
health	memory health information
detail	show the detail

Command Mode

- /exec

show hardware forwarding memory health summary

show hardware forwarding memory health summary

Syntax Description

show	Show running system information
hardware	Show hardware information
forwarding	forwarding information
memory	memory information
health	memory health information
summary	show the summary

Command Mode

- /exec

show hardware ip verify

show hardware [forwarding] ip verify [module <module>] [__readonly__ <info_str>]

Syntax Description

show	Show running system information
hardware	Show hardware information
forwarding	(Optional) Show hardware information for forwarding path
ip	IP
verify	Show IP packet verification checks enabled in hardware
module	(Optional) Specify a module number
<i>module</i>	(Optional) Specify a module number
<i>__readonly__</i>	(Optional)
<i>info_str</i>	(Optional) IDS Check Stats

Command Mode

- /exec

show hardware profile status

```
show hardware profile status [ module <module> ] [ detail ] [ __readonly__ { <total_lpm> <total_host>
<reserved_lpm> <max_host4_limit> <max_host6_limit> <max_mcast_limit> <used_lpm_total>
<used_v4_lpm> <used_v6_lpm> <used_v6_lpm_128> <used_host_lpm_total> <used_host_v4_lpm>
<used_host_v6_lpm> <used_mcast> <used_mcast_oifl> <used_host_in_host_total> <used_host4_in_host>
<used_host6_in_host> <mfib_fd_status> <mfib_fd_maxroute> <mfib_fd_count>
<max_v6_lpm_65_to_127_limit> <max_v6_lpm_limit> <max_ecmp_table_limit> <used_ecmp_table>
<lpm_to_host_migrate_table> <host_to_lpm_migrate_table> <max_mcast_transit_route_limit>
<used_mcast_transit_routes> <max_ecmp_nh_table_limit> <used_ecmp_nh_table> } ]
```

Syntax Description

show	Show running system information
hardware	Show hardware usage settings
profile	Show current table usage
status	Show status of dynamic resource allocation
module	(Optional) Slot/module
<i>module</i>	(Optional) Slot/module number
detail	(Optional) Show detailed information
<i>__readonly__</i>	(Optional) Read only
<i>total_lpm</i>	(Optional) Total LPM Entries
<i>total_host</i>	(Optional) Total Host Entries
<i>reserved_lpm</i>	(Optional) Reserved LPM Entries
<i>max_host4_limit</i>	(Optional) Max Host4 Limit Entries
<i>max_host6_limit</i>	(Optional) Max Host6 Limit Entries
<i>max_mcast_limit</i>	(Optional) Max Mcast Limit Entries
<i>used_lpm_total</i>	(Optional) Used LPM Entries (Total)
<i>used_v4_lpm</i>	(Optional) Used IPv4 LPM Entries
<i>used_v6_lpm</i>	(Optional) Used IPv6 LPM Entries
<i>used_v6_lpm_128</i>	(Optional) Used IPv6 LPM_128 Entries
<i>used_host_lpm_total</i>	(Optional) Used Host Entries in LPM (Total)
<i>used_host_v4_lpm</i>	(Optional) Used Host4 Entries in LPM
<i>used_host_v6_lpm</i>	(Optional) Used Host6 Entries in LPM

<i>used_mcast</i>	(Optional) Used Mcast Entries
<i>used_mcast_oifl</i>	(Optional) Used Mcast OIFL Entries
<i>used_host_in_host_total</i>	(Optional) Used Host Entries in Host (Total)
<i>used_host4_in_host</i>	(Optional) Used Host4 Entries in Host
<i>used_host6_in_host</i>	(Optional) Used Host6 Entries in Host
<i>mfib_fd_status</i>	(Optional) MFIB fd status
<i>mfib_fd_maxroute</i>	(Optional) MFIB fd maxroute
<i>mfib_fd_count</i>	(Optional) MFIB fd count
<i>max_v6_lpm_65_to_127_limit</i>	(Optional) Max Ucast IPv6 LPM_65_to_127 Limit Entries
<i>max_v6_lpm_limit</i>	(Optional) Max Ucast IPv6 LPM Limit Entries
<i>max_ecmp_table_limit</i>	(Optional) Max ECMP table Limit Entries
<i>used_ecmp_table</i>	(Optional) Used ECMP Table Entries
<i>lpm_to_host_migrate_table</i>	(Optional) Times Route Migrated from LPM to Host Table
<i>host_to_lpm_migrate_table</i>	(Optional) Times Route Migrated from Host to LPM Table
<i>max_mcast_transit_route_limit</i>	(Optional) Max Mcast Transit Route Limit Entries
<i>used_mcast_transit_routes</i>	(Optional) Used Mcast Transit Routes
<i>max_ecmp_nh_table_limit</i>	(Optional) Max ECMP NH table Limit Entries
<i>used_ecmp_nh_table</i>	(Optional) Used ECMP NH Table Entries

Command Mode

- /exec

show hardware profile tcam region

```
show hardware profile tcam region [ __readonly__ { TCAM_Region [ { TABLE_Sizes <tcam_compat_type>
<tcam_compat_size> <tcam_compat_width> } ] } ]
```

Syntax Description

show	Show running system information
hardware	Show hardware information
profile	profile
tcam	Show tcam parameters
region	Show tcam region sizes
<i>__readonly__</i>	(Optional)
TCAM_Region	(Optional)
TABLE_Sizes	(Optional)
<i>tcam_compat_type</i>	(Optional)
<i>tcam_compat_size</i>	(Optional)
<i>tcam_compat_width</i>	(Optional)

Command Mode

- /exec

show hardware qos burst-detect max-records

show hardware qos burst-detect max-records [__readonly__ TABLE_qos_burstdetect_maxrecords]

Syntax Description

show	Show running system information
hardware	Show hardware information
qos	Show qos related information
burst-detect	Show oobst burst-detect info
max-records	Show oobst burst-detect max-records
__readonly__	(Optional)
TABLE_qos_burstdetect_maxrecords	(Optional) the xml qos_burst-detect max-records configuration

Command Mode

- /exec

show hardware qos eoq stats-class

```
show hardware qos eoq stats-class [ module <module> ] [ __readonly__ TABLE_qos_eoq_stats_class <module>
<eoq-stats-class-desc> ]
```

Syntax Description

show	Show running system information
hardware	Show hardware information
qos	Show QoS related information
eoq	Show Extended Output Queue(EOQ) related information
stats-class	Show EOQ Statistics class selection config
module	(Optional) Specify a module number
<i>module</i>	(Optional) Specify a module number
<i>__readonly__</i>	(Optional)
TABLE_qos_eoq_stats_class	(Optional) the xml qos_eoq_stats_class configuration
<i>eoq-stats-class-desc</i>	(Optional) selected class description

Command Mode

- /exec

show hardware qos include ipg

show hardware qos include ipg [module <module>] [__readonly__ TABLE_qos_include_ipg <module>]

Syntax Description

show	Show running system information
hardware	Show hardware information
qos	Show qos related information
include	Show include config
ipg	Show whether to include IPG in Shaping/Policing config
module	(Optional) Specify a module number
<i>module</i>	(Optional) Specify a module number
<i>__readonly__</i>	(Optional)
TABLE_qos_include_ipg	(Optional) the xml qos_include_ipg configuration

Command Mode

- /exec

show hardware qos ing-pg-hdrm-reserve

```
show hardware qos ing-pg-hdrm-reserve [ module <module> ] [ __readonly__
TABLE_qos_ing_pg_hdrm_reserve <module> ]
```

Syntax Description

show	Show running system information
hardware	Show hardware information
qos	Show qos related information
ing-pg-hdrm-reserve	Show ing-pg-hdrm-reserve config
module	(Optional) Specify a module number
<i>module</i>	(Optional) Specify a module number
__readonly__	(Optional)
TABLE_qos_ing_pg_hdrm_reserve	(Optional) the xml qos_ing_pg_hdrm_reserve configuration

Command Mode

- /exec

show hardware qos ing-pg-no-min

```
show hardware qos ing-pg-no-min [ module <module> ] [ __readonly__ TABLE_qos_ing_pg_no_min
<module> ]
```

Syntax Description

show	Show running system information
hardware	Show hardware information
qos	Show qos related information
ing-pg-no-min	Show ing-pg-no-min config
module	(Optional) Specify a module number
<i>module</i>	(Optional) Specify a module number
<i>__readonly__</i>	(Optional)
TABLE_qos_ing_pg_no_min	(Optional) the xml qos_ing_pg_no_min configuration

Command Mode

- /exec

show hardware qos ing-pg-share

```
show hardware qos ing-pg-share [ module <module> ] [ __readonly__ TABLE_qos_ing_pg_share <module> ]
```

Syntax Description

show	Show running system information
hardware	Show hardware information
qos	Show qos related information
ing-pg-share	Show ing-pg-share config
module	(Optional) Specify a module number
<i>module</i>	(Optional) Specify a module number
<i>__readonly__</i>	(Optional)
TABLE_qos_ing_pg_share	(Optional) the xml qos_ing_pg_share configuration

Command Mode

- /exec

show hardware qos min-buffer

```
show hardware qos min-buffer [ module <module> ] [ __readonly__ TABLE_qos_min_buffer_profile
<module> <buff-prof-desc> ]
```

Syntax Description

show	Show running system information
hardware	Show hardware information
qos	Show qos related information
min-buffer	Show min-buffer config
module	(Optional) Specify a module number
<i>module</i>	(Optional) Specify a module number
<i>__readonly__</i>	(Optional)
TABLE_qos_min_buffer_profile	(Optional) the xml qos_min_buffer_profile configuration
<i>buff-prof-desc</i>	(Optional) buffer profile description

Command Mode

- /exec

show hardware qos ns-buffer-profile

```
show hardware qos ns-buffer-profile [ module <module> ] [ __readonly__ TABLE_qos_ns_buffer_profile
<module> <buff-prof-desc> ]
```

Syntax Description

show	Show running system information
hardware	Show hardware information
qos	Show qos related information
ns-buffer-profile	Show ns-buffer-profile config
module	(Optional) Specify a module number
<i>module</i>	(Optional) Specify a module number
<i>__readonly__</i>	(Optional)
TABLE_qos_ns_buffer_profile	(Optional) the xml qos_ns_buffer_profile configuration
<i>buff-prof-desc</i>	(Optional) buffer profile description

Command Mode

- /exec

show hardware qos ns-mcq3-alias

```
show hardware qos ns-mcq3-alias [ module <module> ] [ __readonly__ TABLE_qos_ns_mcq3_alias <module>
<ns-mcq3-alias-desc> ]
```

Syntax Description

show	Show running system information
hardware	Show hardware information
qos	Show QoS related information
ns-mcq3-alias	Show NS mc-queue-3 alias class selection config
module	(Optional) Specify a module number
<i>module</i>	(Optional) Specify a module number
<i>__readonly__</i>	(Optional)
TABLE_qos_ns_mcq3_alias	(Optional) the xml qos_ns_mcq3_alias configuration
<i>ns-mcq3-alias-desc</i>	(Optional) selected class description

Command Mode

- /exec

show hardware rate-limiter

```
show hardware rate-limiter [ module <module> ] [ layer-3 { <l3-opts> | multicast <mcast-opts> } | layer-2
<l2-opts> | <opts> | fl <f1-opts> ] [ __readonly__ TABLE hardware_rate_limiter <rate-limit-class>
<class-descr> <module> <rate-limit-configured> <rate-limit-allowed> <rate-limit-dropped> <rate-limit-total>
]
```

Syntax Description

show	Show running system information
hardware	Show hardware information
rate-limiter	Show Rate-Limiter configs and statistics
layer-3	(Optional) Layer-3 control and Routed packets
<i>l3-opts</i>	(Optional)
multicast	(Optional) Multicast data packets
<i>mcast-opts</i>	(Optional)
layer-2	(Optional) Layer-2 control and Bridged packets
<i>l2-opts</i>	(Optional)
<i>opts</i>	(Optional)
fl	(Optional) Control packets from F1 modules to supervisor
<i>f1-opts</i>	(Optional)
module	(Optional) Specify a module number
<i>module</i>	(Optional) Specify a module number
<i>__readonly__</i>	(Optional)
TABLE hardware_rate_limiter	(Optional) the xml Rate-Limiter configuration and statistics
<i>rate-limit-class</i>	(Optional) the xml rate limiter class
<i>class-descr</i>	(Optional) class description
<i>module</i>	(Optional) the xml module number
<i>rate-limit-configured</i>	(Optional) the xml rate-limit-configured
<i>rate-limit-allowed</i>	(Optional) the xml rate-limit-allowed
<i>rate-limit-dropped</i>	(Optional) the xml rate-limit-dropped
<i>rate-limit-total</i>	(Optional) the xml rate-limit-total

Command Mode

- /exec

show hardware rl snmp class-id

```
show hardware rl snmp class-id <class-id> [ __readonly__ TABLE-classRateLimiterTable <class-id-out>
<class-descr> ]
```

Syntax Description

show	Show running system information
hardware	Show hardware information
rl	Show Rate-Limiter configs and statistics
snmp	Show Rate-Limiter snmp information
class-id	rate-limiter class-id
<i>class-id</i>	rate-limiter class
<i>__readonly__</i>	(Optional)
TABLE-classRateLimiterTable	(Optional) Class Rate Limiter Table
<i>class-id-out</i>	(Optional) class if out
<i>class-descr</i>	(Optional) class description

Command Mode

- /exec

show hardware rl snmp global class-id

show hardware rl snmp global class-id <class-id> [__readonly__ TABLE-globalRateLimiterTable
<class-id-out> <rate-limit-configured> <rate-limit-allowed> <rate-limit-dropped> <rate-limit-total>]

Syntax Description

show	Show running system information
hardware	Show hardware information
rl	Show Rate-Limiter configs and statistics
snmp	Show Rate-Limiter snmp information
global	Show Global information
class-id	rate-limiter class-id
<i>class-id</i>	rate-limiter class
<i>__readonly__</i>	(Optional)
TABLE-globalRateLimiterTable	(Optional) Global Rate Limiter Table
<i>class-id-out</i>	(Optional) class if out
<i>rate-limit-configured</i>	(Optional) rate-limit-configured
<i>rate-limit-allowed</i>	(Optional) rate-limit-allowed
<i>rate-limit-dropped</i>	(Optional) rate-limit-dropped
<i>rate-limit-total</i>	(Optional) rate-limit-total

Command Mode

- /exec

show hardware rl snmp local snmp-index class-id

```
show hardware rl snmp local snmp-index <snmp-index> class-id <class-id> [ __readonly__
TABLE-localRateLimiterTable <snmp-index-out> <class-id-out> <rate-limit-configured>
<rate-limit-configured-source> <rate-limit-allowed> <rate-limit-dropped> <rate-limit-total> ]
```

Syntax Description

show	Show running system information
hardware	Show hardware information
rl	Show Rate-Limiter configs and statistics
snmp	Show Rate-Limiter snmp information
local	Show Local information
snmp-index	snmp physical index
<i>snmp-index</i>	physical index
class-id	rate-limiter class-id
<i>class-id</i>	rate-limiter class
__readonly__	(Optional)
TABLE-localRateLimiterTable	(Optional) Local Rate Limiter Table
<i>snmp-index-out</i>	(Optional) snmp index out
<i>class-id-out</i>	(Optional) class if out
<i>rate-limit-configured</i>	(Optional) rate-limit-configured
<i>rate-limit-configured-source</i>	(Optional) rate-limit-configured-source
<i>rate-limit-allowed</i>	(Optional) rate-limit-allowed
<i>rate-limit-dropped</i>	(Optional) rate-limit-dropped
<i>rate-limit-total</i>	(Optional) rate-limit-total

Command Mode

- /exec

show hostname

```
show { hostname | switchname } [ __readonly__ { <hostname> } ]
```

Syntax Description

show	Show running system information
hostname	show the system's hostname
switchname	show the system's hostname
__readonly__	(Optional) Read Only
<i>hostname</i>	(Optional)

Command Mode

- /exec

show hosts

```
show hosts [ __readonly__ [ <dnslookup> ] [ <dnsnameservice> ] [ { TABLE_vrf <vrfname> [
<defaultdomains> ] [ <additionaldomainserver> ] [ <domainservers> ] [ <nameservice> ] [ <dhcpdomains>
] [ <dhcpdomainservers> ] } ] [ { TABLE_dnsconfigvrf <dnsvrfname> [ <usevrf> ] [ <token> ] [ {
TABLE_dnsconfigvrfconfig <config> } ] } ] [ { TABLE_hosts <host> [ <address> } ] }
```

Syntax Description

show	Show running system information
hosts	Show information about DNS
<i>__readonly__</i>	(Optional)
<i>dnslookup</i>	(Optional) dns lookup enable status
<i>dnsnameservice</i>	(Optional) name service
TABLE_vrf	(Optional) vrf domain servers
<i>vrfname</i>	(Optional) vrf name
<i>defaultdomains</i>	(Optional) default domain
<i>additionaldomainserver</i>	(Optional) additionaldomain
<i>domainservers</i>	(Optional) domain server
<i>nameservice</i>	(Optional) name service
<i>dhcpdomains</i>	(Optional) dhcp domains
<i>dhcpdomainservers</i>	(Optional) dhcpservers
TABLE_dnsconfigvrf	(Optional) dns config vrf
<i>dnsvrfname</i>	(Optional) vrfname
<i>usevrf</i>	(Optional) usevrf
<i>token</i>	(Optional) token
TABLE_dnsconfigvrfconfig	(Optional) dns config vrf config
<i>config</i>	(Optional) token
TABLE_hosts	(Optional) all configured dns hosts
<i>host</i>	(Optional) xml host information
<i>address</i>	(Optional) xml address information

Command Mode

- /exec

show hsrp

```
show hsrp [ interface <interface-id> ] [ group <group-number> ] [ active | init | learn | listen | speak | standby
] + [ all ] [ brief [ all ] | detail ] [ ipv4 | ipv6 ] [ __readonly__ <show_hsrp_start> { TABLE_grp_detail
<sh_if_index> <sh_group_num> <sh_group_type> <sh_group_version> <sh_group_state> <sh_state_reason>
<sh_prio> <sh_cfg_prio> <sh_fwd_lower_threshold> <sh_fwd_upper_threshold> <sh_can_forward>
<sh_preempt> <sh_preempt_min_delay> <sh_preempt_min_delay_active> <sh_preempt_reload_delay>
<sh_preempt_reload_delay_active> <sh_preempt_sync_delay> <sh_preempt_sync_delay_active>
<sh_cur_hello> <sh_cur_hello_attr> <sh_cfg_hello> <sh_cfg_hello_attr> <sh_active_hello> <sh_cur_hold>
<sh_cur_hold_attr> <sh_cfg_hold> <sh_cfg_hold_attr> <sh_vip> <sh_vip_v6> <sh_vip_attr>
<sh_num_vip_sec> { TABLE_grp_vip_sec <sh_vip_sec> <sh_vip_sec_v6> } <sh_active_router_addr>
<sh_active_router_addr_v6> <sh_active_router_prio> <sh_active_router_timer> <sh_standby_router_addr>
<sh_standby_router_addr_v6> <sh_standby_router_prio> <sh_authentication_type> <sh_authentication_data>
<sh_keystring_attr> <sh_keystring_timeout> <sh_keystring_cur_valid> <sh_vmac> <sh_vmac_attr>
<sh_num_of_state_changes> <sh_last_state_change> <sh_num_of_total_state_changes>
<sh_last_total_state_change> <sh_num_track_obj> { TABLE_grp_track_obj <sh_track_obj>
<sh_track_obj_state> <sh_track_obj_prio> } <sh_ip_redund_name> <sh_ip_redund_name_attr> }
<show_hsrp_end> ]
```

Syntax Description

show	Show running system information
hsrp	Hot Standby Router Protocol (HSRP) information
interface	(Optional) Groups on this interface
<i>interface-id</i>	(Optional) Interface
active	(Optional) Groups in active state
init	(Optional) Groups in init state
listen	(Optional) Groups in listen state
standby	(Optional) Groups in standby state
learn	(Optional) Groups in learn state
speak	(Optional) Groups in speak state
group	(Optional) Group number
<i>group-number</i>	(Optional) Group Number
all	(Optional) Include groups in disabled state
brief	(Optional) Brief output
detail	(Optional) Detailed output
ipv4	(Optional) HSRP V4 Groups
ipv6	(Optional) HSRP V6 Groups

<i>all</i>	(Optional) Display all VIPs
<i>__readonly__</i>	(Optional) Read only
<i>show_hsrp_start</i>	(Optional) Show hsrp start
<i>TABLE_grp_detail</i>	(Optional) Group table detail
<i>sh_if_index</i>	(Optional) Interface type and number
<i>sh_group_num</i>	(Optional) Group number
<i>sh_group_state</i>	(Optional) HSRP state
<i>sh_state_reason</i>	(Optional) Reason
<i>sh_group_type</i>	(Optional) Group type
<i>sh_group_version</i>	(Optional) Group version
<i>sh_prio</i>	(Optional) Priority
<i>sh_cfg_prio</i>	(Optional) Configured priority
<i>sh_fwd_lower_threshold</i>	(Optional) Lower threshold value
<i>sh_fwd_upper_threshold</i>	(Optional) Upper threshold value
<i>sh_can_forward</i>	(Optional) Current forwarding status
<i>sh_preempt</i>	(Optional) Preemption enabled/not
<i>sh_preempt_min_delay</i>	(Optional) Preemption min delay
<i>sh_preempt_min_delay_active</i>	(Optional) Active preemption min delay
<i>sh_preempt_reload_delay</i>	(Optional) Preemption reload delay
<i>sh_preempt_reload_delay_active</i>	(Optional) Active preemption reload delay
<i>sh_preempt_sync_delay</i>	(Optional) Preemption sync delay
<i>sh_preempt_sync_delay_active</i>	(Optional) Active preemption sync delay
<i>sh_cur_hello</i>	(Optional) Current hello time
<i>sh_cur_hello_attr</i>	(Optional) Hello time in ms/not
<i>sh_cfg_hello</i>	(Optional) Configured hello time
<i>sh_cfg_hello_attr</i>	(Optional) Hello time in ms/not
<i>sh_active_hello</i>	(Optional) Active hello time
<i>sh_cur_hold</i>	(Optional) Current hold time
<i>sh_cur_hold_attr</i>	(Optional) Hello time in ms/not

<i>sh_cfg_hold</i>	(Optional) Configured hold time
<i>sh_cfg_hold_attr</i>	(Optional) Hello time in ms/not
<i>sh_vip</i>	(Optional) Virtual IP address
<i>sh_vip_attr</i>	(Optional) Virtual IP address attribute
<i>sh_num_vip_sec</i>	(Optional) Number of Secondary virtual IP address
TABLE_grp_vip_sec	(Optional) Group secondary ip address
<i>sh_vip_sec</i>	(Optional) Secondary virtual IP address
<i>sh_active_router_addr</i>	(Optional) Active router address
<i>sh_active_router_prio</i>	(Optional) Active router priority
<i>sh_active_router_timer</i>	(Optional) Active router expiry timer
<i>sh_standby_router_addr</i>	(Optional) Standby router address
<i>sh_standby_router_prio</i>	(Optional) Standby router priority
<i>sh_authentication_type</i>	(Optional) Authentication type
<i>sh_authentication_data</i>	(Optional) Authentication data
<i>sh_keystring_attr</i>	(Optional) Keystring attribute
<i>sh_keystring_timeout</i>	(Optional) Keystring timeout
<i>sh_keystring_cur_valid</i>	(Optional) Keystring current valid time
<i>sh_vmac</i>	(Optional) Virtual MAC
<i>sh_vmac_attr</i>	(Optional) Virtual MAC attribute
<i>sh_num_of_state_changes</i>	(Optional) Number of state changes
<i>sh_last_state_change</i>	(Optional) Last state change time
<i>sh_num_of_total_state_changes</i>	(Optional) Number of total state changes
<i>sh_last_total_state_change</i>	(Optional) Last total state change time
<i>sh_num_track_obj</i>	(Optional) Number of tracked objects
TABLE_grp_track_obj	(Optional) Group tracked objects
<i>sh_track_obj</i>	(Optional) Tracked object
<i>sh_track_obj_state</i>	(Optional) State of tracked object
<i>sh_track_obj_prio</i>	(Optional) Tracked object priority decrement
<i>sh_ip_redund_name</i>	(Optional) IP redundancy name

<i>sh_ip_redund_name_attr</i>	(Optional) IP redundancy name attribute
<i>show_hsrp_end</i>	(Optional) End of Group

Command Mode

- /exec

show hsrp anycast

```
show hsrp anycast [ <id> { ipv4 | ipv6 | both } ] [ brief ]
```

Syntax Description

show	Show running system information
hsrp	Hot Standby Router Protocol (HSRP) information
anycast	Anycast related commands
<i>id</i>	(Optional) Bundle number
ipv4	(Optional) Associate IP Version 4 for the bundle
ipv6	(Optional) Associate IP Version 6 for the bundle
both	(Optional) Associate IP Version 4 and 6 for the bundle
brief	(Optional) Brief output

Command Mode

- /exec

show hsrp anycast interface vlan

show hsrp anycast interface { vlan | bdi } <id>

Syntax Description

show	Show running system information
hsrp	Hot Standby Router Protocol (HSRP) information
anycast	Anycast related commands
interface	Bundle on this interface Interface
vlan	VLAN interface
bdi	Bridge-Domain interface
<i>id</i>	VLAN number

Command Mode

- /exec

show hsrp anycast remote-db

```
show hsrp anycast remote-db [ <id> { ipv4 | ipv6 | both } ]
```

Syntax Description

show	Show running system information
hsrp	Hot Standby Router Protocol (HSRP) information
anycast	Anycast related commands
remote-db	Remote data base for the bundle
<i>id</i>	(Optional) Bundle number
ipv4	(Optional) Associate IP Version 4 for the bundle
ipv6	(Optional) Associate IP Version 6 for the bundle
both	(Optional) Associate IP Version 4 and 6 for the bundle

Command Mode

- /exec

show hsrp anycast summary

show hsrp anycast summary

Syntax Description

show	Show running system information
hsrp	Hot Standby Router Protocol (HSRP) information
anycast	Anycast related commands
summary	Show HSRP summary

Command Mode

- /exec

show hsrp bfd-sessions

```
show hsrp bfd-sessions [ interface <interface-id> [ to <ipaddress> ] ] [ __readonly__ TABLE_bfd_sess
<interface> <list_size> { <src_addr> | <src_addr_v6> } { <dst_addr> | <dst_addr_v6> } <ref_count> {
TABLE_ref_groups <ref_group_id> } { TABLE_hist_groups <hist_group_id> <hist_operation>
<hist_rel_time> <hist_abs_time> <hist_ref_count> <hist_group_state> <hist_status> <hist_op_reason> } ]
```

Syntax Description

show	Show running system information
hsrp	Hot Standby Router Protocol (HSRP) information
bfd-sessions	BFD sessions
interface	(Optional) Groups on this interface
<i>interface-id</i>	(Optional) Interface
to	(Optional) To IP address
<i>ipaddress</i>	(Optional) Sessions to IP address
<i>__readonly__</i>	(Optional)
TABLE_bfd_sess	(Optional)
<i>interface</i>	(Optional) Interface
<i>list_size</i>	(Optional) List size
<i>src_addr</i>	(Optional) IPv4 Source address
<i>dst_addr</i>	(Optional) IPv4 Destination address
<i>ref_count</i>	(Optional) Ref count
TABLE_ref_groups	(Optional)
<i>ref_group_id</i>	(Optional) Group id
TABLE_hist_groups	(Optional)
<i>hist_group_id</i>	(Optional) Group id
<i>hist_operation</i>	(Optional) Operation
<i>hist_rel_time</i>	(Optional) Relative time
<i>hist_abs_time</i>	(Optional) Absolute time
<i>hist_ref_count</i>	(Optional) Ref count
<i>hist_group_state</i>	(Optional) Group state

<i>hist_status</i>	(Optional) Status
<i>hist_op_reason</i>	(Optional) Op reason

Command Mode

- /exec

show hsrp bfd-sessions

```
show hsrp bfd-sessions [ interface <interface-id> [ to <ipaddress> ] ]
```

Syntax Description

show	Show running system information
hsrp	Hot Standby Router Protocol (HSRP) information
bfd-sessions	BFD sessions
interface	(Optional) Groups on this interface
<i>interface-id</i>	(Optional) Interface
to	(Optional) To IP address
<i>ipaddress</i>	(Optional) Sessions to IP address

Command Mode

- /exec

show hsrp delay

```
show hsrp delay [ interface <interface-id> ] [ __readonly__ TABLE_delay <interface> <min_delay>
<reload_delay> ]
```

Syntax Description

show	Show running system information
hsrp	Hot Standby Router Protocol (HSRP) information
delay	Group initialisation delay
interface	(Optional) Groups on this interface
<i>interface-id</i>	(Optional) Interface
<i>__readonly__</i>	(Optional)
TABLE_delay	(Optional)
<i>interface</i>	(Optional) Interface
<i>min_delay</i>	(Optional) Min delay
<i>reload_delay</i>	(Optional) Reload delay

Command Mode

- /exec

show hsrp ext-mib sec-addr

```
show hsrp ext-mib sec-addr [ <ifindex-in> <group-id-in> <ip1-in> <ip2-in> <ip3-in> <ip4-in> ] [ __readonly__
TABLE_cHsrpExtSecAddrTable <ifindex-out> <group-id-out> <ip1-out> <ip2-out> <ip3-out> <ip4-out> {
<cHsrpExtSecAddrTable> <cHsrpExtSecAddrAddress> <cHsrpExtSecAddrRowStatus> } ]
```

Syntax Description

<code>__readonly__</code>	(Optional) Read Only
<code>show</code>	Show running system information
<code>hsrp</code>	Hot Standby Router Protocol (HSRP) information
<code>ext-mib</code>	Show hsrp extended mib specific configuration
<code>sec-addr</code>	Secondary virtual address
<i>ifindex-in</i>	(Optional) hsrp group ifindex
<i>group-id-in</i>	(Optional) hsrp group id
<i>group-id-out</i>	(Optional) hsrp group num
<i>ifindex-out</i>	(Optional) hsrp group interface index
<i>ip1-in</i>	(Optional) first part of vip
<i>ip2-in</i>	(Optional) second part of vip
<i>ip3-in</i>	(Optional) third part of vip
<i>ip4-in</i>	(Optional) fourth part of vip
<i>ip1-out</i>	(Optional) first part of vip out
<i>ip2-out</i>	(Optional) second part of vip out
<i>ip3-out</i>	(Optional) third part of vip out
<i>ip4-out</i>	(Optional) fourth part of vip out
<code>TABLE_cHsrpExtSecAddrTable</code>	(Optional) Hsrp extended mib secondary address table
<i>cHsrpExtSecAddrTable</i>	(Optional) Hsrp extended mib Secondary address table
<i>cHsrpExtSecAddrAddress</i>	(Optional) Hsrp extended mib Secondary Address
<i>cHsrpExtSecAddrRowStatus</i>	(Optional) Hsrp extended mib secondary address row status

Command Mode

- /exec

show hsrp ext-mib use-bia

```
show hsrp ext-mib use-bia [ <ifindex-in> ] [ __readonly__ TABLE_cHsrpExtIfEntry <ifindex-out> {
<cHsrpExtIfUseBIA> <cHsrpExtIfRowStatus> } ]
```

Syntax Description

<code>__readonly__</code>	(Optional) Read Only
<code>show</code>	Show running system information
<code>hsrp</code>	Hot Standby Router Protocol (HSRP) information
<code>ext-mib</code>	Show hsrp extended mib specific configuration
<code>use-bia</code>	Use BIA
<code>ifindex-in</code>	(Optional) hsrp group ifindex
<code>ifindex-out</code>	(Optional) hsrp group ifindex
<code>TABLE_cHsrpExtIfEntry</code>	(Optional) Use BIA info table
<code>cHsrpExtIfUseBIA</code>	(Optional) Use BIA enabled
<code>cHsrpExtIfRowStatus</code>	(Optional) Use BIA row status

Command Mode

- /exec

show hsrp mgo

show hsrp mgo [name <name> | brief]

Syntax Description

show	Show running system information
hsrp	Hot Standby Router Protocol (HSRP) information
mgo	Show HSRP mgo details
name	(Optional) Redundancy name string
<i>name</i>	(Optional) name string
brief	(Optional) show HSPR mgo brief

Command Mode

- /exec

show hsrp summary

```
show hsrp summary [ __readonly__ <switchover_notify_rxed> <bfd_enabled> <num_of_groups>
<num_of_v4_v1_groups> <num_of_v4_v2_groups> <num_of_v6_v2_groups> <num_of_active_groups>
<num_of_standby_groups> <num_of_listen_groups> <num_of_v6_active_groups>
<num_of_v6_standby_groups> <num_of_v6_listen_groups> <num_of_hsrp_enabled_ifs> <counter_pkts_tx>
<counter_pkts_tx_failure> <counter_pkts_in> <counter_pkts_bad_vr> <counter_mts_rx> ]
```

Syntax Description

show	Show running system information
hsrp	Hot Standby Router Protocol (HSRP) information
summary	Show HSRP summary
<i>__readonly__</i>	(Optional)
<i>switchover_notify_rxed</i>	(Optional) Switchover notification received (1 => active)
<i>bfd_enabled</i>	(Optional) BFD status
<i>num_of_groups</i>	(Optional) Total number of groups
<i>num_of_v4_v1_groups</i>	(Optional) Number of IPv4 V1 groups
<i>num_of_v4_v2_groups</i>	(Optional) Number of IPv4 V2 groups
<i>num_of_v6_v2_groups</i>	(Optional) Number of IPv6 V2 groups
<i>num_of_active_groups</i>	(Optional) Number of active groups
<i>num_of_standby_groups</i>	(Optional) Number of standby groups
<i>num_of_listen_groups</i>	(Optional) Number of listen groups
<i>num_of_v6_active_groups</i>	(Optional) Number of IPv6 active groups
<i>num_of_v6_standby_groups</i>	(Optional) Number of IPv6 standby groups
<i>num_of_v6_listen_groups</i>	(Optional) Number of IPv6 listen groups
<i>num_of_hsrp_enabled_ifs</i>	(Optional) Number of HSRP enabled interfaces
<i>counter_pkts_tx</i>	(Optional) Number of packet transmission successes
<i>counter_pkts_tx_failure</i>	(Optional) Number of packet transmission failure
<i>counter_pkts_in</i>	(Optional) Number of packets received successfully
<i>counter_pkts_bad_vr</i>	(Optional) Number of packets for unknown groups
<i>counter_mts_rx</i>	(Optional) Number of MTS messages received

Command Mode

- /exec

■ show hsrp summary