



W Show Commands

- [show wred-queue qos-group-map](#), on page 2
- [show wrr-queue qos-group-map](#), on page 3
- [show wrr unicast-bandwidth](#), on page 4

show wred-queue qos-group-map

show wred-queue qos-group-map

Syntax Description

Syntax Description

show	Show running system information
wred-queue	Show WRED qos-group information
qos-group-map	Display mapping of the qos-group information

Command Mode

- /exec

show wrr-queue qos-group-map

show wrr-queue qos-group-map

Syntax Description

Syntax Description		
show		Show running system information
wrr-queue		Display mapping of traffic priority (CoS) values to L3 Multicast
qos-group-map		Show wrr-queue qos-group-map

Command Mode

- /exec

show wrr unicast-bandwidth

show wrr unicast-bandwidth

Syntax Description

Syntax Description		
show		Show running system information
wrr		unicast bandwidth configuration
unicast-bandwidth	rate in percentage of data rate	

Command Mode

- /exec