



D Commands

- [dampen-igp-metric](#), on page 7
- [dampening](#), on page 8
- [dampening](#), on page 9
- [dampening](#), on page 10
- [dampenpenalty](#), on page 11
- [data-pattern](#), on page 12
- [data-pattern pad](#), on page 13
- [data-source](#), on page 14
- [databits](#), on page 15
- [databits](#), on page 16
- [datapath-id](#), on page 17
- [datapath-id](#), on page 18
- [db-jid](#), on page 19
- [db-security user password](#), on page 20
- [db-table](#), on page 21
- [dead-interval](#), on page 22
- [dead-interval](#), on page 23
- [dead-interval](#), on page 24
- [deadtime](#), on page 25
- [deadtime](#), on page 26
- [deadtime](#), on page 27
- [dec](#), on page 28
- [default-information originate](#), on page 29
- [default-information originate](#), on page 30
- [default-information originate](#), on page 31
- [default-information originate](#), on page 32
- [default-information originate](#), on page 33
- [default-information originate](#), on page 34
- [default-information originate always rd route-target](#), on page 35
- [default-metric](#), on page 36
- [default-metric](#), on page 37
- [default-metric](#), on page 38
- [default-metric](#), on page 39

- default-metric, on page 40
- default-miss, on page 41
- default-originate, on page 42
- default echo revision, on page 43
- default permit, on page 44
- default permit, on page 45
- default permit, on page 46
- define, on page 47
- delay-restore time, on page 48
- delay, on page 49
- delay, on page 50
- delay, on page 51
- delay peer-link, on page 52
- delay restore, on page 53
- delay restore interface-vlan, on page 54
- delay restore orphan-port, on page 55
- delay up, on page 56
- delete, on page 57
- delete ca-certificate, on page 58
- delete certificate, on page 59
- delete crl, on page 60
- demand-circuit, on page 61
- deny, on page 62
- depth, on page 63
- description, on page 64
- description, on page 65
- description, on page 66
- description, on page 67
- description, on page 68
- description, on page 69
- description, on page 70
- description, on page 71
- description, on page 72
- description, on page 73
- description, on page 74
- description, on page 75
- description, on page 76
- description, on page 77
- description, on page 78
- description, on page 79
- description, on page 80
- description, on page 81
- description, on page 82
- description, on page 83
- description, on page 84
- description, on page 85

- description, on page 86
- description, on page 87
- description, on page 88
- description, on page 89
- description, on page 90
- description, on page 91
- description, on page 92
- description, on page 93
- description, on page 94
- description, on page 95
- description, on page 96
- description, on page 97
- description, on page 98
- description, on page 99
- description, on page 100
- description, on page 101
- description description, on page 102
- dest-ipaddr, on page 103
- dest-ipaddr, on page 104
- dest-port, on page 105
- dest, on page 106
- destination-group, on page 107
- destination-profile, on page 108
- destination-profile, on page 109
- destination-profile CiscoTAC-1 alert-group, on page 110
- destination-profile CiscoTAC-1 email-addr, on page 111
- destination-profile CiscoTAC-1 http, on page 112
- destination-profile CiscoTAC-1 message-level, on page 113
- destination-profile CiscoTAC-1 message-size, on page 114
- destination-profile CiscoTAC-1 transport-method email, on page 115
- destination-profile CiscoTAC-1 transport-method http, on page 116
- destination-profile alert-group, on page 117
- destination-profile email-addr, on page 118
- destination-profile format, on page 119
- destination-profile full-txt-destination alert-group, on page 120
- destination-profile full-txt-destination email-addr, on page 121
- destination-profile full-txt-destination http, on page 122
- destination-profile full-txt-destination message-level, on page 123
- destination-profile full-txt-destination message-size, on page 124
- destination-profile full-txt-destination transport-method email, on page 125
- destination-profile full-txt-destination transport-method http, on page 126
- destination-profile http, on page 127
- destination-profile message-level, on page 128
- destination-profile message-size, on page 129
- destination-profile short-txt-destination alert-group, on page 130
- destination-profile short-txt-destination email-addr, on page 131

- [destination-profile short-txt-destination http](#), on page 132
- [destination-profile short-txt-destination message-level](#), on page 133
- [destination-profile short-txt-destination message-size](#), on page 134
- [destination-profile short-txt-destination transport-method http](#), on page 135
- [destination-profile short-txt-destination transport-method email](#), on page 136
- [destination-profile transport-method email](#), on page 137
- [destination-profile transport-method http](#), on page 138
- [destination-sup interface](#), on page 139
- [destination](#), on page 140
- [destination1 interface](#), on page 141
- [destination](#), on page 142
- [destination](#), on page 143
- [destination](#), on page 144
- [destination](#), on page 145
- [destination filter ip](#), on page 146
- [destination filter ip any any](#), on page 147
- [destination group](#), on page 148
- [destination interface](#), on page 149
- [destination ip](#), on page 150
- [destination warp interface](#), on page 151
- [device-group](#), on page 152
- [device-group](#), on page 153
- [device-role](#), on page 154
- [device-role](#), on page 155
- [device-role](#), on page 156
- [devtest sap](#), on page 157
- [dfe-tuning-delay](#), on page 158
- [diagnostic bootup level](#), on page 159
- [diagnostic bootup level bypass](#), on page 160
- [diagnostic clear result module all diagnostic clear result module test](#), on page 161
- [diagnostic eem action aggressive](#), on page 162
- [diagnostic monitor interval module test all hour min second](#), on page 163
- [diagnostic monitor module all](#), on page 164
- [diagnostic monitor module test all](#), on page 165
- [diagnostic ondemand action-on-failure continue failure-count diagnostic ondemand action-on-failure stop](#), on page 166
- [diagnostic ondemand iteration](#), on page 167
- [diagnostic ondemand test-parameter module test port_lb packet-length](#), on page 168
- [diagnostic pss shrink](#), on page 169
- [diagnostic start module test](#), on page 170
- [diagnostic stop module test all](#), on page 171
- [diagnostic test simulation module test diagnostic test simulation module test clear](#), on page 172
- [diff-clean](#), on page 173
- [diff-clean all-users](#), on page 174
- [diff](#), on page 175
- [dir](#), on page 176

- `disable-connected-check`, on page 177
- `disable-fka`, on page 178
- `disable-memory-alert-check`, on page 179
- `disable-peer-as-check`, on page 180
- `disable-policy-batching`, on page 181
- `disable`, on page 182
- `discard-route external`, on page 183
- `discard-route external`, on page 184
- `discovery`, on page 185
- `distance`, on page 186
- `distance`, on page 187
- `distance`, on page 188
- `distance`, on page 189
- `distance`, on page 190
- `distance`, on page 191
- `distance`, on page 192
- `distribute-list route in`, on page 193
- `distribute into route-map all`, on page 194
- `distribute link-state`, on page 195
- `dns`, on page 196
- `domain-id`, on page 197
- `domain-id secondary`, on page 198
- `domain-tag`, on page 199
- `dont-capability-negotiate`, on page 200
- `dos2nxos`, on page 201
- `dot1q`, on page 202
- `dot1q`, on page 203
- `dot1q`, on page 204
- `dot1q default dynamic`, on page 205
- `dot1x default`, on page 206
- `dot1x default`, on page 207
- `dot1x host-mode`, on page 208
- `dot1x mac-auth-bypass`, on page 209
- `dot1x max-reauth-req`, on page 210
- `dot1x max-req`, on page 211
- `dot1x max-req`, on page 212
- `dot1x pae`, on page 213
- `dot1x port-control`, on page 214
- `dot1x radius-accounting`, on page 215
- `dot1x re-authenticate interface`, on page 216
- `dot1x re-authentication`, on page 217
- `dot1x re-authentication`, on page 218
- `dot1x show credential`, on page 219
- `dot1x start supplicant interface`, on page 220
- `dot1x stop supplicant interface`, on page 221
- `dot1x supplicant credential`, on page 222

- dot1x supplicant credential, on page 223
- dot1x supplicant default, on page 224
- dot1x supplicant max-start, on page 225
- dot1x supplicant max-start, on page 226
- dot1x supplicant timeout auth-period, on page 227
- dot1x supplicant timeout auth-period, on page 228
- dot1x supplicant timeout held-period, on page 229
- dot1x supplicant timeout held-period, on page 230
- dot1x supplicant timeout start-period, on page 231
- dot1x supplicant timeout start-period, on page 232
- dot1x system-auth-control, on page 233
- dot1x timeout inactivity-period, on page 234
- dot1x timeout inactivity-period, on page 235
- dot1x timeout quiet-period, on page 236
- dot1x timeout quiet-period, on page 237
- dot1x timeout ratelimit-period, on page 238
- dot1x timeout re-authperiod, on page 239
- dot1x timeout re-authperiod, on page 240
- dot1x timeout server-timeout, on page 241
- dot1x timeout supp-timeout, on page 242
- dot1x timeout tx-period, on page 243
- dot1x timeout tx-period, on page 244
- down-bit-ignore, on page 245
- downlink delay, on page 246
- dpp set-qos-group, on page 247
- droplist, on page 248
- dscp, on page 249
- dscp, on page 250
- dscp, on page 251
- dscp, on page 252
- dst-grp, on page 253
- dual-active exclude interface-vlan, on page 254
- dual-stage translate xml, on page 255
- duplex, on page 256
- duplex, on page 257
- duplicate-message throttle, on page 258
- dynamic-capability, on page 259
- dynamic-med-interval, on page 260

dampen-igp-metric

dampen-igp-metric <sec> | no dampen-igp-metric

Syntax Description

no	Negate a command or set its defaults
dampen-igp-metric	Dampen IGP metric-related changes
<i>sec</i>	Time interval in seconds

Command Mode

- /exec/configure/router-bgp/router-bgp-af

dampening

```
[no] dampening [ { <half-life> <reuse-limit> <suppress-limit> <max-suppress-time> } | { route-map
<rmap-name> } ]
```

Syntax Description

no	(Optional) Negate a command or set its defaults
dampening	Configure route flap dampening
<i>half-life</i>	(Optional) Decay half life
<i>reuse-limit</i>	(Optional) Value to start reusing a route
<i>suppress-limit</i>	(Optional) Value to start suppressing a route
<i>max-suppress-time</i>	(Optional) Maximum suppress time for stable route
route-map	(Optional) Apply route-map to specify dampening criteria
<i>rmap-name</i>	(Optional) Route-map name

Command Mode

- /exec/configure/router-bgp/router-bgp-af-ipv4-mdt /exec/configure/router-bgp/router-bgp-af-l2vpn-vpls

dampening

```
[no] dampening | dampening [ { <half-life> [ { <reuse> <suppress> <max-suppress> } ] restart [ <penalty> ] ] ] }
```

Syntax Description

<code>no</code>	Negate a command or set its defaults
<code>dampening</code>	configures dampening feature
<i>half-life</i>	(Optional) half-life time for the penalty
<i>reuse</i>	(Optional) Value to start reusing an interface
<i>suppress</i>	(Optional) Value to start suppressing an interface
<i>max-suppress</i>	(Optional) Maximum duration to suppress an interface
<code>restart</code>	(Optional) Enable restart penalty
<i>penalty</i>	(Optional) Penalty applied at restart

Command Mode

- /exec/configure/if-igp

dampening

```
[no] dampening [ { <half-life> <reuse-limit> <suppress-limit> <max-suppress-time> } | { route-map
<rmap-name> } ]
```

Syntax Description

no	(Optional) Negate a command or set its defaults
dampening	Configure route flap dampening
<i>half-life</i>	(Optional) Decay half life
<i>reuse-limit</i>	(Optional) Value to start reusing a route
<i>suppress-limit</i>	(Optional) Value to start suppressing a route
<i>max-suppress-time</i>	(Optional) Maximum suppress time for stable route
route-map	(Optional) Apply route-map to specify dampening criteria
<i>rmap-name</i>	(Optional) Route-map name

Command Mode

- /exec/configure/router-bgp/router-bgp-af /exec/configure/router-bgp/router-bgp-af-vpnv4
/exec/configure/router-bgp/router-bgp-af-vpnv6 /exec/configure/router-bgp/router-bgp-af-link-state
/exec/configure/router-bgp/router-bgp-af-l2vpn-evpn /exec/configure/router-bgp/router-bgp-af-ipv4-mvpn
/exec/configure/router-bgp/router-bgp-af-ipv6-mvpn

dampenpenalty

dampenpenalty [<penalty>]

Syntax Description

dampenpenalty	charge penalty
<i>penalty</i>	(Optional) Penalty to be charged

Command Mode

- /exec/configure/if-igp

data-pattern

```
{ { no | default } data-pattern | data-pattern <hex-pattern> }
```

Syntax Description

no	
default	Set a command to its defaults
data-pattern	Data Pattern
<i>hex-pattern</i>	Data Pattern in Hex

Command Mode

- /exec/configure/ip-sla/udp

data-pattern pad

```
{ data-pattern pad <pad-val> }
```

Syntax Description

<code>data-pattern</code>	Configure NGOAM ping payload
<code>pad</code>	Configure NGOAM payload test pattern pad
<i>pad-val</i>	Configure NGOAM payload test pad value

Command Mode

- /exec/configure/configngoamconnectcheck

data-source

{ data-source <type> } | { no data-source [<type>] }

Syntax Description

no	Negate a command or set its defaults
data-source	Specify the data source
<i>type</i>	

Command Mode

- /exec/configure/telemetry/sensor-group

databits

[no] databits <*i0*>

Syntax Description

no	(Optional) Negate a command or set its defaults
databits	Set number of databits per character
<i>i0</i>	Number of data bits

Command Mode

- /exec/configure/console

databits

[no] databits <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
databits	Set number of databits per character
<i>i0</i>	Number of data bits

Command Mode

- /exec/configure/com1

datapath-id

datapath-id <datapathid-val> | no datapath-id

Syntax Description

no	Negate a command or set its defaults
datapath-id	Datapath ID
<i>datapathid-val</i>	64-bit hex value [0x1-0xffffffffffff]

Command Mode

- /exec/configure/openflow/switch

datapath-id

datapath-id <datapathid-val> | no datapath-id

Syntax Description

no	Negate a command or set its defaults
datapath-id	Datapath ID
<i>datapathid-val</i>	64-bit hex value [0x1-0xffffffffffffff]

Command Mode

- /exec/configure/openflow/switch/sub-switch

db-jid

[no] db-jid <jid> [key-type <key-type>]

Syntax Description

no	(Optional) Negate a command or set its defaults
db-jid	Jabber ID of database
<i>jid</i>	Enter Jabber ID of database
key-type	(Optional) Query key type for this database
<i>key-type</i>	(Optional)

Command Mode

- /exec/configure/fabric-db/server-xmpp

db-security user password

```
[no] db-security user <user> password { 0 <clear> | 7 <encrypted> | <password> } [ shared-secret { 10 <clear> | 7 <encrypted> | <secret> } ]
```

Syntax Description

no	(Optional) Negate a command or set its defaults
db-security	Database Security
user	User ID
<i>user</i>	Enter user ID
password	Password
0	Password that follows should be in clear text
<i>clear</i>	Password in clear text
7	Password that follows should be in encrypted text
<i>encrypted</i>	Encrypted password
<i>password</i>	Enter password in clear text
shared-secret	(Optional) Shared-secret
10	(Optional) Indicates that password that follows should be in clear text
<i>clear</i>	(Optional) Password in clear text
7	(Optional) Password that follows should be in encrypted text
<i>encrypted</i>	(Optional) Encrypted password
<i>secret</i>	(Optional) Enter shared-secret in clear text

Command Mode

- /exec/configure/fabric-db/server-ldap

db-table

[no] db-table <tablename> [key-type <key-type>]

Syntax Description

no	(Optional) Negate a command or set its defaults
db-table	Table name to search
<i>tablename</i>	Enter table name to search
key-type	(Optional) Query key type for this table
<i>key-type</i>	(Optional)

Command Mode

- /exec/configure/fabric-db/server-ldap

dead-interval

```
{ { dead-interval <interval> } | { no dead-interval [ <interval> ] } }
```

Syntax Description

no	Negate a command or set its defaults
dead-interval	Dead interval
<i>interval</i>	(seconds)

Command Mode

- /exec/configure/router-ospf/vrf/router-ospf-slink

dead-interval

```
{ { dead-interval <interval> } | { no dead-interval [ <interval> ] } }
```

Syntax Description

no	Negate a command or set its defaults
dead-interval	Dead interval
<i>interval</i>	(seconds)

Command Mode

- /exec/configure/router-ospf3/router-ospf3-vlink /exec/configure/router-ospf3/vrf/router-ospf3-vlink

dead-interval

```
{ { dead-interval <interval> } | { no dead-interval [ <interval> ] } }
```

Syntax Description

no	Negate a command or set its defaults
dead-interval	Dead interval
<i>interval</i>	(seconds)

Command Mode

- /exec/configure/router-ospf/router-ospf-vlink /exec/configure/router-ospf/vrf/router-ospf-vlink

deadtime

[no] deadtime <*i0*>

Syntax Description

no	(Optional) Negate a command or set its defaults
deadtime	duration for which non-reachable server is skipped
<i>i0</i>	Length of time, in minutes

Command Mode

- /exec/configure/radius

deadtime

[no] deadtime <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
deadtime	duration for which non-reachable server is skipped
<i>i0</i>	Length of time, in minutes

Command Mode

- /exec/configure/ldap

deadtime

[no] deadtime <*i0*>

Syntax Description

no	(Optional) Negate a command or set its defaults
deadtime	duration for which non-reachable server is skipped
<i>i0</i>	Length of time, in minutes

Command Mode

- /exec/configure/tacacs+

dec

dec <expr>

Syntax Description

dec	calculator with results in decimal format
<i>expr</i>	the expression to compute (integer arithmetics)

Command Mode

- /exec

default-information originate

[no] default-information originate [always] [route-map <map-name>]

Syntax Description

no	(Optional) Negate a command or set its defaults
default-information	RIP control distribution of default route
originate	RIP distribute a default route
always	(Optional) RIP always advertise default route
route-map	(Optional) Policy to constrain redistribution
<i>map-name</i>	(Optional) Route-map name

Command Mode

- /exec/configure/router-rip/router-rip-af-common /exec/configure/router-rip/router-rip-vrf-af-common

default-information originate

[no] default-information originate [always] [route-map <map-name>]

Syntax Description

no	(Optional) Negate a command or set its defaults
default-information	Control origination of a default route
originate	Originate a default route
always	(Optional) Always advertise default route
route-map	(Optional) Route-map to announce default routes
<i>map-name</i>	(Optional) A 'routing-rules' route-map name

Command Mode

- /exec/configure/router-isis/router-isis-vrf-common /exec/configure/router-isis/router-isis-af-common

default-information originate

[no] default-information originate [always] [route-map <policy-name>]

Syntax Description

no	(Optional) Negate a command or set its defaults
default-information	Control distribution of default route
originate	Distribute a default route
always	(Optional) Always advertise default route
route-map	(Optional) Policy to control distribution of default route
<i>policy-name</i>	(Optional) Route-map name

Command Mode

- /exec/configure/router-ospf3/router-ospf3-af-ipv6 /exec/configure/router-ospf3/vrf/router-ospf3-af-ipv6

default-information originate

[no] default-information originate [always] [route-map <map>]

Syntax Description

no	(Optional) Negate a command or set its defaults
default-information	Control origination of a default route
originate	Originate a default route
always	(Optional) Always advertise default route
route-map	(Optional) Use a route-map for default route metrics
<i>map</i>	(Optional) Route-map name

Command Mode

- /exec/configure/router-igrp/router-igrp-vrf-common /exec/configure/router-igrp/router-igrp-af-common

default-information originate

[no] default-information originate [always] [route-map <policy-name>]

Syntax Description

no	(Optional) Negate a command or set its defaults
default-information	Control distribution of default route
originate	Distribute a default route
always	(Optional) Always advertise default route
route-map	(Optional) Policy to control distribution of default route
<i>policy-name</i>	(Optional) Route-map name

Command Mode

- /exec/configure/router-ospf /exec/configure/router-ospf/vrf

default-information originate

[no] default-information originate

Syntax Description

no	(Optional) Negate a command or set its defaults
default-information	Control distribution of default information
originate	Distribute a default route

Command Mode

- /exec/configure/router-bgp/router-bgp-af /exec/configure/router-bgp/router-bgp-af-ipv6-label
/exec/configure/router-bgp/router-bgp-af-ipv4-label

default-information originate always rd route-target

```
[no] default-information originate always rd { <ext-comm-rd-aa2nn4> | <ext-comm-rd-aa4nn2> } route-target
{ <ext-comm-rt-aa2nn4> | <ext-comm-rt-aa4nn2> }
```

Syntax Description

no	(Optional) Negate a command or set its defaults
default-information	Control distribution of default information
originate	Distribute a default route
always	Always advertise default route
rd	VPN Route Distinguisher
<i>ext-comm-rd-aa4nn2</i>	VPN route distinguisher in aa4:nn or ip:nn format
<i>ext-comm-rd-aa2nn4</i>	VPN route distinguisher in aa:nn format
route-target	Specify Target VPN Extended Communities
<i>ext-comm-rt-aa4nn2</i>	RT extcommunity in aa4:nn or ip:nn format
<i>ext-comm-rt-aa2nn4</i>	RT extcommunity in aa:nn format

Command Mode

- /exec/configure/router-bgp/router-bgp-af-vpnv4 /exec/configure/router-bgp/router-bgp-af-vpnv6

default-metric

{ default-metric <cost> } | { no default-metric [<cost>] }

Syntax Description

no	Negate a command or set its defaults
default-metric	Specify default metric for redistributed routes
<i>cost</i>	Metric value

Command Mode

- /exec/configure/router-ospf /exec/configure/router-ospf/vrf

default-metric

default-metric <metric> | no default-metric [<metric>]

Syntax Description

no	Negate a command or set its defaults
default-metric	RIP default metric
<i>metric</i>	RIP metric value

Command Mode

- /exec/configure/router-rip/router-rip-af-common /exec/configure/router-rip/router-rip-vrf-af-common

default-metric

{ default-metric <cost> } | { no default-metric [<cost>] }

Syntax Description

no	Negate a command or set its defaults
default-metric	Specify default metric for redistributed routes
<i>cost</i>	Metric value

Command Mode

- /exec/configure/router-ospf3/router-ospf3-af-ipv6 /exec/configure/router-ospf3/vrf/router-ospf3-af-ipv6

default-metric

```
{ { default-metric <bw> <delay> <rel> <load> <mtu> } | { no default-metric [ <bw> <delay> <rel> <load> <mtu> ] } }
```

Syntax Description

<code>no</code>	Negate a command or set its defaults
<code>default-metric</code>	Set metric of redistributed routes
<code>bw</code>	Bandwidth in Kbits per second
<code>delay</code>	Delay metric
<code>rel</code>	Reliability metric where 255 is 100% reliable
<code>load</code>	Effective bandwidth metric (Loading) where 255 is 100% loaded
<code>mtu</code>	Maximum Transmission Unit metric of the path

Command Mode

- /exec/configure/router-eigrp/router-eigrp-vrf-common /exec/configure/router-eigrp/router-eigrp-af-common

default-metric

[no] default-metric <metric>

Syntax Description

no	(Optional) Negate a command or set its defaults
default-metric	Set metric of redistributed routes
<i>metric</i>	Default Metric

Command Mode

- /exec/configure/router-bgp/router-bgp-af

default-miss

default-miss { continue-drop | continue-normal | continue-controller | drop | normal | controller } | no default-miss

Syntax Description

no	Negate a command or set its defaults
default-miss	Set continue-drop/continue-normal/continue-controller/drop/normal/controller flow action
continue-drop	cascade drop to next table
continue-normal	cascade normal to next table
continue-controller	cascade punt to next table
drop	drop packet
normal	forward to normal dataplane
controller	punt to controller

Command Mode

- /exec/configure/openflow/switch

default-originate

[no | default] default-originate [route-map <rmap-name>]

Syntax Description

no	(Optional) Negate a command or set its defaults
default	(Optional) Inherit values from a peer template
default-originate	Originate a default toward this peer
route-map	(Optional) Route-map to specify criteria for originating default
<i>rmap-name</i>	(Optional) Route-map name

Command Mode

- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af
/exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-ipv4-label
/exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-ipv6-label

default echo revision

```
default echo { revision | vendor-extension }
```

Syntax Description

default	Set a command to its defaults
echo	Echo Request attributes
revision	Echo packet default revision
vendor-extension	Send Vendor Extension TLV with echo Req

Command Mode

- /exec/configure/mpls-oam

default permit

[no] default { permit | deny }

Syntax Description

no	(Optional) Negate a command or set its defaults
default	Default Host Admission Policy
permit	Admission Permitted
deny	Admission Denied

Command Mode

- /exec/configure/nbm-host-policy/pim

default permit

[no] default { permit | deny }

Syntax Description

no	(Optional) Negate a command or set its defaults
default	Default Host Admission Policy
permit	Admission Permitted
deny	Admission Denied

Command Mode

- /exec/configure/nbm-host-policy/sender

default permit

[no] default { permit | deny }

Syntax Description

no	(Optional) Negate a command or set its defaults
default	Default Host Admission Policy
permit	Admission Permitted
deny	Admission Denied

Command Mode

- /exec/configure/nbm-host-policy/receiver

define

[no] define <paramname> [<paramtype>] [<paramdesc>]

Syntax Description

no	(Optional) Negate a command or set its defaults
define	Define a parameter
<i>paramname</i>	Enter the name of the parameter
<i>paramtype</i>	(Optional) param type
<i>paramdesc</i>	(Optional) Enter the parameter description

Command Mode

- /exec/configure/param-list

delay-restore time

[no] delay-restore time <sec>

Syntax Description

no	(Optional) Negate a command or set its defaults
delay-restore	delay-restore
time	time
<i>sec</i>	time in seconds

Command Mode

- /exec/configure/config-evpn-msite-bgw

delay

delay <delay_val> | no delay [<delay_val>]

Syntax Description

no	Negate a command or set its defaults
delay	Specify interface throughput delay
<i>delay_val</i>	Throughput delay (tens of microseconds)

Command Mode

- /exec/configure/if-ethernet-all /exec/configure/if-eth-non-member /exec/configure/if-port-channel /exec/configure/if-ethernet-all /exec/configure/if-ethernet-p2p /exec/configure/if-remote-ethernet-sub /exec/configure/if-port-channel-range

delay

delay <microseconds> | no delay

Syntax Description

no	Negate a command or set its defaults
delay	Specify interface throughput delay
<i>microseconds</i>	Throughput delay (tens of microseconds)

Command Mode

- /exec/configure/if-vlan-common

delay

delay <delay_val> | no delay [<delay_val>]

Syntax Description

no	Negate a command or set its defaults
delay	Specify interface throughput delay
<i>delay_val</i>	Throughput delay (tens of microseconds)

Command Mode

- /exec/configure/if-ether-sub /exec/configure/if-ether-sub-p2p /exec/configure/if-port-channel-sub

delay peer-link

delay peer-link <time> | no delay peer-link

Syntax Description

no	Negate a command or set its defaults
delay	Peer-link bringup delay
peer-link	Delay peer-link bringup
<i>time</i>	Delay in bringing up the peer-link (in seconds)

Command Mode

- /exec/configure/vpc-domain

delay restore

delay restore <time-out> | no delay restore

Syntax Description

no	Negate a command or set its defaults
delay	Initialization delay
restore	Delay after restoring peer-link
<i>time-out</i>	Delay in bringing up the vPC links (in seconds)

Command Mode

- /exec/configure/vpc-domain

delay restore interface-vlan

delay restore interface-vlan <time-out> | no delay restore interface-vlan

Syntax Description

no	Negate a command or set its defaults
delay	Initialization delay
restore	Delay after restoring peer-link
interface-vlan	Delay in bringing-up interface-vlan
<i>time-out</i>	Delay in bringing up the interface-vlan (in seconds)

Command Mode

- /exec/configure/vpc-domain

delay restore orphan-port

delay restore orphan-port <delay_time> | no delay restore orphan-port

Syntax Description

no	Negate a command or set its defaults
delay	Initialization delay
restore	Delay after restoring peer-link
orphan-port	Configure vPC orphan-port delay bring-up timer
<i>delay_time</i>	Specify delay time in seconds

Command Mode

- /exec/configure/vpc-domain

delay up

delay { { up <up_delay> [down <down_delay>] } | { down <down_delay> [up <up_delay>] } } | no delay

Syntax Description

no	Negate a command or set its defaults
delay	Tracking delay
up	Delay up change notification
<i>up_delay</i>	Seconds to delay
down	(Optional) Delay down change notification
<i>down_delay</i>	(Optional) Seconds to delay

Command Mode

- /exec/configure/track /exec/configure/tr-list-bool /exec/configure/tr-list-thrp /exec/configure/tr-list-thrw

delete

delete { <uri0> | <uri1> | <uri2> } [no-prompt]

Syntax Description

delete	delete a file or directory
<i>uri0</i>	Delete a file or directory
<i>uri1</i>	Delete a file or directory on expansion flash
<i>uri2</i>	Directory or filename on logflash
no-prompt	(Optional) Do not prompt for multiple deletion of files

Command Mode

- /exec

delete ca-certificate

delete ca-certificate

Syntax Description

delete	Delete the certificates
ca-certificate	Delete the ca certificates

Command Mode

- /exec/configure/trustpoint

delete certificate

delete certificate [force]

Syntax Description

delete	Delete the certificates
certificate	Delete the identity certificate
force	(Optional) Force delete the identity certificate

Command Mode

- /exec/configure/trustpoint

delete crl

delete crl

Syntax Description

delete	Delete the certificates
crl	Delete the CRL

Command Mode

- /exec/configure/trustpoint

demand-circuit

[no] demand-circuit

Syntax Description

no	(Optional) Negate a command or set its defaults
demand-circuit	OSPF Demand circuit

Command Mode

- /exec/configure/router-ospf/vrf/router-ospf-slink

deny

```
<seqno> deny <mpls> { <label1_any> | { <label1> [ mask <label1_mask> ] } } [ <label2_any> | { <label2> [ mask <label2_mask> ] } ] [ <label3_any> | { <label3> [ mask <label3_mask> ] } ] [ <label4_any> | { <label4> [ mask <label4_mask> ] } ] { <mplsaction> <mplsactionid> }
```

Syntax Description

<i>seqno</i>	Sequence number
deny	Deny
mask	(Optional) mask
<i>label1</i>	mpls label one
<i>label2</i>	(Optional) mpls label two
<i>label3</i>	(Optional) mpls label three
<i>label4</i>	(Optional) mpls label four
<i>label1_mask</i>	(Optional) mpls label one mask
<i>label2_mask</i>	(Optional) mpls label two mask
<i>label3_mask</i>	(Optional) mpls label three mask
<i>label4_mask</i>	(Optional) mpls label four mask
<i>label1_any</i>	label one Any
<i>label2_any</i>	(Optional) label two Any
<i>label3_any</i>	(Optional) label three Any
<i>label4_any</i>	(Optional) label four Any
<i>mpls</i>	mpls keyword
<i>mplsaction</i>	mpls ACL Action
<i>mplsactionid</i>	redirect: Ethernet1/1,port-channel1 set-erspan-dscp: <1-63> set-erspan-gre-prot: <1-65535>

Command Mode

- /exec/configure/mpsac1

depth

{ [no] depth <cells> | no depth }

Syntax Description

depth	Provide the number of cells for this INT queue-profile
<i>cells</i>	queue-profile depth (number of cells/packets). Default is 300

Command Mode

- /exec/configure/config-int-q-prof

description

{ description <line> | no description }

Syntax Description

no	Negate a command or set its defaults
description	Description of the route-map
<i>line</i>	Route-map description string

Command Mode

- /exec/configure/route-map

description

```
{ [ no ] description <line> | no description }
```

Syntax Description

description	Provide a description for this Flow Exporter
<i>line</i>	Monitor description string (63 characters maximum)

Command Mode

- /exec/configure/config-int-exporter

description

{ [no] description <line> | no description }

Syntax Description

description	Provide a description for this INT Record
<i>line</i>	Record description string (63 characters maximum)

Command Mode

- /exec/configure/config-int-record

description

{ [no] description <line> | no description }

Syntax Description

description	Provide a description for this INT Watchlist
<i>line</i>	Watchlist description string (63 characters maximum)

Command Mode

- /exec/configure/config-int-watchlist

description

{ [no] description <line> | no description }

Syntax Description

description	Provide a description for this INT Monitor
<i>line</i>	Monitor description string (63 characters maximum)

Command Mode

- /exec/configure/config-int-monitor

description

{ [no] description <line> | no description }

Syntax Description

description	Provide a description for this Flow Record
<i>line</i>	Record description string (63 characters maximum)

Command Mode

- /exec/configure/config-fte-record

description

{ [no] description <line> | no description }

Syntax Description

description	Provide a description for this FTE Monitor
<i>line</i>	Monitor description string (63 characters maximum)

Command Mode

- /exec/configure/config-fte-monitor

description

{ [no] description <line> | no description }

Syntax Description

description	Provide a description for this FTE Eveny
<i>line</i>	Event description string (63 characters maximum)

Command Mode

- /exec/configure/config-fte-event

description

description <desc_line> | no description [<desc_line>]

Syntax Description

no	Negate a command or set its defaults
description	Enter description of maximum 80 characters
<i>desc_line</i>	Description of maximum 80 characters

Command Mode

- /exec/configure/if-vfc

description

description <descr> | no description

Syntax Description

no	Negate a command or set its defaults
description	Session description (max 32 characters)
<i>descr</i>	Enter the description string(can include spaces)

Command Mode

- /exec/configure/monitor-common

description

description <desc_line> | no description [<desc_line>]

Syntax Description

no	Negate a command or set its defaults
description	Enter description of maximum 254 characters
<i>desc_line</i>	Description of maximum 254 characters

Command Mode

- /exec/configure/if-any-tunnel

description

{ description <desc-str> | no description [<desc-str>] }

Syntax Description

no	Negate a command or set its defaults
description	Class-Map description
<i>desc-str</i>	Description of this class-map (up to 200 characters)

Command Mode

- /exec/configure/class-map

description

[no] description <desc-str>

Syntax Description

no	(Optional) Negate a command or set its defaults
description	Class-Map description
<i>desc-str</i>	Description of this class-map (up to 200 characters)

Command Mode

- /exec/configure/class-map/type/queuing

description

{ description <desc-str> | no description [<desc-str>] }

Syntax Description

no	Negate a command or set its defaults
description	Table-Map description
<i>desc-str</i>	Description of this table-map (up to 200 characters)

Command Mode

- /exec/configure/table-map

description

{ description <desc-str> | no description [<desc-str>] }

Syntax Description

no	Negate a command or set its defaults
description	Policy-Map description
<i>desc-str</i>	Description of this policy-map (up to 200 characters)

Command Mode

- /exec/configure/policy-map

description

```
{ description <desc-str> | no description [ <desc-str> ] }
```

Syntax Description

no	Negate a command or set its defaults
description	Policy-Map description
<i>desc-str</i>	Description of this policy-map (up to 200 characters)

Command Mode

- /exec/configure/policy-map/type/queuing

description

{ [no] description <line> | no description }

Syntax Description

description	Provide a description for this Flow Record
<i>line</i>	Record description string (63 characters maximum)

Command Mode

- /exec/configure/nfm-record

description

{ [no] description <line> | no description }

Syntax Description

description	Provide a description for this Flow Monitor
<i>line</i>	Monitor description string (63 characters maximum)

Command Mode

- /exec/configure/nfm-monitor

description

{ [no] description <line> | no description }

Syntax Description

description	Provide a description for this Flow Exporter
<i>line</i>	Monitor description string (63 characters maximum)

Command Mode

- /exec/configure/nfm-exporter

description

description [port-profile] <desc_line> | no description [port-profile] [<desc_line>]

Syntax Description

no	Negate a command or set its defaults
description	Enter port-profile description of maximum 80 characters
port-profile	(Optional) Hack for conf-sync
<i>desc_line</i>	Enter port-profile description of maximum 80 characters

Command Mode

- /exec/configure/port-profile

description

{ description <desc-str> | no description [<desc-str>] }

Syntax Description

no	Negate a command or set its defaults
description	Class-Map description
<i>desc-str</i>	Description of this class-map (up to 200 characters)

Command Mode

- /exec/configure/class-map/type/uf

description

```
{ description <desc-str> | no description [ <desc-str> ] }
```

Syntax Description

no	Negate a command or set its defaults
description	Policy-Map description
<i>desc-str</i>	Description of this policy-map (up to 200 characters)

Command Mode

- /exec/configure/policy-map/type/uf

description

description <desc> | no description

Syntax Description

no	Negate a command or set its defaults
description	Fabric Path topology description
<i>desc</i>	Description of maximum 80 characters

Command Mode

- /exec/configure/fp-topology

description

[no] description <description>

Syntax Description

no	(Optional) Negate a command or set its defaults
description	Configure description for the policy
<i>description</i>	Description for the policy

Command Mode

- /exec/configure/event-manager-applet

description

[no] description

Syntax Description

no	Negate a command or set its defaults
description	Configure description for the policy

Command Mode

- /exec/configure/event-manager-applet

description

description <desc_line> | no description

Syntax Description

no	Negate a command or set its defaults
description	Interface specific description
<i>desc_line</i>	Up to 255 characters describing this interface

Command Mode

- /exec/configure/if-vlan-common

description

description <line> | no description

Syntax Description

no	Negate a command or set its defaults
description	Add a description for the role
<i>line</i>	Enter the description string(can include spaces)

Command Mode

- /exec/configure/role

description

description <desc_line> | no description [<desc_line>]

Syntax Description

no	Negate a command or set its defaults
description	Enter description of maximum 254 characters
<i>desc_line</i>	Description of maximum 254 characters

Command Mode

- /exec/configure/if-eth-base /exec/configure/if-port-channel /exec/configure/if-eth-port-channel /exec/configure/if-ether-sub /exec/configure/if-ether-sub-p2p /exec/configure/if-port-channel-sub /exec/configure/if-loopback /exec/configure/if-ethernet-all /exec/configure/if-ethernet-p2p /exec/configure/if-remote-ethernet-sub /exec/configure/if-port-channel-range

description

description <desc_line> | no description [<desc_line>]

Syntax Description

no	Negate a command or set its defaults
description	Enter description of maximum 254 characters
<i>desc_line</i>	Description of maximum 254 characters

Command Mode

- /exec/configure/if-mgmt-ether

description

description <desc_line> | no description [<desc_line>]

Syntax Description

no	Negate a command or set its defaults
description	Enter description of maximum 254 characters
<i>desc_line</i>	Description of maximum 254 characters

Command Mode

- /exec/configure/if-nve

description

description <desc_line> | no description [<desc_line>]

Syntax Description

no	Negate a command or set its defaults
description	Enter description of maximum 80 characters
<i>desc_line</i>	Description of maximum 80 characters

Command Mode

- /exec/configure/if-overlay /exec/configure/if-te /exec/configure/if-nve

description

[no] description [<desc>] | description <desc>

Syntax Description

no	Negate a command or set its defaults
description	Group description
<i>desc</i>	(Optional) Up to 80 characters describing this group

Command Mode

- /exec/configure/if-eth-any/vrrpv3

description

{ description <line> } | { no description }

Syntax Description

no	Negate a command or set its defaults
description	Description of the VRF
<i>line</i>	VRF description string

Command Mode

- /exec/configure/vrf

description

description <describe> | no description

Syntax Description

no	Negate a command or set its defaults
description	Description for the BMP server
<i>describe</i>	Upto 80 characters describing this server

Command Mode

- /exec/configure/router-bgp/router-bgp-bmp-server

description

description <describe> | { no | default } description [<describe>]

Syntax Description

no	Negate a command or set its defaults
default	Inherit values from a peer template
description	Neighbor specific description
<i>describe</i>	Upto 80 characters describing this neighbor

Command Mode

- /exec/configure/router-bgp/router-bgp-neighbor-sess

description

```
{ [ no ] description <text> }
```

Syntax Description

description	description for this profile
<i>text</i>	description

Command Mode

- /exec/configure/dot1x-cred

description

```
{ description <description_text> | no description [ <description_text> ] }
```

Syntax Description

no	Negate a command or set its defaults
description	Virtual service description
<i>description_text</i>	Description of this virtual service

Command Mode

- /exec/configure/virt-serv

description

{ description <descr> } | { no description }

Syntax Description

description	Configure description of the profile
<i>descr</i>	Description of maximum 64 characters

Command Mode

- /exec/configure/configngoamprofile

description description

[no] description | description <desc>

Syntax Description

no	(Optional) Negate a command or set its defaults
description	Pathway description
<i>desc</i>	Up to 80 characters describing this pathway

Command Mode

- /exec/configure/if-eth-any/vrrs

dest-ipaddr

```
{ dest-ipaddr { <ip-address> | <hostname> | <ipv6-address> } }
```

Syntax Description

dest-ipaddr	Destination ip address
<i>ip-address</i>	IP address, broadcast disallowed
<i>hostname</i>	IP Hostname, broadcast disallowed

Command Mode

- /exec/configure/ip-sla/tcp

dest-ipaddr

```
{ dest-ipaddr { <ip-address> | <hostname> } }
```

Syntax Description

<code>dest-ipaddr</code>	Destination ip address
<i>ip-address</i>	IP address, broadcast disallowed
<i>hostname</i>	IP Hostname, broadcast disallowed

Command Mode

- /exec/configure/ip-sla/udp /exec/configure/ip-sla/jitter

dest-port

{ dest-port <port> }

Syntax Description

dest-port	Destination port
<i>port</i>	udp port number

Command Mode

- /exec/configure/ip-sla/udp /exec/configure/ip-sla/jitter /exec/configure/ip-sla/tcp

dest

```
{ dest { { ip { <numeric10> | <numeric11> | unknown } } | { mac <dmac> <dot1qid> [ <intfid> ] } } }
```

Syntax Description

dest	destination node
ip	ip address
<i>numeric10</i>	Ipv4 address of remote host / VTEP
unknown	Peer vtep ip is unknown, Applicable only for channel Nv03
mac	Mac
<i>dmac</i>	Destination mac address
<i>dot1qid</i>	Encapsulation dot1q/bd on which the mac is learnt
<i>intfid</i>	(Optional) Name of the interface for ngoam ping on which dot1q is configured

Command Mode

- /exec/configure/configngoamconnectcheck

destination-group

[no] destination-group <dgrp-id>

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-group	Create destination group
<i>dgrp-id</i>	Identifier

Command Mode

- /exec/configure/telemetry

destination-profile

[no] destination-profile

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Specify the default destination profile

Command Mode

- /exec/configure/telemetry

destination-profile

[no] destination-profile <s0>

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
s0	User defined destination profile name

Command Mode

- /exec/configure/callhome

destination-profile CiscoTAC-1 alert-group

[no] destination-profile CiscoTAC-1 alert-group { All | Configuration | Diagnostic | EEM | Cisco-TAC | Environmental | Inventory | License | Linecard-Hardware | Supervisor-Hardware | Syslog-group-port | System | Test }

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
CiscoTAC-1	Configure destination profile for XML message
alert-group	Add alert group
All	This alert group consists of all of the callhome messages
Cisco-TAC	Events which are meant for Cisco TAC only
Environmental	Power, fan, temperature related events
Inventory	Inventory status events
License	Events related to licensing
Linecard-Hardware	Linecard related events
Supervisor-Hardware	Supervisor related events
Syslog-group-port	Events related to syslog messages filed by port manager
System	Software related events
Test	User generated test events
Configuration	Events related to Configuration
Diagnostic	Events related to Diagnostic
EEM	EEM events

Command Mode

- /exec/configure/callhome

destination-profile CiscoTAC-1 email-addr

[no] destination-profile CiscoTAC-1 email-addr <s0>

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
CiscoTAC-1	Configure destination profile for XML message
email-addr	Add email addr
s0	Provide email address, example: jdow@xyz.com

Command Mode

- /exec/configure/callhome

destination-profile CiscoTAC-1 http

[no] destination-profile CiscoTAC-1 http <s0>

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
CiscoTAC-1	Configure destination profile for XML message
http	Add http or https url
s0	Provide http or https url, example1: http://site.com/services/callserv example2: https://site2.com/serv/CALL

Command Mode

- /exec/configure/callhome

destination-profile CiscoTAC-1 message-level

[no] destination-profile CiscoTAC-1 message-level <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
CiscoTAC-1	Configure destination profile for XML message
message-level	Callhome message level(0-lowest urgency, 9-highest urgency)
<i>i0</i>	

Command Mode

- /exec/configure/callhome

destination-profile CiscoTAC-1 message-size

[no] destination-profile CiscoTAC-1 message-size <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
CiscoTAC-1	Configure destination profile for XML message
message-size	Configure maximum message size (default 5000000)
<i>i0</i>	Provide maximum possible message size

Command Mode

- /exec/configure/callhome

destination-profile CiscoTAC-1 transport-method email

[no] destination-profile CiscoTAC-1 transport-method email

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
CiscoTAC-1	Configure destination profile for XML message
transport-method	Callhome message sending transport-method
email	email transport-method

Command Mode

- /exec/configure/callhome

destination-profile CiscoTAC-1 transport-method http

[no] destination-profile CiscoTAC-1 transport-method http

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
CiscoTAC-1	Configure destination profile for XML message
transport-method	Callhome message sending transport-method
http	http transport-method

Command Mode

- /exec/configure/callhome

destination-profile alert-group

[no] destination-profile <s0> alert-group { All | Configuration | Diagnostic | EEM | Cisco-TAC | Environmental | Inventory | License | Linecard-Hardware | Supervisor-Hardware | Syslog-group-port | System | Test }

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
s0	User defined destination profile name
alert-group	Add alert group
All	This alert group consists of all of the callhome messages
Cisco-TAC	Events which are meant for Cisco TAC only
Environmental	Power,fan,temperature related events
Inventory	Inventory status events
License	Events related to licensing
Linecard-Hardware	Linecard related events
Supervisor-Hardware	Supervisor related events
Syslog-group-port	Events related to syslog messages filed by port manager
System	Software related events
Test	User generated test events
Configuration	Events related to Configuration
Diagnostic	Events related to Diagnostic
EEM	EEM events

Command Mode

- /exec/configure/callhome

destination-profile email-addr

[no] destination-profile <s0> email-addr <s1>

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
s0	User defined destination profile name
email-addr	Add email addr
s1	Provide email address, example: jdow@xyz.com

Command Mode

- /exec/configure/callhome

destination-profile format

destination-profile <*s0*> format { full-txt | short-txt | XML }

Syntax Description

destination-profile	Configure destination profiles
<i>s0</i>	User defined destination profile name
format	Callhome message format (default XML)
full-txt	Plain text message format
short-txt	Short text message format
XML	XML message format

Command Mode

- /exec/configure/callhome

destination-profile full-txt-destination alert-group

[no] destination-profile full-txt-destination alert-group { All | Configuration | Diagnostic | EEM | Cisco-TAC | Environmental | Inventory | License | Linecard-Hardware | Supervisor-Hardware | Syslog-group-port | System | Test }

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
full-txt-destination	Configure destination profile for plain txt message
alert-group	Add alert group
All	This alert group consists of all of the callhome messages
Cisco-TAC	Events which are meant for Cisco TAC only
Environmental	Power, fan, temperature related events
Inventory	Inventory status events
License	Events related to licensing
Linecard-Hardware	Linecard related events
Supervisor-Hardware	Supervisor related events
Syslog-group-port	Events related to syslog messages filed by port manager
System	Software related events
Test	User generated test events
Configuration	Events related to Configuration
Diagnostic	Events related to Diagnostic
EEM	EEM events

Command Mode

- /exec/configure/callhome

destination-profile full-txt-destination email-addr

[no] destination-profile full-txt-destination email-addr <s0>

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
full-txt-destination	Configure destination profile for plain txt message
email-addr	Add email addr
s0	Provide email address, example: jdow@xyz.com

Command Mode

- /exec/configure/callhome

destination-profile full-txt-destination http

[no] destination-profile full-txt-destination http <s0>

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
full-txt-destination	Configure destination profile for plain txt message
http	Add http or https url
s0	Provide http or https url, example1: http://site.com/services/callserv example2: https://site2.com/serv/CALL

Command Mode

- /exec/configure/callhome

destination-profile full-txt-destination message-level

[no] destination-profile full-txt-destination message-level <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
full-txt-destination	Configure destination profile for plain txt message
message-level	Callhome message level(0-lowest urgency, 9-highest urgency)
<i>i0</i>	

Command Mode

- /exec/configure/callhome

destination-profile full-txt-destination message-size

[no] destination-profile full-txt-destination message-size <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
full-txt-destination	Configure destination profile for plain txt message
message-size	Configure maximum message size (default 2500000)
<i>i0</i>	Provide maximum possible message size

Command Mode

- /exec/configure/callhome

destination-profile full-txt-destination transport-method email

[no] destination-profile full-txt-destination transport-method email

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
full-txt-destination	Configure destination profile for plain txt message
transport-method	Callhome message sending transport-method
email	email transport-method

Command Mode

- /exec/configure/callhome

destination-profile full-txt-destination transport-method http

[no] destination-profile full-txt-destination transport-method http

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
full-txt-destination	Configure destination profile for plain txt message
transport-method	Callhome message sending transport-method
http	http transport-method

Command Mode

- /exec/configure/callhome

destination-profile http

[no] destination-profile <s4> { http <s2> }

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
s4	User defined destination profile name
http	Add http or https url
s2	Provide http or https url, example1: http://site.com/services/callserv example2: https://site2.com/serv/CALL

Command Mode

- /exec/configure/callhome

destination-profile message-level

[no] destination-profile <s0> message-level <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
s0	User defined destination profile name
message-level	Callhome message level(0-lowest urgency, 9-highest urgency)
i0	

Command Mode

- /exec/configure/callhome

destination-profile message-size

[no] destination-profile <s0> message-size <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
s0	User defined destination profile name
message-size	Configure maximum message size (default 2500000)
i0	Provide maximum possible message size

Command Mode

- /exec/configure/callhome

destination-profile short-txt-destination alert-group

[no] destination-profile short-txt-destination alert-group { All | Configuration | Diagnostic | EEM | Cisco-TAC | Environmental | Inventory | License | Linecard-Hardware | Supervisor-Hardware | Syslog-group-port | System | Test }

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
short-txt-destination	Configure destination profile for short txt message
alert-group	Add alert group
All	This alert group consists of all of the callhome messages
Cisco-TAC	Events which are meant for Cisco TAC only
Environmental	Power, fan, temperature related events
Inventory	Inventory status events
License	Events related to licensing
Linecard-Hardware	Linecard related events
Supervisor-Hardware	Supervisor related events
Syslog-group-port	Events related to syslog messages filed by port manager
System	Software related events
Test	User generated test events
Configuration	Events related to Configuration
Diagnostic	Events related to Diagnostic
EEM	EEM events

Command Mode

- /exec/configure/callhome

destination-profile short-txt-destination email-addr

[no] destination-profile short-txt-destination email-addr <s0>

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
short-txt-destination	Configure destination profile for short txt message
email-addr	Add email addr
s0	Provide email address, example: jdow@xyz.com

Command Mode

- /exec/configure/callhome

destination-profile short-txt-destination http

[no] destination-profile short-txt-destination http <s0>

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
short-txt-destination	Configure destination profile for short txt message
http	Add http or https url
s0	Provide http or https url, example1: http://site.com/services/callserv example2: https://site2.com/serv/CALL

Command Mode

- /exec/configure/callhome

destination-profile short-txt-destination message-level

[no] destination-profile short-txt-destination message-level <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
short-txt-destination	Configure destination profile for short txt message
message-level	Callhome message level(0-lowest urgency, 9-highest urgency)
<i>i0</i>	

Command Mode

- /exec/configure/callhome

destination-profile short-txt-destination message-size

[no] destination-profile short-txt-destination message-size <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
short-txt-destination	Configure destination profile for short txt message
message-size	Configure maximum message size (default 4000)
<i>i0</i>	

Command Mode

- /exec/configure/callhome

destination-profile short-txt-destination transport-method http

[no] destination-profile short-txt-destination transport-method http

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
short-txt-destination	Configure destination profile for short txt message
transport-method	Callhome message sending transport-method
http	http transport-method

Command Mode

- /exec/configure/callhome

destination-profile short-txt-destination transport-method email

[no] destination-profile short-txt-destination transport-method email

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
short-txt-destination	Configure destination profile for short txt message
transport-method	Callhome message sending transport-method
email	email transport-method

Command Mode

- /exec/configure/callhome

destination-profile transport-method email

[no] destination-profile <s5> transport-method email

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
s5	User defined destination profile name
transport-method	Callhome message sending transport-method
email	email transport-method

Command Mode

- /exec/configure/callhome

destination-profile transport-method http

[no] destination-profile <s6> transport-method http

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
s6	User defined destination profile name
transport-method	Callhome message sending transport-method
http	http transport-method

Command Mode

- /exec/configure/callhome

destination-sup interface

[no] destination-sup interface <interface>

Syntax Description

no	(Optional) Negate a command or set its defaults
destination-sup	Destination configuration
interface	Configure interfaces
<i>interface</i>	

Command Mode

- /exec/configure/monitor-local-src /exec/configure/config-monitor
/exec/configure/config-monitor-erspan-src

destination

```
{ [ no ] destination { <ipaddr> | <ipv6addr> } [ use-vrf { <vrf_name> | <vrf-known-name> } ] | no destination
}
```

Syntax Description

<code>destination</code>	Specify the destination address
<code>ipaddr</code>	Destination IP address for collector
<code>use-vrf</code>	(Optional) Optional VRF label
<code>vrf_name</code>	(Optional) VRF name
<code>vrf-known-name</code>	(Optional) Known VRF name

Command Mode

- /exec/configure/config-fte-exporter

destination1 interface

[no] destination1 interface <interface_range>

Syntax Description

no	(Optional) Negate a command or set its defaults
destination1	Destination configuration
interface	Configure interfaces
<i>interface_range</i>	

Command Mode

- /exec/configure/monitor-local-dst

destination

```
{ [ no ] destination { <ipaddr> | <ipv6addr> } [ use-vrf { <vrf_name> | <vrf-known-name> } ] | no destination }
```

Syntax Description

<code>destination</code>	Specify the destination address
<code>ipaddr</code>	Destination IP address for collector
<code>use-vrf</code>	(Optional) Optional VRF label
<code>vrf_name</code>	(Optional) VRF name
<code>vrf-known-name</code>	(Optional) Known VRF name

Command Mode

- /exec/configure/config-int-exporter

destination

```
{ [ no ] destination { <ipaddr> | <ipv6addr> } [ use-vrf { <vrf_name> | <vrf-known-name> } ] | no destination }
```

Syntax Description

<code>destination</code>	Specify the destination address
<code>ipaddr</code>	Destination IP address for collector
<code>use-vrf</code>	(Optional) Optional VRF label
<code>vrf_name</code>	(Optional) VRF name
<code>vrf-known-name</code>	(Optional) Known VRF name

Command Mode

- /exec/configure/nfm-exporter

destination

```
{ [ no ] destination <ipaddr> } [ use-vrf { <vrf-name> | <vrf-known-name> } ]
```

Syntax Description

<code>destination</code>	Destination configuration
<code>ipaddr</code>	IP Address to be configured
<code>use-vrf</code>	(Optional) VRF label
<code>vrf-name</code>	(Optional) VRF name
<code>vrf-known-name</code>	(Optional) Known VRF name

Command Mode

- /exec/configure/config-ssx-exporter

destination

[no] destination | destination <ipaddr>

Syntax Description

no	Negate a command or set its defaults
destination	destination of tunnel
<i>ipaddr</i>	ip address (A.B.C.D)

Command Mode

- /exec/configure/if-te

destination filter ip

```
[no] destination filter ip { <ip-addr> <ip-mask> } [ ip | { { udp | tcp } { <port_num> | any } } ] [ { arp | advertise } { enable | disable } ]
```

Syntax Description

no	(Optional) Negate a command or set its defaults
destination	destination ip configuration
filter	list of ips to filter
ip	destination ip
<i>ip-addr</i>	IP address in format i.i.i.i
<i>ip-mask</i>	IP network mask in format m.m.m.m
ip	(Optional) IP Protocol
udp	(Optional) UDP Protocol
tcp	(Optional) TCP Protocol
<i>port_num</i>	(Optional) Port Number
any	(Optional) Any Port Number
arp	(Optional) ARP
advertise	(Optional) advertise
enable	(Optional) Enable
disable	(Optional) Disable

Command Mode

- /exec/configure/smartc

destination filter ip any any

[no] destination filter ip any any

Syntax Description

no	(Optional) Negate a command or set its defaults
destination	destination ip configuration
filter	list of ips to filter
ip	destination ip
any	Any IP

Command Mode

- /exec/configure/smartc

destination group

[no] destination group <group_number>

Syntax Description

no	(Optional) Negate a command or set its defaults
destination	Destination configuration
group	Configure destination group
<i>group_number</i>	

Command Mode

- /exec/configure/monitor-local-dst

destination interface

[no] destination interface <interface_range>

Syntax Description

no	(Optional) Negate a command or set its defaults
destination	Destination configuration
interface	Configure interfaces
<i>interface_range</i>	

Command Mode

- /exec/configure/monitor-local-dst

destination ip

[no] destination ip <ipaddress>

Syntax Description

no	(Optional) Negate a command or set its defaults
destination	Destination configuration
ip	Configure remote IP address
<i>ipaddress</i>	

Command Mode

- /exec/configure/config-monitor-erspan-src

destination warp interface

[no] destination warp interface <interface_range>

Syntax Description

no	(Optional) Negate a command or set its defaults
destination	Destination configuration
interface	Configure interfaces
<i>interface_range</i>	
warp	Create warp destination group

Command Mode

- /exec/configure/monitor-local-dst

device-group

[no] device-group <group-name>

Syntax Description

no	(Optional) Negate a command or set its defaults
device-group	PLB device group
<i>group-name</i>	Specify device-group name

Command Mode

- /exec/configure/plb

device-group

{ device-group <name> } | { no device-group <name> }

Syntax Description

no	Negate a command or set its defaults
device-group	ITD device group
<i>name</i>	ITD device group name

Command Mode

- /exec/configure/itd

device-role

[no] device-role <dev_role>

Syntax Description

no	(Optional) Negate a command or set its defaults
<i>dev_role</i>	

Command Mode

- /exec/configure/config-ra-guard

device-role

[no] device-role <dev_role>

Syntax Description

no	(Optional) Negate a command or set its defaults
<i>dev_role</i>	

Command Mode

- /exec/configure/config-snoop-policy

device-role

[no] device-role <devrole>

Syntax Description

no	(Optional) Negate a command or set its defaults
<i>devrole</i>	

Command Mode

- /exec/configure/config-dhcp-guard

devtest sap

devtest sap <sap> [exec <func>]

Syntax Description

devtest	Remote API invocation (helps testing and debugging)
sap	Specify the SAP address of the destination queue
<i>sap</i>	SAP address of the destination queue (0 == Registry)
exec	(Optional) Specify the API name to be invoked on the remote feature
<i>func</i>	(Optional) Examples:

Command Mode

- /exec

dfe-tuning-delay

```
{ dfe-tuning-delay <delay-val> | no dfe-tuning-delay [ <delay-val> ] }
```

Syntax Description

no	Negate a command or set its defaults
dfe-tuning-delay	Configure DFE Tuning delay for interface
<i>delay-val</i>	DFE tuning delay value (ms)

Command Mode

- /exec/configure/if-ethernet-all /exec/configure/if-eth-base

diagnostic bootup level

[no] diagnostic bootup level

Syntax Description

no	Negate a command or set its defaults
diagnostic	Diagnostic commands
bootup	Configure Diagnostic for bootup
level	Select diagnostic level

Command Mode

- /exec/configure

diagnostic bootup level bypass

diagnostic bootup level { bypass | complete }

Syntax Description

diagnostic	Diagnostic commands
bootup	Configure Diagnostic for bootup
level	Select diagnostic level
bypass	Skip all bootup test
complete	Complete level

Command Mode

- /exec/configure

diagnostic clear result module all diagnostic clear result module test

diagnostic clear result module all | diagnostic clear result module <module> test { <test-id> | all }

Syntax Description

diagnostic	Diagnostic commands
clear	Erase Diagnostic Test Results/Stats
result	Diagnostic test result
module	Module keyword
<i>module</i>	Module number
all	Select all
test	Diagnostic test selection
<i>test-id</i>	

Command Mode

- /exec

diagnostic eem action aggressive

[no] diagnostic eem action aggressive

Syntax Description

no	(Optional) Negate a command or set its defaults
diagnostic	Diagnostic commands
eem	Configure Diagnostic for eem
action	Select diagnostic action
aggressive	Take aggressive default actions

Command Mode

- /exec/configure

diagnostic monitor interval module test all hour min second

diagnostic monitor interval module <module> test { all | <name> | <test-id> } hour <hour-cntr> min <min-cntr> second <sec-cntr> | no diagnostic monitor interval module <module> test { all | <name> | <test-id> }

Syntax Description

no	Negate a command or set its defaults
diagnostic	Diagnostic commands
monitor	Configure diagnostic monitoring test
interval	Configure diagnostic monitoring tests interval
module	Module Keyword
<i>module</i>	Module number
test	Diagnostic test selection
all	Select all test ID
<i>test-id</i>	
<i>name</i>	Test name
hour	Hour of the day
<i>hour-cntr</i>	Interval in hours
min	Minute of an hour
<i>min-cntr</i>	Interval in minutes
second	Second of a minute
<i>sec-cntr</i>	Interval in seconds

Command Mode

- /exec/configure

diagnostic monitor module all

[no] diagnostic monitor module all [test <name>]

Syntax Description

no	(Optional) Negate a command or set its defaults
diagnostic	Diagnostic commands
monitor	Configure diagnostic monitoring test
module	Module Keyword
all	Select all module ID
test	(Optional) Diagnostic test selection
<i>name</i>	(Optional) Test name

Command Mode

- /exec/configure

diagnostic monitor module test all

diagnostic monitor module <module> test { all | <name> | <test-id> } | no diagnostic monitor module <module>
test { all | <name> | <test-id> }

Syntax Description

no	Negate a command or set its defaults
diagnostic	Diagnostic commands
monitor	Configure diagnostic monitoring test
module	Module Keyword
<i>module</i>	Module number
test	Diagnostic test selection
all	Select all test ID
<i>test-id</i>	
<i>name</i>	Test name

Command Mode

- /exec/configure

diagnostic ondemand action-on-failure continue failure-count diagnostic ondemand action-on-failure stop

diagnostic ondemand action-on-failure continue failure-count <failure-cnt> | diagnostic ondemand
action-on-failure stop

Syntax Description

diagnostic	Diagnostic commands
ondemand	On demand diagnostic setting
action-on-failure	Set action to take if test fails
continue	Continue ondemand test until test failure limit is reached
failure-count	Continue failing tests this many times
stop	Stop ondemand tests immediately if a test fails
<i>failure-cnt</i>	Maximum number of test failures allowed

Command Mode

- /exec

diagnostic ondemand iteration

diagnostic ondemand iteration <iteration-count>

Syntax Description

diagnostic	Diagnostic commands
ondemand	On demand diagnostic setting
iteration	Set number of times to repeat ondemand test list
<i>iteration-count</i>	Number of times to repeat ondemand test list

Command Mode

- /exec

diagnostic ondemand test-parameter module test port_lb packet-length

diagnostic ondemand test-parameter module <module> test port_lb packet-length <size>

Syntax Description

diagnostic	Diagnostic commands
ondemand	Ondemand command
test-parameter	Set test parameter
module	Module keyword
<i>module</i>	Module number
test	Diagnostic test selection
port_lb	Port loop back test
packet-length	Size of the packet
<i>size</i>	Packet size for the selected module

Command Mode

- /exec

diagnostic pss shrink

diagnostic pss shrink

Syntax Description

diagnostic	Diagnostic commands
pss	PSS command
shrink	compact the diag_port_lb PSS

Command Mode

- /exec

diagnostic start module test

```
diagnostic start module <module> test { all | <name> | <test-id> | non-disruptive | per-port } [ port { iall | <port-id> } ]
```

Syntax Description

diagnostic	Diagnostic commands
start	Starting on demand diagnostic
module	Module keyword
<i>module</i>	Module Number
test	Diagnostic test selection
all	Select all test ID
<i>name</i>	Test name
<i>test-id</i>	
non-disruptive	Select the Non-Disruptive test suite [Attribute = N]
per-port	Select the Per-Port test suite [Attribute = P]
port	(Optional) Interface port selection
iall	(Optional) Select all ports
<i>port-id</i>	(Optional)

Command Mode

- /exec

diagnostic stop module test all

diagnostic stop module <module> test { all | <name> | <test-id> }

Syntax Description

diagnostic	Diagnostic commands
stop	Stopping diagnostic
module	Module keyword
<i>module</i>	Module Number
test	Diagnostic test selection
all	Select all test ID
<i>test-id</i>	
<i>name</i>	Test name

Command Mode

- /exec

diagnostic test simulation module test diagnostic test simulation module test clear

```
diagnostic test simulation module <module> test <test-id> [ port { <port-id> | all } ] { success | fail | random-fail } | diagnostic test simulation module <module> test <test-id> clear
```

Syntax Description

diagnostic	Diagnostic commands
test	Diagnostic test selection
simulation	Simulating Diagnostic result
module	Module keyword
<i>module</i>	Module Number
test	Diagnostic test selection
<i>test-id</i>	
port	(Optional) Interface port selection
all	(Optional) Select all ports
<i>port-id</i>	(Optional)
success	pass test result
fail	fail test result
random-fail	fail test result randomly
clear	Stop simulation

Command Mode

- /exec

diff-clean

diff-clean [all-sessions]

Syntax Description

diff-clean	remove temp files created by ' diff' filters
all-sessions	(Optional) remove ' diff' temp files from all sessions (past and present!) of current user

Command Mode

- /exec

diff-clean all-users

diff-clean all-users

Syntax Description

diff-clean	remove temp files created by ' diff' filters
all-users	remove ' diff' temp files from all sessions (past and present!) of all users

Command Mode

- /exec

diff

| diff [again | echo | -c [<lines>] | -b | -B | -i | -I <regexp> | -y | --left-column | -W <columns> | -q | -s] +

Syntax Description

	Pipe command output to filter
diff	show difference between current and previous invocation (creates temp files: remove them with 'diff-clean' command and dont use it on commands with big outputs, like 'show tech!')
again	(Optional) dont create new file: use old ones, just change display options or add more filters
echo	(Optional) echo the current file (only effective if no old file)
-c	(Optional) set number of lines of context (default 3)
<i>lines</i>	(Optional) number of lines of context
-b	(Optional) Ignore changes in amount of white space
-B	(Optional) Ignore changes that just insert or delete blank lines
-i	(Optional) Ignore changes in case
-I	(Optional) Ignore changes that just insert or delete lines that match regexp
<i>regexp</i>	(Optional) regexp of lines to ignore
-y	(Optional) Use the side by side output format
--left-column	(Optional) Print only the left column of two common lines in side by side format
-W	(Optional) Use an output width of <columns> in side by side format
<i>columns</i>	(Optional) Use an output width of <columns> in side by side format
-q	(Optional) Report only whether the files differ, not the details of the differences
-s	(Optional) Report when two files are the same

Command Mode

- /output

dir

```
dir [ <uri0> | <uri1> | <uri2> ] [ __readonly__ { TABLE_dir <fsize> <timestring> <fname> } { <usage>
<bytesused> <bytesfree> <bytestotal> } ]
```

Syntax Description

<code>dir</code>	list files in a directory
<code>uri0</code>	(Optional) Directory or filename
<code>uri1</code>	(Optional) Directory or filename on expansion flash
<code>uri2</code>	(Optional) Directory or filename on log flash
<code>__readonly__</code>	(Optional) Read Only
<code>TABLE_dir</code>	(Optional) show dir
<code>fsize</code>	(Optional) filesize
<code>timestring</code>	(Optional) time string
<code>fname</code>	(Optional) filename
<code>usage</code>	(Optional) usage
<code>bytesused</code>	(Optional) bytes used
<code>bytesfree</code>	(Optional) bytes free
<code>bytestotal</code>	(Optional) bytes total

Command Mode

- /exec

disable-connected-check

[no | default] disable-connected-check

Syntax Description

no	(Optional) Negate a command or set its defaults
default	(Optional) Inherit values from a peer template
disable-connected-check	Disable check for directly connected peer

Command Mode

- /exec/configure/router-bgp/router-bgp-neighbor-sess

disable-fka

[no] disable-fka

Syntax Description

no	(Optional) Negate a command or set its defaults
disable-fka	Disables verifying FIP Keep Alive

Command Mode

- /exec/configure/if-vfc

disable-memory-alert-check

[no] disable-memory-alert-check

Syntax Description

no	(Optional) Negate a command or set its defaults
disable-memory-alert-check	Disables the system memory alert handling in BGP

Command Mode

- /exec/configure/router-bgp

disable-peer-as-check

[no | default] disable-peer-as-check

Syntax Description

no	(Optional) Negate a command or set its defaults
default	(Optional) Inherit values from a peer template
disable-peer-as-check	Disable checking of peer AS-number while advertising

Command Mode

- /exec/configure/router-bgp/router-bgp-vrf-neighbor/router-bgp-vrf-neighbor-af-ipv4
- /exec/configure/router-bgp/router-bgp-vrf-neighbor/router-bgp-vrf-neighbor-af-ipv6
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-l2vpn-evpn
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-ipv4-label
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-ipv6-label
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-ipv4-mvpn
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-ipv6-mvpn

disable-policy-batching

[no] disable-policy-batching [nexthop | { { ipv4 | ipv6 } prefix-list <prfxlist-name> }]

Syntax Description

no	(Optional) Negate a command or set its defaults
disable-policy-batching	Disable batching evaluation of outbound policy for a peer
nexthop	(Optional) batching based on nexthop
ipv4	(Optional) IPv4 address-family
ipv6	(Optional) IPv6 address-family
prefix-list	(Optional) Apply prefix-list
<i>prfxlist-name</i>	(Optional) Name of prefix-list

Command Mode

- /exec/configure/router-bgp

disable

disable

Syntax Description

disable	disable callhome
---------	------------------

Command Mode

- /exec/configure/callhome

discard-route external

[no] discard-route { external | internal }

Syntax Description

no	(Optional) Negate a command or set its defaults
discard-route	Install discard route
external	External route
internal	Internal route

Command Mode

- /exec/configure/router-ospf3 /exec/configure/router-ospf3/vrf

discard-route external

[no] discard-route { external | internal }

Syntax Description

no	(Optional) Negate a command or set its defaults
discard-route	Install discard route
external	External route
internal	Internal route

Command Mode

- /exec/configure/router-ospf /exec/configure/router-ospf/vrf

discovery

```
discovery { quick-start | hello { holdtime <link-hello-holdtime> | interval <link-hello-intvl> } | targeted-hello
{ accept [ from <pfx-list> ] | tgt-holdtime <tgt-hello-holdtime> | tgt-interval <tgt-hello-intvl> } |
ignore-transport-address | omit-transport-address | spoofing } | no discovery { quick-start | hello { holdtime |
interval } | targeted-hello { accept | tgt-holdtime | tgt-interval } | ignore-transport-address | omit-transport-address
| spoofing }
```

Syntax Description

no	Negate a command or set its defaults
discovery	LDP discovery
quick-start	Enable quick LDP Hello transmissions on interface up
hello	LDP discovery Hello
interval	LDP discovery Hello interval
holdtime	LDP discovery Hello holdtime
<i>link-hello-holdtime</i>	Holdtime in seconds
<i>link-hello-intvl</i>	Hello interval in seconds
targeted-hello	LDP discovery Targeted Hello
accept	Accept targeted hellos
from	(Optional) Prefix list to specify acceptable targeted hello sources
<i>pfx-list</i>	(Optional) Name of prefix list
tgt-holdtime	LDP discovery Targeted Hello holdtime
<i>tgt-hello-holdtime</i>	Holdtime in seconds
tgt-interval	LDP discovery Targeted Hello interval
<i>tgt-hello-intvl</i>	Hello interval in seconds
ignore-transport-address	
omit-transport-address	
spoofing	

Command Mode

- /exec/configure/ldp

distance

distance <ebgp-dist> <ibgp-dist> <local-dist> | no distance [<ebgp-dist> <ibgp-dist> <local-dist>]

Syntax Description

no	Negate a command or set its defaults
distance	Configure administrative distance
<i>ebgp-dist</i>	Distance for EBGP routes
<i>ibgp-dist</i>	Distance for IBGP routes
<i>local-dist</i>	Distance for local routes

Command Mode

- /exec/configure/router-bgp/router-bgp-af

distance

distance <distance> | no distance [<distance>]

Syntax Description

no	Negate a command or set its defaults
distance	RIP administrative distance
<i>distance</i>	RIP administrative distance

Command Mode

- /exec/configure/router-rip/router-rip-af-common /exec/configure/router-rip/router-rip-vrf-af-common

distance

distance <admin-dist> | no distance [<admin-dist>]

Syntax Description

no	Negate a command or set its defaults
distance	Administrative distance
<i>admin-dist</i>	Distance value

Command Mode

- /exec/configure/router-isis/router-isis-af-ipv4

distance

distance <admin-dist> | no distance [<admin-dist>]

Syntax Description

no	Negate a command or set its defaults
distance	Administrative distance
<i>admin-dist</i>	Distance value

Command Mode

- /exec/configure/router-isis/router-isis-vrf-common

distance

distance <admin-dist> | no distance [<admin-dist>]

Syntax Description

no	Negate a command or set its defaults
distance	OSPFv3 administrative distance
<i>admin-dist</i>	administrative distance value

Command Mode

- /exec/configure/router-ospf3/router-ospf3-af-ipv6 /exec/configure/router-ospf3/vrf/router-ospf3-af-ipv6

distance

```
{ { distance <int-distance> <ext-distance> } | { no distance [ <int-distance> <ext-distance> ] } }
```

Syntax Description

no	Negate a command or set its defaults
distance	Define an administrative distance
<i>int-distance</i>	Distance for internal routes
<i>ext-distance</i>	Distance for external routes

Command Mode

- /exec/configure/router-eigrp/router-eigrp-vrf-common /exec/configure/router-eigrp/router-eigrp-af-common

distance

distance <admin-dist> | no distance [<admin-dist>]

Syntax Description

no	Negate a command or set its defaults
distance	OSPF administrative distance
<i>admin-dist</i>	administrative distance value

Command Mode

- /exec/configure/router-ospf /exec/configure/router-ospf/vrf

distribute-list route in

[no] distribute-list { { route-map <map> } | { prefix-list <list> } } { in | out } <interface>

Syntax Description

no	(Optional) Negate a command or set its defaults
distribute-list	Filter networks in routing updates
route-map	Use a route-map for route filtering
<i>map</i>	Route-map name
prefix-list	Use a prefix-list for route filtering
<i>list</i>	Reference to prefix-list name
in	Filter incoming routing updates
out	Filter outgoing routing updates
<i>interface</i>	Interface name

Command Mode

- /exec/configure/router-eigrp/router-eigrp-vrf-common /exec/configure/router-eigrp/router-eigrp-af-common

distribute into route-map all

```
{ { distribute <src-level> into <dst-level> { { route-map { <map-name> | <rtr_pol_name> } } | all } } | { no
distribute <src-level> into <dst-level> [ { route-map { <map-name> | <rtr_pol_name> } } | all ] } }
```

Syntax Description

no	Negate a command or set its defaults
distribute	Distribute routes between ISIS levels
<i>src-level</i>	Route-distribution between levels
<i>dst-level</i>	Route-distribution between levels
route-map	Route Map to constrain distribution
into	from level-n into level-m
<i>map-name</i>	A 'routing-rules' route-map name
<i>rtr_pol_name</i>	An existing routing-rules policy
all	Distribute all level-n routes

Command Mode

- /exec/configure/router-isis/router-isis-vrf-common /exec/configure/router-isis/router-isis-af-common

distribute link-state

[no] distribute link-state [instance-id <instid>] [level <level>] [throttle <seconds>]

Syntax Description

no	(Optional) Negate a command or set its defaults
distribute	Distribute routes between ISIS levels
link-state	Distribute link-state
instance-id	(Optional) Instance ID of ISIS process
<i>instid</i>	(Optional) Instance ID of ISIS process
level	(Optional) Level to be distributed
<i>level</i>	(Optional) IS-IS level
throttle	(Optional) Throttle timer in seconds
<i>seconds</i>	(Optional) Throttle timer in seconds

Command Mode

- /exec/configure/router-isis

dns

```
[no] dns { <WORD> } { name-server { <hostname> | <ip-address> } } { [ source-ip { <source-ip-hostname> | <source-ip-address> } ] [ source-port <src-port> ] } +
```

Syntax Description

no	(Optional)
<i>source-ip</i>	(Optional) source-port
<i>src-port</i>	(Optional)
dns	DNS Operation
<i>WORD</i>	Target IP Address or Hostname
name-server	Name Server
<i>hostname</i>	Destination hostname, broadcast disallowed
<i>ip-address</i>	Destination IP address, broadcast disallowed
<i>source-ip-hostname</i>	(Optional) source IP hostname, broadcast disallowed
<i>source-ip-address</i>	(Optional) source IP address, broadcast disallowed
source-port	(Optional) Source Port

Command Mode

- /exec/configure/ip-sla

domain-id

domain-id { <id> | { type <dtype> value <dvalue> } | Null } | no domain-id [<id> | { type <dtype> value <dvalue> } | Null]

Syntax Description

no	Negate a command or set its defaults
domain-id	OSPF domain-ID
<i>id</i>	OSPF domain ID in IP address format
type	OSPF domain ID type in Hex format
<i>dtype</i>	OSPF domain ID type in Hex format
value	OSPF domain ID ext. community value in Hex
<i>dvalue</i>	
Null	Null Domain-ID

Command Mode

- /exec/configure/router-ospf/vrf

domain-id secondary

domain-id { <id> | { type <dtype> value <dvalue> } | Null } secondary | no domain-id [<id> | { type <dtype> value <dvalue> } | Null] secondary

Syntax Description

no	Negate a command or set its defaults
domain-id	OSPF domain-ID
<i>id</i>	OSPF domain ID in IP address format
type	OSPF domain ID type in Hex format
<i>dtype</i>	OSPF domain ID type in Hex format
value	OSPF domain ID ext. community value in Hex
<i>dvalue</i>	
Null	Null Domain-ID
secondary	Secondary Domain-ID

Command Mode

- /exec/configure/router-ospf/vrf

domain-tag

[no] domain-tag <as-number>

Syntax Description

no	(Optional) Negate a command or set its defaults
domain-tag	Set OSPF process domain-tag
<i>as-number</i>	AS number

Command Mode

- /exec/configure/router-ospf/vrf

dont-capability-negotiate

[no | default] dont-capability-negotiate

Syntax Description

no	(Optional) Negate a command or set its defaults
default	(Optional) Inherit values from a peer template
dont-capability-negotiate	Don't negotiate capability with this neighbor

Command Mode

- /exec/configure/router-bgp/router-bgp-neighbor-sess

dos2nxos

dos2nxos <uri0>

Syntax Description

dos2nxos	DOS to NXOS text file format converter
<i>uri0</i>	Filename to be displayed

Command Mode

- /exec

dot1q

```
{ dot1q <vlan-id> [ cos <cos-val> ] } | { no dot1q }
```

Syntax Description

no	Negate a command or set its defaults
dot1q	specify flow profile to include dot1q tag
<i>vlan-id</i>	specify flow profile vlan-id
cos	(Optional) specify class of service
<i>cos-val</i>	(Optional) class of service value

Command Mode

- /exec/configure/configngoamprofileflow

dot1q

[no] dot1q <vlan-id-sh>

Syntax Description

no	(Optional) Negate a command or set its defaults
dot1q	Configure a dot1q-based static host
<i>vlan-id-sh</i>	

Command Mode

- /exec/configure/static-host

dot1q

{ dot1q <dot1q-id> [<intf-id>] } | { no dot1q }

Syntax Description

no	Negate a command or set its defaults
dot1q	Encapsulation dot1q/bd
<i>dot1q-id</i>	Encapsulation dot1q/bd value
<i>intf-id</i>	(Optional) Name of the interface for ngoam on which dot1q is configured

Command Mode

- /exec/configure/configngoamprofile

dot1q default dynamic

{ dot1q default dynamic } | { no dot1q default }

Syntax Description

no	Negate a command or set its defaults
dynamic	Dynamic Profile Map: Retrieve profile name from the external server
dot1q	Dot1Q Encapsulation
default	Default (wildcard). Match any dot1q when there is no specific dot1q mapping configured

Command Mode

- /exec/configure/profile-map /exec/configure/profile-map-global

dot1x default

dot1x default

Syntax Description

dot1x	dot1x configuration commands
-------	------------------------------

Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ethernet-all

dot1x default

dot1x default

Syntax Description

dot1x	dot1x configuration commands
-------	------------------------------

Command Mode

- /exec/configure

dot1x host-mode

dot1x host-mode <host_mode> | no dot1x host-mode

Syntax Description

dot1x	dot1x configuration commands
host-mode	role of 802.1x authenticating entity
<i>host_mode</i>	Host Mode

Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ethernet-all

dot1x mac-auth-bypass

dot1x mac-auth-bypass [eap] | no dot1x mac-auth-bypass

Syntax Description

no	Negate a command or set its defaults
dot1x	dot1x configuration commands
mac-auth-bypass	Configure Mac-Auth-Bypass
eap	(Optional) EAP Authentication

Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ethernet-all

dot1x max-reauth-req

dot1x max-reauth-req <count> | no dot1x max-reauth-req

Syntax Description

dot1x	dot1x configuration commands
max-reauth-req	Maximum Re-authentication Attempts Before Failing
<i>count</i>	number of retries

Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ethernet-all

dot1x max-req

dot1x max-req <count> | no dot1x max-req

Syntax Description

dot1x	dot1x configuration commands
max-req	Maximum Retries to Initiate Authentication
<i>count</i>	number of retries

Command Mode

- /exec/configure

dot1x max-req

dot1x max-req <count> | no dot1x max-req

Syntax Description

dot1x	dot1x configuration commands
max-req	Maximum Retries to Initiate Authentication
<i>count</i>	number of retries

Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ethernet-all

dot1x pae

[no] dot1x pae <pae-value>

Syntax Description

dot1x	dot1x configuration commands
pae	role of 802.1x authenticating entity
<i>pae-value</i>	role

Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ethernet-all

dot1x port-control

[no] dot1x port-control <port-control-value>

Syntax Description

dot1x	dot1x configuration commands
port-control	port control
<i>port-control-value</i>	set the port-control value

Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ethernet-all

dot1x radius-accounting

[no] dot1x radius-accounting

Syntax Description

dot1x	dot1x configuration commands
radius-accounting	accounting messages to RADIUS

Command Mode

- /exec/configure

dot1x re-authenticate interface

dot1x re-authenticate interface <if>

Syntax Description

dot1x	dot1x configuration commands
re-authenticate	Manually re-authenticate an Interface
<i>if</i>	target interface

Command Mode

- /exec

dot1x re-authentication

[no] dot1x re-authentication

Syntax Description

dot1x	dot1x configuration commands
re-authentication	Enable or Disable Reauthentication for this port

Command Mode

- /exec/configure

dot1x re-authentication

[no] dot1x re-authentication

Syntax Description

dot1x	dot1x configuration commands
re-authentication	Enable or Disable Reauthentication for this port

Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ethernet-all

dot1x show credential

dot1x show credential <name>

Syntax Description

dot1x	dot1x configuration commands
credential	supplicant credential profile
<i>name</i>	profile name

Command Mode

- /exec/configure/dot1x-cred

dot1x start supplicant interface

```
{ dot1x start supplicant interface <if> } | { dot1x start supplicant interface <if> credential <name> }
```

Syntax Description

dot1x	dot1x configuration commands
start	start 802.1x client
supplicant	802.1x supplicant
<i>if</i>	target interface
credential	credential profile name
<i>name</i>	name

Command Mode

- /exec

dot1x stop supplicant interface

dot1x stop supplicant interface <if>

Syntax Description

dot1x	dot1x configuration commands
stop	stop 802.1x client
supplicant	802.1x supplicant
<i>if</i>	target interface

Command Mode

- /exec

dot1x supplicant credential

[no] dot1x supplicant credential <name>

Syntax Description

dot1x	dot1x configuration commands
supplicant	802.1x supplicant
credential	supplicant credential profile

Command Mode

- /exec/configure

dot1x supplicant credential

[no] dot1x supplicant credential <name>

Syntax Description

dot1x	dot1x configuration commands
supplicant	802.1x supplicant
credential	credential profile name
<i>name</i>	name

Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ethernet-all

dot1x supplicant default

dot1x supplicant default

Syntax Description

dot1x	dot1x configuration commands
supplicant	802.1x supplicant

Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ethernet-all

dot1x supplicant max-start

[no] dot1x supplicant max-start <count>

Syntax Description

dot1x	dot1x configuration commands
supplicant	802.1x supplicant
max-start	Maximum Start Requests
<i>count</i>	number

Command Mode

- /exec/configure

dot1x supplicant max-start

[no] dot1x supplicant max-start <count>

Syntax Description

dot1x	dot1x configuration commands
supplicant	802.1x supplicant
max-start	Maximum Start Requests
<i>count</i>	number

Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ethernet-all

dot1x supplicant timeout auth-period

[no] dot1x supplicant timeout auth-period <value>

Syntax Description

dot1x	dot1x configuration commands
supplicant	802.1x supplicant
timeout	Various Timeouts
auth-period	waiting period for responses from authenticator
<i>value</i>	time interval in seconds

Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ethernet-all

dot1x supplicant timeout auth-period

[no] dot1x supplicant timeout auth-period <value>

Syntax Description

dot1x	dot1x configuration commands
supplicant	802.1x supplicant
timeout	Various Timeouts
auth-period	waiting period for responses from authenticator
<i>value</i>	time interval in seconds

Command Mode

- /exec/configure

dot1x supplicant timeout held-period

[no] dot1x supplicant timeout held-period <value>

Syntax Description

dot1x	dot1x configuration commands
supplicant	802.1x supplicant
timeout	Various Timeouts
held-period	waiting period for retrying, after failed authentication
<i>value</i>	time interval in seconds

Command Mode

- /exec/configure

dot1x supplicant timeout held-period

[no] dot1x supplicant timeout held-period <value>

Syntax Description

dot1x	dot1x configuration commands
supplicant	802.1x supplicant
timeout	Various Timeouts
held-period	waiting period for retrying, after failed authentication
<i>value</i>	time interval in seconds

Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ethernet-all

dot1x supplicant timeout start-period

[no] dot1x supplicant timeout start-period <value>

Syntax Description

dot1x	dot1x configuration commands
supplicant	802.1x supplicant
timeout	Various Timeouts
start-period	Interval Between Start Requests
<i>value</i>	time interval in seconds

Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ethernet-all

dot1x supplicant timeout start-period

[no] dot1x supplicant timeout start-period <value>

Syntax Description

dot1x	dot1x configuration commands
supplicant	802.1x supplicant
timeout	Various Timeouts
start-period	Interval Between Start Requests
<i>value</i>	time interval in seconds

Command Mode

- /exec/configure

dot1x system-auth-control

[no] dot1x system-auth-control

Syntax Description

dot1x	dot1x configuration commands
system-auth-control	Enable or Disable SysAuthControl

Command Mode

- /exec/configure

dot1x timeout inactivity-period

dot1x timeout inactivity-period <value> | no dot1x timeout inactivity-period

Syntax Description

dot1x	dot1x configuration commands
timeout	Various Timeouts
inactivity-period	Timeout For Session Inactivity
<i>value</i>	time interval in seconds

Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ethernet-all

dot1x timeout inactivity-period

dot1x timeout inactivity-period <value> | no dot1x timeout inactivity-period

Syntax Description

dot1x	dot1x configuration commands
timeout	Various Timeouts
inactivity-period	Timeout For Session Inactivity
<i>value</i>	time interval in seconds

Command Mode

- /exec/configure

dot1x timeout quiet-period

dot1x timeout quiet-period <value> | no dot1x timeout quiet-period

Syntax Description

dot1x	dot1x configuration commands
timeout	Various Timeouts
quiet-period	Timeout For Retrying Authentication After Failed Authentication
<i>value</i>	time interval in seconds

Command Mode

- /exec/configure

dot1x timeout quiet-period

dot1x timeout quiet-period <value> | no dot1x timeout quiet-period

Syntax Description

dot1x	dot1x configuration commands
timeout	Various Timeouts
quiet-period	Timeout For Retrying Authentication After Failed Authentication
<i>value</i>	time interval in seconds

Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ethernet-all

dot1x timeout ratelimit-period

dot1x timeout ratelimit-period <value> | no dot1x timeout ratelimit-period

Syntax Description

dot1x	dot1x configuration commands
timeout	Various Timeouts
ratelimit-period	Rate Limit period for EAPOL-Start
<i>value</i>	time interval in seconds

Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ethernet-all

dot1x timeout re-authperiod

dot1x timeout re-authperiod <value> | no dot1x timeout re-authperiod

Syntax Description

dot1x	dot1x configuration commands
timeout	Various Timeouts
re-authperiod	Timeout For Re-Authentication
<i>value</i>	time interval in seconds

Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ethernet-all

dot1x timeout re-authperiod

dot1x timeout re-authperiod <value> | no dot1x timeout re-authperiod

Syntax Description

dot1x	dot1x configuration commands
timeout	Various Timeouts
re-authperiod	Timeout For Re-Authentication
<i>value</i>	time interval in seconds

Command Mode

- /exec/configure

dot1x timeout server-timeout

dot1x timeout server-timeout <value> | no dot1x timeout server-timeout

Syntax Description

dot1x	dot1x configuration commands
timeout	Various Timeouts
server-timeout	Timeout for Radius Retries
<i>value</i>	time interval in seconds

Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ethernet-all

dot1x timeout supp-timeout

dot1x timeout supp-timeout <value> | no dot1x timeout supp-timeout

Syntax Description

dot1x	dot1x configuration commands
timeout	Various Timeouts
supp-timeout	Timeout for Supplicant retries
<i>value</i>	time interval in seconds

Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ethernet-all

dot1x timeout tx-period

dot1x timeout tx-period <value> | no dot1x timeout tx-period

Syntax Description

dot1x	dot1x configuration commands
timeout	Various Timeouts
tx-period	Timeout For Resending Requests To Supplicant
<i>value</i>	time interval in seconds

Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ethernet-all

dot1x timeout tx-period

dot1x timeout tx-period <value> | no dot1x timeout tx-period

Syntax Description

dot1x	dot1x configuration commands
timeout	Various Timeouts
tx-period	Timeout For Resending Requests To Supplicant
<i>value</i>	time interval in seconds

Command Mode

- /exec/configure

down-bit-ignore

{ down-bit-ignore } | { no down-bit-ignore }

Syntax Description

no	Negate a command or set its defaults
down-bit-ignore	Configure a PE router to ignore the DN bit for network summary, external and NSSA external LSA

Command Mode

- /exec/configure/router-ospf/vrf

downlink delay

downlink delay <ena-dis-flg> [timeout <time-out>] | no downlink delay

Syntax Description

no	Negate a command or set its defaults
downlink	Change downlink linkup time
delay	delay bringup of downlinks
<i>ena-dis-flg</i>	Enable/Disable downlink delay feature
timeout	(Optional) downlink ports enable delay in seconds
<i>time-out</i>	(Optional) Time out

Command Mode

- /exec/configure

dpp set-qos-group

[no] dpp set-qos-group <qos-group>

Syntax Description

no	(Optional) Negate a command or set its defaults
dpp	Dynamic Packet Prioritization
set-qos-group	QoS group to be mapped
<i>qos-group</i>	QoS Group Value

Command Mode

- /exec/configure/policy-map/type/uf/class

droplist

[no] droplist <droplistname>

Syntax Description

droplist	Specify INT droplist to use
<i>droplistname</i>	Name of droplist

Command Mode

- /exec/configure/config-int-monitor

dscp

[no] dscp <dscp>

Syntax Description

dscp	DSCP
<i>dscp</i>	DSCP to be configured

Command Mode

- /exec/configure/config-ssx-exporter

dscp

{ [no] dscp <dscp> | no dscp }

Syntax Description

dscp	Optional DSCP
<i>dscp</i>	Differentiated services codepoint value

Command Mode

- /exec/configure/config-int-exporter

dscp

{ [no] dscp <dscp> | no dscp }

Syntax Description

dscp	Provide the dscp value for this INT flow-profile
<i>dscp</i>	flow-profile dscp (allowed values: 1, 2, 4, 8, 16, 32, 63). Default is 1

Command Mode

- /exec/configure/config-int-flow-prof

dscp

{ [no] dscp <dscp> | no dscp }

Syntax Description

dscp	Optional DSCP
<i>dscp</i>	Differentiated services codepoint value

Command Mode

- /exec/configure/nfm-exporter

dst-grp

[no] dst-grp <d-grp-id>

Syntax Description

no	(Optional) Negate a command or set its defaults
dst-grp	Associated destination group
<i>d-grp-id</i>	Identifier

Command Mode

- /exec/configure/telemetry/subscription

dual-active exclude interface-vlan

dual-active exclude interface-vlan <allow-vlans> | no dual-active exclude interface-vlan

Syntax Description

no	Negate a command or set its defaults
dual-active	Configuration when peer link is down but peer is alive
interface-vlan	Interface vlan configuration
exclude	Interface vlans to exclude from suspension when dual-active
<i>allow-vlans</i>	Set allowed interface vlans

Command Mode

- /exec/configure/vpc-domain

dual-stage translate xml

```
dual-stage translate <dn> { xml | json } <in_file> <out_file> [ exec-python ] [ delete-files ]
```

Syntax Description

dual-stage	Related to 2 stage commit
translate	Convert from external restful format to internal JSON
xml	Input file has XML
json	Input file has JSON
<i>dn</i>	DN param
<i>in_file</i>	Input file name
<i>out_file</i>	Output file name
exec-python	(Optional) Execute python script after translation
delete-files	(Optional) Delete input and output files after translation

Command Mode

- /exec

duplex

duplex <duplex_mode> | no duplex [<duplex_mode>]

Syntax Description

no	Negate a command or set its defaults
duplex	Enter the port duplex mode
<i>duplex_mode</i>	Interface duplex mode

Command Mode

- /exec/configure/if-mgmt-ether

duplex

duplex <duplex_mode> | no duplex [<duplex_mode>]

Syntax Description

no	Negate a command or set its defaults
duplex	Enter the port duplex mode
<i>duplex_mode</i>	Interface duplex mode

Command Mode

- /exec/configure/if-ethernet-all /exec/configure/if-eth-non-member /exec/configure/if-port-channel

duplicate-message throttle

[no] duplicate-message throttle

Syntax Description

no	(Optional) Negate a command or set its defaults
duplicate-message	Configure throttling of duplicate callhome alert messages
throttle	Enable throttling of duplicate callhome alert messages

Command Mode

- /exec/configure/callhome

dynamic-capability

[no | default] dynamic-capability

Syntax Description

no	(Optional) Negate a command or set its defaults
default	(Optional) Inherit values from a peer template
dynamic-capability	Dynamic capability

Command Mode

- /exec/configure/router-bgp/router-bgp-neighbor-sess

dynamic-med-interval

[no] dynamic-med-interval <sec>

Syntax Description

no	(Optional) Negate a command or set its defaults
dynamic-med-interval	Sets the interval for dampening of med changes
<i>sec</i>	Time interval in seconds

Command Mode

- /exec/configure/router-bgp