



F Commands

- [fabric-soo](#), on page 6
- [fabric database auto-pull dci node-id](#), on page 7
- [fabric database auto-pull dci vrf node-id](#), on page 8
- [fabric database auto-pull vni interface](#), on page 9
- [fabric database inherit-profile-map](#), on page 10
- [fabric database mobility-domain](#), on page 11
- [fabric database override-profile](#), on page 12
- [fabric database override-vrf-profile](#), on page 13
- [fabric database profile-map](#), on page 14
- [fabric database profile-map global](#), on page 15
- [fabric database refresh dot1q](#), on page 16
- [fabric database refresh vni](#), on page 17
- [fabric database static-host](#), on page 18
- [fabric database timer](#), on page 19
- [fabric database type bl-dci](#), on page 20
- [fabric database type cabling](#), on page 21
- [fabric database type host](#), on page 22
- [fabric database type network](#), on page 23
- [fabric database type partition](#), on page 24
- [fabric database type profile](#), on page 25
- [fabric forwarding admin-distance](#), on page 26
- [fabric forwarding anycast-gateway-mac](#), on page 27
- [fabric forwarding dup-host-ip-addr-detection](#), on page 28
- [fabric forwarding dup-host-recovery-timer recover-count](#), on page 29
- [fabric forwarding dup-host-unfreeze-timer unfreeze-count](#), on page 30
- [fabric forwarding limit-vlan-mac](#), on page 31
- [fabric forwarding mode anycast-gateway](#), on page 32
- [fabric forwarding selective-host-probe](#), on page 33
- [fabric forwarding system-check ready](#), on page 34
- [fabric multicast event-history bgp](#), on page 35
- [fabric multicast event-history ha](#), on page 36
- [fabric multicast event-history hmm](#), on page 37
- [fabric multicast event-history isis](#), on page 38

- fabric multicast event-history m2rib, on page 39
- fabric multicast event-history m6rib, on page 40
- fabric multicast event-history mrib, on page 41
- fabric multicast event-history pim, on page 42
- fabric multicast event-history pim6, on page 43
- failaction, on page 44
- failaction, on page 45
- fan speed default, on page 46
- fast-convergence, on page 47
- fast-convergence, on page 48
- fast-external-fallover, on page 49
- fast-flood enable, on page 50
- fast-flood enable, on page 51
- fast-flood enable, on page 52
- fast-flood interval, on page 53
- fast-flood interval, on page 54
- fast-flood interval, on page 55
- fast-reload, on page 56
- fast-reload network-os, on page 57
- fast-reroute, on page 58
- fast-reroute backup-prot-preempt optimize-bw, on page 59
- fcdroplacency network, on page 60
- fcoe, on page 61
- fcoe, on page 62
- fcoe clear-compatibility, on page 63
- fcoe enable-fex, on page 64
- fcoe fcf-priority, on page 65
- fcoe fcmap, on page 66
- fcoe fka-adv-period, on page 67
- fcoe veloopback, on page 68
- fcoe vsan, on page 69
- fctimer D_S_TOV, on page 70
- fctimer E_D_TOV, on page 71
- fctimer R_A_TOV, on page 72
- fctimer abort, on page 73
- fctimer commit, on page 74
- fctimer distribute, on page 75
- feature-set, on page 76
- feature-set, on page 77
- feature, on page 78
- feature analytics, on page 79
- feature bash-shell, on page 80
- feature bfd, on page 81
- feature bgp, on page 82
- feature catena, on page 83
- feature container-tracker, on page 84

- feature dhcp, on page 85
- feature dot1x, on page 86
- feature eigrp, on page 87
- feature evb, on page 88
- feature evmed, on page 89
- feature fabric forwarding, on page 90
- feature flexlink, on page 91
- feature grpc, on page 92
- feature hardware-telemetry, on page 93
- feature hsrp, on page 94
- feature icam, on page 95
- feature imp, on page 96
- feature interface-vlan, on page 97
- feature isis, on page 98
- feature itd, on page 99
- feature lacp, on page 100
- feature ldap, on page 101
- feature lldp, on page 102
- feature macsec, on page 103
- feature mpls evpn, on page 104
- feature mpls l3vpn, on page 105
- feature mpls ldp, on page 106
- feature mpls oam, on page 107
- feature mpls segment-routing, on page 108
- feature mpls segment-routing traffic-engineering, on page 109
- feature mpls static, on page 110
- feature mpls traffic-engineering, on page 111
- feature msdp, on page 112
- feature mvpn, on page 113
- feature nat, on page 114
- feature nbm, on page 115
- feature netconf, on page 116
- feature netflow, on page 117
- feature ngmvpn, on page 118
- feature ngoam, on page 119
- feature ngoam, on page 120
- feature npiv, on page 121
- feature ntp, on page 122
- feature nv overlay, on page 123
- feature nxapi, on page 124
- feature nxdb, on page 125
- feature nxsdk, on page 126
- feature openflow, on page 127
- feature openflow, on page 128
- feature ospf, on page 129
- feature ospfv3, on page 130

- feature password encryption aes, on page 131
- feature pbr, on page 132
- feature pim, on page 133
- feature pim6, on page 134
- feature plb, on page 135
- feature poap, on page 136
- feature poe, on page 137
- feature pong, on page 138
- feature port-security, on page 139
- feature private-vlan, on page 140
- feature privilege, on page 141
- feature ptp, on page 142
- feature restconf, on page 143
- feature rip, on page 144
- feature scheduler, on page 145
- feature scp-server, on page 146
- feature sflow, on page 147
- feature sftp-server, on page 148
- feature sla responder, on page 149
- feature sla sender, on page 150
- feature sla twamp-server, on page 151
- feature smart-channel, on page 152
- feature ssh, on page 153
- feature tacacs, on page 154
- feature telemetry, on page 155
- feature telnet, on page 156
- feature tunnel, on page 157
- feature udd, on page 158
- feature vmtracker, on page 159
- feature vn-segment-vlan-based, on page 160
- feature vpc, on page 161
- feature vrrp, on page 162
- feature vrrpv3, on page 163
- feature vtp, on page 164
- fec, on page 165
- fec, on page 166
- fhrp delay minimum, on page 167
- fhrp delay reload, on page 168
- fileys delete, on page 169
- filter, on page 170
- filter access-group, on page 171
- filter ip, on page 172
- filter ipv6 access-group, on page 173
- filter mac, on page 174
- filter out, on page 175
- filter tx control-packets, on page 176

- filter vlan, on page 177
- filter vlan include-untagged, on page 178
- find, on page 179
- fips debug errors debug, on page 180
- fips mode enable, on page 181
- flow-count, on page 182
- flow-count, on page 183
- flow exporter, on page 184
- flow forward, on page 185
- flow monitor, on page 186
- flow record, on page 187
- flow timeout, on page 188
- flowcontrol hardware, on page 189
- flowcontrol receive, on page 190
- flush-routes, on page 191
- flush-routes, on page 192
- flush-routes, on page 193
- flush-routes, on page 194
- flush-routes, on page 195
- flush-routes, on page 196
- follow, on page 197
- forceshut reset-reason, on page 198
- format, on page 199
- format bootflash, on page 200
- format bootflash check-filesystem, on page 201
- format usb1, on page 202
- forward, on page 203
- forwarding-adjacency, on page 204
- fragments, on page 205
- frequency, on page 206
- from to, on page 207
- from to, on page 208
- fte event, on page 209
- fte exporter, on page 210
- fte monitor, on page 211
- fte record, on page 212
- fte system monitor, on page 213
- ftrace, on page 214

fabric-soo

```
[no] fabric-soo { <ext-comm-soo-aa2nn4> | <ext-comm-soo-aa4nn2> }
```

Syntax Description

no	(Optional) Negate a command or set its defaults
fabric-soo	Fabric Site of Origin
<i>ext-comm-soo-aa4nn2</i>	VPN extcommunity in aa4:fabric_id format
<i>ext-comm-soo-aa2nn4</i>	VPN extcommunity in aa:fabric_id format

Command Mode

- /exec/configure/router-bgp

fabric database auto-pull dci node-id

fabric database auto-pull dci node-id <mgmt-ip-address>

Syntax Description

fabric	Fabric
database	Fabric Database
auto-pull	Pull configuration
dci	DCI profile
node-id	management ip address of this node
<i>mgmt-ip-address</i>	IP address in CIDR format

Command Mode

- /exec

fabric database auto-pull dci vrf node-id

```
fabric database auto-pull dci vrf <vrf-name> node-id <mgmt-ip-address> [ peer-id <peer-ip-address> ]
```

Syntax Description

<code>fabric</code>	Fabric
<code>database</code>	Fabric Database
<code>auto-pull</code>	Pull configuration
<code>dci</code>	DCI profile
<code>vrf</code>	Display per-VRF information
<i>vrf-name</i>	VRF name
<code>node-id</code>	management ip address of this node
<i>mgmt-ip-address</i>	IP address in CIDR format
<code>peer-id</code>	(Optional) management ip address of peer
<i>peer-ip-address</i>	(Optional) IP address in CIDR format

Command Mode

- /exec

fabric database auto-pull vni interface

```
fabric database auto-pull { vni <vni-id> | dot1q <vlan-id> } interface <interface-id> [ { overwrite-vlan |
overwrite-bd } <ow-vlan-id> ]
```

Syntax Description

fabric	Fabric
database	Fabric Database
auto-pull	Pull configuration
vni	Pull ethernet-tag vni configuration
<i>vni-id</i>	
dot1q	Pull ethernet-tag dot1q configuration
<i>vlan-id</i>	
interface	Applied interface
<i>interface-id</i>	Name of interface
overwrite-vlan	(Optional) Overwrite the system generate vlan
overwrite-bd	(Optional) Overwrite the system generate bd
<i>ow-vlan-id</i>	(Optional)

Command Mode

- /exec

fabric database inherit-profile-map

{ fabric database inherit-profile-map <id> } | { no fabric database inherit-profile-map }

Syntax Description

no	Negate a command or set its defaults
fabric	Fabric
database	Configure Fabric Database
inherit-profile-map	Inherit a profile map. All non-global mappings will be inherited.
<i>id</i>	Profile Map ID

Command Mode

- /exec/configure/if-eth-any /exec/configure/if-port-channel

fabric database mobility-domain

[no] fabric database mobility-domain <name>

Syntax Description

no	(Optional) Negate a command or set its defaults
fabric	Fabric
database	Configure Fabric Database
mobility-domain	Tag to identify mobility domain name
<i>name</i>	Mobility Domain Name

Command Mode

- /exec/configure

fabric database override-profile

[no] fabric database override-profile <profilename>

Syntax Description

no	(Optional) Negate a command or set its defaults
fabric	Fabric
database	Configure Fabric Database
override-profile	Override the network profile name
<i>profilename</i>	Enter the profile name to override network profile

Command Mode

- /exec/configure

fabric database override-vrf-profile

[no] fabric database override-vrf-profile <profilename>

Syntax Description

no	(Optional) Negate a command or set its defaults
fabric	Fabric
database	Configure Fabric Database
override-vrf-profile	Override the VRF (partition) profile name
<i>profilename</i>	Enter the profile name to override VRF profile

Command Mode

- /exec/configure

fabric database profile-map

[no] fabric database profile-map <id>

Syntax Description

no	(Optional) Negate a command or set its defaults
fabric	Fabric
database	Configure Fabric Database
profile-map	Configure a profile map
<i>id</i>	Profile Map ID

Command Mode

- /exec/configure

fabric database profile-map global

[no] fabric database profile-map global

Syntax Description

no	(Optional) Negate a command or set its defaults
fabric	Fabric
database	Configure Fabric Database
profile-map	Configure a profile map
global	Global profile (apply to all interfaces)

Command Mode

- /exec/configure

fabric database refresh dot1q

```
fabric database refresh dot1q <vlan-id> [ { mobility-domain <name> | interface <interface-id> } ]
```

Syntax Description

fabric	Fabric
database	Fabric Database
refresh	Refresh profile configuration
dot1q	Dot1Q Encapsulation
<i>vlan-id</i>	
interface	(Optional) Applied interface
<i>interface-id</i>	(Optional) Name of interface
mobility-domain	(Optional) Tag to identify mobility domain name
<i>name</i>	(Optional) Mobility Domain Name

Command Mode

- /exec

fabric database refresh vni

```
fabric database refresh { vni <vni-id> | include-vrf { <vrf-name> } }
```

Syntax Description

fabric	Fabric
database	Fabric Database
refresh	Refresh profile configuration
vni	Virtual Network Identifier
<i>vni-id</i>	
include-vrf	Include VRF name
<i>vrf-name</i>	VRF name

Command Mode

- /exec

fabric database static-host

[no] fabric database static-host

Syntax Description

no	(Optional) Negate a command or set its defaults
fabric	Fabric
database	Fabric Database
static-host	Configure a static host

Command Mode

- /exec/configure

fabric database timer

[no] fabric database timer { aging | cleanup | recovery | re-add } <timeout>

Syntax Description

no	(Optional) Negate a command or set its defaults
fabric	
database	
timer	HMM timers
cleanup	Delay in minutes before profile is deleted
recovery	Delay in minutes before recovered profile is deleted
re-add	Delay in minutes before new client requests (after un-apply) are accepted
aging	Delay in minutes before profile is checked for aging
<i>timeout</i>	Set timeout in minutes

Command Mode

- /exec/configure

fabric database type bl-dci

[no] fabric database type bl-dci

Syntax Description

no	(Optional) Negate a command or set its defaults
fabric	Fabric
database	Configure Fabric Database
type	Configure database type
bl-dci	Border Leaf - DCI

Command Mode

- /exec/configure

fabric database type cabling

[no] fabric database type cabling

Syntax Description

no	(Optional) Negate a command or set its defaults
fabric	Fabric
database	Configure Fabric Database
type	Configure database type
cabling	Cable Management Database

Command Mode

- /exec/configure

fabric database type host

[no] fabric database type host

Syntax Description

no	(Optional) Negate a command or set its defaults
fabric	Fabric
database	Configure Fabric Database
type	Configure database type
host	Host Database

Command Mode

- /exec/configure

fabric database type network

[no] fabric database type network

Syntax Description

no	(Optional) Negate a command or set its defaults
fabric	Fabric
database	Configure Fabric Database
type	Configure database type
network	Network Database

Command Mode

- /exec/configure

fabric database type partition

[no] fabric database type partition

Syntax Description

no	(Optional) Negate a command or set its defaults
fabric	Fabric
database	Configure Fabric Database
type	Configure database type
partition	Partition Database

Command Mode

- /exec/configure

fabric database type profile

[no] fabric database type profile

Syntax Description

no	(Optional) Negate a command or set its defaults
fabric	Fabric
database	Configure Fabric Database
type	Configure database type
profile	Port or Switch Profile Database

Command Mode

- /exec/configure

fabric forwarding admin-distance

{ fabric forwarding admin-distance <distance> } | { no fabric forwarding admin-distance }

Syntax Description

no	Negate a command or set its defaults
fabric	Fabric
forwarding	Fabric Forwarding Protocol: Host Mobility Manager (HMM)
admin-distance	Administrative distance for HMM host routes
<i>distance</i>	Set the administrative distance for HMM (default is 190)

Command Mode

- /exec/configure

fabric forwarding anycast-gateway-mac

```
{ fabric forwarding anycast-gateway-mac <mac-addr> } | { no fabric forwarding anycast-gateway-mac }
```

Syntax Description

no	Negate a command or set its defaults
fabric	Fabric
forwarding	Fabric Forwarding Protocol: Host Mobility Manager (HMM)
anycast-gateway-mac	Anycast Gateway MAC of the Switch
<i>mac-addr</i>	MAC address

Command Mode

- /exec/configure

fabric forwarding dup-host-ip-addr-detection

```
{ fabric forwarding dup-host-ip-addr-detection <mmoves> <nsecs> | no fabric forwarding
dup-host-ip-addr-detection }
```

Syntax Description

no	Negate a command or set its defaults
fabric	Fabric
forwarding	Fabric Forwarding Protocol: Host Mobility Manager (HMM)
dup-host-ip-addr-detection	To detect duplicate host address in n secs
<i>mmoves</i>	Set Number of host moves to be allowed in n secs. Default is 5
<i>nsecs</i>	Set the duplicate detection timeout in secs for host moves. Default is 180

Command Mode

- /exec/configure

fabric forwarding dup-host-recovery-timer recover-count

{ fabric forwarding dup-host-recovery-timer <timeout> recover-count <count> | no fabric forwarding dup-host-recovery-timer }

Syntax Description

no	Negate a command or set its defaults
fabric	Fabric
forwarding	Fabric Forwarding Protocol: Host Mobility Manager (HMM)
dup-host-recovery-timer	Refresh the frozen duplicate host
<i>timeout</i>	Set the timeout in secs to refresh the duplicate host. Default is 30 secs
recover-count	Maximum number of refreshes
<i>count</i>	Set the maximum number of host refresh. Default is 5.

Command Mode

- /exec/configure

fabric forwarding dup-host-unfreeze-timer unfreeze-count

```
{ fabric forwarding dup-host-unfreeze-timer <timeout> unfreeze-count <count> | no fabric forwarding
dup-host-unfreeze-timer }
```

Syntax Description

no	Negate a command or set its defaults
fabric	Fabric
forwarding	Fabric Forwarding Protocol: Host Mobility Manager (HMM)
dup-host-unfreeze-timer	Refresh the frozen duplicate host
<i>timeout</i>	Set the timeout in secs to refresh the duplicate host. Default is 180 secs
unfreeze-count	Maximum number of refreshes
<i>count</i>	Set the maximum number of host refresh

Command Mode

- /exec/configure

fabric forwarding limit-vlan-mac

[no] fabric forwarding limit-vlan-mac <max-limit>

Syntax Description

no	(Optional) Negate a command or set its defaults
fabric	Fabric
forwarding	Fabric Forwarding Protocol: Host Mobility Manager (HMM)
limit-vlan-mac	Maximum number of end-hosts allowed to have the same (vlan, MAC) mapping in a given vrf (Default is 2048)
<i>max-limit</i>	Set max-limit

Command Mode

- /exec/configure

fabric forwarding mode anycast-gateway

{ fabric forwarding mode anycast-gateway } | { no fabric forwarding mode }

Syntax Description

no	Negate a command or set its defaults
fabric	Fabric
forwarding	Fabric Forwarding Protocol: Host Mobility Manager (HMM)
mode	Forwarding Modes
anycast-gateway	Anycast Gateway Forwarding Mode

Command Mode

- /exec/configure/if-vlan /exec/configure/if-vlan-range

fabric forwarding selective-host-probe

[no] fabric forwarding selective-host-probe

Syntax Description

no	(Optional) Negate a command or set its defaults
fabric	Fabric
forwarding	Fabric Forwarding Protocol: Host Mobility Manager (HMM)
selective-host-probe	Trigger unconditional host probe

Command Mode

- /exec/configure

fabric forwarding system-check ready

fabric forwarding system-check { ready | not-ready }

Syntax Description

fabric	Fabric
forwarding	Fabric Forwarding Protocol: Host Mobility Manager (HMM)
system-check	System check
ready	Set to ready
not-ready	Set to not ready

Command Mode

- /exec

fabric multicast event-history bgp

```
[no] fabric multicast event-history bgp { size { <size_in_text> | <size_in_kbytes> } }
```

Syntax Description

no	(Optional) Negate a command or set its defaults
fabric	Fabric
multicast	Configure multicast
event-history	Configure event-history buffer
bgp	BGP events for fabric multicast
size	Configure size
<i>size_in_text</i>	Buffer size
<i>size_in_kbytes</i>	Size in kbytes

Command Mode

- /exec/configure

fabric multicast event-history ha

```
[no] fabric multicast event-history ha { size { <size_in_text> | <size_in_kbytes> } }
```

Syntax Description

no	(Optional) Negate a command or set its defaults
fabric	Fabric
multicast	Configure multicast
event-history	Configure event-history buffer
ha	ha events for fabric multicast
size	Configure size
<i>size_in_text</i>	Buffer size
<i>size_in_kbytes</i>	Size in kbytes

Command Mode

- /exec/configure

fabric multicast event-history hmm

```
[no] fabric multicast event-history hmm { size { <size_in_text> | <size_in_kbytes> } }
```

Syntax Description

no	(Optional) Negate a command or set its defaults
fabric	Fabric
multicast	Configure multicast
event-history	Configure event-history buffer
hmm	HMM events for fabric multicast
size	Configure size
<i>size_in_text</i>	Buffer size
<i>size_in_kbytes</i>	Size in kbytes

Command Mode

- /exec/configure

fabric multicast event-history isis

[no] fabric multicast event-history isis { size { <size_in_text> | <size_in_kbytes> } }

Syntax Description

no	(Optional) Negate a command or set its defaults
fabric	Fabric
multicast	Configure multicast
event-history	Configure event-history buffer
isis	ISIS events for fabric multicast
size	Configure size
<i>size_in_text</i>	Buffer size
<i>size_in_kbytes</i>	Size in kbytes

Command Mode

- /exec/configure

fabric multicast event-history m2rib

```
[no] fabric multicast event-history m2rib { size { <size_in_text> | <size_in_kbytes> } }
```

Syntax Description

no	(Optional) Negate a command or set its defaults
fabric	Fabric
multicast	Configure multicast
event-history	Configure event-history buffer
m2rib	M2RIB events for fabric multicast
size	Configure size
<i>size_in_text</i>	Buffer size
<i>size_in_kbytes</i>	Size in kbytes

Command Mode

- /exec/configure

fabric multicast event-history m6rib

[no] fabric multicast event-history m6rib { size { <size_in_text> | <size_in_kbytes> } }

Syntax Description

no	(Optional) Negate a command or set its defaults
fabric	Fabric
multicast	Configure multicast
event-history	Configure event-history buffer
m6rib	M6RIB events for fabric multicast
size	Configure size
<i>size_in_text</i>	Buffer size
<i>size_in_kbytes</i>	Size in kbytes

Command Mode

- /exec/configure

fabric multicast event-history mrib

```
[no] fabric multicast event-history mrib { size { <size_in_text> | <size_in_kbytes> } }
```

Syntax Description

no	(Optional) Negate a command or set its defaults
fabric	Fabric
multicast	Configure multicast
event-history	Configure event-history buffer
mrib	MRIB events for fabric multicast
size	Configure size
<i>size_in_text</i>	Buffer size
<i>size_in_kbytes</i>	Size in kbytes

Command Mode

- /exec/configure

fabric multicast event-history pim

```
[no] fabric multicast event-history pim { size { <size_in_text> | <size_in_kbytes> } }
```

Syntax Description

no	(Optional) Negate a command or set its defaults
fabric	Fabric
multicast	Configure multicast
event-history	Configure event-history buffer
pim	PIM events for fabric multicast
size	Configure size
<i>size_in_text</i>	Buffer size
<i>size_in_kbytes</i>	Size in kbytes

Command Mode

- /exec/configure

fabric multicast event-history pim6

```
[no] fabric multicast event-history pim6 { size { <size_in_text> | <size_in_kbytes> } }
```

Syntax Description

no	(Optional) Negate a command or set its defaults
fabric	Fabric
multicast	Configure multicast
event-history	Configure event-history buffer
pim6	PIM6 events for fabric multicast
size	Configure size
<i>size_in_text</i>	Buffer size
<i>size_in_kbytes</i>	Size in kbytes

Command Mode

- /exec/configure

failaction

[no] failaction { node { reassign | drop } | cluster drop } +

Syntax Description

no	(Optional) Negate a command or set its defaults
failaction	Configure failaction for PLB service
node	PLB failaction node
reassign	PLB failaction reassign
drop	PLB failaction drop
cluster	PLB failaction cluster

Command Mode

- /exec/configure/plb

failaction

```
[no] failaction { [ node { reassign | drop | least-bucket | per-bucket } ] | [ bucket { distribute } ] | [ cluster drop ] }
```

Syntax Description

no	(Optional) Negate a command or set its defaults
failaction	ITD failaction
node	(Optional) ITD failaction node
reassign	(Optional) ITD failaction reassign
drop	(Optional) ITD failaction drop
least-bucket	(Optional) ITD failaction least-bucket node
per-bucket	(Optional) ITD failaction per-bucket node
bucket	(Optional) ITD failaction bucket reassign
distribute	(Optional) ITD failaction distribute reassign
cluster	(Optional) ITD failaction cluster

Command Mode

- /exec/configure/itd

fan speed default

```
fan speed { default | set <speed> }
```

Syntax Description

fan	configure fan param.
speed	configure fan speed.
default	fan reset to old speed.
set	fan speed set to
<i>speed</i>	fan speed

Command Mode

- /exec/configure

fast-convergence

fast-convergence | no fast-convergence

Syntax Description

no	Negate a command or set its defaults
fast-convergence	Enable vPC fast-convergence

Command Mode

- /exec/configure/vpc-domain

fast-convergence

[no] fast-convergence

Syntax Description

no	(Optional) Negate a command or set its defaults
fast-convergence	Configure vPC fast convergence

Command Mode

- /exec/configure/vpc-domain

fast-external-fallover

[no] fast-external-fallover

Syntax Description

no	(Optional) Negate a command or set its defaults
fast-external-fallover	Immediately reset the session if the link to a directly connected BGP peer goes down

Command Mode

- /exec/configure/router-bgp

fast-flood enable

[no] fast-flood enable

Syntax Description

no	(Optional) Negate a command or set its defaults
fast-flood	Fast flood the LSP's
enable	Turn on fast-flooding

Command Mode

- /exec/configure/router-isis/router-isis-vrf-common

fast-flood enable

[no] fast-flood enable

Syntax Description

no	(Optional) Negate a command or set its defaults
fast-flood	Fast flood the LSP's
enable	Turn on fast-flooding

Command Mode

- /exec/configure/otv-isis/otv-isis-vrf-common

fast-flood enable

[no] fast-flood enable

Syntax Description

no	(Optional) Negate a command or set its defaults
fast-flood	Fast flood the LSP's
enable	Turn on fast-flooding

Command Mode

- /exec/configure/l2mp-isis/l2mp-isis-vrf-common

fast-flood interval

[no] fast-flood interval <interval>

Syntax Description

no	(Optional) Negate a command or set its defaults
fast-flood	Fast flood the LSP's
interval	Duration/interval of the fast-flood timer.
<i>interval</i>	Specify the value (ms)

Command Mode

- /exec/configure/router-isis/router-isis-vrf-common

fast-flood interval

[no] fast-flood interval <interval>

Syntax Description

no	(Optional) Negate a command or set its defaults
fast-flood	Fast flood the LSP's
interval	Duration/interval of the fast-flood timer.
<i>interval</i>	Specify the value (ms)

Command Mode

- /exec/configure/otv-isis/otv-isis-vrf-common

fast-flood interval

[no] fast-flood interval <interval>

Syntax Description

no	(Optional) Negate a command or set its defaults
fast-flood	Fast flood the LSP's
interval	Duration/interval of the fast-flood timer.
<i>interval</i>	Specify the value (ms)

Command Mode

- /exec/configure/l2mp-isis/l2mp-isis-vrf-common

fast-reload

```
fast-reload { [ nxos <uri> | trigger-gr | save-config | [ non-interruptive | nosrg ] ] + | force-all [ nxos <uri> ] +
} [ override ]
```

Syntax Description

fast-reload	fast-reload software
nxos	(Optional) boot-variable name
<i>uri</i>	(Optional) Enter image uri
non-interruptive	(Optional) Non-Interruptive image upgrade
nosrg	(Optional) nosrg
override	(Optional) Do fast-reload without impact check
trigger-gr	(Optional) Enable BGP GR for compatible peers
save-config	(Optional) Save running-config to startup-config before fast-reload
force-all	Force upgrade the system

Command Mode

- /exec

fast-reload network-os

fast-reload network-os <uri>

Syntax Description

fast-reload	fast-reload software
network-os	non-cisco OS
<i>uri</i>	Enter image uri

Command Mode

- /exec

fast-reroute

[no] fast-reroute | fast-reroute [node-protect | bw-protect] +

Syntax Description

no	Negate a command or set its defaults
fast-reroute	Specify mpls tunnel can be fast-rerouted
node-protect	(Optional) node protection desired
bw-protect	(Optional) bandwidth protection desired

Command Mode

- /exec/configure/if-te /exec/configure/tunnel-te/cbts-member

fast-reroute backup-prot-preempt optimize-bw

[no] fast-reroute backup-prot-preempt optimize-bw | no fast-reroute timers promotion | fast-reroute timers promotion <seconds>

Syntax Description

no	(Optional) Negate a command or set its defaults
fast-reroute	fast-reroute parameters
backup-prot-preempt	Preemption algorithm for backup tunnels
optimize-bw	Reduce bandwidth wastage (default: minimize LSPs preempted)
timers	configure fast-reroute timer
promotion	Configure how often we scan for LSP backup promotion
<i>seconds</i>	seconds between promotions (0 disables promotion.)

Command Mode

- /exec/configure/te

fcdroplateny network

[no] fcdroplateny { network <i0> [vsan <i1>] | switch <i2> }

Syntax Description

no	(Optional) Negate a command or set its defaults
fcdroplateny	configure switch or network latency
network	network latency in milliseconds
<i>i0</i>	network latency in milliseconds
vsan	(Optional) VSAN id range
<i>i1</i>	(Optional)
switch	switch latency in milliseconds
<i>i2</i>	switch latency in milliseconds

Command Mode

- /exec/configure

fcoe

[no] fcoe

Syntax Description

no	(Optional) Negate a command or set its default
fcoe	FCOE Congiguration

Command Mode

- /exec/configure/vlan

fcoe

[no] fcoe

Syntax Description

no	(Optional) Negate a command or set its defaults
fcoe	create fcoe associate between fex and switch

Command Mode

- /exec/configure/fex

fcoe clear-compatibility

fcoe clear-compatibility

Syntax Description

fcoe	FCOE command
clear-compatibility	Clear the Vfc over AA and bind to member port capability

Command Mode

- /exec/configure

fcoe enable-fex

[no] fcoe enable-fex

Syntax Description

no	(Optional) Negate a command or set its defaults
fcoe	FCOE command
enable-fex	Enables FCoE over FEX HIF interfaces

Command Mode

- /exec/configure

fcoe fcf-priority

fcoe fcf-priority <i0> | no fcoe fcf-priority

Syntax Description

no	Negate a command or set its defaults
fcoe	FCOE command
fcf-priority	FCF priority specification
<i>i0</i>	Enter FCF priority

Command Mode

- /exec/configure

fcoe fcmmap

fcoe fcmmap <i0> | no fcoe fcmmap

Syntax Description

no	Negate a command or set its defaults
fcoe	FCOE command
fcmmap	FC MAP specification
<i>i0</i>	Enter FCMAP

Command Mode

- /exec/configure

fcoe fka-adv-period

fcoe fka-adv-period <i0> | no fcoe fka-adv-period

Syntax Description

no	Negate a command or set its defaults
fcoe	FCOE command
fka-adv-period	FKA Advertisement Period
<i>i0</i>	FKA Advertisement Period (in sec)

Command Mode

- /exec/configure

fcoe vloopback

fcoe vloopback | no fcoe vloopback

Syntax Description

no	Negate a command or set its defaults
fcoe	FCOE command
vloopback	VFID check for VE ports

Command Mode

- /exec/configure

fcoe vsan

fcoe vsan <tran-id> | no fcoe vsan

Syntax Description

no	Negate a command or set its default
fcoe	FCOE Congiguration
vsan	Translated VSAN Status
<i>tran-id</i>	Enter VSAN-ID being associated with VLAN-ID

Command Mode

- /exec/configure/vlan

fctimer D_S_TOV

[no] fctimer D_S_TOV <i0> [vsan <i1>]

Syntax Description

no	(Optional) Negate a command or set its defaults
fctimer	configure fibre channel timers
D_S_TOV	D_S_TOV in milliseconds(5000-10000)
<i>i0</i>	D_S_TOV in milliseconds(5000-10000)
vsan	(Optional) Specify VSAN id
<i>i1</i>	(Optional) VSAN id

Command Mode

- /exec/configure

fctimer E_D_TOV

[no] fctimer E_D_TOV <i0> [vsan <i1>]

Syntax Description

no	(Optional) Negate a command or set its defaults
fctimer	configure fibre channel timers
E_D_TOV	E_D_TOV in milliseconds(1000-4000)
<i>i0</i>	E_D_TOV in milliseconds(1000-4000)
vsan	(Optional) Specify VSAN id
<i>i1</i>	(Optional) VSAN id

Command Mode

- /exec/configure

fctimer R_A_TOV

[no] fctimer R_A_TOV <i0> [vsan <i1>]

Syntax Description

no	(Optional) Negate a command or set its defaults
fctimer	configure fibre channel timers
R_A_TOV	R_A_TOV in milliseconds(5000-10000)
<i>i0</i>	R_A_TOV in milliseconds(5000-10000)
vsan	(Optional) Specify VSAN id
<i>i1</i>	(Optional) VSAN id

Command Mode

- /exec/configure

fctimer abort

[no] fctimer abort

Syntax Description

no	(Optional) Negate a command or set its defaults
fctimer	configure fibre channel timers
abort	abort the fctimer configuration commands

Command Mode

- /exec/configure

fctimer commit

[no] fctimer commit

Syntax Description

no	(Optional) Negate a command or set its defaults
fctimer	configure fibre channel timers
commit	commit the fctimer configuration commands

Command Mode

- /exec/configure

fctimer distribute

[no] fctimer distribute

Syntax Description

no	(Optional) Negate a command or set its defaults
fctimer	configure fibre channel timers
distribute	Enable distribution of fctimer configuration using CFS

Command Mode

- /exec/configure

feature-set

[no] feature-set <fs>

Syntax Description

no	Negate a command or set its defaults
feature-set	Enable feature-set
fs	allow feature-set

Command Mode

- /exec/configure

feature-set

feature-set <fs>

Syntax Description

feature-set	Enable feature-set
<i>fs</i>	allow feature-set

Command Mode

- /exec/configure

feature

[no] feature <arg1>

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Feature name
<i>arg1</i>	Enter feature name

Command Mode

- /exec/configure/rolefeaturegrp

feature analytics

[no] feature analytics

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
analytics	Enable/Disable Analytics!!!

Command Mode

- /exec/configure

feature bash-shell

[no] feature bash-shell

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
bash-shell	Enable/Disable bash-shell

Command Mode

- /exec/configure

feature bfd

[no] feature bfd

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
bfd	bfd

Command Mode

- /exec/configure

feature bgp

[no] feature bgp

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
bgp	Enable/Disable Border Gateway Protocol (BGP)

Command Mode

- /exec/configure

feature catena

[no] feature catena

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
catena	Enable/Disable catena

Command Mode

- /exec/configure

feature container-tracker

[no] feature container-tracker

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
container-tracker	Enable/Disable NXOS Container Tracker

Command Mode

- /exec/configure

feature dhcp

[no] feature dhcp

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
dhcp	Enable/Disable DHCP Manager

Command Mode

- /exec/configure

feature dot1x

[no] feature dot1x

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
dot1x	Enable/Disable dot1x

Command Mode

- /exec/configure

feature eigrp

[no] feature eigrp

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
eigrp	Enable/Disable Enhanced Interior Gateway Routing Protocol (EIGRP)

Command Mode

- /exec/configure

feature evb

[no] feature evb

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
evb	Enable/Disable Edge Virtual Bridge (EVB)

Command Mode

- /exec/configure

feature evmed

[no] feature evmed

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
evmed	Enable/Disable Generic event detectors

Command Mode

- /exec/configure

feature fabric forwarding

[no] feature fabric forwarding

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
fabric	Enable/Disable Fabric Services
forwarding	Enable/Disable Fabric Forwarding Protocol: Host Mobility Manager (HMM)

Command Mode

- /exec/configure

feature flexlink

[no] feature flexlink

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
flexlink	Enable/Disable Flexlink

Command Mode

- /exec/configure

feature grpc

[no] feature grpc

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
grpc	Enable/Disable grpc Services

Command Mode

- /exec/configure

feature hardware-telemetry

[no] feature hardware-telemetry

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
hardware-telemetry	Enable/Disable Hardware Telemetry

Command Mode

- /exec/configure

feature hsrp

[no] feature hsrp

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
hsrp	Enable/Disable Hot Standby Router Protocol (HSRP)

Command Mode

- /exec/configure

feature icam

[no] feature icam

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
icam	Enable/Disable icam

Command Mode

- /exec/configure

feature imp

[no] feature imp

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
imp	Enable/Disable IMP

Command Mode

- /exec/configure

feature interface-vlan

[no] feature interface-vlan

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
interface-vlan	Enable/Disable interface vlan

Command Mode

- /exec/configure

feature isis

[no] feature isis

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
isis	Enable/Disable IS-IS Unicast Routing Protocol (IS-IS)

Command Mode

- /exec/configure

feature itd

[no] feature itd

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
itd	Enable/Disable ITD

Command Mode

- /exec/configure

feature lacp

[no] feature lacp

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
lacp	Enable/Disable LACP

Command Mode

- /exec/configure

feature ldap

[no] feature ldap

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
ldap	Enable/Disable ldap

Command Mode

- /exec/configure

feature lldp

[no] feature lldp

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
lldp	Enable/Disable LLDP

Command Mode

- /exec/configure

feature macsec

[no] feature macsec

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
macsec	Enable/Disable CTS

Command Mode

- /exec/configure

feature mpls evpn

[no] feature mpls evpn

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
mpls	Enable/Disable MPLS Services
evpn	Enable MPLS EVPN

Command Mode

- /exec/configure

feature mpls l3vpn

[no] feature mpls l3vpn

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
mpls	Enable/Disable MPLS Services
l3vpn	Enable/Disable Layer 3 Virtual Private Networks

Command Mode

- /exec/configure

feature mpls ldp

[no] feature mpls ldp

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
mpls	Enable/Disable MPLS Services
ldp	Enable/Disable Label Distribution Protocol

Command Mode

- /exec/configure

feature mpls oam

[no] feature mpls oam

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
mpls	Enable/Disable MPLS Services
oam	Enable MPLS OAM

Command Mode

- /exec/configure

feature mpls segment-routing

[no] feature mpls segment-routing

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
mpls	Enable/Disable MPLS Services
segment-routing	Enable Segment-routing

Command Mode

- /exec/configure

feature mpls segment-routing traffic-engineering

[no] feature mpls segment-routing traffic-engineering

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
mpls	Enable/Disable MPLS Services
segment-routing	Enable Segment-routing
traffic-engineering	Enable/Disable segment-routing traffic-engineering

Command Mode

- /exec/configure

feature mpls static

[no] feature mpls static

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
mpls	Enable/Disable MPLS Services
static	Enable/Disable Static Labeled Paths

Command Mode

- /exec/configure

feature mpls traffic-engineering

[no] feature mpls traffic-engineering

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
mpls	Enable/Disable MPLS Services
traffic-engineering	Enable/Disable MPLS Traffic Engineering

Command Mode

- /exec/configure

feature msdp

[no] feature msdp

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
msdp	Enable/Disable Multicast Source Discovery Protocol (MSDP)

Command Mode

- /exec/configure

feature mvpn

[no] feature mvpn

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
mvpn	Multicast Virtual Private Networks.

Command Mode

- /exec/configure

feature nat

[no] feature nat

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
nat	Enable/Disable NAT

Command Mode

- /exec/configure

feature nbm

[no] feature nbm

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable a feature
nbm	Enable/Disable Non Blocking Multicast (NBM) feature

Command Mode

- /exec/configure

feature netconf

[no] feature netconf

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
netconf	Enable/Disable netconf Services

Command Mode

- /exec/configure

feature netflow

[no] feature netflow

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
netflow	Enable/Disable NetFlow

Command Mode

- /exec/configure

feature ngmvpn

[no] feature ngmvpn

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
ngmvpn	Enable/Disable EVPN/MVPN features

Command Mode

- /exec/configure

feature ngoam

[no] feature ngoam

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
ngoam	Enable/Disable ngoam

Command Mode

- /exec/configure

feature ngoam

[no] feature ngoam

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
ngoam	Enable/Disable ngoam

Command Mode

- /exec/configure

feature npiv

[no] feature npiv

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features

Command Mode

- /exec/configure

feature ntp

[no] feature ntp

Syntax Description

no	(Optional) Negate a command or set its default
feature	Command to enable/disable features
ntp	Enable/Disable NTP

Command Mode

- /exec/configure

feature nv overlay

[no] feature nv overlay

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
nv	Enable/Disable VxLAN
overlay	Enable/Disable VxLAN

Command Mode

- /exec/configure

feature nxapi

[no] feature nxapi

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
nxapi	Enable/Disable nxapi

Command Mode

- /exec/configure

feature nxdb

[no] feature nxdb

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
nxdb	Enable/Disable nxdb

Command Mode

- /exec/configure

feature nxsdk

[no] feature nxsdk

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
nxsdk	Enable/Disable nxsdk Services

Command Mode

- /exec/configure

feature openflow

[no] feature openflow

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
openflow	Enable/Disable OpenFlow agent

Command Mode

- /exec/configure

feature openflow

[no] feature openflow

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
openflow	Enable/Disable OpenFlow agent

Command Mode

- /exec/configure

feature ospf

[no] feature ospf

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
ospf	Enable/Disable Open Shortest Path First Protocol (OSPF)

Command Mode

- /exec/configure

feature ospfv3

[no] feature ospfv3

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
ospfv3	Enable/Disable Open Shortest Path First Version 3 Protocol (OSPFv3)

Command Mode

- /exec/configure

feature password encryption aes

[no] feature password encryption aes

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Enable the feature
password	Credential(s) for the user(s)/device(s)
encryption	Strong encryption for credential(s)
aes	Encrypt using AES encryption standard

Command Mode

- /exec/configure

feature pbr

[no] feature pbr

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
pbr	Enable/Disable Policy Based Routing(PBR)

Command Mode

- /exec/configure

feature pim

[no] feature pim

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
pim	Enable/Disable Protocol Independent Multicast (PIM)

Command Mode

- /exec/configure

feature pim6

[no] feature pim6

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
pim6	Enable/Disable Protocol Independent Multicast(PIM) for IPv6

Command Mode

- /exec/configure

feature plb

[no] feature plb

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
plb	Enable/Disable Pervasive Load Balancing feature

Command Mode

- /exec/configure

feature poap

[no] feature poap

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
poap	Enable/Disable POAP

Command Mode

- /exec/configure

feature poe

[no] feature poe

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable a feature
poe	Enable/Disable Power over Ethernet(PoE) feature

Command Mode

- /exec/configure

feature pong

[no] feature pong

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
pong	Enable/Disable Pong

Command Mode

- /exec/configure

feature port-security

[no] feature port-security

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable eth port security features
port-security	Enable/Disable port-security

Command Mode

- /exec/configure

feature private-vlan

[no] feature private-vlan

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
private-vlan	Enable/Disable private-vlan

Command Mode

- /exec/configure

feature privilege

[no] feature privilege

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
privilege	Enable/Disable IOS type privilege level support

Command Mode

- /exec/configure

feature ptp

[no] feature ptp

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
ptp	Enable/Disable PTP

Command Mode

- /exec/configure

feature restconf

[no] feature restconf

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
restconf	Enable/Disable restconf Services

Command Mode

- /exec/configure

feature rip

[no] feature rip

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
rip	Enable/Disable Routing Information Protocol (RIP)

Command Mode

- /exec/configure

feature scheduler

[no] feature scheduler

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
scheduler	Enable/Disable scheduler

Command Mode

- /exec/configure

feature scp-server

[no] feature scp-server

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
scp-server	Enable/Disable SCP server

Command Mode

- /exec/configure

feature sflow

[no] feature sflow

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
sflow	Enable/Disable sFlow agent

Command Mode

- /exec/configure

feature sftp-server

[no] feature sftp-server

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
sftp-server	Enable/Disable SFTP server

Command Mode

- /exec/configure

feature sla responder

[no] feature sla responder

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
sla	Enable/Disable SLA
responder	Enable/Disable responder part of SLA

Command Mode

- /exec/configure

feature sla sender

[no] feature sla sender

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
sla	Enable/Disable SLA
sender	Enable/Disable sender part of SLA

Command Mode

- /exec/configure

feature sla twamp-server

[no] feature sla twamp-server

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
sla	Enable/Disable SLA
twamp-server	Enable/Disable twamp-server part of SLA

Command Mode

- /exec/configure

feature smart-channel

[no] feature smart-channel

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
smart-channel	Enable/Disable smart-channel

Command Mode

- /exec/configure

feature ssh

[no] feature ssh

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
ssh	Enable/Disable ssh

Command Mode

- /exec/configure

feature tacacs

[no] feature tacacs +

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features

Command Mode

- /exec/configure

feature telemetry

[no] feature telemetry

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
telemetry	Enable/Disable Telemetry

Command Mode

- /exec/configure

feature telnet

[no] feature telnet

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
telnet	Enable/Disable telnet

Command Mode

- /exec/configure

feature tunnel

[no] feature tunnel

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
tunnel	Enable/Disable Tunnel Manager

Command Mode

- /exec/configure

feature udd

[no] feature udd

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
udd	Enable/Disable UDLD

Command Mode

- /exec/configure

feature vmtracker

[no] feature vmtracker

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
vmtracker	Enable/Disable VM Tracker feature

Command Mode

- /exec/configure

feature vn-segment-vlan-based

[no] feature vn-segment-vlan-based

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
vn-segment-vlan-based	Enable/Disable VLAN based VN segment

Command Mode

- /exec/configure

feature vpc

[no] feature vpc

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
vpc	Enable/Disable VPC (Virtual Port Channel)

Command Mode

- /exec/configure

feature vrrp

[no] feature vrrp

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
vrrp	Enable/Disable Virtual Router Redundancy Protocol (VRRP)

Command Mode

- /exec/configure

feature vrrpv3

[no] feature vrrpv3

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
vrrpv3	Enable/Disable Virtual Router Redundancy Protocol (VRRP) version 3

Command Mode

- /exec/configure

feature vtp

[no] feature vtp

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
vtp	Enable/Disable VTP

Command Mode

- /exec/configure

fec

fec <fec_val> | no fec [<fec_val>]

Syntax Description

no	Negate a command or set its defaults
fec	Forwarding error correction
<i>fec_val</i>	Interface FEC options

Command Mode

- /exec/configure/if-ethernet-all /exec/configure/if-eth-base

fec

fec <fec_val_old> | no fec [<fec_val_old>]

Syntax Description

no	Negate a command or set its defaults
fec	Forwarding error correction
<i>fec_val_old</i>	Interface FEC options

Command Mode

- /exec/configure/if-ethernet-all /exec/configure/if-eth-base

fhrp delay minimum

[no] fhrp delay minimum | fhrp delay minimum <delay>

Syntax Description

no	Negate a command or set its defaults
fhrp	FHRP interface configuration commands
delay	Configure FHRP delay
minimum	minimum delay
<i>delay</i>	Seconds to delay

Command Mode

- /exec/configure/if-eth-any /exec/configure/if-vlan

fhrp delay reload

[no] fhrp delay reload | fhrp delay reload <delay>

Syntax Description

no	Negate a command or set its defaults
fhrp	FHRP interface configuration commands
delay	Configure FHRP delay
reload	reload delay
<i>delay</i>	Seconds to delay

Command Mode

- /exec/configure/if-eth-any /exec/configure/if-vlan

filesystem delete

filesystem delete <*s0*>

Syntax Description

filesystem	file system command
delete	delete a file on file system
<i>s0</i>	file name

Command Mode

- /exec

filter

[no] filter [subject-name <s0> | altname-email <s1> | altname-upn <s2>]

Syntax Description

no	(Optional) Negate a command or set its defaults
filter	Configure mapping filter
subject-name	(Optional) Subject name of the certificate
<i>s0</i>	(Optional) Subject name
altname-email	(Optional) Email id as an alternate name
<i>s1</i>	(Optional) Email id
altname-upn	(Optional) User principal name as an alternate name
<i>s2</i>	(Optional) User principal name

Command Mode

- /exec/configure/certmap-filter

filter access-group

[no] filter access-group <acl-name> [allow-sharing]

Syntax Description

no	(Optional) Negate a command or set its defaults
filter	Filter configuration
access-group	access control group
<i>acl-name</i>	access control list name
allow-sharing	(Optional) allow up to 4 access control groups on same source interface

Command Mode

- /exec/configure/monitor-local-src /exec/configure/config-monitor
/exec/configure/config-monitor-erspan-src

filter ip

[no] filter ip <src_ip> <src_mask> <dst_ip> <dst_mask>

Syntax Description

no	(Optional) Negate a command or set its defaults
filter	Set SPAN filter options
ip	Set SPAN IP filtering options
<i>src_ip</i>	Set source IP address
<i>src_mask</i>	Set source IP mask
<i>dst_ip</i>	Set destination IP address
<i>dst_mask</i>	Set destination IP mask

Command Mode

- /exec/configure/monitor-local-src /exec/configure/config-monitor
/exec/configure/config-monitor-erspan-src

filter ipv6 access-group

[no] filter ipv6 access-group <acl-name> [allow-sharing]

Syntax Description

no	(Optional) Negate a command or set its defaults
filter	Filter configuration
ipv6	ipv6 access group
access-group	access control group
<i>acl-name</i>	access control list name
allow-sharing	(Optional) allow up to 4 access control groups on same source interface

Command Mode

- /exec/configure/monitor-local-src /exec/configure/config-monitor
/exec/configure/config-monitor-erspan-src

filter mac

[no] filter mac <src_mac> <src_mask> <dst_mac> <dst_mask>

Syntax Description

no	(Optional) Negate a command or set its defaults
filter	Set SPAN filter options
mac	Set SPAN MAC filtering options
<i>src_mac</i>	Set source MAC address
<i>src_mask</i>	Set source MAC mask
<i>dst_mac</i>	Set destination MAC address
<i>dst_mask</i>	Set destination MAC mask

Command Mode

- /exec/configure/monitor-local-src /exec/configure/config-monitor
/exec/configure/config-monitor-erspan-src

filter out

[no | default] { filter-list <fltrlist-name> } { out | in }

Syntax Description

no	(Optional) Negate a command or set its defaults
default	(Optional) Inherit values from a peer template
filter-list	Apply AS-PATH filter-list
<i>fltrlist-name</i>	Name of filter-list
out	Apply policy to outgoing routes
in	Apply policy to incoming routes

Command Mode

- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af
 /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-vpnv4
 /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-ipv4-mdt
 /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-vpnv6
 /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-l2vpn-vpls
 /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-ipv4-mvpn
 /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-ipv6-mvpn
 /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-l2vpn-evpn
 /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-ipv4-label
 /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-ipv6-label

filter tx control-packets

[no] filter tx control-packets

Syntax Description

no	(Optional) Negate a command or set its defaults
filter	Set SPAN filter options
tx	Set SPAN tx filtering options
control-packets	Filter out CPU generated packets and SPAN only data packets

Command Mode

- /exec/configure/monitor-local-src /exec/configure/config-monitor
/exec/configure/config-monitor-erspan-src

filter vlan

[no] filter vlan <vlan_mrange> [include-untagged]

Syntax Description

no	(Optional) Negate a command or set its defaults
filter	Filter configuration
vlan	Vlan type
<i>vlan_mrange</i>	
include-untagged	(Optional) Include untagged frames on port with Layer 3 subinterfaces

Command Mode

- /exec/configure/monitor-local-src /exec/configure/config-monitor
/exec/configure/config-monitor-erspan-src

filter vlan include-untagged

[no] filter vlan include-untagged

Syntax Description

no	(Optional) Negate a command or set its defaults
filter	Filter configuration
vlan	Vlan type
include-untagged	Include untagged frames on port with Layer 3 subinterfaces

Command Mode

- /exec/configure/config-monitor

find

find <s0>

Syntax Description

find	Find a file below the current directory
s0	Enter the filename prefix to search

Command Mode

- /exec

fips debug errors debug

[no] fips debug errors { debug-lc-post-on-maint | reset-debug-lc-post-on-maint }

Syntax Description

no	(Optional) Negate a command or set its defaults
fips	Enable/Disable FIPS mode
debug	Introduce errors into FIPS tests
errors	Introduce errors
debug-lc-post-on-maint	Run the switch on debug mode for fips maintenance state
reset-debug-lc-post-on-maint	Reset the mode from debug-lc-post-on-maint

Command Mode

- /exec/

fips mode enable

[no] fips mode enable

Syntax Description

no	(Optional) Negate a command or set its defaults
fips	Enable/Disable FIPS mode
mode	FIPS mode
enable	Enable/Disable FIPS mode

Command Mode

- /exec/configure

flow-count

[no] flow-count <count>

Syntax Description

flow-count	Flow count throttle for drop events
<i>count</i>	<1-32767>

Command Mode

- /exec/configure/config-fte-event/group-latency-events

flow-count

[no] flow-count <count>

Syntax Description

flow-count	Flow count throttle for drop events
<i>count</i>	<1-32767>

Command Mode

- /exec/configure/config-fte-event/group-drop-events

flow exporter

[no] flow exporter <exportername>

Syntax Description

flow	Enable/Disable NetFlow configuration
exporter	Define a Flow Exporter
<i>exportername</i>	Name of Flow Exporter

Command Mode

- /exec/configure

flow forward

[no] flow { forward | reverse }

Syntax Description

no	(Optional) Negate a command or set its defaults
flow	Configure ngoam flow
forward	Ngoam forward flow
reverse	Ngoam reverse flow

Command Mode

- /exec/configure/configngoamprofile

flow monitor

[no] flow monitor <monitorname>

Syntax Description

flow	Enable/Disable NetFlow configuration
monitor	Define a Flow Monitor
<i>monitorname</i>	Name of Flow Monitor

Command Mode

- /exec/configure

flow record

[no] flow record <recordname>

Syntax Description

flow	Enable/Disable NetFlow configuration
record	Define a Flow Record
<i>recordname</i>	Record name

Command Mode

- /exec/configure

flow timeout

{ [no] flow timeout <time> | no flow timeout }

Syntax Description

flow	Enable/Disable NetFlow configuration
timeout	Define a Flow Timeout
<i>time</i>	Time in seconds (flush-cache-Only)

Command Mode

- /exec/configure

flowcontrol hardware

[no] flowcontrol hardware

Syntax Description

no	(Optional) Negate a command or set its defaults
flowcontrol	Set flow control
hardware	Set hardware flowcontrol

Command Mode

- /exec/configure/com1

flowcontrol receive

```
flowcontrol { receive { <rx_flowctrl> } | send { <tx_flowctrl> } } | no flowcontrol { receive [ { <rx_flowctrl>
} ] | send [ { <tx_flowctrl> } ] }
```

Syntax Description

no	Negate a command or set its defaults
flowcontrol	Configure interface flowcontrol
receive	Receive pause frames
<i>rx_flowctrl</i>	Receive flow control
send	Send pause frames
<i>tx_flowctrl</i>	Send flow control

Command Mode

- /exec/configure/if-ethernet-all /exec/configure/if-eth-non-member /exec/configure/if-port-channel

flush-routes

[no] flush-routes

Syntax Description

no	(Optional) Negate a command or set its defaults
flush-routes	Flush routes in RIB during restart

Command Mode

- /exec/configure/router-eigrp

flush-routes

[no] flush-routes

Syntax Description

no	(Optional) Negate a command or set its defaults
flush-routes	Flush routes in RIB during restart

Command Mode

- /exec/configure/router-rip

flush-routes

[no] flush-routes

Syntax Description

no	(Optional) Negate a command or set its defaults
flush-routes	Flush routes on non-graceful controlled restart

Command Mode

- /exec/configure/router-isis

flush-routes

[no] flush-routes

Syntax Description

no	(Optional) Negate a command or set its defaults
flush-routes	Flush routes on a non-graceful controlled restart

Command Mode

- /exec/configure/router-ospf3

flush-routes

[no] flush-routes

Syntax Description

no	(Optional) Negate a command or set its defaults
flush-routes	Flush routes on a non-graceful controlled restart

Command Mode

- /exec/configure/router-ospf

flush-routes

[no] flush-routes

Syntax Description

no	(Optional) Negate a command or set its defaults
flush-routes	Flush routes in RIB upon controlled restart

Command Mode

- /exec/configure/router-bgp

follow

follow <name> | no follow

Syntax Description

no	Negate a command or set its defaults
follow	Group to be followed
<i>name</i>	master name string to follow

Command Mode

- /exec/configure/if-eth-any/hsrp_ipv4 /exec/configure/if-eth-any/hsrp_ipv6

forceshut reset-reason

```
forceshut [ { module <module> | <s0> <santa-cruz-range> | zone <zonenumber> <subzone> } ] reset-reason
<reset_reason_string>
```

Syntax Description

forceshut	Force the entire switch to shut down
module	(Optional) Optional. Module to be forceshut(optional arg)
<i>module</i>	(Optional) please enter the module number
<i>s0</i>	(Optional) Power off a specific xbar
<i>santa-cruz-range</i>	(Optional) please enter the xbar number
zone	(Optional) Optional. Zone to be forceshut(optional arg)
<i>zonenumber</i>	(Optional) please enter the zone number
<i>subzone</i>	(Optional) please enter the subzone number
reset-reason	Shut down (with reset-reason)
<i>reset_reason_string</i>	please enter reset_reason_string in quotes

Command Mode

- /exec

format

format <uri1>

Syntax Description

format	Format disks
<i>uri1</i>	destination filesystem path

Command Mode

- /exec

format bootflash

format bootflash:

Syntax Description

format	Format disks
bootflash:	Format bootflash:

Command Mode

- /exec

format bootflash check-filesystem

format bootflash: check-filesystem

Syntax Description

format	Format disks
bootflash:	Format bootflash:
check-filesystem	Format bootflash: and fix any errors in file system

Command Mode

- /exec

format usb1

format usb1:

Syntax Description

format	Format disks
usb1:	Format usb1:

Command Mode

- /exec

forward

[no] forward

Syntax Description

no	(Optional) Negate a command or set its defaults
forward	Configure paths

Command Mode

- /exec/configure/mpls_static/ipv4/lsp/inlabel

forwarding-adjacency

[no] forwarding-adjacency | forwarding-adjacency [holdtime <msec>]

Syntax Description

no	Negate a command or set its defaults
forwarding-adjacency	Treat this tunnel as a Forwarding Adjacency
holdtime	(Optional) How long in msec to wait upon flooding a down Forwarding Adjacency
<i>msec</i>	(Optional) Holdtime on MPLS TE Down

Command Mode

- /exec/configure/if-te

fragments

[no] fragments <opt_type>

Syntax Description

no	(Optional) Negate a command or set its defaults
<i>opt_type</i>	frag_op_type

Command Mode

- /exec/configure/ipacl /exec/configure/ipv6acl

frequency

```
{ { no | default } frequency | frequency <seconds> }
```

Syntax Description

no	
default	Set a command to its defaults
frequency	Frequency of an operation
<i>seconds</i>	Frequency in seconds

Command Mode

- /exec/configure/ip-sla/udp /exec/configure/ip-sla/jitter /exec/configure/ip-sla/tcp
/exec/configure/ip-sla/icmpEcho /exec/configure/ip-sla/dns /exec/configure/ip-sla/fabricPathEcho
/exec/configure/ip-sla/http

from to

```
[no] { { from <frm-list> to <to-val> } | { default { <value> | copy | ignore } } }
```

Syntax Description

no	(Optional) Negate a command or set its defaults
from	Map values from this
<i>frm-list</i>	Original list of values which are to be mapped
to	Map values to this
<i>to-val</i>	New mapped value
default	map default values
<i>value</i>	default value to be set
copy	Do a default copy
ignore	Ignore any unspecified values

Command Mode

- /exec/configure/table-map

from to

```
{ [ no ] { { from <frm-list> to <to-val> } | { default <value> } } } | default copy
```

Syntax Description

no	(Optional) Negate a command or set its defaults
from	Map values from this
<i>frm-list</i>	Original list of values which are to be mapped
to	Map values to this
<i>to-val</i>	New mapped value
default	map default values
<i>value</i>	default value to be set
copy	Do a default copy

Command Mode

- /exec/configure/def-tmap

fte event

[no] fte event <eventname>

Syntax Description

fte	Enable/Disable FTE configuration
event	Define a FTE event
<i>eventname</i>	Event name

Command Mode

- /exec/configure/config-fte

fte exporter

[no] fte exporter <exportername>

Syntax Description

fte	Enable/Disable Flow Table Events configuration
exporter	Define a events Exporter
<i>exportername</i>	Name of event Exporter

Command Mode

- /exec/configure/config-fte

fte monitor

[no] fte monitor <monitorname>

Syntax Description

fte	Enable/Disable FTE configuration
monitor	Define a FTE Monitor
<i>monitorname</i>	Name of FTE Monitor

Command Mode

- /exec/configure/config-fte

fte record

[no] fte record <recordname>

Syntax Description

fte	Enable/Disable FTE configuration
record	Define a FTE Record
<i>recordname</i>	Record name

Command Mode

- /exec/configure/config-fte

fte system monitor

[no] fte system monitor <monitorname>

Syntax Description

fte	change fte global settings
system	global config
monitor	fte Monitor to be applied
<i>monitorname</i>	ssx Monitor to be applied

Command Mode

- /exec/configure/config-fte

ftrace

```
ftrace [ { set-opt { option <n0> <v0> | filter <f0> <v0> } { proc <p0> | buf_size <b0> } [ <s0> ] } | { reset { all | filter <f0> | trace | <s0> } } | { enable { inband | kernel | lnd <i0> | process <i0> | trace } } | { list { filters <f0> | curr_tracer | all } } | { debug { on | off } } | { dump { all | traces } } ]
```

Syntax Description

ftrace	Run ftrace tool to enable/disable kernel/process tracing
set-opt	(Optional) Set ftrace tracing options available
reset	(Optional) Reset ftrace options to defaults, disable tracing
enable	(Optional) Enable ftrace tracing with given options
list	(Optional) List ftrace available options/filters/events
debug	(Optional) Ftrace based debug trace enable/disable
dump	(Optional) Dump traces collected in ftrace circular buffer
all	(Optional) Act on all available datasets
lnd	(Optional) Trace proc/pid specific lnd inband driver calls
inband	(Optional) Trace inband driver + netstack functions
kernel	(Optional) Trace kernel function of sched, net, inband
process	(Optional) Trace proc/pid specific kernel function calls
trace	(Optional) Enable tracing_on in ftrace settings
option	(Optional) Name of ftrace option to be set
filter	(Optional) Set ftrace filter to be applied
proc	(Optional) Set ftrace process to be traced
buf_size	(Optional) Set ftrace buffer size limits
filters	(Optional) list available ftrace filters
curr_tracer	(Optional) Print ftrace current tracer
traces	(Optional) Dump ftrace trace buffer contents
on	(Optional) Enable ftrace based debug tracing
off	(Optional) Dump ftrace trace buffer contents
<i>i0</i>	(Optional) pid of process to trace
<i>f0</i>	(Optional) name of ftrace filter to list/set

<i>n0</i>	(Optional) name of ftrace option to be set
<i>v0</i>	(Optional) value of ftrace option/filter to be set
<i>p0</i>	(Optional) pid of ftrace proc to be set
<i>b0</i>	(Optional) value of ftrace buffer size limit to set
<i>s0</i>	(Optional) name of ftrace option to be set/reset

Command Mode

- /exec

